



Operation


Mode Functions (continued)

Privacy Codes


Your microTALK® radio incorporates two advanced coded squelch systems that can help to reduce interference from other users on any given channel. CTCSS (Continuous Tone Coded Squelch System) provides 38 privacy codes and DCS (Digitally Coded Squelch) provides 83 privacy codes. This provides a total of 121 **Privacy Codes**. Either system can be used on channels (CH1-CH22), but both systems cannot be used on the same channel at the same time.

 To successfully communicate with a privacy code, both of the transmitting and receiving radios must be tuned to the same channel with the same privacy code system (CTCSS or DCS) and privacy code number. Each channel will save the last privacy code system and number you selected.


 The privacy code 0 is not a privacy code, it allows all signals to be heard on a channel that is set to 0 on both the CTCSS and DCS systems.

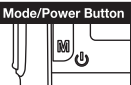


Set CTCSS Privacy Codes



To select a CTCSS privacy code:

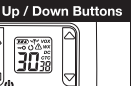


1. After selecting a channel (only available on channels 1~22), press the **Mode** button once, the **CTCSS** Indicator appears and the small numbers next to the channel number flash on the display.

 If DCS is turned **on** for the selected channel, the display will flash the CTCSS icon and “OFF.” To switch from DCS to CTCSS, press the **Up** or **Down** button while the display is flashing “OFF.” The small numbers will be flashing on the display and you can proceed to step 2.

2. Press using the **Up** or **Down** button to select a privacy code. You can hold the **Up** or **Down** button for fast advance.


9

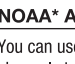


Operation

General Specifications

Frequency Allocation and Compatibility



To listen to All Hazards Radio channels:




1. During **Standby** mode, press and hold the **Up/Weather** button until the **All Hazards Weather Radio** icon and the currently selected All Hazards Radio channel are displayed.

2. Use the **Up** or **Down** button to change **All Hazards Radio** channels.

3. The **All Hazards Radio** icon will continue to be displayed when **All Hazards Radio** is on.


4. To exit **All Hazards Radio**, press and hold the **Up/Weather** button or press and release the **Talk** button.

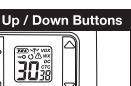



*National Oceanographic and Atmospheric Administration


Weather (WX) Alert Mode

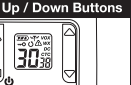Turning On the Weather Alert function will allow your radio to automatically receive NOAA weather signals and warnings from designated weather broadcast stations. If the radio is turned ON, it will alert to Weather and other emergency alerts broadcast by NOAA.



 This feature is set to OFF by default.



 Make sure the strongest Weather channel is selected for your area using the channel selection in the previous menu.

To turn Weather Alert On or Off:

1. When listen to a selected weather radio channel, press and hold the **Down** button until the **Weather Alert** icon flashes on the display. The current On or Off setting is displayed.

2. Press the **Up** and **Down** button to turn Weather Alert On or Off.


3. Press and hold the **Down** button again to save the new setting exit the **Weather Alert** Setting Mode and return to **Weather radio** mode. The Weather Alert icon shows on the display when it turned on.

4. To exit **All Hazards Radio**, press and hold the **Up/Weather** button or press and release the **Talk** button.


15

3. When your desired CTCSS privacy code is displayed, choose one of the following:


- Press the **Mode** button to enter the new setting and proceed to other functions.
- Press the **Talk** or **Call** button to enter the new setting and return to **Standby** mode.
- Do not press any buttons for 6 seconds to enter the new setting and return to **Standby** mode.

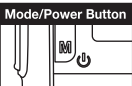


Set DCS Privacy Codes



To select a DCS privacy code:

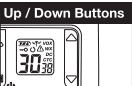

1. After selecting a channel (only be available on channel 1~22), press the **Mode** button until the **DCS** indicator appears and the small numbers will flash on the display (0 through 83).


 If CTCSS is turned **on** at the channel selected, the display will flash the DCS icon and “OFF.” To switch from CTCSS to DCS, press the **Up** or **Down** button while the display is flashing “OFF.” The small numbers will be flashing on the display and you can proceed to step 2.

2. Press using the **Up** or **Down** button to select a DCS privacy code. You can hold the **Up** or **Down** button for fast advance.

3. When your desired DCS privacy code is displayed, choose one of the following:

- Press the **Mode** button to enter the new setting and proceed to other functions.
- Press the **Talk** or **Call** button to enter the new setting and return to **Standby** mode.
- Do not press any buttons for 6 seconds and it will return to **Standby** mode.

10

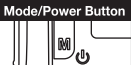


Voice Activated Transmit (VOX)


In **VOX** mode, your microTALK® radio can be used “hands-free”, automatically transmitting when you speak. You can set the **VOX** sensitivity level to fit the volume of your voice and avoid transmissions triggered by background noise.

To turn VOX mode on or off:


- Press the **Mode** button until the **VOX** indicator flashes on the display. The current **On** or **Off** setting is displayed.
- Press the **Up** or **Down** button to turn VOX **On** or **Off**.
- Choose one of the following:
 - Press the **Mode** button to enter the new setting and proceed to other functions.
 - Press the **Talk** or **Call** button to enter the new setting and return to **Standby** mode.
 - Do not press any buttons for 6 seconds and it will return to **Standby** mode.

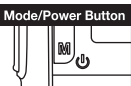


To set VOX sensitivity:

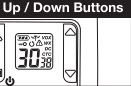

1. Press the **Mode** button until the **VOX** icon flashes and the current sensitivity level is displayed.

 The current VOX sensitivity level is displayed with letters “L” and a Number 1 through 5, with Number 5 being the most sensitive level and Number 1 being the least sensitive level.



2. Press the **Up** or **Down** button to change the setting.

3. Choose one of the following:

- Press the **Mode** button to enter the new setting and proceed to other functions.
- Press the **Talk** or **Call** button to enter the new setting and return to **Standby** mode.
- Do not press any buttons for 6 seconds and it will return to **Standby** mode.

Channel No.	NWR Frequency	Channel No.	NWR Frequency
1	162.550MHz	6	162.500MHz
2	162.400MHz	7	162.525MHz
3	162.475MHz	8	161.650MHz
4	162.425MHz	9	161.775MHz
5	162.450MHz	10	163.275MHz

IMPORTANT NOTICE:

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Safety Information for microTALK Radios

Your wireless handheld portable transceiver contains a low power transmitter. When the talk button is pushed, it sends out radio frequency (RF) signals. The device is authorized to operate at a duty factor not to exceed 50%. In August 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless devices.

Important


FCC RF Exposure Requirements: For body-worn operation, this radio has been tested and meets the FCC RF exposure guidelines when used with Cobra accessories supplied or designated for this product. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. Use only the supplied antenna. Unauthorized antennas, modifications or attachments could damage the transmitter and may violate FCC regulations.

Normal Position:

Hold the transmitter approximately two (2) inches from your face and speak in a normal voice, with the antenna pointed up and away.

A	B	C	A	B	C
1	462.5625	ANY	16	462.5750	ANY
2	462.5875	ANY	17	462.6000	ANY
3	462.6125	ANY	18	462.6250	ANY
4	462.6375	ANY	19	462.6500	ANY
5	462.6625	ANY	20	462.6750	ANY
6	462.6875	ANY	21	462.7000	ANY
7	462.7125	ANY	22	462.7250	ANY
8	467.5625	ANY	23	462.5625	CTCSS / 38
9	467.5875	ANY	24	462.6125	CTCSS / 35
10	467.6125	ANY	25	462.6625	CTCSS / 32
11	467.6375	ANY	26	462.7125	CTCSS / 29
12	467.6625	ANY	27	462.5500	CTCSS / 26
13	467.6875	ANY	28	462.6000	CTCSS / 23
14	467.7125	ANY	29	462.6500	CTCSS / 20
15	462.5500	ANY	30	462.7000	CTCSS / 17

16




Channel Scan

Your microTALK® radio can automatically scan channels.

To scan channels:

- Press the **Mode** button until the **Scan** icon and the current **off** setting are flashing.
- Press the **Up** or **Down** button to select Channel Scan **on** or **off**.
- Choose one of the following:
 - While the current setting is **on**, press **Talk** or **Call** button to begin scanning channels.
 - While the current setting is **on**, do not press any button for 6 seconds to begin scanning channels.
 - While the current setting is **off**, press **Mode** button to proceed to other functions.
 - While the current setting is **off**, press **Talk** or **Call** button to return to **Standby** mode.
 - While the current setting is **off**, do not press any buttons for 6 seconds to return to **Standby** mode.

 The radio will check privacy codes while scanning channels.

The **Scan** icon will continue to be displayed when scan is **on**. Your radio will continue to scan all channels and stop if an incoming transmission is detected. Your radio will remain on that channel for 8 seconds.

During scanning (while receiving an incoming transmission), you can choose from the following:

- Press and hold the **Talk** button to communicate on that channel. Your radio will remain on that channel and return to **Standby** mode.
- Press the **Up** or **Down** button to resume scanning channels.
- Press the **Talk** or **Call** button to return to **Standby** mode.

FCC Part 15.21 Warning Statement-

NOTE: THE GRANTEE IS NOT RESPONSIBLE FOR ANY CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE. SUCH MODIFICATIONS COULD VOID THE USER’S AUTHORITY TO OPERATE THE EQUIPMENT.

IC RSS-GEN

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- this device may not cause interference, and
- this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d’Industrie Canada applicables aux appareils radio exempts de licence. L’exploitation est autorisée aux deux conditions suivantes:

- l’appareil ne doit pas produire de brouillage, et
- l’utilisateur de l’appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d’en compromettre le fonctionnement.

Radiation Exposure Statement:

Under ISDEC regulations, this radio transmitter may only operate using the antenna that is affixed to the radio transmitter. Use only the supplied antenna. Unauthorized antennas, modifications, or attachments could damage the transmitter and may void the user’s authority to operate the radio.


Any changes of modifications not expressly approved by the party responsible for compliance could void the user’s ability to operate the equipment.

SAR tests are conducted using standard operating positions accepted by the FCC/ISED/C with the device transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value.

This device has been tested and certified to not exceed the exposure limit established by the FCC/ISED/C. Tests for each device are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC/ISED/C.

For body worn operation, this device has been tested and meets the FCC/ISED/C RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 10mm from the body. Non-compliance with the above restrictions may result in a violation of RF exposure guidelines.

11

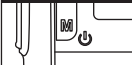


Ten Call Tone Settings

You can choose between ten different **Call Tone Settings** to transmit a call alert.

To change a call tone setting:

- Press the **Mode** button until the letter “C” and the current call tone number (01 through 10) is displayed. The current call tone will sound for 3 seconds.
- Press the **Up** or **Down** button to hear the other call tone settings.
- Choose one of the following:
 - Press the **Mode** button to enter the new setting and proceed to other functions.
 - Press **Talk** or **Call** button to enter the new setting and return to **Standby** mode.
 - Do not press any buttons for 6 seconds and it will return to **Standby** mode.

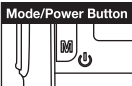


Roger Beep Confirmation Tone

Your listener will hear an audible tone when you release the **Talk** button. This alerts the other party that you have finished talking and it is OK for them to speak.

To turn roger beep on or off:

- Press the **Mode** button until the **Roger Beep** indicator flashes. The current **on** or **off** setting is displayed.
- Press the **Up** or **Down** button to select Roger Beep **on** or **off**.
- Choose one of the following:
 - Press the **Mode** button to enter the new setting and proceed to other functions.
 - Press **Talk** or **Call** button to enter the new setting and return to **Standby** mode.
 - Do not press any buttons for 6 seconds and it will return to **Standby** mode.

12



Warranty & Trademark Acknowledgment

Limited One-Year Warranty

Cobra warrants your product against all defects in materials and workmanship for a period of one (1) year from the date of original purchase.

Cobra, at our sole discretion, will repair or replace your product (with the same or comparable product) free of charge.

Cobra will not pay shipping charges that you incur for sending your product to us. Products received COD will be refused.

To make a warranty claim, we will require proof or purchase in the form of an invoice or receipt. No proof of purchase is required for factory direct purchases.

Warranty Exclusions: Warranty does not apply to your product under any of the following conditions: 1. The serial number has been removed or modified. 2. Your product has been subjected to misuse or damage (including water damage, physical abuse, and/or improper installation). 3. Your product has been modified in any way. 4. Your receipt or proof-of-purchase is from a non-authorized dealer or internet auction site including E-bay, U-bid, or other non-authorized resellers.

LIMITATION OF WARRANTY: EXCEPT AS EXPRESSLY PROVIDED HEREIN, YOU ARE ACQUIRING THE PRODUCT “AS IS” AND “WHERE IS”, WITHOUT REPRESENTATION OR WARRANTY. COBRA SPECIFICALLY DISCLAIMS ANY REPRESENTATION OR WARRANTY INCLUDING, BUT NOT LIMITED TO THOSE CONCERNING THE MERCHANTABILITY AND SUITABILITY OF THE PRODUCT FOR A PARTICULAR PURPOSE. COBRA SHALL NOT BE LIABLE FOR CONSEQUENTIAL, SPECIAL OR INCIDENTAL DAMAGES INCLUDING, WITHOUT LIMITATION, DAMAGES ARISING OUT OF THE USE, MISUSE OR MOUNTING OF THE PRODUCT.

The above limitations or exclusions shall be limited to the extent they violate the laws of any particular state. Cobra is not responsible for products lost in shipment between the owner and our service center.

General Warranty Information

Each product we manufacture is covered by our factory warranty. While each product may have unique components and policy, the general guideline below will apply to most Cobra products.

All Cobra products purchased factory-direct or from our Authorized Resellers will come with a full one to three (1-3) year warranty from the date of the original retail purchase (see policy statement above for full warranty details and exclusions).


Standard accessories packaged with each model will have a one-year factory warranty. Accessory items have a one-year factory warranty.

Shipping to our facility is not covered in our warranty. Return shipping is included within the US. This warranty is non-transferrable.

For the sake of clarity, ‘repair or replace the Product or its defective part’ does not include removal or installation work, costs or expenses which include but are not limited to labor costs or expenses.

Cobra will not be responsible for lost packages.

18

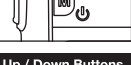


Key Tone On/Off

When **Key Tone** is **On**, an audible tone will sound each time a button is pressed.

To turn key tone on or off:

- Press the **Mode** button until **Key Tone** indicator flashes. Current key tone status **on** or **off** will flash.
- Press the **Up** or **Down** button to select key tone on or off.
- Choose one of the following:
 - Press the **Mode** button to enter the new setting and proceed to other functions.
 - Press **Talk** or **Call** button to enter the new setting and return to **Standby** mode.
 - Do not press any buttons for 6 seconds and it will return to **Standby** mode.

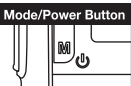

Lock Function

The **Lock** function locks the **Up**, **Down** and **Mode** buttons to prevent accidental operation.

To activate lock function:

- Press the **Mode** button until the **Lock** icon and the current **off** setting are flashing.
- Press the **Up** or **Down** button to select lock function **on** or **off**.
- Choose one of the following:
 - While the current setting is **on**, press **Talk** or **Call** button to enable lock function.
 - While the current setting is **on**, do not press any button for 6 seconds to enable lock function.
 - While the current setting is **off**, press **Mode** button to return to **Standby** mode.
 - While the current setting is **off**, press **Talk** or **Call** button to return to **Standby** mode.
 - While the current setting is **off**, do not press any buttons for 6 seconds to return to **Standby** mode.

To turn the lock off:

– Press and hold the **Mode/Power** button for two seconds.

When in **Lock** mode, the **Lock** icon will be displayed.

13

For Products Purchased Outside the U.S.A.

Please contact your authorized local reseller or agent for warranty information.

Trademark Acknowledgment

©2024 Cobra Electronics Corporation. Cobra and the snake design are proprietary trademarks of Cobra Electronics Corporation, USA. Other trademarks and trade names are those of their respective owners.

Cobra Electronics Corporation™ is a trademark of Cobra Electronics Corporation, USA.

20