

V-2R VHF Collinear Gain Vertical For 144-148 MHz

INSTRUCTION MANUAL

GENERAL.

The new Hy-Gain V-2R, two meter antenna is a collinear 5/8-wave omnidirectional vertical antenna for the 144-148 MHz Amateur band. The V-2R features two sets of 1/4-wave radials which properly decouple the lower 5/8-wave radiator from the mast. It also features a 500 watt enclosed coil that matches the antenna to a nominal 50 ohms. The ruggedized V-2R is suitable for personal use, repeater, and packet BBS service.

The feedpoint is a standard UHF connector that is protected from the weather within the lower radiator. The V-2R also features a mast-to-mast bracket that will accept up to a two inch O.D. mast.

The V-2R can also be used outside of the two meter Amateur band. Graphs are supplied **SO** that the antenna can be set to any frequency between 138 and 174 MHz.

SPECIFICATIONS				
VSWR at Resonance	Less than 1.5:1			
2:1 VSWR Band Width	10 MHz minimum			
Power Gain	3 dBd (5.2 dBi)			
Antenna/Mast Isolation	20 dB			
Power Input	500 Watts continuous			
Lightning Protection	DC ground			
Height (nominal)	108 inches (2743 mm)			
Wind Area	0.67 sq. ft. (.062 sq. m)			
Maximum Mast O.D.	2 inches (51mm)			
Hardware	18-8 stainless steel except for U-Bolts			
Maximum Wind Survival (without ice)	105 mph (168.98 kmph)			
Net Weight	6.3 lbs (2.86 kg)			

ASSEMBLY

Unpack the antenna and check the parts against the Parts List and drawings.


Select four of the radial clamps and associated hardware and loosely assemble them as shown in Figure 1.

Repeat the previous step for the remaining four radial clamps.

Set both assembled clamps upside down on a flat surface.

Select the eight (8) 7/16" x 17 1/8" radial tubes (Item No. 4), and insert them completely into the assembled radial clamps.

Tighten the outer eight (8) screws of each assembly just enough to hold the radial tubes in place. These screws will be securely tightened in a later step.

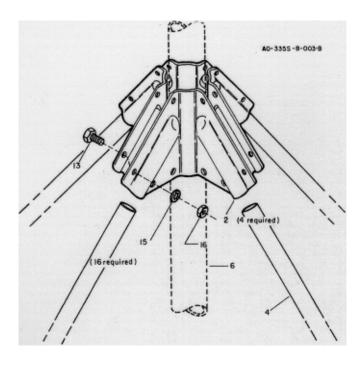

Item
No.
Description
Radial Clamp, 45 degrees
Tube 7/16" x 17 1/8"
Tube, 1" O.D. x 60", slotted
Bolt, X10-24 x 1/2", hex
Lockwasher, X10, internal
Nut, X10-24, hex

Figure 1 Radial Clamp Assembly

Item No.	Description
1	Mast-to-Mast Bracket Plate, 1 1/8"
3	Mast-to-Mast Bracket Clamp, 1
6	Tube, 1" O.D. x 60", slotted
18	Bolt, 1/4"-20 x 3/4", hex head
20	Lockwasher, 1/4", internal
21	Nut, 1/4''-20, hex
23	U-bolt, 5/16" x 2" x 211/16"
24	Lockwasher, 5/16", split
25	Nut. 5/16"-18, hex


Select the 1" x 60" tube (Item No. 6).

Slip both radial assemblies over the bottom of the 60" tube and position as shown in Figure 4 and Detail A. The unslotted end of the 60" tube is the bottom. Determine the "B" dimension from Figure 7. For example, at 146 MHz, B = 32.3/8" (822 mm).

Tighten all screws in both radial assemblies securely and evenly.

Select the mast-to-mast clamp, plate and associated hardware and loosely assemble them as shown in Figure 2.

Slide the assembled mast-to-mast clamp over the bottom end of the 60" tube as shown in Figure 2 and securely tighten the four (4) 1/4"- $20 \times 3/4$ " bolts, nuts and lockwashers (Item Nos. 18, 20 & 21).

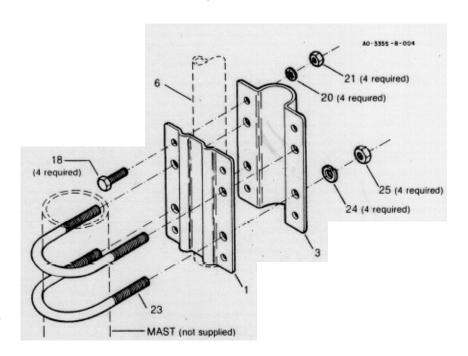

NOTE: The end of the 1" x 60" tube (Item 6) should be even with the bottom of the mast-to mast brackets (Item 1 and 3).

Figure 2 Mast-to-Mast Clamp

UPPER RADIATOR/COIL ASSEMBLY

Refer to Figure 3.

Select the V-2R VHF Coil assembly. The coaxial cable will attach to this in a later step.

Select one No. 10 compression clamp (Item 11) and install over the slotted tube end of the coil assembly (Item 8).

Select the 7/8" 0.D. x 24" tube (Item 7) and insert the plain end into the slotted tube of the coil assembly approximately 2". Position the compression clamp as shown in Figure 5 and tighten securely.

Select one No. 6 compression clamp (Item 10) and place over the swaged/slotted end of the 7/8" tube (Item 7).


Select the 5/8" x 31" (Item 5) tube and insert either end into the 7/8" tube (Item 7).

Refer to Figure 4. Adjust the 5/8" x 31" tube so dimension "A" is equal to 41 1/2" for two meter operation. Tighten the No. 6 compression clamp (Item 6) securely.

NOTE: The tuning charts in this manual are accurate. However, due to variation in installations some minor adjustments may be required to resonate the antenna on the desired

Select the 5/8" caplug (Item No. 12) and slip it over the end of the 5/8" tube.


NOTE: Dimension "A" is from the top of the coil form to the tip of the element. Dimension "B" is from the bottom of the plastic coil form to the top of the radial clamps.

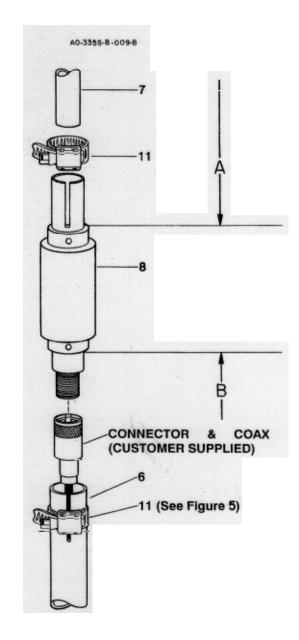

Item	
No.	Description
6	Tube, 1" O.D. x 60", slotted
7	Tube, 7/8" x 24" swaged & slotted
8	Coil, 500 watt, VHF
10	Clamp, #6, Tubing
11	Clamp, #10, Tubing


Figure 3
Upper Radiator/Coil Assembly

NOTE: At 146 MHz, A = 41 1/2" (1054 mm), = 32 3/8" (822 mm).

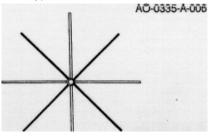

RADIALS AS SEEN FROM EITHER THE TOP OR THE BOTTOM.

Detail A Top or Bottom View of Radials

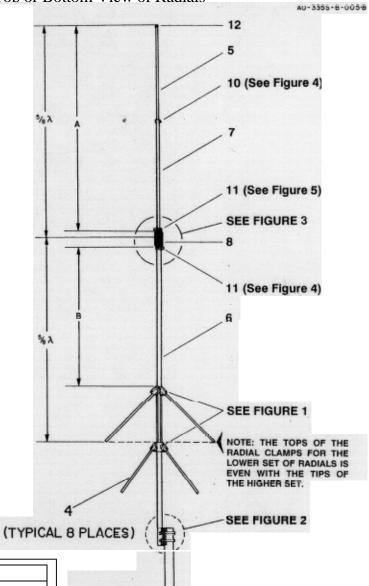


Item#	Description	
5	Tube, 5/8" x 81"	
6	Tube, 1" O.D. x 60", slotted	
7	Tube, 7/8" x 24" swaged, drilled & slotted	
8	Coil, 500 Watt, VHF	
10	Clamp, #6, Tubing	
11	Clamp, #10, Tubing	
12	Caplug, 5/8" black	

Figure 4 Overall View

Select the proper size tube clamp as shown in Figure 5. When installing the clamps, place the clamp near the tube end with the top of the clamp over the slot in the tube as shown.

 After adjustment of the tubing lengths, tighten the clamp with a 5/16 inch nut driver, socket, or open end wrench until the tubing will not twist or telescope.





Part	Description	Fits
No.		Tubing Sizes
358756	Clamp, Size #6	1/2"
	all stainless steel	and 3/4"
	5/16" hex head screw	
Part	Description	Fits
No.		Tubing
		Sizes
358757	Clamp, Size #10	
	'all stainless steel	t"
	5/16" hex head screw	

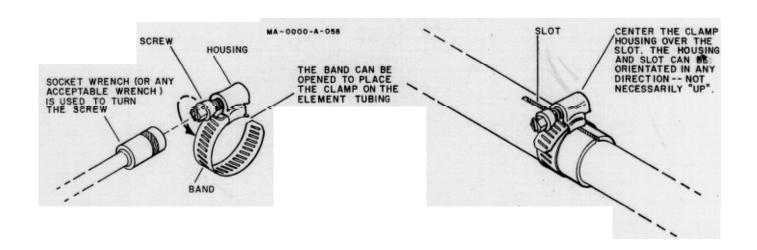


Figure 5 Compression Clamps

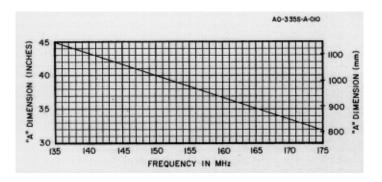


Figure 6
Dimension "A" Chart

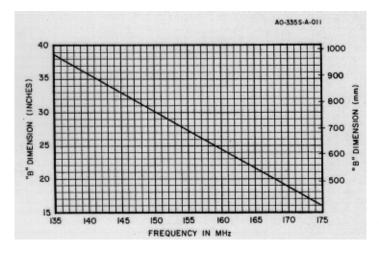


Figure 7
Dimension "B" Chart

Select the No. 10 tube clamp and slip it over the top end of the 1" x 60" tube. Position it as shown in Figure 3 and tighten it just enough to prevent it from sliding down the tube.

INSTALLATION

There are two ways to attach your coax to the V2R antenna. The first method involves attaching a short length of coax to the antenna before attaching the antenna to the supporting mast.

The remaining length of coax can then be attached and routed to the radio. The short length of coax must be at least 6 feet long, so the connection between coax lengths can be made below the mast-to-mast bracket.

The second method involves attaching the complete length of coax to the antenna before attaching the antenna to the supporting mast. In this method, the antenna and entire coax length must be carried up the tower or mast.

Choose one of the suggested methods of attaching the coax to the V-2R.

Insert one end of the coax into the bottom of the 1" x 60" tube. Push the coax through until the connector emerges from the top of the

Screw the coax connector onto the V-2R coil connector.

Push the coax cable into the top of the 1" x 60" tube until the matching coil rests on the one inch tube. Tighten the one inch compression clamp.

The antenna can now be mounted on a mast (2" O.D. max.). For adequate lightning protection, the antenna supporting structure must be well grounded.

WARNING

Installation of this product near power lines is dangerous. For your safety, follow the installation directions.

Several antennas may be mounted on the same mast. Your V-2R should be mounted above the other antenna for best performance. When side mounting the V-2R on a tower, it should be kept at least 20 inches away from the tower.

ANNOUNCING

Hy-Gain now makes a similar antenna for 400470 MHz called the V-4R. Inquire at your local Hy-Gain dealer for more information.

PARTS LIST

			Item
Description Qty		Part No.	No.
1	Mast-to-Mast bracket plate, 1 1/8"	160011	1
8	Radial clamp, 45 degrees	160012	2
1	Mast-to-mast bracket clamp, 1 1/8"	160047	3
8	Tube, 7/16" O.D. x 17 1/8"	170445	4
1	Tube, 5/8" O.D. x 31"	170614	5
1	Tube, 1" O.D. x 60", slotted	191001	6
1	Tube, 7/8" x 24", swaged & slotted	190204	7
1	Coil, 500 watt, VHF	878630	8
1	Parts Pack, 335S-1, Stainless Steel	878631	
	(Not Used)		9
	Clamp, #6 tube	358756	10
2	Clamp, #10 tube	358757	11
	Caplug, 5/8", black	450503	12
33	Bolt, #10-24 x 1/2", hex head	500158	13
	(Not Used)		14
	Lockwasher, #10, internal	565697	15
	Nut, #10-24, hex	554071	16
	Bolt, 1/4"-20 x 3/4", hex head	505266	18
	Lockwasher, 1/4", internal	562961	20
	Nut, 1/4"-20, hex	554099	21
	U-bolt, 5/16" x 2" x 2 11/16"	540036	23
4	Lockwasher, 5/16", split	564792	24
4	Nut, 5/16"-18, hex	555747	25

NOTE: Some extra small parts are included but not used.



Hy-Gain Warrants to the original owner of this product, if manufactured by *Hy-Gain* and purchased from an authorized dealer or directly from *Hy-Gain* to be free from defects in material and workmanship for a period of 12 months for rotator products and 24 months for antenna products from date of purchase provided the following terms of this warranty are satisfied.

- 1. The purchaser must retain the dated proof-of-purchase (bill of sale, canceled check, credit card or money order receipt, etc.) describing the product to establish the validity of the warranty claim and submit the original or machine reproduction of such proof of-purchase to *Hy-Gain* at the time of warranty service. *Hy-Gain* shall have the discretion to deny warranty without dated proof-of-purchase. Any evidence of alteration, erasure, or forgery shall be cause to void any and all warranty terms immediately.
- 2. **Hy-Gain** agrees to repair or replace at **Hy-Gain**'s option without charge to the original owner any defective product under warranty, provided the product is returned postage prepaid to **Hy-Gain** with a personal check, cashiers check, or money order for \$8.00 covering postage and handling.
 - 3. Under no circumstances is *Hy-Gain* liable for consequential damages to person or property by the use of any *Hy-Gain* products.
- 4. Out-of-warranty Service: *Hy-Gain* will repair any out-of-warranty product provided the unit is shipped prepaid. All repaired units will be shipped COD to the owner. Repair charges will be added to the COD fee unless other arrangements are made.
- 5. This warranty is given in lieu of any other warranty expressed or implied.
 - 6. **Hy-Gain** reserves the right to make changes or improvements in design or manufacture without incurring any obligation to install such changes upon any of the products previously manufactured.
- 7. All *Hy-Gain* products to be serviced in-warranty or out-of-warranty should be addressed to hy-gain, 308 Industrial Park Road, Mississippi 39759, USA and must be accompanied by a letter describing the problem in detail along with a copy of your dated proof-of-purchase.
- 8. This warranty gives you specific rights, and you may also have other rights which vary from state to state.