

TS-790A/790E

EXTERNAL CONTROL INSTRUCTION MANUAL

KENWOOD CORPORATION

CONTENTS

1.	SPECIFICATIONS	3
2.	OPERATION	3
	2-1. PRECAUTIONS FOR COMPUTER-CONNECTED OPERATION	3
	2-2. CONTROL OPERATION	3
	2-3. COMMANDS	4

1. SPECIFICATIONS

Signal formatTTL level

■ Interface

■ Terminal Connections

Pin No.	Signal Name		1/0
1	GND	Signal ground	
2	TXD	Transmit data	Output
3	RXD	Receive data	Input
4	CTS	Transmit enable	Input
5	RTS	Receive enable	Output
6	NC	No connection	AUT DITERT

GND: This is the signal ground terminal.

TXD: The transmit data is the serial data from the transceiver to the computer. The output utilizes negative logic.

RXD: The receive data is the serial data from the computer to the transceiver. The input utilizes negative logic.

CTS: This signal is supplied from the computer, and is used to inhibit transmit data from the transceiver when the computer is not ready to receive. The input utilizes positive logic. (Transmit data is stopped by a logic low.)

RTS: This signal is applied to the computer, and is used to inhibit transmit data from the computer when the transceiver is not ready to receive it. The output utilizes positive logic. (Inhibit is requested when the level is low.)

Connector pin configuration



(Viewed from the rear)

2. OPERATION

Caution:

Turn the POWER switch OFF before making connections.

2-1. PRECAUTIONS FOR COMPUTER-CONNECTED OPERATION

When connecting the transceiver with a computer, check the following points.

1. Are the connections correct?

The transceiver output should be connected to the computer input and the transceiver input to the computer output.

Example:

Transceiver's transmission data — Computer's receive data

Transceiver's RTS - Computer's CTS

- 2. Is the computer's transmission rate 4800 BPS (bits per second)?
- 3. Is the computer's bit configuration correct?1 start bit, 8 character bits, 2 stop bits, no parity.

2-2. CONTROL OPERATION

Most computers handle data in the form of "bits", and "bytes". A bit is the smallest piece of information that the computer can handle. A byte is composed of 8 bits. This is the most convenient form for most computer data. This data may be sent in the form of either serial or parallel data strings. The parallel mode is faster, but more complicated, while the serial form is slower it requires less complicated equipment, and therefore is less expensive.

Serial transmission of data occurs over a single line using time-division methods. This use of a single line also offers the advantage of reducing the number of errors due to line noise.

For control of the transceiver via the computer only three lines are theoretically required: transmit data (TXD), receive data (RXD), and ground (GND). From a practical standpoint it is also necessary to incorporate some means of controlling when this data transfer will occur. We don't want the computer and transceiver sending information at the same time! This is controlled by the RTS and the CTS lines.

The IF-232C is used in conjunction to provide voltage conversion. RS-232C deals in voltages above and below TTL levels, and must be converted to prevent damage to the transceiver. This interface/conversion is handled by the IF-232C.

The actual command sequence would be similar to those described below:

For example, the radio is placed into the transmit mode whenever the character string "TX" is sent from the computer. The character string "TX" is called a command. It tells the transceiver to do something. There are 33 different commands available for control of the transceiver. These commands may be incorporated into a computer program written in BASIC or any other high level language such as PASCAL, etc. Programming methods vary from computer to computer so please refer to the instruction manuals included with your terminal program, and computer.

2-3. COMMANDS

The illustration below demonstrates that a command is composed of two alphabetical characters, various parameters, and the terminator to signal the end of the command.

Example:

Command Parameters Terminator

2-3-1. Command Description

A command may consist of either lower or upper case alphabetical characters.

2-3-2. Parameter Description (Refer to the parameter list.)

Parameters are used to specify specific information necessary to implement the desired command. The exact number of parameters necessary for each command is predetermined. If a particular parameter is not applicable to the transceiver you are controlling the parameter digits should be filled using any character except the terminator ";".

For example the MC (Memory channel selector) command uses two parameters, 1 column to specify the memory bank number, and 2 columns to specify the memory channel number. To specify CH9 of memory bank number 1, the command would be:

"MC109:"	 The memory bank number is not
	necessary when programming the
	TS-790 so the command could be
	as given above "MC109" or as:
"MC_09;"	 In this case a blank has been used
	to fill the parameter block for the
	memory bank number.


The following are examples of bad commands:

"MC09;"	No memory bank specification (not
	enough parameters)
"MC19;"	Not enough digits in the memory
	channel parameter, i.e. CH9 should
	be given as "09".
"MC_1_09_;"	Unnecessary characters between
	parameters.
"MC1009"	No terminator

2-3-3. Terminator

To signal the end of a command it is necessary to use a special character. The character that has been selected for use is the semicolon ";". This special character must appear as the last character in a particular command string.

2-3-4. Types of Commands

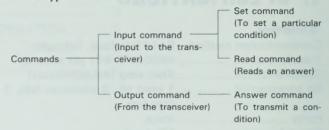

Commands can be classified as shown in the chart above. For example, with the FA (Frequency of VFO A) command.

- To set the frequency at 144 MHz, the command sent from the computer to the transceiver is: "FA00144000000;"(Set command)
- To read the frequency of VFO A, the command sent from the computer to the transceiver is:
 "FA:"......(Read command)
- When the read command, above, has been sent, the command returned to the computer is:
 "FA00144000000;"(Answer command)

2-3-5. Error Messages

In addition to the answer command, the transceiver will send one of the following error messages:

?;	 When the command syntax is incorrect. When the command was not executed due to the current status of the transceiver, even though the command syntax was correct. Note: Occasionally this message may not appear due to microprocessor transients in the transceiver.
E;	When a communication error occurs, such as an over- run error or framing error occurs during serial data transmissions.
0;	When the receive data is sent but processing cannot be completed.

2-3-7. Parameter list

Format No.	Name	Number of columns	Format
1	SW	1	0 = OFF 1 = ON
2	MODE	1	1 = LSB 4 = FM 2 = USB 7 = CWN 3 = CW
3	FUNCTION	1	0 = VFO A 2 = MEMORY 1 = VFO B 3 = CALL
4	FREQUENCY	11	Represented in Hz, using 11 columns. Example: 00144000000 is 144 MHz 10 GHz 1 MHz 1 kHz 1 Hz
5	RIT FREQUENCY	5	The first column is "+" or "-", and the remaining four columns indicate the frequency in Hz. Example: +5320 is +5.32 kHz
6	STEP FREQUENCY	5	Represented in Hz, using 5 columns.
7	MEMORY CHANNEL	2	Represented in two columns. Example: 02 is CH2
8	-	-	
9	MEMORY CHANNEL SPLIT SPECIFI- CATION	1	0 = Receive 1 = Transmit
10	MEMORY LOCKOUT	1	O = Not locked out 1 = Locked out
11	TX/RX	1	0 = Receive 1 = Transmit
12	_	_	
13	OFFSET	1	0 = SIMPLEX 2 = - 1 = +
14	TONE FREQUENCY	2	Represented using two columns, from 01 to 38.
15	_	-	
16	MODEL NO.	3	Three column number specifying each set.
17	_	-	
18	=	-	
19	-	-	
20	BUSY Indicator	1	0 = OFF 1 = ON
21	DESTINATION CODE	1	0 = MAIN 1 = SUB
22	S METER (SUB)	4	0000 (MIN) ↔0015 (MAX)

2-3-8. Command Use Precautions

- 1. The control characters (00 to 1FH) when included in receive data are ignored.
- 2. Program execution may be delayed during rapid encoder rotation.
- 3. Receive data is not processed when directly entering the frequency from the keyboard.
- 4. To enter the transmitter frequency for split frequency operations using the MW command, enter any number from 1 thru 7 as the mode and either a "O" or a "1" to indicate the memory channel lockout statue.

2-3-9. Command List

Command	Function	Page
Al	AUTO INFORMATION	7
BY	BUSY	7
CN	CTCSS No.	8
CT	CTCSS	8
DC	DESTINATION CODE	9
DN/UP	DOWN/UP	9
FA/FB	FREQUENCY VFO A/FREQUENCY VFO B	10
FN	FUNCTION	10
ID	ID	11
IF	INFORMATION	11
LK	LOCK	12
LT	AUTO LOCK TUNE	12
MC	MEMORY CHANNEL	13
MD	MODE	13
MR	MEMORY READ	14
MT	MUTE	14
MW	MEMORY WRITE	15
OS	OFFSET	15
RC	RIT CLEAR	16
RD/RU	RIT DOWN/RIT UP	16
RT	RIT	17
RX/TX	RX/TX	17
SC	SCAN	18
SM	S METER (SUB)	18
SP	SPLIT	19
ST	STEP	19
TN	TONE NUMBER	20
ТО	TONE	20
VR	VOICE RECALL	21

AI AUTO INFORMATION

Ap	plicable	models	TS-	790A/	790E									Paramet	er	Forma	t	Param	eter funct	tion
Function	AUTO	NFORM	MATIC	N OI	N/OFF	settir	ng							P1	1	1	9	Al	ON/OFF	
		1	2 ;	3 4	5	6	7	8	9	10	11	12	13							
	and	A	I P	1	;	1	,		,	,	1									
2	Set	14	15 1	6 1	7 18	19	20	21	22	23	24	25	26							
and community	00			1	.1	_1	.1	1	1	i		1								
		1	2 3	3 4	5	6	7	8	9	10	11	12	13							
2	Read					1				1		1								
	Read	14	15 1	6 1	7 18	19	20	21	22	23	24	25	26							
	00			-					1											
	The state of	1	2 3	4	5	6	7	8	9	10	11	12	13							
	and	1	FIF	or para	ameters	refer t	o "IF"	comn	nand		1									
	Answer command	14	15 1	6 1	7 18	19	20	21	22	23	24	25	26							
	1 00		,								,		,							
	swe	27	28 2	9 3	0 31	32	33	34	35	36	37	38	39							
3	An		i		1		,	1	1	,			,							

BY BUSY

Ap	plicable	models	T	S-790	DA/79	OE									Parameter	Fo	rmat	Paramet	er funct	ion
Function	BUSY	signal r	eado	out											P1		20	BUSY ON/OI	indica	tor
	р	1	2	3	4	5	6	7	8	9	10	11	12	13						
Input commands	Set	14	15	16	17	18	19	20	21	22	23	24	25	26						
comi		1	2	3	4	5	6	7	8	9	10	11	12	13						
ndu	diand	В	Y	;																
	Read	14	15	16	17	18	19	20	21	22	23	24	25	26						
_		1	2	3	4	5	6	7	8	9	10	11	12	13						
SDIR	and	В	Υ	P1	;		_			1	1	,								
	comm	14	15	16	17	18	19,	20	21	22	23	24	25	26	11					
Output commissions	Answer command	27	28	29	30	31	32	33	34	35	36	37	38	39						
Description		>																		

CN CTCSS No.

Ap	plicable r	nodels	Т	S-790	OA/79	OE									Parameter	Format	Param	eter function
Function	CTCS	S numb	oer s	select	tion a	and r	eado	ut							P1		CTCS	S tone fre-
		1	2	3	4	5	6	7	8	9	10	11	12	13				
	pc	С	N	Р	1	;									No.	Hz	No.	Hz
	Set		14			,				1	L	1			01	67.0	21	136.5
S	Set	14	15	16	17	18	19	20	21	22	23	24	25	26	02	71.9	22	141.3
Input commands	6														03	74.4	23	146.2
na	0														04	77.0	24	151.4
Ē															05	79.7	25	156.7
0		1	2	3	4	5	6	7	8	9	10	11	12	13	06	82.5	26	162.2
+	_	1	T	3	4		י		0	9	10	11	16	13	07	85.4	27	167.9
Da	_ =	C	N	;											08	88.5	28	173.8
=	na		15		1.7	10	10	00	0.1	00	00	0.4	05	00	09	91.5	29	179.9
	m Re	14	15	16	17	18	19	20	21	22	23	24	25	26	10	94.8	30	186.2
	Read														12	100.0	31	192.8
															13	103.5	32	203.5
															14	107.2	33	210.7
		1	2	3	4	5	6	7	8	9	10	11	12	13	15	110.9	34	218.1
ds	PC	С	N	Р	1										16	114.8	35	225.7
e e	la l		IV	F	1	;									17	118.8	36	233.6
Ë	E I	14	15	16	17	18	19	, 20	21	22	23	24	25	26	18	123.0	37	241.8
Ĕ	0														19	127.3	38	250.3
ŏ	2							1							20	131.8		
JUT	× ×	27	28	29	30	31	32	33	34	35	36	37	38	39				
Output commands	Answer command																	
Description	Pleas	e note 1	that	the s	97.4	Hz T	one (does	not f	uncti	on fo	r ded	ode	purpos	ses.		letine b	er (t)

CT CTCSS

Ар	plicable r	nodels	T:	S-790)A/79	OE									Parameter	F	ormat	Paramete	er funct	ion
Function	CTCS	S ON/O	FF s	selec	tion	and r	eado	ut							P1		1	стсѕѕ	ON/O	-F
	pu	C	2 T	3 P1	4	5	6	7	8	9	10	11	12	13						
mands	Set	14	15	16	17	18	19	20	21	22	23	24	25	26						
Input commands	Pu	1 C	2 T	3	4	5	6	7	8	9	10	11	12	13						
	Read	14	15	16	17	18	19	20	21	22	23	24	25	26						
0	T.	1	2	3	4	5	6	7	8	9	10	11	12	13						
Output commands	man	C,	Т	P1	i			1			1									
	com	14	15	16	17	18	19	20	21	22	23	24	25	26						
	Answer command	27	28	29	30	31	32	33	34	35	36	37	38	39						
5	Ans									1										
Description	7																			

DC DESTINATION CODE

Ap	plicable	models		TS-79	DA/79	OE									Parameter	Format		Paramet	er function
Function	DEST	INATIO	ON C	ODE	selec	tion	and i	reado	ut						P1	21	DESTINATION CODE		
		1	2	3	4	5	6	7	8	9	10	11	12	13					
	and	D	C	P1	;		1		1			1							
Input commands	Set	14	15	16	17	18	19	20	21	22	23	24	25	26	11 11				
103		1	2	3	4	5	6	7	8	9	10	11	12	13					
ibar	and	D	C	;			,		1	[,	I	1	1					
=	Read	14	15	16	17	18	19	20	21	22	23	24	25	26					
	-	1	2	3	4	5	6	7	8	9	10	11	12	13					
2	pui	D	C	P1					0		10	- 11	- 12						
B	comma	14	15	16	17	18	19	20	21	22	23	24	25	26					
Output commands	Answer command	27	28	29	30	31	32	33	34	35	36	37	38	39					
Describtion																			

DN	UP	DOWN/UP

Ар	plicable	models	TS-7	90A/79	90E									Para	ameter	F	ormat	Paramete	r functi	on
Function	Same	function	as mi	croph	one U	IP/DC	OWN	swite	ch					-46						
			2 3	4	5	6	7	8	9	10	11	12	13							
	and	DN UP	;		1					1		1	,							
Input commands	Set	14	15 16	17	18	19	20	21	22	23	24	25	26							
ıt com	-	1	2 3	4	5	6	7	8	9	10	11	12	13							
ndul	Read	14	15 16	17	18	19	20	21	22	23	24	25	26							
ds	pu	1	2 3	4	5	6	7	8	9	10	11	12	13							
Output commands	Answer command	14	15 16	17	18	19	20	21	22	23	24	25	26							
COL	r co			1,	1		1		,	1										
put	swe	27	28 - 29	30	31	32	33	34	35	36	37	38	39							
Onl	An		1		1	1	1			1	1	1								
Description														,						

FA FB FREQUENCY VFO A/FREQUENCY VFO B

Ap	plicable r	models		TS-790	DA/79	0E									Parameter	For	mat	Paramete	r function	n
Function	VFO A	A and	VFO	B fre	quen	cy se	electi	on ar	nd rea	adout	t				P1		4	FREQU	JENCY	
		1	2	3	4	5	6	7	8	9	10	11	12	13						
	and	F	A B		ı	1		P1			ï	1	1							
ds	Set	14	15	16	17	18	19	20	21	22	23	24	25	26						
input commands	00	;		1	1					1	1		1							
5 -															-					
3	Ф	1 <u>F</u>	A B	3	4	5	6	7	8	9	10	11	12	13						
=	Read	14	B 15	16	17	18	19	20	21	22	23	24	25	26						
	Re	14	13	10	17	10	19	20	- 41	44	23	24	23	20						
		1		1	1	1	1	1	1	1	1	1	1							
		1	2	3	4	5	6	7	8	9	10	11	12	13						
	and	F	A . B			1		P1:		1	1	1	1							
	Answer command	14	15	16	17	18	19	20	21	22	23	24	25	26						
	00 1			1				1			1	1	1							
2	SWe	27	28	29	30	31	32	33	34	35	36	37	38	39						
3	An							1	1	1	1	1								
+																				
Describition																				
200																				

FN FUNCTION

Ap	plicable	models		TS-790	DA/79	OE				-					Parameter	For	mat	Parame	ter functi	on
Function	VFO	A and \	/FO	ВМЕ	MOF	RY C	ALL s	settin	g					NA C	P1	,	3	FUN	CTION	1
	t nand	F ,	2 N	3 P1	4	5	6	7	8	9	10	11	12	13						
Input commands	Set	14	15	16	17	18	19	20	21	22	23	24	25	26						
nput coi	and	1	2	3	4	5	6	7	8	9	10	11	12	13						
	Read	14	15	16	17	18	19	20	21	22	23	24	25	26						
spue	land	1	2	3	4	5	6	7	8	9	10	11	12	13						
Output commands	Answer command	14	15	16	17	18	19	20	21	22	23	24	25	26						
Output	Answe	27	28	29	30	31	32	33	34	35	36	37	38	39						
Description	7																			

ID ID

Ар	plicable	models	TS-7	90A/79	OE									Parameter	Format	Parameter function
Function	Mode	el No. rea	adout f	or trar	sceiv	er re	cogn	iztior	۱.					P1	16	MODEL No. TS-790 : 007
	pu	1	2 3	4	5	6	7	8	9	10	11	12	13			
mands	Set command	14	15 16	17	18	19	20	21	22	23	24	25	26			
Input commands	Pu	1	2 3 D ;	4	5	6	7	8	9	10	11	12	13			
lu	Read		15 16	17	18	19	20	21	22	23	24	25	26			
**		1	2 3	4	5	6	7	8	9	10	11	12	13			
ands	nand	1	D	P1		;										
mmos	command	14	15 16	17	18	19	20	21	22	23	24	25	26			
Output commands	Answer	27	28 29	30	31	32	33	34	35	36	37	38	39			
Description																

IF INFORMATION

A	plicable	models	TS-7	90A/79	90E									Parameter	Format	Parameter function
č	Dianl	ay of tra	nanaiya	ro ou	rront	cond	ition							P1	4	DISPLAY FREQUENCY
otio	Dispi	ay or tra	lisceive	is cu	Helli	COHU	ILIOII							P2	6	STEP FREQUENCY
Function														P3	5	RIT FREQUENCY
		T												P4	1	RIT ON/OFF
		1	2 3	4	5	6	7	8	9	10	11	12	13	P5		
	pu													P6		1
	Set	14	15 16	17	18	19	20	21	22	23	24	25	26	P7	7	MEMORY CHANNEL
Ď	Smo		10. 10		10					20	21	20	- 20	P8	11	TX/RX
0	O							. 1						P9	_ 2	MODE
=														P10	3	FUNCTION
5		1	2 3	4	5	6	7	8	9	10	11	12	13	P11	1	SCAN ON/OFF
input commissions	pu	1	F ;											P12	1	SPLIT ON/OFF
Ξ	Read	14	15 16	17	18	19	20	21	22	23	24	25	26	P13	1	TONE ON/OFF
	Read	14	10	11	- 10	15	20	21	22	20	24		20	P14	14	TONE FREQUENCY
	O				1							_		P15	13	OFFSET
		1	2 3	4	5	6	7	8	9	10	11	12	13			
2	pur		F				P1									
0	command	14	15 16	17	18	19	20	21	22	23	24	25	26			
5	COL		P2					Р3			P4					
5	Ver	27	28 29	30	31	32	33	34	35	36	37	38	39			
d no	Answer	P7	P8	P9	P10	P11	P12	P13	Р	14	P15	ï				
Description Output commands	An	P/	P8	P9	P10	P11	P12	[P13]		14	P15	;				

LK LOCK

Ap	plicable	models	T	S-790	A/79	OE									Parameter	Format	Parameter function
Function	LOCK	ON/OF	F se	tting	and	displ	ay								P1	1	LOCK ON/OFF
	put	1 L	2 K	3 P1	4	5	6	7	8	9	10	11	12	13			
Input commands	Set	14	15	16	17	18	19	20	21	22	23	24	25	26			
ibar com	pue	1 L	2 K	3	4	5	6	7	8	9	10	11	12	13			
=	Read	14	15	16	17	18	19	20	21	22	23	24	25	26			
0	D	1	2	3	4	5	6	7	8	9	10	11	12	13	_		
	omman	14	K 15	P1	;	18	19	20	21	22	23	24	25	26			
Cuthut commissions	Answer command	27	28	29	30	31	32	33	34	35	36	37	38	39			
Describitori																	

LT AUTO LOCK TUNE

Ар	plicable	models	TS-7	90A/79	OE									Parameter	Format	Parameter function
Function	AUT	O LOCK	TUNE	ON/OF	F sel	ection	n and	reac	dout					P1	1	ALT ON/OFF
		1	2 3	4	5	6	7	8	9	10	11	12	13			
3	Set	L.	T P	1 ;						1						
ds	Set	14	15 16	17	18	19	20	21	22	23	24	25	26			
man	S									1						
Input commands		1	2 3	4	5	6	7	8	9	10	11	12	13			
put	pu	L	Т ;													
드	Read	14	15 16	17	18	19	20	21	22	23	24	25	26			
	COL		1													
-		1	2 3	4	5	6	7	8	9	10	11	12	13			
spui	and	L	TP	1 ;												
Output commands	Answer command	14	15 16	17	18	19	20	21	22	23	24	25	26			
t co	er co		L	1		4			1		1					
ıtbn	NS W	27	28 29	30	31	32	33	34	35	36	37	38	39			
ő	Ā				1	A			1	1	L					
Description																

MC MEMORY CHANNEL

Ap	plicable	models	TS-	790A/7	90E									Parameter	Format	Parameter function
Function	Mem	ory chan	nel se	etting	,									P1 P2	7	MEMORY CHANNEL
	pue	1	0	3 4	5 P2	6	7	8	9	10	11	12	13			
mands	Set	14	15 1	6 17	18	19	20	21	22	23	24	25	26			
Input commands	рапф	1	2 3	3 4	5	6	7	8	9	10	11	12	13			
_	Read	14	15 1	6 17	18	19	20	21.	22	23	24	25	26			
spu	pue	1	2 3	3 4	5	6	7	8	9	10	11	12	13			
omma	comma	14	15 1	6 17	18	19	20	21	22	23	24	25	26			
Output commands	Answer command	27	28 2	9 30	31	32	33	34	35	36	37	38	39			
Description																

MD MODE

Ap	plicable	models	Т	S-790)A/79	0E									Parameter	Format	Parameter function
Function	Mode	e setting	•												P1	2	MODE
		1	2	3	4	5	6	7	8	9	10	11	12	13			
	t nand	M	D	P1	;												
mands	Set	14	15	16	17	18	19	20	21	22	23	24	25	26			
Input commands	g	1	2	3	4	5	6	7	8	9	10	11	12	13	-		
Inp	Read	14	15	16	17	18	19	20	21	22	23	24	25	26			
ds	pu	1	2	3	4	5	6	7	8	9	10	11	12	13	-		
omman	comma	14	15	16	17	18	19	20	21	22	23	24	25	26			
Output commands	Answer command	27	28	29	30	31	32	33	34	35	36	37	38	39			
Description																	

MR MEMORY READ

Ap	plicable	models	T:	S-790)A/79	0E									Parameter	Format	Parameter function
Function	Mem	ory disp	lay												P1	9	SPLIT SPECIFI- CATION
E															P2	_	-
	Set	1	2	3	4	5	6	7	8	9	10	11	12	13	Р3	7	MEMORY CHANNEL
nds	Se	14	15	16	17	18	19	20	21	22	23	24	25	26	P4	4	FREQUENCY
nma	O	L			·	1	L				1	L			P5	2	MODE
Input commands	pug	1 M	2 R	3 P1	4	5 P	6	7 ;	8	9	10	11	12	13	P6	10	MEMORY LOCKOUT
_	Read	14	15	16	17	18	19	20	21	22	23	24	25	26	P7	1	TONE ON/OFF
	00						1			1			1		P8	14	TONE FREQUENCY
		1	2	3	4	5	6	7	8	9	10	11	12	13	P9	13	OFFSET
Output commands	Answer command	M	R	P1			3				P4						
nma	mm	14	15	16	17	18	19	20	21	22	23	24	25	26			
COL	00 1		ı			P5	P6	P7	Р	8	P9	,					
put	, we	27	28	29	30	31	32	33	34	35	36	37	38	39			
Out	Ans												L				
Description 0		arameter	rs are	e set	to C)FF v	vhen	the n	nemo	ory c	hanne	l is v	acan	t.			

MT MUTE

Ар	plicable	models	TS-7	90A/79	90E									Parameter	Format	Parameter function
Function	MUTE	ON/OF	F selec	tion a	nd re	adou	t							P1	1	MUTE ON/OFF
	р	1	2 3	. 1	5	6	7	8	9	10	11	12	13			
	Set	M	TP	-	1	1	1	1				1				
Input commands	Set	14	15 16	17	18	19	20	21	22	. 23	24	25	26			
out com	pu	1 M	2 3 T ;	4	5	6	7	8	9	10	11	12	.13	_		
jul I	Read		15 16	17	18	19	20	21	22	23	24	25	26			
(0		1	2 3	4	5	6	7	8	9	10	11	12	13			
ands	nand	М	T P1	;		,		L	A							
mm	omn	14	15 16	17	18	19	20	21	22	23	24	25	26			
Output commands	Answer command	27	28 29	30	31	32	33	34	35	36	37	38	39			
Outp	Ansı			1	1	1				1	1	l.				
Description																

MW MEMORY WRITE

Ap	plicable	models	TS-79	0A/790	DE									Parameter	Format	Parameter function
Function	Memo	ory entry												P1	9	SPLIT SPECIFI-
		1	2 3	4	5	6	7	8	, 9	10	11	12	13	P2	_	_
sp	Set	M V	V P1	17	P 18	19	20	21	22	P4	24	25	26	Р3	7	MEMORY CHANNEL
man	00				P5	P6	P7		P8	P9	,			P4	4	FREQUENCY
com		1	2 3	4	5	6	7	8	9	10	11	12	13	P5	2	MODE
Input commands	Read		5 16	17	18	19	20	21	22	23	24	25	26	P6	10	MEMORY LOCKOUT
	R		1											P7	1	TONE ON/OFF
														P8	14	TONE FREQUENCY
spi	pu	1	2 3	4	5	6	7	8	9	10	11	12	13	P9	13	OFFSET
ommar	command	14 1	5 16	17	18	19	20	21	22	23	24	25	26			
Output commands	Answer	27 2	8 29	30	31	32	33	34	35	36	37	38	39			
Description	(2) V		effectiv split ch	e freq	luenc	у со	lumn	s are	"0"	, the	men	nory i	s set	to an open		eive frequencies,

OS OFFSET

Ap	plicable	models	TS-79	0A/79	0E									Parameter	Format	Parameter function
Function	OFFS	ET settin	g											P1	13	OFFSET
		1	2 3	4	5	6	7	8	9	10	11	12	13			
	and	0	S P1	;		1	ı	ı	1	1	ı		4			
ands	Set	14	15 16	17	18	19	20	21	22	23	24	25	26			
Input commands		1	2 3	4	5	6	7	8	9	10	11	12	13			
Input	Read	14	15 16	17	18	19	20	21	22	23	24	25	26			
	Con			1.	1		L	L	1	L						
spu	put	1	2 3	4	5	6	7	8	9	10	11	12	13			
omma	comme	14	15 16	17	18	19	20	21	22	23	24	25	26			
Output commands	Answer command	27	28 29	30	31	32	33	34	35	36	37	38	39			
Description	ď															

RC RIT CLEAR

Ар	plicable r	nodels	TS-	-790	A/790)E									Parameter	Format	Parameter function
Function	RIT fre	equency	clea	ranc	e												
	pu	1 R	2 C	3	4	5	6	7	8	9	10	11	12	13			
mands	Set	L		16	17	18	19	20	21	22	23	24	25	26			
Input commands	P	1	2	3	4	5	6	7	8	9	10	11	12	13			
dul	Read	14	15	16	17	18	19	20	21	22	23	24	25	26			
SDL	pui	1	2	3	4	5	6	7	8	9	10	11	12	13			
ommar	command	14	15	16	17	18	19	20	21	22	23	24	25	26			
Output commands	Answer	27	28	29	30	31	32	33	34	35	36	37	38	39			
Description	point		on the	e fro	nt pa												with the center trol before these

RD RU RIT DOWN/UP

Аp	plicable	models	TS-	790A/7	90E									Parameter	Format	Parameter function
LOUCHOU	RIT fr	equency	/ UP/E	OWN												
		1 RD		3 4	5	6	7	8	9	10	11	12	13			
	t iand	RU		;												
2	Set	14	15	16 17	18	19	20	21	22	23	24	25	26			
Para communication	ö			1				L				L				
		1	2	3 4	5	6	7	8	9	10	11	12	13			
	ad						L			1						
	Read	14	15	16 17	18	19	20	21	22	23	24	25	26			
				0 4						10		10	10			
	pue		2	3 4	5	6	7	8	9	10	11	12	13			
	command	14	15	16 17	18	19	20	21	22	23	24	25	26			
	Answer c	27	28	29 30	31	32	33	34	35	36	37	38	39			
	Ans					L				1	ı	1				
	Whe	n using t	these	comm	ands t	he ce	nter	frequ	ency	poin	t on	the R	IT con	trol may no	t coincide	with the center
	point	printed	on the	e front	panel.	The	cent	er po	int w	ill coi	ncide	with	the po	osition of th	e RIT con	trol before these

RT RIT

Ар	plicable	models	Т	S-790)A/79	0E									Parameter	Format	Parameter function
Function	RIT O	N/OFF s	setti	ng											P1	1	RIT ON/OFF
	-	1	2	3	4	5	6	7	8	9	10	11	12	13			
	et nanc	R	Т	P1	;					<u>. </u>	1						
mands	Set	14	15	16	17	18	19	20	21	22	23	24	25	26			
Input commands	P	1	2	3	4	5	6	7	8	9	10	11	12	13			
lnp	Read	14	15	16	17	18	19	20	21	22	23	24	25	26			
	00					l	1	1		1	1						
spu	pu	1	2	3	4	5	6	7	8	9	10	11	12	13			
Output commands	Answer command	14	15	16	17	18	19	20	21	22	23	24	25	26			
out co	wer o	27	28	29	30_	31	32	33	34	35	36	37	38	39			
Out	Ans						1	Į.	ı	l	l	l					
Description															1		

Ар	plicable	models	1	S-790)A/79	0E									Parameter	Format	Parameter function
Function	RX: F																
	PL	1 	2 RX TX	3 ;	4	5	6	7	8	9	10	11	12	13			
ands	Set	14	15	16	17	18	19	20	21	22	23	24	25	26			
Input commands	pı	1	2	3	4	5	6	7	8	9	10	11	12	13			
	Read	14	15	16	17	18	19	20	21	22	23	24	25	26			
200	nd	1	2	3	4	5	6	7	8	9	10	11	12	13			
ommar	command	14	15	16	17	18	19	20	21	22	23	24	25	26			
Output commands	Answer	27	28	29	30	31	32	33	34	35	36	37	38	39			
Description																	

SC SCAN

Ар	plicable	models	T	S-790	DA/79	OE									Parameter	Format	Parameter function
Function	Scan	ON/OF	F set	tting											P1	1	SCAN ON/OFF
	pu	s s	2 C	3 P1	4	5	6	7	8	9	10	11	12	13			
mands	Set	14	15	16	17	18	19	20	21	22	23	'24	• 25	26			
Input commands	pui	1	2	3	4	5	6	7	8	9	10	11	12	13			
n	Read	14	15	16	17	18	19	20	21	22	23	24	25	26			
spu	pue	1	2	3	4	5_	6	7	8	9	10	11	12	13			
omma	commis	14	15	16	17	18	19	20	21	22	23	24	25	26			
Output commands	Answer command	27	28	29	30	31	32	33	34	35	36	37	38	39			
Description															1		

SM S-METER (SUB)

Ap	plicable	mode	els		ΓS-790	DA/79	OE									Parameter	Format	Parameter function
Function	S-Me	eter s	sigr	nal o	utput	(SUI	B)									P1	22	S-Meter signal output (SUB)
	pu		1	2	3	4	5	6	7	8	9	10	11	12	13			
S	Set command		14	15	16	17	18	19	20	21	22	23	24	25	26			
Input commands	COL				1	,	L						1	1				
t con			1	2	3	4	5	6	7	8	9	10	11	12	13			
Inpu	ad			M	;		1					1						
	Read		14	15	16	17	18	19	20	21	22	23	24	25	26			
	ŏ						·				L	1						
			1	2	3	4	5	6	7	8	9	10	11	12	13			
ands	nand	1	S	M		Р	1		;		1	1		4				
ommo	comm	1	l 4	15	16	17	18	19	20	21	22	23	24	25	26			
Output commands	Answer command		27	28	29	30	31	32	33	34	35	36	37	38	39			
Out	Ans					1	1			1	L	J	4					
_																		
iptio																		
Description																		
۵																		

SP SPLIT

Ap	plicable	models	Т	S-79	0 A / 7 9	OE									Parameter	Format	Parameter function
Function	SPLI	T ON/OF	F se	etting	1 .										P1	1	SPLIT ON/OFF
		1	2	3	4	5	6	7	8	9	10	11	12	13			
	t land	S	Р	P1	;												
mands	Set	14	15	16	17	18	19	20	21	22	23	24	25	26			
Input commands	pu	1	2	3	4	5	6	7	8	9	10	11	12	13			
디	Read	14	15	16	17	18	19	20	21	22	23	24	25	26			
spue	land	1	2	3	4	5	6	7	8	9	10	11	12	13			
comme	сот	14	15	16	17	18	19	20	21	22	23	24	25	26			
Output commands	Answer command	27	28	29	30	31	32	33	34	35	36	37	38	39			
Description																	

ST STEP

Ар	plicable	models	TS-7	90A/79	90E									Parameter	Format	Parameter function
Function	STEP	ON/OFF	settin	g			·							P1	1	STEP ON/OFF
		r	2 3	4	5	6	7	8	9	10	11	12	13			
	and	S	T P1	;												
Spus	Set	14	15 16	17	18	19	20	21	22	23	24	25	26			
JITITIO				1	1		1					*				
input comminants	pu	1	2 3	4	5	6	7	8	9	10	11	12	13			
	Read	14	15 16	17	18	19	20	21	22	23	24	25	26			
	00				1											
2	p	1	2 3	4	5	6	7	8	9	10	11	12	13			
	Answer command	14	15 16	17	18	19	20	21	22	23	24	25	26			
Output commands	ver co	27	28 29	30	31	32	33	34	35	36	37	38	39			
Outh	Answ		1		- 01	02	- 00	1	1	1	1	1				
ption																
Description																

TN TONE NUMBER

Ар	plicable	models	TS	-790A	/790E									Parameter	Format	Param	eter function
Function	Sub-	tone fred	luenc	y set	ting									P1	14	TONE	FREQUENCY
		1	2	3	4	5 6	7	8	9	10	11	12	13				
	Set	T	N	P1		;								No.	Hz	No.	Hz
	Set						-							01	67.0	20	131.8
S	Sen	14	15	16	17 1	18 19	20	21	22	23	24	25	26	02	71.9	21	136.5
ŭ.	0													03	74.4	22	141.3
Input commands														04	77.0	23	146.2
Ē														05	79.7	24	151.4
00		1	2	3	4	5 6	7	8	9	10	11	12	13	06	82.5	25	156.7
+	73	_			-	0				10	- 11	12	10	07	85.4	26	162.2
p	T G													08	88.5	27	167.9
-	ng m	14	15	16	17 1	.8 19	20	21	22	23	24	25	26	09	91.5	28	173.8
	A E	14	13	10 .	17 1	.6 19	20	- 21		23	24	23	20	10	94.8	29	179.9
	Read													11	97.4	30	186.2
														12	100.0	31	192.8
											_			13	103.5	32	203.5
		1	2	3	4	5 6	7	8	9	10	11	12	13	14	107.2	33	210.7
ds	pu													15	110.9	34	218.1
an	Па	-				t	1							16	114.8	35	225.7
Ē	T.	14	15	16	17 1	.8 19	20	21	22	23	24	25	26	17	118.8	36	233.6
200	Ö													18	123.0	37	241.8
Ö	_						1	1						19	127.3	38	250.3
Output commands	Answer command	27	28	29 3	30 3	1 32	33	34	35	36	37	38	39		J		
Out	Ans																
no		L															
Description																	

TO TONE

Ap	plicable	models	TS-79	90A/79	90E									Parameter	Format	Parameter function
Function	TONE	ON/OFF	setting	3										P1	1	TONE ON/OFF
		1	2 3	4	5	6	7	8	9	10	11	12	13			
	Set	T) P1	;					1		1	ı				
ds	Set	14	5 16	17	18	19	20	21	22	23	24	25	26			
Input commands	00			1	<u></u>							1				
t con	-	1	2 3	4	5	6	7	8	9	10	11	12	13	-		
ndu	Read								1	1	1					
	Rea	14	5 16	17	18	19	20	21	22	23	24	25	26			
	00							ı			1					
S	ъ	1	2 3	4	5	6	7	8	9	10	11	12	13			
and	nan							1			ı	1				
mmc	command	14	5 16	17	18	19	20	21	22	23	24	25	26			
Output commands	Answer	27	8 29	30	31	32	33	34	35	36	37	38	39			
outp	\ns\															
	4		1	1	•				1	-						
Description							3.									

VR VOICE RECALL

Ар	plicable	models		TS-790	0A/79	0E									Parameter	Format	Parameter function
Function	Gene	ration o	fsy	nthes	sized	voice											
		1	2	3	4	5	6	7	8	9	10	11	12	13			
	t	V	R	;						1							
mands	Set	14	15	16	17	18	19	20	21	22	23	24	25	26			
Input commands	pu	1	2	3	4	5	6	7	8	9	10	11	12	13			
<u> </u>	Read	14	15	16	17	18	19	20	21	22	23	24	25	26			
S	p	1	2	3	4	5	6	7	8	9	10	11	12	13			
Output commands	Answer command	14	15	16	17	18	19	20	21	22	23	24	25	26			
but co	wer c	27	28	29	30	31	32	33	34	35	36	37	38	39			
Out	Ans				1	1				1		1	1				
Description	Requ	ires the	use	of th	he op	otiona	I VS	-2 Va	pice S	Synth	esize	r.					

MEMO:

KENWOOD