

KXB3080 MANUAL ERRATA

Rev. B-1, September 12, 2016

MAKE THESE CHANGES TO YOUR REV B MANUAL OR ANNOTATE THE TEXT TO REFER TO THIS ERRATA WHERE INDICATED.

1. **Page 1, Fine-tip temperature-controlled ESD-safe soldering station:** Change 0.13 mm to 1.3 mm.
2. **Page 11, replace the step beginning with “Enable both 30 and 80 meters...” with the following steps:**
 - With the power on, tap MENU and turn the VFO knob to locate the *b30* parameter.
 - Hold MENU until *OFF* is displayed on the LED.
 - Turn the VFO knob until *On* is displayed on the LED.
 - Tap MENU to return to the *b30* parameter display.
 - Tap the 2 switch to display the *b80* on the LED.
 - Turn the VFO knob to display *On* on the LED.
 - Tap MENU twice to exit the menu.