

# Control Panel Reference

(For details, refer to page numbers shown in parentheses)

**Power ON/OFF:** Hold both the **RATE** and **A/B** switches for 2 seconds (see “ON” label below the VFO A knob).

**Tap / Hold Functions,** e.g. **PRE** / **NR**: Tap to use the function labeled on or above a control; hold ½-sec for the function labeled below it.

**Numeric Keypad:** Twelve of the switches and knobs form a keypad (0-9/decimal/enter) for use with **FREQ**, etc.



## Receive

- ⊖ **AF/MON** AF gain (17); tone/monitor level (17)
- ⊖ **NB** Noise blanker (18)
- PRE** Preamp / attenuator (17)
- NR** Noise reduction (18)
- ⊖ **FIL** / **APF-AN** Filtering (17); APF (18); auto-notch (18)

## Transmit

- ⊖ **KYR-SPT/MIC** Keyer (19); Spot (21); Mic gain (19)
- ⊖ **PWR** Power level (19)
- ATU** ATU tune (19)
- PFn** Prog. switch functions (25)
- XMIT** TX/PTT (19)
- TUNE** CW carrier (19)

## VFO A / Band / Mode

- DATA** Data mode (27)
- TEXT** Text decode (29)
- MSG** Msg play (19, 30)
- REC** Msg record (19, 30)
- RATE** VFO tuning (16); ON/OFF (with **A/B**)
- FREQ** Freq. entry (15)

## VFO B / Misc.

- ⊖ **OFS/B** Coarse VFO tuning (16); VFO B (16)
- CLR** Clear RIT (16)
- RIT** Receive offset (16)
- SPLIT** Split RX/TX (30)
- DISP** Special disp. (23)
- MENU** Menu (14)