

**LDG AT-600ProII  
600W Automatic  
Antenna Tuner**



**LDG Electronics**

1445 Parran Road  
St. Leonard MD 20685-2903 USA

Phone: 410-586-2177

[ldg@ldgelectronics.com](mailto:ldg@ldgelectronics.com)

[www.ldgelectronics.com](http://www.ldgelectronics.com)

---

---

# Table Of Contents

Introduction	2
Jumpstart, or “Real hams don’t read manuals!”	3
Specifications	4
An Important Word About Power Levels	4
Important Safety Warning	4
Getting to know your AT-600Proll	5
<i>Front Panel</i>	5
<i>Back Panel</i>	6
Installation	7
Basic Operation	10
<i>Using the Front Panel Buttons</i>	10
<i>User Configuration Options</i>	10
<i>Transmitting and Receiving</i>	13
Tuning	14
<i>Basic Tuning Operation</i>	14
<i>Manual Memory Tune</i>	14
<i>Manual Full Tune</i>	15
<i>Bypass Mode</i>	16
<i>Error Indication</i>	16
Advanced Operation	18
<i>Manual Inductor/Capacitor Adjustments</i>	18
<i>High/Low Relay Adjustment</i>	18
<i>Manual Memory Store</i>	18
<i>Status Check</i>	19
Application Notes	20
<i>Mobile Operation</i>	20
<i>Internally Generated RF Noise</i>	20
<i>MARS/CAP Coverage</i>	20
<i>Operation with <u>DISCONTINUED</u> LDG Electronics M-600 External Meter</i>	21
<i>Tuning Hints</i>	21
Theory of Operation	21
<i>Some basic ideas about impedance</i>	21
<i>Transmitters, transmission lines, antennas, and impedance</i>	22
The LDG AT-600Proll	24
A Word About Tuning Etiquette	25
Care and Maintenance	25
Quick Reference	26
Technical Support	27
Two-Year Transferrable Warranty	27
Out Of Warranty Service	27
Returning Your Product For Service	27
Product Feedback	28

---

## INTRODUCTION

LDG pioneered the automatic, wide-range switched-L tuner in 1995. From its laboratories in St. Leonard, Maryland, LDG continues to define the state of the art in this field with innovative automatic tuners and related products for every amateur need.

Congratulations on selecting the LDG Electronics AT-600ProII 600-watt automatic tuner. The AT-600ProII provides full and semi-automatic antenna tuning across the entire HF spectrum plus 6 meters, at power levels up to 600 watts (250W on 6m). It will tune dipoles, verticals, Yagis, or virtually any coax-fed antenna. It will match an amazing range of antennas and impedances, far greater than some tuners you may have considered, including the built-in tuners on many transceivers.

The AT-600ProII is designed to handle 600 watts of output power and is ideal for use with small outboard linear amplifiers rated up to 600 watts, or even newer high power transceivers.

## JUMPSTART, OR “REAL HAMS DON’T READ MANUALS!”

Ok, but at least read this one section before operating the AT-600ProII:

1. Connect a 50-ohm coax jumper cable from the antenna jack on your amplifier to the **TX** jack on the back of the AT-600ProII. (This cable must be rated to 600 watts.)
2. Connect your antenna’s 50-ohm coax feedline to the **ANT 1** jack on the rear of the AT-600ProII.
3. Connect the supplied DC power cable to the jack marked **12 VDC**. Connect this cable to a DC source between 11-16 volts DC, 1000 mA. The jack center tip is positive.
4. Power up the transceiver and select the desired operating frequency and mode.
5. Bypass the amplifier.
6. Make sure Antenna 1 is selected (**ANT 2** LED is off). Press **ANT** to toggle.
7. Begin transmitting, any mode<sup>1</sup>.
8. When the tuning cycle is complete, activate the amplifier, and you’re ready to operate!

**Note:** With the amplifier active, it is suggested to place the AT-600ProII in semi-automatic tuning mode to avoid re-tuning at high power levels.

---

*1 In SSB mode, simply speak into the microphone while transmitting. Tuning may be performed at up to 125 watts of input power, provided that the transceiver employs a “roll-back” circuit to protect it from high SWR. For transceivers without roll-back circuits, power should be limited to 25 watts when tuning, to avoid damage to the transmitter or tuner.*

---

## Specifications

- 1 to 600 watts power range (SSB and CW), 250 watts PSK and digital modes, and 250 watts on 6 meters.
- Silver-Teflon SO-239 connectors.
- Over 4,000 memories for instantaneous band changing.
- Built-in 2-port antenna switch, with 2,000 memories each.
- Tuning time 0.2 to 15 seconds full tune, 0.2 seconds memory tune.
- 1.8 to 54.0 MHz coverage. Built-in frequency sensor.
- Tunes 6 to 1,000 ohm loads (16 to 150 on 6m).
- LED bargraph displays power level, SWR, and status.
- Antenna Indicator LED shows the currently selected antenna.
- Bypass Indicator LED shows when tuner is in pass-thru.
- User-selectable operating parameters: Auto/Semi mode, 600W/60W scale, and more.
- DC power cable included.
- Optional radio interface cables available. See web site for details.
- Power requirements: 11 to 16 VDC @ 1A max. 7mA when idle.
- Dimensions: 10.5”L x 8.5”W x 2.75H”
- Weight 3 pounds, 6 oz.

## AN IMPORTANT WORD ABOUT POWER LEVELS

The AT-600ProII is rated at 700 watts maximum power input *at most*. Many amplifiers output well over 750 watts. Power levels that significantly exceed specifications will definitely damage or destroy your AT-600ProII. If the tuner fails during overload, it could also damage your transmitter, amplifier, or transceiver. Be sure to observe the specified power limitations.

### IMPORTANT SAFETY WARNING

**Never install antennas or transmission lines over or near power lines. You can be seriously injured or killed if any part of the antenna, support, or transmission line touches a power line. Always follow this antenna safety rule: The distance to the nearest power line should be at least twice the length of the longest antenna, transmission line, or support dimension.**


---

## GETTING TO KNOW YOUR AT-600PROII

Your AT-600ProII is a quality, precision instrument that will give you many years of outstanding service; take a few minutes to get to know it.

### Front Panel

The front panel of the AT-600ProII features eight pushbuttons, two LED bargraph scales, and

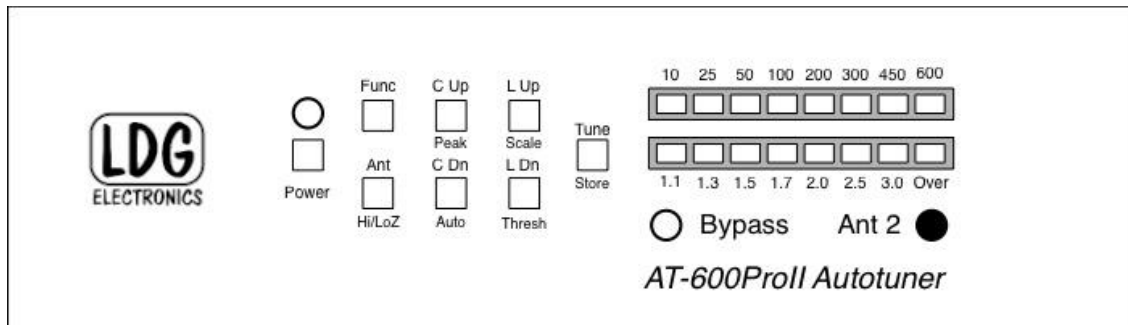

three indicator LEDs:

**Power:** Turns the unit on or off. The Power LED glows when the power is on.

**Func:** Activates secondary function of other buttons.

**Ant:** Selects the active antenna port.

**C Up:** Manually increase capacitance.

**C Dn:** Manually decrease capacitance.

**L Up:** Manually increase inductance.

**L Dn:** Manually decrease inductance.

**Tune:** Initiates memory or full tuning cycle. Momentary push places tuner in bypass.

**PWR Meter:** Bargraph display indicates forward power in 0-60- and 0-600-watt ranges.

**SWR Meter:** Bargraph display indicates SWR during tuning or transmission.

**Bypass LED:** Indicates Bypass mode is active.

**ANT 2 LED:** Lights when Antenna 2 is selected. Off when Antenna 1 is selected.


Each of the pushbuttons has the primary function listed above when pushed. Additionally, pressing the **FUNC** button before pressing any other button will activate that button's secondary function.

---

The power button on the AT-600ProII actually places the tuner in bypass and enters a low-power sleep mode, rather than turning the unit fully off. Press the Power button for 1 second to turn off, or momentarily to turn on.

### *Back Panel*

The rear panel of the AT-600ProII has seven jacks.

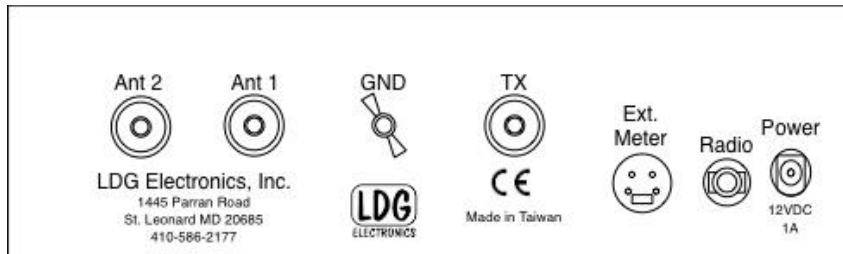

**Ant 1:** Connect a 50-ohm antenna coax feedline to this SO-239 connector. This jack is automatically disconnected when the AT-600ProII is turned off.

**Ant 2:** Connect a second 50-ohm antenna coax feedline to this SO-239 connector. This is the antenna jack that is active when the **ANT 2** LED is lit on the front panel. Also, this jack is active when the AT-600ProII is turned off.

**Gnd (wing nut):** Connect to the antenna system ground.

**Tx:** Connect a 50-ohm jumper coax from this jack to the ANT jack on the rear of the amplifier.

**Ext. Meter:** Connect the discontinued LDG M-600 External Meter to this jack or use for remote control via PC.

**Radio:** (optional) Connect the optional radio interface cable.

**Power:** Connect the supplied DC coaxial power cable to this connector and connect to a source of 11-16 VDC @ 1A. Center pin is positive.

---

## Installation

The AT-600ProII is intended for indoor use only; it is not water-resistant. If you use it outdoors, (Field Day, for example) you must protect it from rain. The AT-600ProII is designed for use with coax-fed antennas. If use with longwires or ladder-line-fed antennas is desired, an external balun rated to 600 watts is required.

Place the AT-600ProII in a convenient location near the transceiver and amplifier. Always turn your radio and amplifier off before plugging or unplugging anything. The radio may be damaged if cables are connected or disconnected while the power is on.

Connect the HF antenna jack on the amplifier to the **TX** jack on the back of the AT-600ProII, using a 50-ohm coax cable rated 600 watts or higher.

Connect a 50-ohm antenna feedline coax to the **ANT 2** jack on the back of the AT-600ProII, and optionally connect a second antenna feedline to the **ANT 1** jack. **NOTE: ANT 2 is automatically selected when no DC power is present.** This way, if you only have one antenna, it is automatically disconnected from your radio when the power is off.


The AT-600ProII is designed to interface directly with many popular ICOM and Yaesu transceivers, enabling one button tuning. In the case of ICOM radios, the supplied interface cable also powers the tuner.

For ICOM radios supporting the AH-3 or AH-4 external tuner, connect the 4-pin Molex connector of the optional IC-PAC ICOM interface cable to the radio's Tuner port. Then connect the 1/8" stereo plug on the other end of the ICOM interface cable to the jack marked **Radio** on the rear of the AT-600ProII. Connect the coaxial DC power plug of the ICOM interface cable to the **12V DC Power** jack.


For Yaesu FT-857 and FT-897, use the optional Y-ACC cable and plug the red end marked **Radio** into the transceiver's ACC port. Plug the black end of the Y-ACC cable into the jack marked **Radio** on the rear of the AT-600ProII.

Unless the AT-600ProII is being powered by the ICOM radio interface cable as above, you'll also need to plug in the supplied DC coaxial power cable. This cable has a 2.5x5.5mm coaxial plug on the end. Plug the coaxial plug into the **12V DC Power** jack on the rear of the AT-600ProII and connect the other end to a DC power source between 11-16 volts DC, capable of supplying up to 1A.


Grounding the AT-600ProII tuner will enhance its performance and safety. LDG recommends that you connect your tuner to a suitable ground. A common ground rod connected to buried radials is ideal, but a single ground rod can provide a serviceable ground. LDG strongly recommends the use of a properly installed, high quality lightning arrestor on all antenna cables.

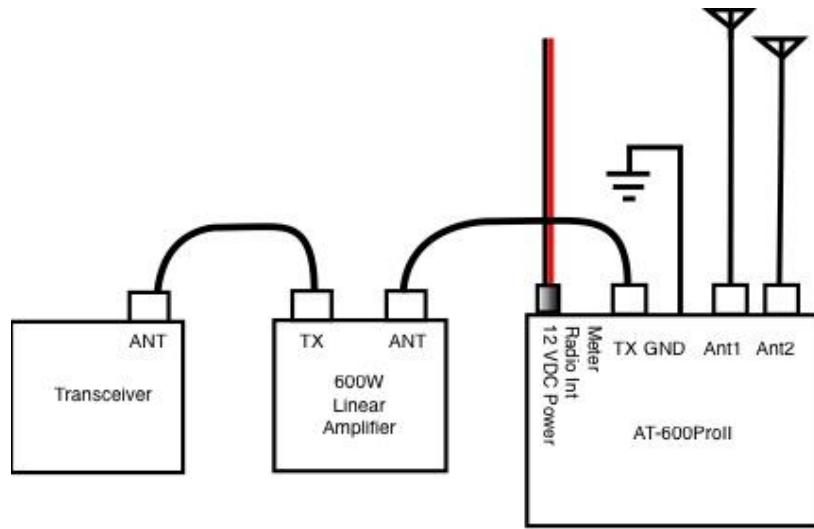

Typical Installation

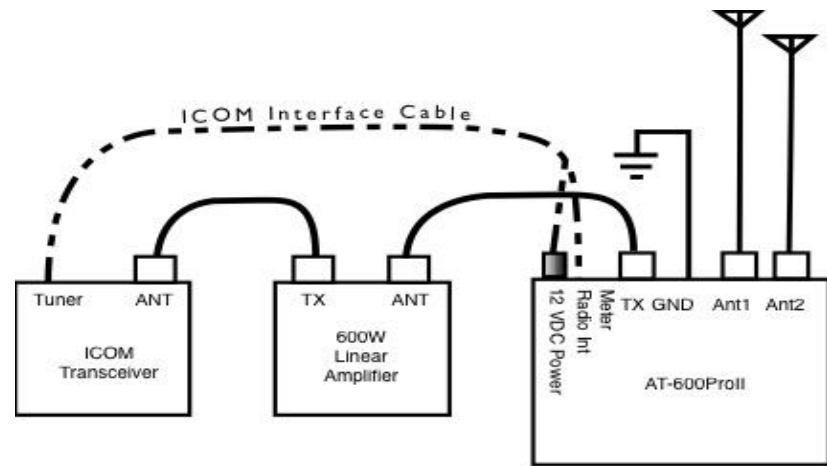

ICOM Installation

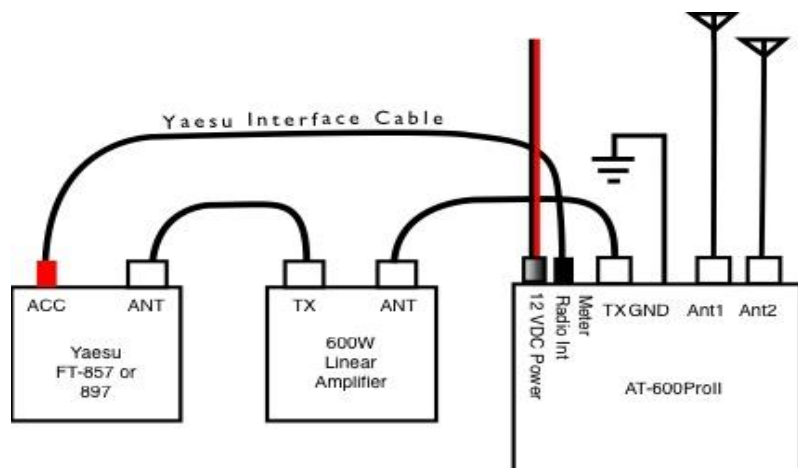

FT-857/897 Installation



---

## Basic Operation

### *Using the Front Panel Buttons*

All operations of the AT-600ProII are controlled via the front panel buttons. Although there are a total of eight buttons on the front panel, there are more than eight functions that can be carried out on the AT-600ProII. To accommodate the many functions of the AT-600ProII, the operation performed by pressing a particular button is determined by the manner in which the button is pressed, and no operation begins until the button is actually released.

The various types of button presses are described here:

**Momentary or short press:** The button is pressed and released immediately.

**Medium Press:** The button is held for one-half to 2.5 seconds, and then released.


**Long Press:** The button is held for more than 2.5 seconds, and then is released.

**FUNC -> Button:** The **FUNC** button is pressed first, and then the button is pressed momentarily and released. e.g.: **FUNC -> Ant** means “Press the **Func** button and release, and then press the **Ant** button and release.”

### *User Configuration Options*

The AT-600ProII offers several user-settable options that allow the behavior of the tuner to adapt to many different operating circumstances. Most of these options are accessed by placing the tuner in **Function** mode, which is done by pressing and releasing the **Func** button, and then pressing the desired button to activate the configuration option while in function mode.


To confirm entry into **Function** mode, the AT-600ProII will flash an “up arrow” on the LED display after the **Func** button is pressed.

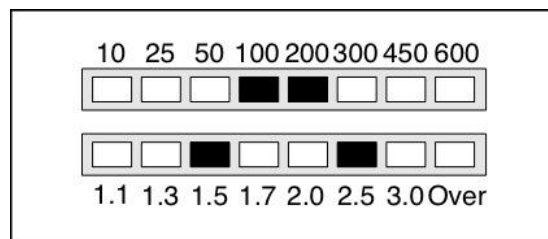

Function Mode On

---


Function mode times-out after a few seconds if no other button is pushed. Alternately, function mode can be cancelled by pressing the **Func** button again. In either case, when Function mode is exited, a “down arrow” is displayed on the LED display:

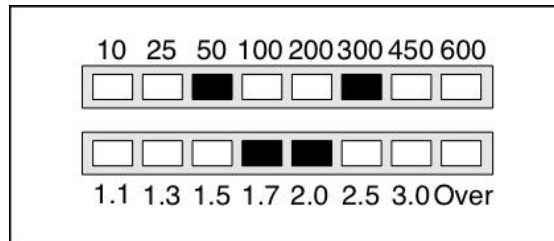

Function Mode Off


**Peak Mode On/Off:** The Power display on the LED bargraph can display either average power or peak forward power, in watts. Average mode is suitable for 100% duty cycle modes such as FM, RTTY, or PSK. Peak mode is more useful on modes with varying duty cycle such as SSB or AM. The factory default is average mode.

To toggle between power display modes, press **Func -> C Up** (Press and release **Func**, then press and release **C Up**). Peak mode is indicated by a falling meter display, with the highest power shown as a steady LED while the remaining LEDs fall back to zero. Average mode shows the same display, but without the steady LED showing. Press **Func -> C Up** repeatedly to toggle between Peak and Average modes.

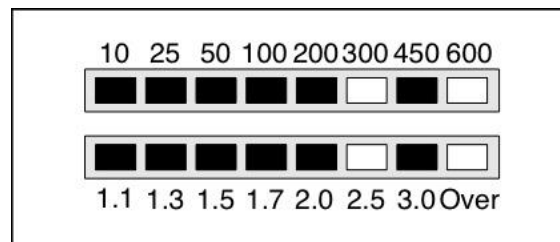


Peak Mode

**Wattmeter Scale:** The Power LED bargraph displays either 0 to 60 watts or 0 to 600 watts full scale. To toggle between these two scales, press **Func -> L Up**. The LED marked “50” or “600” will light momentarily to indicate the newly selected scale.

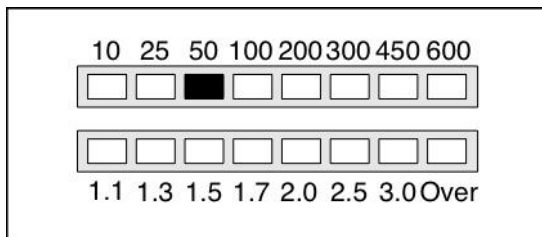


60 Watt Scale

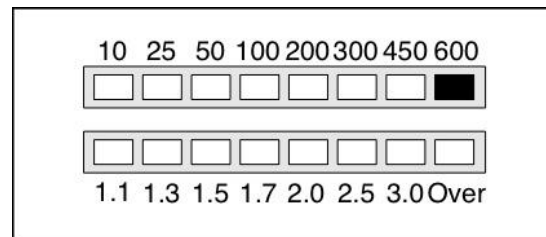


600 Watt Scale

**Automatic Tuning Mode:** The AT-600ProII may be set for either semi-automatic tuning or fully automatic tuning. In semi-automatic tuning mode, a tuning cycle will not begin unless specifically requested by pressing the **Tune** button. In fully automatic tuning mode, a tuning cycle will begin any time there is RF present and the SWR exceeds a pre-set level. The default setting is fully automatic tuning mode.

To toggle between semi- and fully automatic modes, press **Func -> C Dn**. The LED display will show one of the two patterns to indicate which mode has been selected:

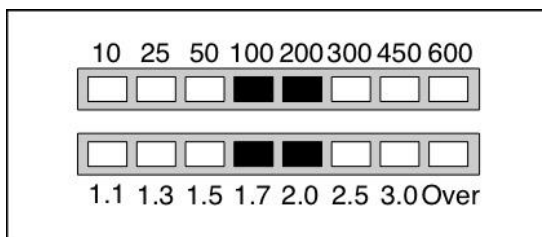

Auto Mode

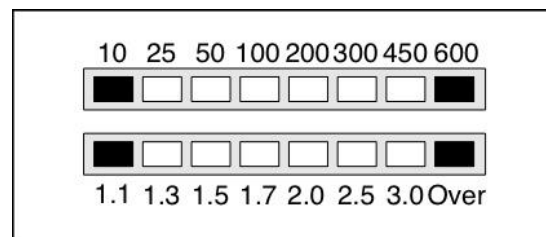


Semi Mode

**Automatic Tune SWR Threshold:** When the AT-600ProII is in fully automatic tuning mode, an automatic tuning cycle will begin any time RF is present and the SWR has exceeded a set threshold. This threshold is user-programmable to any value between 1.7:1 and 3.0:1. To set the automatic tune SWR threshold, press **Func -> L Dn** repeatedly (press **Func**, then **L Dn**; **Func**, then **L Dn**, and so on...) to cycle through all the options. The SWR threshold will be displayed on the SWR scale momentarily.

---

The default value of SWR threshold is 2.0:1. The following example shows setting the SWR threshold to 1.7:1.

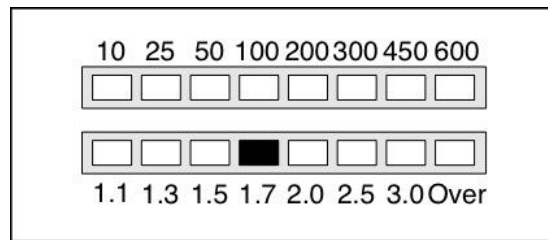

Auto Threshold

**Antenna Selection:** Press the **Ant** button momentarily to toggle which antenna port is currently active. The **ANT 2** LED will light when Antenna 2 is selected and is off when Antenna 1 is selected. When toggling the antenna selection, the previous tuning settings for the newly selected antenna are also recalled. This is useful when comparing antenna performance on the same frequency.

#### *Transmitting and Receiving*

During receive operation, only the antenna and bypass indicator LEDs are lit on the AT-600ProII. During transmit, the forward RF power level is displayed on the PWR bargraph, and the SWR is displayed on the SWR bargraph. Each PWR bargraph LED lights from halfway between the previous value and the next higher value. For example, the 100W LED lights from 75 watts to 150 watts. If the power is 151 watts, then the 200W LED lights, as well.

When reading the SWR bargraph, an illuminated LED on the graph means “The SWR is at least this much.” In other words, if the 1.3 LED is lit, it means that the SWR is between 1.3 and 1.5:1. No LEDs lit means the SWR is less than 1.1:1.

The **Bypass** LED lights any time that all the internal relays are in their de-energized state, meaning that no inductance or capacitance is being added to the antenna system by the tuner.

---

## TUNING

### *Basic Tuning Operation*

A tuning cycle on the AT-600ProII is initiated from either the **Tune** button on the front of the AT-600ProII, an over-SWR condition when in fully automatic tuning mode, or from pressing the **TUNER/CALL** button on the front of an ICOM radio connected using the ICOM interface cable. Two types of tuning cycles are available.

A **memory tuning cycle** attempts to tune quickly, based on having previously tuned on the present frequency selection. If the tuner previously was successful in tuning on the currently selected frequency, the settings from that match will be loaded into the tuner relays, and checked to see if an acceptable SWR level is found using these memorized settings.


Memory frequency step sizes vary with the selected band. Steps are very close together on the lower bands, to accommodate the typically higher-Q antennas for those bands, while step size is somewhat larger on the higher (17 meters and up) bands, where antenna Q is typically lower.

A **full tuning cycle** “starts from scratch,” and begins a fixed tuning sequence, where the AT-600ProII rapidly tries varying combinations of inductance and capacitance values, and then zeroes-in on the best match possible. When the tuning cycle is complete, if an acceptable match was found, the inductance and capacitance settings are saved in a memory associated with the selected frequency and antenna, so that they may be recalled quickly in the future via a memory tuning cycle.

In this manner, the AT-600ProII “learns;” the longer you use it, the more closely it adapts itself to the bands and frequencies you use. Most users will probably use memory tuning most of the time; it takes advantage of any saved tuning settings, but automatically defaults to a full tuning cycle if no stored data is available.

### *Manual Memory Tune*

To initiate a memory tuning cycle at any time, first, bypass the amplifier<sup>2</sup>. Press and hold the **Tune** button for 0.5 to 2.5 seconds (medium button press) and release. The LED bargraph display will show the following pattern to indicate a memory tune cycle is selected:

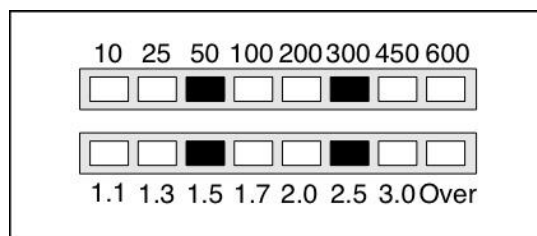

Medium Press > 0.5 sec

---

<sup>2</sup> Note that, while the AT-600ProII employs software that prevents it from tuning while transmitting over 150 watts, it is still a good idea to bypass your amplifier while tuning, as further protection against damage to the tuner.

---

If you are using the optional ICOM or Yaesu interface cable, your radio will automatically reduce power, switch to CW mode, and transmit for as long as is needed to complete the tuning cycle, and then will return to the previous operating mode and power level when done.


If you are not using the optional ICOM or Yaesu radio interface cable, you will need to key the radio manually in AM, SSB, or CW mode. Note that if your radio does not incorporate an SWR rollback circuit<sup>3</sup>, you will first need to reduce power to 25 watts or less. In no case should you transmit more than 150 watts during tuning.

If the memory tune is not successful, the AT-600ProII falls through to full tuning cycle. At the end of a tuning cycle, the LEDs cycle inwards to indicate a successful tune. You may then activate the amplifier and begin transmitting.

If using the AT-600ProII with an ICOM transceiver connected with the ICOM interface cable, pressing the **TUNER/CALL** button on the transceiver initiates a memory tuning cycle. Again, bypass the amplifier while tuning. The AT-600ProII will not tune if the transmit power is over 150 watts, or if the transmit power exceeds 100 watts during high SWR conditions, in order to protect the switching relays.

#### *Manual Full Tune*

As with the memory tuning cycle, if your radio is not equipped with a rollback circuit, reduce power to 25 watts or less before tuning. To explicitly initiate a full tuning cycle, press and hold the **Tune** button on the AT-600ProII front panel for more than 2.5 seconds. The LEDs will display the following pattern to confirm a full tuning cycle is requested:

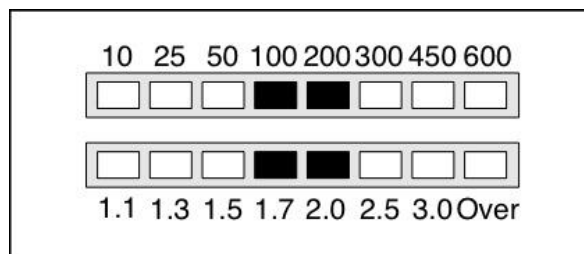

Long Press > 2.5 sec

If you are using one of the optional radio interface cables, the radio will automatically reduce power, switch to CW mode, and begin transmitting while the full tuning cycle is in progress. If not, key the radio (Talk into the mic on SSB or AM, close the key on CW) until the tuning cycle is complete. As with the memory tuning cycle, when the tuning cycle is complete, the LEDs will scan inward to indicate a successful tune.

---

<sup>3</sup> An SWR rollback circuit automatically reduces the output power level when high SWR is present. Check your radio's manual to see if your radio uses a rollback circuit.

---

### *Bypass Mode*

The AT-600ProII may be placed in Bypass Mode by pressing the **Tune** button momentarily (less than 0.5 second). Bypass places the tuner in a pass-thru configuration, where the tuner behaves like a coax jumper, not affecting the antenna match. When placed in Bypass Mode, the Bypass LED will light and the AT-600ProII is automatically put into Semi-Automatic Tuning Mode. Bypass may be useful for comparing the effect of the AT-600ProII's tuning versus the unmatched antenna system. Pressing **Tune** momentarily again will take the unit out of Bypass Mode (the LED will no longer be lit), and the relay settings of the previous match will be restored. The tuner will still be in Semi-Automatic Tuning Mode until you reset it to Automatic Tuning mode.

When the tuner is placed in Bypass mode, it will remain in bypass mode until either:

- a.) You re-enable Full Automatic Tuning mode.
- b.) You manually increment or decrement the inductor / capacitor settings.

If an ICOM radio and interface cable is used, the AT-600ProII may also be bypassed by pressing the **TUNER/CALL** button momentarily. On some models of ICOM radios, changing bands will also automatically bypass the tuner.

### *Error Indication*

When performing a tuning cycle, there are several conditions that may occur that cause the tune to fail. All are reported as an error, via blinking the front panel LEDs in a particular fashion. The following errors are reported:

**ERR\_NO\_MATCH:** Unable to find a suitable match. Upon completing an entire full tuning cycle, no combination of inductors and capacitors was able to bring the SWR below 3.5:1.

**ERR\_NO\_RF:** No RF power was present at the beginning of a tuning cycle. In other words, the **Tune** button was pressed to request a tune cycle, but the transmitter was not keyed up.


**ERR\_LOST\_RF:** RF power disappeared before the tuning cycle completed. You must continue to key the radio until the tuning cycle completes.

**ERR\_NO\_FREQ:** Unable to determine operating frequency. In order to store a memory match, the frequency of the transmitted RF must be known.


**ERR\_OVER\_PWR / ERR\_SWR\_PWR:** Relay protection activated. Because the relays may be damaged if they are switching during high power operation, software prevents the relays from toggling under certain conditions. Relays will not toggle if the SWR is over 3.0:1 and the power is over 100 watts and will not toggle if the power is over 150 watts regardless of the SWR.

The diagrams on the next page show what the various error indications look like.


The diagrams below show what the various error indications look like.

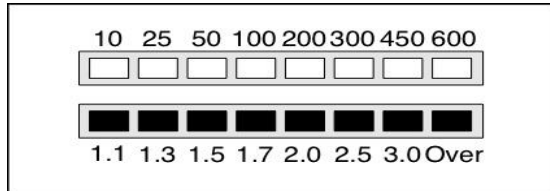


**ERR\_NO\_MATCH: SWR**  
LEDs blink twice

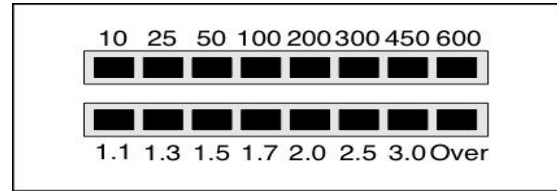


**ERR\_NO\_FREQ: All LEDs**  
blink twice

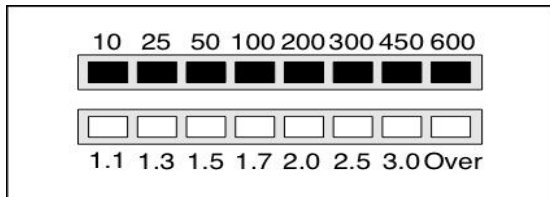

**ERR\_NO\_RF: Blink once**  
**ERR\_LOST\_RF: Blink twice**

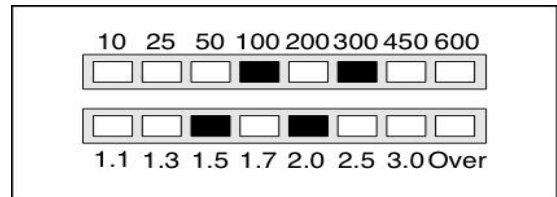


**ERR\_OVER\_PWR:**  
Center LEDs toggle

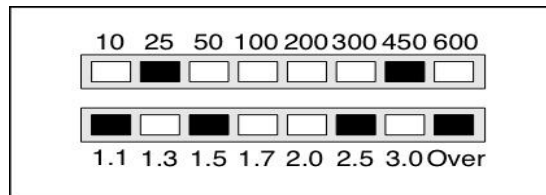

**ERR\_SWR\_PWR:**  
Outer LEDs toggle

Additionally, if the forward power exceeds the maximum value selected for the meter scale, the PWR LEDs will blink an over-range condition. The four right-most LEDs of the PWR bargraph will cycle during over-range.

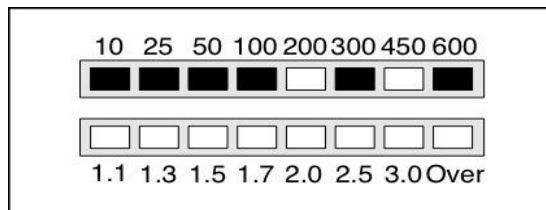

**Meter Over-scale:**  
Rightmost 4 LEDs toggle



---

## Advanced Operation

### *Manual Inductor/Capacitor Adjustments*


In some rare cases, after tuning, it may be desirable to adjust the inductance and capacitance settings that the AT-600ProII came up with during the tuning process. This is more likely to occur when attempting to tune an antenna far from its resonant frequency.

The **C Up**, **C Dn**, **L Up**, and **L Dn** buttons may be used to increase or decrease the amount of capacitance or inductance, respectively. The momentary press of any of these buttons increases or decreases the value by one unit, and displays the resulting value on the bargraph meter. Capacitance value is displayed on the SWR bargraph, and inductance on the PWR bargraph. These values are displayed in binary, left justified. The lowest-order relay is displayed on the leftmost LED. The rightmost LED on the PWR bargraph displays the state of the High/Low Impedance relay.


Repeatedly press one of these buttons to increase or decrease multiple times, or simply hold the button and the button will auto-repeat. You may also transmit while increasing or decreasing, so that the SWR value is displayed, but the capacitor and inductor values will not be displayed during transmit; instead, the power and SWR levels are displayed.

### *High/Low Relay Adjustment*

In addition to being able to manually control the inductor and capacitor value of the AT-600ProII, it is also possible to manually set the high/low impedance relay, which determines whether the tuner is an L-C configuration or a C-L configuration. To toggle the state of the high/low impedance relay, press **Func -> Ant**. The LED display will show one of two patterns to confirm the setting.

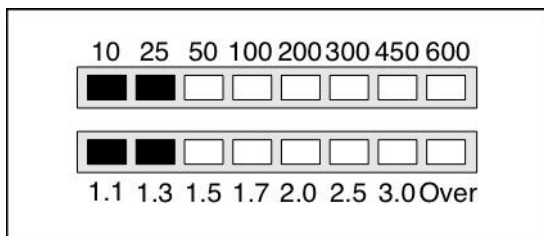

Low Impedance

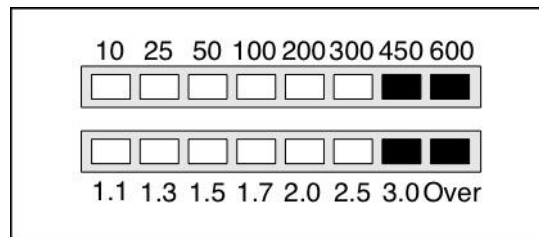

High Impedance


### *Manual Memory Store*

Once manual adjustments are complete, press **Func -> Tune** (that is, press **Func** momentarily, then **Tune** momentarily) to store the current relay settings in the memory associated with the frequency last transmitted upon.

### Status Check

The status of most user settings can be checked by pushing and *holding* the **Func** button while pressing the relevant button for that setting. For example, to check to see what the current SWR threshold value is, without changing the value, press and hold the **Func** button, and while still holding the **Func** button, press the **L Dn** (Thresh) button. The display will show the currently selected SWR threshold value.

While holding the **Func** button, the bargraph display will show the following pattern, to indicate that the AT-600ProII is waiting for you to push a button to check its status:

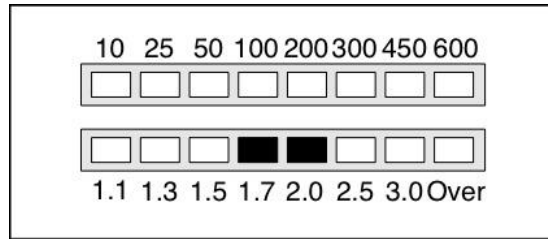

Function Hold

The following status items can be checked:

<i>Func Hold + This button</i>	<i>Status check</i>
<b>C Up / Peak</b>	Display Peak/Avg setting
<b>C Dn / Auto</b>	Display Auto/Semi setting
<b>L Up / Scale</b>	Display Power meter scale
<b>L Dn / Thresh</b>	Display SWR tuning threshold
<b>ANT / HiLoZ</b>	Display High / Low Impedance


---

## APPLICATION NOTES


### *Mobile Operation*

The AT-600ProII is perfectly suited to mobile operation. It can be installed under the dashboard along with the transceiver or mounted remotely. The only requirements are that the tuner remains dry, and that the power source is fused appropriately. A 2 amp “fast blow” fuse is recommended.

If the ICOM or Yaesu radio interface cable is needed for a remote installation, the optional cables can be extended in two ways. The original cable can be cut, and jumper wires soldered between all the connections, or new connectors can be purchased, and a pair of homebrew extender cables made with the new connectors.

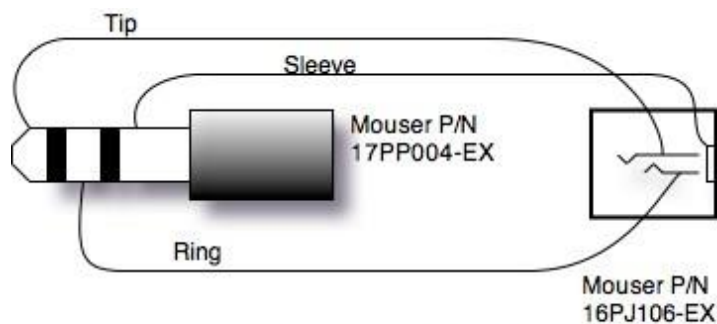

**Radio Interface Extender Cable**

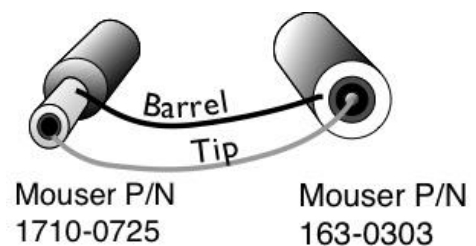

**DC Power Extender  
For ICOM Interface**

With the AT-600ProII mounted, for example, in the trunk, simply set the AT-600ProII for fully automatic mode. It will automatically tune any time the SWR exceeds the preprogrammed threshold. Although the LED display will not be visible in the trunk of the car, your transceiver’s built-in SWR meter will show the tuner’s progress. Remember to keep your eyes on the road, however! In most cases, a match will be recalled from memory, so the SWR will snap to a low value as soon as you begin to transmit.

### *Internally Generated RF Noise*

The AT-600ProII is microprocessor controlled, and as such, generates a small amount of RF noise when the processor is active. Normally, the processor is only active during transmit operation, so the noise is not normally heard; however, if Peak mode is selected, the processor remains active for a moment after key-up, to allow the LEDs to settle back down to zero. You may briefly hear some noise in your receiver during this time. This is normal and is noticeable the most when using CW in full break-in, with Peak mode selected. In practice, this should not be much of a problem, as Peak mode is not very useful when using CW.

### *MARS/CAP Coverage*

The AT-600ProII provides continuous tuning coverage from 1.8 MHz to 54.0 MHz, not just inside the ham bands. This makes it useful for MARS or CAP operation, or any other legal HF operation.

---

### *Operation with **DISCONTINUED** LDG Electronics M-600 External Meter*

The AT-600ProII has an external meter jack on the rear panel, which supports use of the **discontinued** M-600 External Meter. The M-600 External Meter is an optional accessory for the AT-600ProII that provides a large analog meter movement, and can be used to display Forward Power, Reflected Power, and SWR.

Be sure to turn off your AT-600ProII before plugging in or unplugging the M-600 External Meter.

The metered parameter displayed on the external meter need not be the same as the parameter selected for viewing on the AT-600ProII's built-in LED bargraphs, so it is possible to watch two parameters at once! Consult the M-600 External Meter user manual for more details.

### *Tuning Hints*

1.) The AT-600ProII is designed to allow fully automatic tuning, which causes a tuning cycle to begin any time the SWR exceeds the user-selected threshold. However, tuning is not allowed when the forward power exceeds a level that could damage the relays. If the AT-600ProII is left in fully automatic mode with the amplifier active, it is possible to begin a tuning cycle while transmitting high power in some circumstances, such as SSB transmission, where the power level begins at a low level and then increases with voice peaks.

Once the power level exceeds the relay protection threshold, the tuning cycle will stop, leaving the tuner in an un-tuned state. Because of this, LDG recommends switching the amplifier off before tuning, and then once tuning is complete, the AT-600ProII should be switched to semi-automatic mode (**FUNC -> Auto**) for as long as the amplifier is active, to prevent re-tuning under high power.

2.) Some transceivers employ a fairly aggressive SWR roll-back circuit, which reduces transmit power under high SWR conditions. It is possible, on a particularly mismatched antenna, for the transmit power of the transceiver to be reduced so low that the frequency counter circuitry of the AT-600ProII does not provide accurate information. For this reason, LDG suggests that you tune with 20 to 50 watts of transmit power if tuning seems erratic when transmitting with lower power levels. For many transceivers, this is a simple matter of switching the radio to AM or RTTY mode and keying the mic.

## **THEORY OF OPERATION**

### *Some basic ideas about impedance*

The theory underlying antennas and transmission lines is fairly complex, and in fact employs a mathematical notation called “complex numbers” that have “real” and “imaginary” parts. It is beyond the scope of this manual to present a tutorial on this subject<sup>4</sup>, but a little background will help in understanding what the AT-600ProII is doing, and how it does it.

---



<sup>4</sup> For a very complete treatment of this subject, see any edition of the ARRL Handbook for Radio Communications (previously the Handbook For Radio Amateurs).

---

In simple DC circuits, the wire resists current flow, converting some of it into heat. The relationship between voltage, current, and resistance is described by the elegant and well-known “Ohm’s Law”, named for Georg Simon Ohm of Germany, who first discovered the principle in 1826. In RF circuits, an analogous but more complicated relationship exists.

RF circuits also resist the flow of electricity. However, the presence of capacitive and inductive elements causes the voltage to lead or lag the current, respectively. In RF circuits, this resistance to the flow of electricity is called “impedance”, and can include all three elements: resistive, capacitive, and inductive.

The output circuit of a transmitter consists of inductors and capacitors, usually in a series/parallel configuration called a “pi network”. The transmission line can be thought of as a long string of capacitors and inductors in series/parallel, and the antenna is a kind of resonant circuit. At any given RF frequency, each of these can exhibit resistance, and impedance in the form

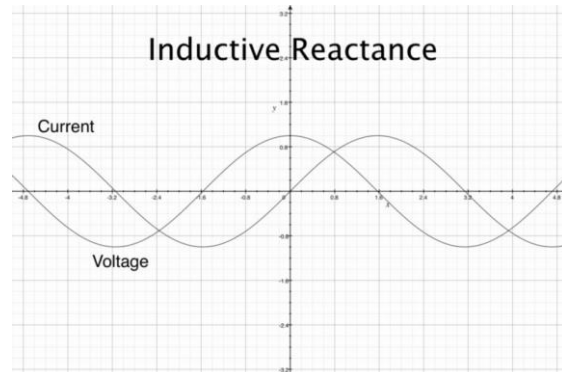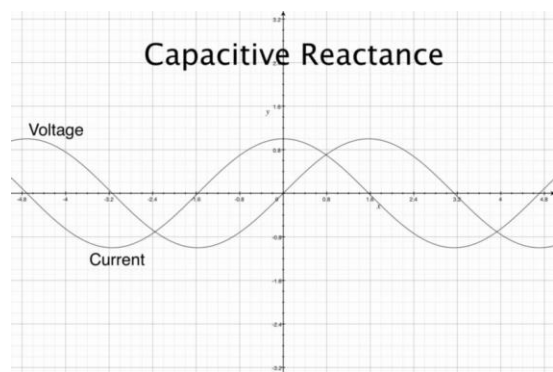

of capacitive or inductive “reactance”.

#### *Transmitters, transmission lines, antennas, and impedance*

The output circuit of a transmitter, the transmission line, and the antenna, all have a characteristic impedance. For reasons beyond the scope of this document, the standard impedance is nominally 50 ohms resistive, with zero capacitive and zero inductive components. When all three parts of the system have the same impedance, the system is said to be “matched”, and maximum transfer of power from the transmitter to the antenna occurs. While the transmitter output circuit and transmission line are of fixed, carefully designed impedance, the antenna presents 50-ohm, non-reactive load only at its natural resonant frequencies. At other frequencies, it will exhibit capacitive or inductive reactance, causing it to have an impedance other than 50 ohms.

When the impedance of the antenna is different from that of the transmitter and transmission line, a “mismatch” is said to exist. In this case, some of the RF energy from the transmitter is reflected from the antenna back down the transmission line and into the transmitter. If this reflected energy is strong enough, it can damage the transmitter’s output circuits.

The ratio of transmitted to reflected energy is called the “standing wave ratio”, or SWR. An SWR of 1 (sometimes written 1:1) indicates a perfect match. As more energy is reflected, the SWR increases to 2, 3, or higher. As a general rule, modern solid state transmitters must operate with an

SWR of 2 or less. Tube exciters are somewhat more tolerant of high SWR. If a 50 ohm antenna is resonant at the operating frequency, it will show an SWR close to 1. However, this is usually not the case; operators often need to transmit at frequencies other than resonance, resulting in a reactive antenna and a higher SWR.

$$SWR = \frac{1 + \sqrt{R/F}}{1 - \sqrt{R/F}} \quad \text{where } F = \text{Forward power (watts)}, R = \text{Reflected power (watts)}$$

SWR is measured using a device called an “SWR bridge”, inserted in the transmission line between the transmitter and the antenna. This circuit measures forward and reflected power from which SWR may be calculated (some meters calculate SWR for you). More advanced units can measure forward and reflected power simultaneously, and show these values and SWR at the same time.

An antenna tuner is a device used to cancel out the effects of antenna reactance. Tuners add capacitance to cancel out inductive reactance in the antenna, and vice versa. Simple tuners use variable capacitors and inductors; the operator adjusts them by hand while observing reflected power on the SWR meter until a minimum SWR is reached. The LDG Electronics AT-600ProII automates this process.

REV	FWD Power (watts)								
	20	30	40	50	60	70	80	90	100
2	1.92	1.70	1.58	1.50	1.45	1.41	1.38	1.35	1.33
4	2.62	2.15	1.92	1.79	1.70	1.63	1.58	1.53	1.50
6	3.42	2.62	2.26	2.06	1.92	1.83	1.75	1.70	1.65
8	4.44	3.14	2.62	2.33	2.15	2.02	1.92	1.85	1.79
10	5.83	3.73	3.00	2.62	2.38	2.22	2.09	2.00	1.92
12	7.87	4.44	3.42	2.92	2.62	2.41	2.26	2.15	2.06
14	11.24	5.31	3.90	3.25	2.87	2.62	2.44	2.30	2.20
16	17.94	6.42	4.44	3.60	3.14	2.83	2.62	2.46	2.33
18	37.97	7.87	5.08	4.00	3.42	3.06	2.80	2.62	2.47
20		9.90	5.83	4.44	3.73	3.30	3.00	2.78	2.62
22		12.92	6.74	4.94	4.07	3.55	3.21	2.96	2.77
24		17.94	7.87	5.51	4.44	3.83	3.42	3.14	2.92
26		27.96	9.32	6.17	4.85	4.12	3.65	3.32	3.08
28		57.98	11.24	6.95	5.31	4.44	3.90	3.52	3.25
30			13.93	7.87	5.83	4.79	4.16	3.73	3.42
32			17.94	9.00	6.42	5.18	4.44	3.95	3.60
34			24.63	10.40	7.09	5.60	4.75	4.19	3.80
36			37.97	12.20	7.87	6.07	5.08	4.44	4.00
38			77.99	14.60	8.80	6.60	5.44	4.71	4.21
40				17.94	9.90	7.19	5.83	5.00	4.44
42				22.96	11.24	7.87	6.26	5.31	4.68
44				31.30	12.92	8.65	6.74	5.65	4.94
46				47.98	15.08	9.56	7.27	6.02	5.22
48				97.99	17.94	10.63	7.87	6.42	5.51
50					21.95	11.92	8.55	6.85	5.83

No tuner will fix a bad antenna. If the antenna is far from resonance, the inefficiencies inherent in such operation are inescapable; it’s simple physics. Much of the transmitted power may be dissipated in the tuner as heat, never reaching the antenna at all. A tuner simply “fools” the transmitter into behaving as though the antenna were resonant, avoiding any damage that might otherwise be caused by high reflected power. For best performance, the antenna used should always be as close to resonance as is practical.

---

## THE LDG AT-600PROII

In 1995, LDG Electronics pioneered a new type of automatic antenna tuner. The LDG design uses banks of fixed capacitors and inductors, switched in and out of the circuit by relays under microprocessor control. An additional relay switches between high and low impedance ranges. A built-in SWR sensor provides feedback; the microprocessor searches the capacitor and inductor banks, seeking the lowest possible SWR. The tuner is a “Switched L” network, consisting of series inductors and parallel capacitors. LDG chose the L network for its minimum number of parts and its ability to tune unbalanced loads, such as coax-fed dipoles, verticals, Yagis, and, in fact, virtually any coax-fed antenna.

The series inductors are switched in and out of the circuit, and the parallel capacitors are switched to ground under microprocessor control. The high/low impedance relay switches the capacitor bank either to the transmitter side of the inductor bank, or to the antenna side. This allows the AT-600ProII to handle loads that are either greater than or less than 50 ohms. All relays are sized to carry 600 watts PEP.

The SWR sensor is a variation of the Bruene circuit. This SWR measuring technique is used in most dual-meter and direct-reading SWR meters. Slight modifications were made to the circuit to provide voltages instead of currents for the analog-to-digital converters that provide signals proportional to the forward and reflected power levels. The single-lead primary through the center of the sensor transformer provides RF current sampling. Diodes rectify the sample and provide a DC voltage proportional to RF power. These two voltages are read by the ADCs in the microprocessor, and are used to compute SWR in real time.

Although the microprocessor’s oscillator runs at 32 MHz, which allows the main tuning routine to execute in only a few milliseconds, the relays require several milliseconds of settling time for every combination of inductors and capacitors. Thus, it may take several seconds before all relay combinations are exhausted, in the case of a difficult tune.

The tuning routine uses an algorithm to minimize the number of tuner adjustments. The routine first de-energizes the high/low impedance relay if necessary, and then individually steps through the inductors to find a coarse match. With the best inductor selected, the tuner then steps through the individual capacitors to find the best coarse match. If no match is found, the routine repeats the coarse tuning with the high/low impedance relay energized. The routine then fine tunes the inductors and capacitors. The program checks LC combinations to see if a 1.5:1 or lower SWR can be obtained and stops when it finds a good match.

The microprocessor runs a fine tune routine just after the tuner finds a match of 1.5:1 or less. This fine tune routine now tries to make the SWR as low as possible (not just to 1.5); it takes about half a second to run.

---

## **A WORD ABOUT TUNING ETIQUETTE**

Be sure to use a vacant frequency when tuning. With today's crowded ham bands, this is often difficult. However, causing interference to other hams should be avoided as much as possible. The AT-600ProII's very short tuning cycle, as little as a fraction of a second, minimizes the impact of tuning transmissions.

## **CARE AND MAINTENANCE**

The AT-600ProII tuner is essentially maintenance-free. Power limits in this manual should be strictly adhered to. The outer case may be cleaned as needed with a soft cloth slightly dampened with household cleaning solution. As with any modern electronic device, the AT-600ProII can be damaged by temperature extremes, water, impact, or static discharge. LDG strongly recommends the use of a good quality, properly installed lightning arrestor in the antenna lead.



Quick Reference

<i>Button</i>	<i>Primary Function</i>	<i>Func -&gt; Button</i>	<i>Status Check (Func Hold + Button)</i>
<b>Tune</b>	Full Tune (Long Press) Memory Tune (Medium Press) Bypass (Short Press)	Manually Store Tuning Parameters	Display Relay Settings
<b>Ant</b>	Toggle Antenna Selection	Toggle High/Low Impedance	Display High/Low Impedance
<b>C Up</b>	Increase Capacitance	Toggle Peak / Average Power	Display PWR Meter Mode
<b>C Dn</b>	Decrease Capacitance	Toggle Auto / Semi Mode	Display Auto / Semi Selection
<b>L Up</b>	Increase Inductance	Set PWR Meter Scale	Display PWR Meter Scale
<b>L Dn</b>	Decrease Inductance	Set Auto Tuning SWR Threshold	Display Auto Tuning SWR Threshold
<b>Func</b>	Select Secondary Button Functions		

---

## **TECHNICAL SUPPORT**

The LDG customer support staff is ready to answer your product questions by telephone and by e-mail. We know that you will enjoy your product even more knowing LDG is ready to answer your questions as the need arises.

Visit the Support Center at: [ldgelectronics.com/support](http://ldgelectronics.com/support)

Our website links you to the on-line Customer Support Center where you can send us a question, do your own research in the LDG Product Knowledge Books, and read through lists of frequently asked product questions. LDG regularly updates on-line information so the best on-line support information is available all day and every day.

The LDG website provides links to product manuals, just in case you lose this one! When you are thinking about the purchase of other LDG products our website also has complete product specifications and photographs you can use to help make your purchase decision. Don't forget the links to all of the quality LDG Dealers also ready to help you make that purchase decision.

## **TWO-YEAR TRANSFERRABLE WARRANTY**

Your product is warranted against manufacturer defects in parts and labor for two full years from the date of purchase. This two-year warranty is also transferable. When you sell or give away your LDG product, give the new owner a copy of the original sales receipt and the two-year warranty goes with the new owner.

There is no need to complete a warranty card or to register an LDG product. Your product receipt establishes eligibility for warranty service, so save that receipt. Send your receipt with the product whenever you send your product to LDG for repair. Products sent to LDG without a receipt are considered requests for out-of-warranty repair.

LDG does not guarantee product damage or abuse. This means that a product failure, as determined by LDG, to be caused by the customer or by other natural calamity (e.g., lightning) is not covered under the two-year warranty. Damage can be caused by failure to heed the product's published limitations and specifications or by not following good Amateur practice.

## **OUT OF WARRANTY SERVICE**

If a product fails after the warranty period, LDG wants to help you get it fixed. Send the product to us for repair any time you like. We will determine what needs to be done and contact you with an estimate.

---

## RETURNING YOUR PRODUCT FOR SERVICE

Returning a product to LDG is easy. We do not require a return merchandise authorization. Visit the Customer Support Center: [www.ldgelectronics.com/support](http://www.ldgelectronics.com/support)

Download the LDG Product Repair Form. List all contact information including email address and all details of problems you are experiencing. For warranty service, please include a copy of your purchase receipt. After the unit is received and logged into our service department system, an email will be sent confirming your unit is in process.

Repairs can take three to four weeks but are usually faster. The most recent information on returning products for service is found at the LDG Customer Support Center.

Send your carefully packaged unit with the Repair Form to:

LDG Electronics, Inc.  
Attn: Repair Department  
1445 Parran Rd  
St. Leonard, MD 20685

## PRODUCT FEEDBACK

We encourage product feedback! Tell us what you really think of your LDG product. In a card, letter, or email (preferred) tell us how you used the product and how well it worked in your application. Send along a photo or even a schematic or drawing to illustrate your narrative. We like to share your comments with our staff, our dealers, and even other customers at the LDG website.

<http://www.ldgelectronics.com/>

