

Instructions for use:

1.Getting started

LC90 is powered by 2*18650 rechargeable lithium battery. A USB-Type-C cable is supplied in the package.

Press and hold the () button to power on.To shutdown the radio,press and hold the same button.

2.Charging battery

To charge the battery,connect the Type-C cable to 5V power adapter,You can use any mobile phone charger,The mobile quick charge protocol ensures that the output voltage of the charger will adjust to 5V when charging to radio,but **DO NOT USE THE CHARGER OF IPAD OR COMPUTER!**

Note:The charging might take much longer to complete if the radio is playing while charging.

3.Bluetooth playback

Press the BT () Key to make the radio enter bluetooth mode.

Open your device's bluetooth setting,and active the pairing mode,the device scans for bluetooth devices.

When the radio is found,your bluetooth device shows its name "Choyong-LC90",select the radio and connect it.

8

Then you can start playback on your bluetooth device,you can control the playback by the radio(next,previous,pause...ect).

The connection will be restored automatically when both devices are in range and the radio in bluetooth mode.

4.Software Update

There may be software release to upgrade features of the radio from time to time.Check the update regularly to keep your radio up to date with the latest software.

Caution:Do not do any operation during the upgrade progress!!! Or the radio will be damaged!

5.Telescopic antenna assist Middle Wave

An auxiliary middle wave receiving circuit is integrated in the radio,you can try to use telescopic antenna to increase the MW signal strength and to improve the performance of SNR ,espeacialy effective outdoors.

9

Trouble Shooting:

Problem	Solutions
Connect to the network successfully,but unable to play particular stations.	<ul style="list-style-type: none">The station is not broadcasting at this time of the day,remember it maybe located in a different time zone.The station has too many people trying to attach to.The station server capacity is not large enough.The internet connection between the radio and the radio station server is too slow or unstable to support the date rate of broadcast.The link of the radio is out of the date,please contact us to update the station list.
The radio got freeze or no response	Forced restart the radio,Press the () and hold for 5 seconds until the radio restarted (show white screen),then release the button.
Can not connect to Wi-Fi network	Confirm that the Wi-Fi can access the internet (i.e.can browse the web) using the same network.
Insufficient Wi-Fi signal strength	Check the distance to router,see if a computer/mobile phone can connect to the network in this location,if the signal is weak,please optimize the distance of the router's location.

10

Product Specification:

Model:	LC90	
Colour:	Space gray	
Weight:	640g	
Size:	200*122*40mm	
FM	Frequency	64-108MHz
	Step	10KHz/100KHz
LW	Frequency	153-279KHz
	Step	1KHz/9KHz
MW	Frequency	522-1710KHz
	Step	1KHz/9KHz/10KHz
SW	Frequency	2300-26100KHz
	Step	1KHz/5KHz
Speaker	15W	
Battery:	Replaceable and rechargeable 18650*2	
Network:	4G Band supported: FDD Band2/3/4/5/ TDD Band38/39/40/41.	
Bluetooth version:	5.2	
TF card:	Maximum 32 GB	
Earphone:	3.5mm jack	
Extenna Antenna:	3.5mm jack	

11

 
Important function tips:

How to connect Wi-Fi?

Press () button into the Wi-Fi setting page.Choose the Wi-Fi that you want to connect,then input the password.Use (VF/VM) to shift input method.(abc/ABC),you need to restart the radio to remember the password

How to add internet radio website?

Press () 'Add radio',will come out a QR Code.Use any QR Scan app on your phone,then type the website you want to listen.

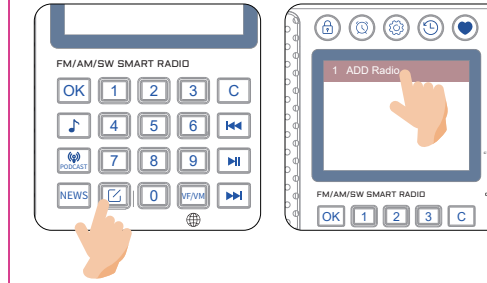

12



More details and operation tips,please check our instruction videos on Youtube:
<https://www.youtube.com/@choyongradio>

24 hour service Team please contact:
Choyongradio@gmail.com

Official Website:
<http://www.sz-chaoyuan.com>

 
13



Portable Multi-Band Internet Radio LC90 User Manual



Location of Controls:

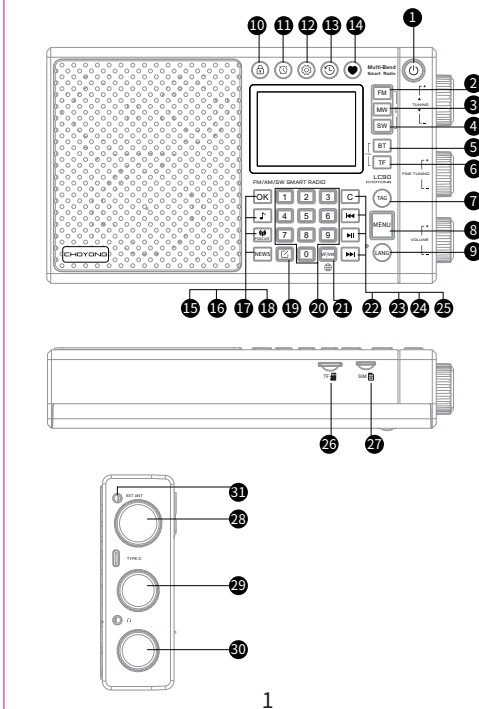

1

1.ON / OFF

Press 2 seconds to turn the radio ON/OFF,press 5 second till the white screen appeared to force restart the radio.

2.FM / Mode

A short press to enter FM mode.Press and hold 2 seconds to turn on FM ATS(Auto Searching and save) function

3.MW mode / LW mode

First short press to enter MW mode.in MW mode,press and hold 2 seconds to turn on MW ATS(Auto Searching and save) function.

If the radio is in MW mode,another short press will enter LW(Long Wave)mode,press and hold 2 seconds to turn on LW ATS(Auto Searching and save) function.

4.SW Mode

A short press to enter SW mode.Press and hold 2 seconds to turn on SW ATS(Auto Searching and save) function

5.Bluetooth Mode

A short press to enter Bluetooth mode,the radio will work as a bluetooth speaker.

2

6.TF Card mode

A short press to enter TF card mode.The radio need to restart after the TF-Card inserted.

7.Tag Button

Press this key to choose different internet radio stations by tag. like POP/NEWS/ MUSIC/ ROCK...

8.Menu button

Press Menu button to open the main menu.

9.Language mode

Press this key to choose different internet radio stations by language.like German, French, English etc...

10.Lock Button

Press this key to choose different internet radio stations by language.like German, French, English etc...

11. Clock Alert

Press this button to set the alarm clock,the scheduled power on/off,and the play time limit

12. Set UP

Press this key to enter the settings menu.

3

13.History

Press this key you will see the record of the radio stations you have listened.

14.Favorites

While playing,press this key to bookmark your favorite radio stations,When not playing press this key to view your favorite stations

15.Confirm button

Press this button for confirm what you choose.

16.Music stations shortcut key

Press this key will present a list of internet radio stations labeled with music.

17.Podcast stations shortcut key

Press this key will present a list of internet radio stations labeled with podcast.

18. News stations shortcut key

Press this key will present a list of internet radio stations labeled with NEWS.

4

19.Add / Edit stations

Press this key and follow the instructions you can add or edit the website of internet radio stations to local memory.

20.Number

By pressing these buttons, you can input the radio frequency,the password of Wi-Fi,and the numbers of the music in TF-Card for direct tuning.

21.VF / VM button

(1) Switch Input Method when inputing Wi-Fi password.
(2) Switch the function of the tuning knob when working in regular radio mode,VF---Switching frequency, VM---Switching saved frequency.

22.Retun button

Press this key back to Upper level.

23.Previous()

Press this key to shift to previous Song/Channel.

24. Pause button()

Press this key to Pause/Replay.

5

25.Next()

Press this key to shift to next Song/Channel.

26.TF card Slot

After insert a TF-Card and restart the radio,you can play the music that you have prepared in TF-Card.Supports a maximum of 32 GB TF-Card.
You can copy music to TF-Card or delete music by connecting the radio to a computer.

27.SIM Card slot

Support Nano Sim Card,you need to restart the radio after insert SIM-Card.

28.Multifunctional knob

(1) In regular radio mode use for tuning frequency by steps(FM 100KHz,MW 9/10KHz,SW 5KHz);A short press during playing will turn on the meter-band selection interface.
(2) In VM Mode use for switching saved frequency.
(3) In internet radio mode use for switching internet radio stations.
(4) A short press to confirm.
(5) In main menu interface use to select and confirm.

6

29.Fine Tuning knob

(1)In regular radio mode use for tuning frequency by fine steps(FM 10KHz,MW 1KHz,SW 1KHz);
(2)In favorite regular radios interface use for switching favorite radios.
(3)A short press during regular radio playing will adjust the receiving bandwidth.

30.Volume Control with switch

Tuning to increase or decrease volume
Rotate counter-clockwise until hear a 'click' sound,the radio will enter sleep mode.turn on the volume switch the machine will continue to play.

31.External antenna jack

Support 3.5mm plug external antenna,both active and passive antennas can be used .

7