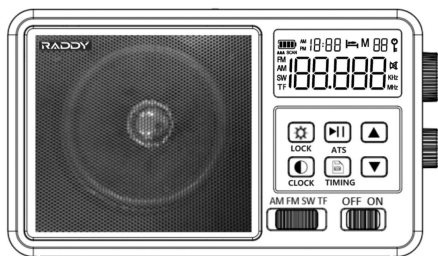


User Manual

Model: RF206

1: Product appearance diagram



Thank you for your purchase. Before using the product, we kindly ask you to carefully read this user guide and keep it in a safe place.

2: Brief Description of Product Features

This product uses software programming to achieve FM, medium wave, short wave, and full-band wireless radio reception, delivering excellent sound quality.

This device allows for wireless music playback through Bluetooth connectivity and supports music playback via TF and USB cards.

This product offers two power supply options: AC and DC.

This product features a large 4-inch, 4Ω, 8W speaker, delivering clear and powerful audio quality. It also supports headphone connectivity for private listening.

The large rotary knob is used for tuning radio stations, making the operation simple and easy to understand.

This product offers versatile functionality. In addition to the large tuning knob for station selection, it also features a station auto-tuning function, supporting both full-automatic radio station search and auto-search for radio stations.

This product offers the following features: scheduled power-on, sleep mode power-off, locking, and mute functions.

The LCD large screen displays various information, including the time, battery status, frequency, track number, playback time, and operating mode, providing users with clear operational instructions.













This product features backlighting for user convenience in low-light conditions, with adjustable brightness levels (standard and high brightness) available.

The radio function can memorize up to 110 radio stations (AM: 20, FM: 30, SW: 60).

It supports TF cards with a maximum capacity of 256GB and can play WMA, WAV, APE, and FLAC formats.

In Bluetooth/TF/USB music playback modes, you can pause playback, fast forward or rewind, and select the previous or next song.

3: Quickly Mastering the Functions of Each Button:

	<p>1: Switch to the "ON" position to power on the device. 2: Switch to the "OFF" position to power off the device.</p>
	<p>Mode Selection Button AM: Medium wave reception FM: FM reception SW: Shortwave reception TF: TF card/USB card playback mode</p>
 (Tuning Knob)	<p>In radio reception mode, use the rotary knob to select a radio station.</p>
 (Volume Knob)	<p>Rotate to adjust the volume level.</p>
<p>USB</p>	<p>Insert a 'USB' card to play music tracks stored on the USB card (Refer to details in Operation, Section 8).</p>
<p>TF</p>	<p>Insert a 'TF' card to play music tracks from the TF card (Refer to details in Operation, Section 8).</p>
	<p>1: Mode Switching -In the working mode, a light press toggles to Bluetooth playback mode, and the LCD displays the [bt] symbol. -When the four-position switch  is set to the [TF] position, a light press switches between "TF/USB" modes. 2: Long press for 2 seconds to activate the lock function; long press for 2 seconds again to deactivate the lock function.</p>
	<p>1: Radio Mode: Long press for 2 seconds to initiate full-automatic radio station search and storage. / Light press for mute, and press again to unmute. 2: In Music Playback Mode: Light press to pause/play.</p>
	<p>1: Time/Auto Power-On Time/Sleep Shutdown Time Setting: Adjust the time settings using the "+ button." 2: Radio Operation Mode: Light press to select the next station (+); long press for automatic upward radio station search. 3: Music Playback Mode: Light press to skip to the next song; long press for fast forward playback.</p>
	<p>1: Time/Auto Power-On Time/Sleep Shutdown Time Setting: Adjust the time by decreasing it. 2: Radio Operation Mode: Light press to select the previous station (-); long press for automatic downward radio station search. 3: Music Playback Mode: Light press to go back to the previous song. TF/USB Operation Mode: Long press for fast rewind playback.</p>
	<p>1: Light press to adjust the backlight brightness. (Refer to details in Operation, Section 13) 2: Long press for 2 seconds to set the operating time (Refer to details in Operation, Section 9).</p>
	<p>1: In radio working mode, light press to initiate manual station preset; press again to confirm the preset (See details in Operation Section 6.4). 2: In the powered-on state, long press for 2 seconds to set the sleep shutdown time (See details in Operation Section 11). 3: In the powered-off state, long press for 2 seconds to set the scheduled power-on time (See details in Operation Section 10).</p>
<p>[AA 1.5V×4] Located on the back of the product.</p>	<p>Install four AA batteries into the battery compartment. (Note: Inserting the AC plug will disconnect the battery power supply).</p>
<p>AC IN</p>	<p>Insert the AC power cord to supply the device with AC power.</p>
	<p>3.5mm headphone jack.</p>

4: Power Switch:




Toggle Switch:

Insert the AC power cord into the [AC-IN] power port (located on the left side of the device) or insert four AA dry batteries [1.5V×4AA]. The LCD will display the time. Move the switch to the [ON] position to power on the radio. Move the switch to the [OFF] position to power off the radio.

5: Volume Adjustment:

In operating mode, you can adjust the volume as needed by rotating the volume knob. Turning the volume knob in the 'MIN' direction decrease the volume, while turning it in the 'MAX' direction increase the volume."

6: Listening to Radio Broadcasts:

6.1: In the radio powered-on state, push the four-position switch  to select the mode button.

 
This product can receive FM, medium wave, and short wave. The reception ranges and step values for each band are as follows:

Frequency Band Reception Range	Step Value
AM 1: 522-1710KHZ	9KHz (Factory default is a 9KHz step value for AM)
AM 2: 520-1710KHZ	10KHZ
FM FM: 64.00-108.00MHZ	0.1MHZ
SW short wave: 2.300-23.000MHZ	0.005HZ

6.2: Method for Adjusting the Medium Wave Step Value:


For medium wave reception, different countries have different requirements, and you can adjust it according to your needs.

 
 
Clock Display Mode: Long press the [] button for approximately 3 seconds, and the LCD screen will display the "10KHZ" character.

 
Press the [] button again, and it will toggle between the step values "9KHZ / 10KHZ." After about 1.5 seconds, the number disappears, and the last selected step value becomes the default.

Note: In the United States, Canada, Mexico, and other North and South American countries, the medium wave step value must be set to 10KHZ, while in other countries, the step value is 9KHZ.

6.3: This product supports multiple tuning methods: Manual tuning, automatic radio station search, and full automatic radio station storage.

6.3.1: Manual Tuning: Rotate the [] knob to increase or decrease the frequency in each band by the minimum step value.

6.3.2: Automatic Radio Station Search: Press and hold [ or ] for 2 seconds to quickly search for radio stations in an upward or downward direction using the minimum step value. When a station with a signal is found, the search stops, and the station starts playing.



6.3.3: Full Automatic Radio Station Storage: In the radio broadcast mode, press and hold [] for 2 seconds to initiate a full automatic scan for radio stations. The device will automatically store stations from the lowest to the highest frequency point. During the full automatic scanning process, the LCD will display "SCAN" in

the upper left corner and the station's address number in the upper right corner as "M**" (the number represents the station's address number). After completing one round of scanning, the device will automatically stop the search and start playing the first stored station.

*This device can store up to 20 AM stations, 30 FM stations, and 60 SW stations, for a total of 110 radio stations.

Note: The number of stored radio stations may vary based on the local signal strength and environment.

6.4: Manual Station Storage Method:

In the radio broadcast mode, after using the methods described in 6.3.1 & 6.3.2 to search for your desired station frequency, do the following: Light press [] to enter the station storage mode. The LCD will display the station address as "M**," with the "***" station address number flashing. At this point, press [▲ or ▼] to select the station address number. Press [] again to confirm your selection, and the "***" station address will stop flashing. After 5 seconds, the "M**" station address display will exit, indicating that the manual station storage operation is complete.


6.5: Method for Removing Radio Station


In the radio broadcast mode, after storing radio stations using the methods described in sections 6.3.3 and 6.4, light press [▲ & ▼] to select station numbers. Each light press of [▲ or ▼] will change to the next stored radio station.

Note: If the LCD displays 'M---,' it means there are no preset radio stations.**

7: Bluetooth Playback:




7.1 The Bluetooth pairing name for this product is: RF206.

7.2 In the power-on working mode, light press [] to switch to the "bE" mode. The "bE" symbol will blink, indicating that it's waiting to connect to a Bluetooth device. Once the connection is successful, the "bE" symbol will stop blinking.

7.3 Light press [▲] to skip to the next song, light press [▼] to go back to the previous song, and light press [] to toggle between pause and play. You can also use your mobile device for corresponding controls.

8: Using TF Card/USB Card Playback

Properly insert the TF card. Properly insert the USB playback card.




8.1: Turn the switch [] to the TF position, light press [] to switch to "TF" card mode/USB mode, and music will play automatically. Light press [] to pause/play.

8.2: Light press [▲] to skip to the next song, light press [▼] to go back to the previous song, long press [▲] for fast-forward, and long press [▼] for fast rewind down

8.3: Supports a maximum of 256GB.



 

 


8.4: Supports MP3, WMA, WAV, APE, and FLAC formats for music playback.


9: Time Settings

In the power-on or power-off mode, long press [] for 2 seconds to initiate the runtime setting. The hours "***" will start flashing as a prompt. Light press or long press [▲, ▼] to adjust the hour time upwards or downwards. Then, light press [] to move to the minute time, which will also start flashing. Light press or long press [▲, ▼] to adjust the minute time upwards or downwards. Light press [] to confirm the time adjustment or simply stop the operation. The device will automatically confirm the last adjusted time within 10 seconds.


 
 
 
 
 
Note: The time format for this product is the 12-hour clock system (LCD displaying "AM" represents morning time, and "PM" represents afternoon time).

10: Scheduled Power-On Time Setting:



10.1: Setting the Scheduled Power-On Time: In clock display mode, long press  for 2 seconds. The LCD screen will display the scheduled power-on hour with "***" and "AL" characters flashing. Light press or long press [, ] to adjust the scheduled power-on hour time upwards or downwards. Then, light press  to move to the scheduled power-on minute time, which will also flash with "***" and "AL". Light press or long press [, ] to adjust the scheduled power-on minute time upwards or downwards. Light press  to confirm. If you stop the operation, the device will automatically confirm the adjusted scheduled power-on time within 10 seconds.



10.2: Disabling the Scheduled Power-On Function: In clock display mode, when the LCD screen displays the "AL" character, light press  to disable the scheduled power-on function, and the "AL" character will disappear from the LCD screen.


11: Setting the Sleep Auto Shutdown Time:

While the device is powered on or in a scheduled power-on state, long press  for 2 seconds to activate the sleep timer setting. The LCD will display " 120," and the " " symbol will blink to indicate this. Light press [, ] to choose the sleep timer duration from options such as 120-110-100-90-80-70-60-50-40-30-20-10-OFF (in minutes). If there is no further input within 3 seconds, the LCD will return to the playback mode, and the blinking " " symbol will cease. In this mode, the device will automatically power off within the selected sleep timer duration.


12: Locking and Unlocking Function

Long press  for 2 seconds, and the LCD screen will display the " " symbol, indicating that the device is locked.

Long press  for 2 seconds once more, and the " " symbol will disappear, indicating that the device is unlocked.

Note: The []Volume Knob, OFF/ON Toggle Switch] are not affected by the lock, while other buttons are locked. To unlock, follow the steps above.

13: Adjusting the Radio Backlight Brightness:


Light press  to adjust the backlight brightness. You can choose from three options: low brightness, high brightness, or turning off the backlight.

14: Using the Antenna:

When listening to FM and SW, extend the antenna and adjust its length and direction to find the best reception.

*Tip: If you experience strong interference from a radio station causing channel overlap, you can mitigate it by adjusting the telescopic antenna to a shorter length.

For AM broadcasts, this device utilizes a built-in magnetic antenna to receive medium wave signals. Magnetic antennas have some directionality when receiving signals. Therefore, when listening to medium wave broadcasts, try rotating the device to find the optimal reception position.

External antenna: Improve FM/SW band receiving effect [.

Using the 3.5MM jack of external antenna into this antenna jack

Suitable for use in poor signal situations.

*Tip: the external antenna is not the standard accessory.

15: Key Technical Specifications:

Reception Range	AM: 522-1710KHZ FM: 64-108MHZ SW:2.3000-23.000MHZ
Reception Sensitivity	AM: 84dB FM:18dB SW: 26dB
Static Current	≤150uA
Maximum Current	≤800mA
Speaker	4 inches , 4Ω , 8W
Signal-to-Noise Ratio	FM:40dB AM:30dB SW:32dB
Number of Presets in Radio Mode	110 units
Bluetooth Version	VER 5.0
Bluetooth Reception Distance	≤10 meters
DC	DC6V(1.5V×4 AA the battery)
AC	220V-240V,50HZ / 110V,60HZ
Supported Formats for TF/USB Card Playback	Supported playback formats: MP3, WMA, WAV, APE, FLAC
Maximum Supported Capacity for TF Card	256G
Product Dimensions	218x128x73mm
Net Weight of the Product	826g

16. Safety Precautions:

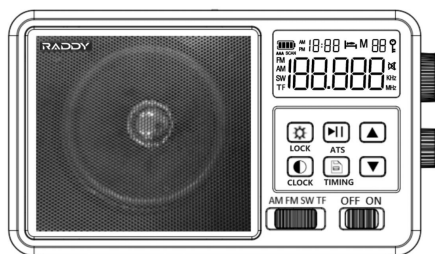
Before using the product, please ensure that you follow these basic safety guidelines to ensure safe and reliable operation:

- ◆ Read and understand all safety instructions and usage information.
- ◆ When the battery usage indicator shows "□" with a space or when the battery "□" ' frame is flashing, it indicates that the battery is running low and needs to be replaced to avoid disruption of normal operation.
- ◆ If the device is not used for an extended period, remove the battery.
- ◆ Avoid exposure to rain, moisture, or corrosive chemicals.
- ◆ Keep away from high-temperature heat sources and do not expose it to high temperatures or open flames.
- ◆ Avoid prolonged exposure to direct sunlight.

User Manual DE

Model: RF206

1: Diagramm des Produktaussehens



Danke für Ihren Einkauf. Bevor Sie das Produkt verwenden, bitten wir Sie, diese Bedienungsanleitung sorgfältig zu lesen und an einem sicheren Ort aufzubewahren.

2: Kurze Beschreibung der Produktmerkmale

Dieses Produkt nutzt Softwareprogrammierung, um den drahtlosen FM-, Mittelwellen-, Kurzwellen- und Vollband-Radioempfang zu ermöglichen und eine hervorragende Klangqualität zu liefern.

Dieses Gerät ermöglicht die kabellose Musikkwiedergabe über Bluetooth-Konnektivität und unterstützt die Musikkwiedergabe über TF- und USB-Karten.

Dieses Produkt bietet zwei Stromversorgungsoptionen: AC und DC.

Dieses Produkt verfügt über einen großen 4-Zoll-Lautsprecher mit 4 Ω und 8 W, der eine klare und kraftvolle Audioqualität liefert. Es unterstützt auch Kopfhöreranschlüsse für privates Hören.

Der große Drehknopf dient zum Abstimmen von Radiosendern und macht die Bedienung einfach und leicht verständlich.

Dieses Produkt bietet vielseitige Funktionalität. Neben dem großen Abstimmknopf zur Senderauswahl verfügt es auch über eine Funktion zur automatischen Sendersuche, die sowohl die vollautomatische Suche nach Radiosendern als auch die automatische Suche nach Radiosendern unterstützt.

Dieses Produkt bietet die folgenden Funktionen: geplantes Einschalten, Ausschalten im Ruhemodus, Sperr- und Stummschaltfunktionen.

Der große LCD-Bildschirm zeigt verschiedene Informationen an, darunter Uhrzeit, Batteriestatus, Frequenz, Titelnummer, Wiedergabezeit und Betriebsmodus, und bietet Benutzern klare Bedienanweisungen.












Zur Benutzerfreundlichkeit bei schlechten Lichtverhältnissen verfügt dieses Produkt über eine Hintergrundbeleuchtung mit einstellbaren Helligkeitsstufen (Standard und hohe Helligkeit).

Die Radiofunktion kann bis zu 110 Radiosender speichern (AM: 20, FM: 30, SW: 60).

Es unterstützt TF-Karten mit einer maximalen Kapazität von 256 GB und kann die Formate WMA, WAV, APE und FLAC abspielen.

In den Musikkwiedergabemodi Bluetooth/TF/USB können Sie die Wiedergabe anhalten, schnell vor- oder zurückspulen und den vorherigen oder nächsten Titel auswählen.

3: Die Funktionen jeder Taste schnell beherrschen:

	<p>1: Wechseln Sie in die Position „ON“, um das Gerät einzuschalten. 2: Wechseln Sie in die Position „OFF“, um das Gerät auszuschalten.</p>
	<p>Modusauswahltaaste AM: Mittelwellenempfang, FM: UKW-Empfang SW: Kurzwellenempfang TF: TF-Karten-/USB-Karten-Wiedergabemodus</p>
 (Tuning Knob)	<p>Im Radioempfangsmodus wählen Sie mit dem Drehknopf einen Radiosender aus.</p>
 (Volume Knob)	<p>Drehen, um die Lautstärke einzustellen.</p>
<p>USB</p>	<p>Stecken Sie eine „USB“-Karte ein, um auf der USB-Karte gespeicherte Musiktitel abzuspielen (siehe Einzelheiten im Abschnitt „Betrieb“, Abschnitt 8).</p>
<p>TF</p>	<p>Legen Sie eine „TF“-Karte ein, um Musiktitel von der TF-Karte abzuspielen (siehe Einzelheiten im Abschnitt „Betrieb“, Abschnitt 8).</p>
	<p>1: Modusumschaltung - Im Arbeitsmodus wird durch leichtes Drücken in den Bluetooth-Wiedergabemodus umgeschaltet und auf dem LCD wird das Symbol [bt] angezeigt. - Wenn der Vier-Positionen-Schalter auf die Position [TF] gestellt ist, wechselt ein leichter Druck zwischen den Modi „TF/USB“. 2: 2 Sekunden lang drücken, um die Sperrfunktion zu aktivieren; Drücken Sie erneut 2 Sekunden lang, um die Sperrfunktion zu deaktivieren.</p>
	<p>1: Radiomodus: 2 Sekunden lang drücken, um die vollautomatische Suche und Speicherung von Radiosendern zu starten. / Drücken Sie leicht, um die Stummschaltung einzuschalten, und drücken Sie erneut, um die Stummschaltung aufzuheben. 2: Im Musikwiedergabemodus: Zum Anhalten/Wiedergeben leicht drücken.</p>
	<p>1: Zeit-/Auto-Einschaltzeit-/Schlaf-Abschaltzeit-Einstellung: Passen Sie die Zeiteinstellungen mit der „+“-Taste an. 2: Radio-Betriebsmodus: Leicht drücken, um den nächsten Sender auszuwählen (+); Langes Drücken für automatische Aufwärtssuche nach Radiosendern. 3: Musikwiedergabemodus: Leicht drücken, um zum nächsten Lied zu springen; Langes Drücken für schnelle Vorlaufwiedergabe.</p>
	<p>1: Zeit-/Auto-Einschaltzeit-/Schlaf-Abschaltzeit-Einstellung: Passen Sie die Zeit an, indem Sie sie verkürzen. 2: Radio-Betriebsmodus: Leicht drücken, um den vorherigen Sender auszuwählen (-); Langes Drücken für automatische Abwärtssuche nach Radiosendern. 3: Musikwiedergabemodus: Durch leichtes Drücken kehren Sie zum vorherigen Lied zurück. TF/USB-Betriebsmodus: Langes Drücken für schnelles Zurückspulen der Wiedergabe.</p>
	<p>1: Drücken Sie leicht, um die Helligkeit der Hintergrundbeleuchtung anzupassen. (Einzelheiten finden Sie im Abschnitt „Betrieb“, Abschnitt 13). 2: Halten Sie die Taste 2 Sekunden lang gedrückt, um die Betriebszeit einzustellen (siehe Einzelheiten im Abschnitt „Betrieb“, Abschnitt 9).</p>
	<p>1: Im Radio-Betriebsmodus leicht drücken, um die manuelle Sendervoreinstellung zu starten; Drücken Sie erneut, um die Voreinstellung zu bestätigen (Einzelheiten finden Sie im Abschnitt 6.4 „Bedienung“). 2: Drücken Sie im eingeschalteten Zustand 2 Sekunden lang, um die Abschaltzeit für den Ruhezustand einzustellen (Einzelheiten finden Sie im Abschnitt 11 „Betrieb“). 3: Drücken Sie im ausgeschalteten Zustand 2 Sekunden lang, um die geplante Einschaltzeit festzulegen (Einzelheiten finden Sie im Abschnitt 10 „Betrieb“).</p>
<p>[AA 1.5V×4] Located on the back of the product.</p>	<p>Legen Sie vier AA-Batterien in das Batteriefach ein. (Hinweis: Durch das Einstecken des Netzsteckers wird die Batteriestromversorgung unterbrochen.)</p>
<p>AC IN</p>	<p>Stecken Sie das Netzkabel ein, um das Gerät mit Wechselstrom zu versorgen.</p>
	<p>3,5-mm-Kopfhöreranschluss.</p>

4: Netzschalter:



Toggle Switch:

Stecken Sie das Netzkabel in den Netzanschluss [AC-IN] (auf der linken Seite des Geräts) oder legen Sie vier AA-Trockenbatterien [1,5 V × 4 AA] ein. Das LCD zeigt die Uhrzeit an.

Bewegen Sie den Schalter in die Position [ON], um das Radio einzuschalten.

Bewegen Sie den Schalter in die Position [OFF], um das Radio auszuschalten.

5: Lautstärkeeinstellung:

In operating mode, you can adjust the volume as needed by rotating the volume knob. Turning the volume knob in the 'MIN' direction decrease the volume, while turning it in the 'MAX' direction increase the volume."

6: Hören von Radiosendungen:


6.1: Drücken Sie im eingeschalteten Zustand des Radios den Vier-Positions-Schalter, um die Modustaste auszuwählen.


Dieses Produkt kann FM, Mittelwelle und Kurzwelle empfangen. Die Empfangsbereiche und Schrittwerte für jedes Band sind wie folgt:

6.2: Methode zum Anpassen des Mittelwellen-Schrittwerts:

Frequency Band Reception Range	Step Value
AM 1: 522-1710KHZ	9KHz (Factory default is a 9KHz step value for AM)
AM 2: 520-1710KHZ	10KHZ
FM FM: 64.00-108.00MHZ	0.1MHZ
SW short wave: 2.300-23.000MHZ	0.005HZ


For medium wave reception, different countries have different requirements, and you can adjust it according to your needs.


 
Clock Display Mode: Long press the [] button for approximately 3 seconds, and the LCD screen will display the "10KHZ" character.


Press the [] button again, and it will toggle between the step values "9KHZ / 10KHZ." After about 1.5 seconds, the number disappears, and the last selected step value becomes the default.

Note: In the United States, Canada, Mexico, and other North and South American countries, the medium wave step value must be set to 10KHZ, while in other countries, the step value is 9KHZ.

6.3: Dieses Produkt unterstützt mehrere Abstimmungsmethoden: manuelle Abstimmung, automatische Suche nach Radiosendern und vollautomatische Speicherung von Radiosendern.

6.3.1: Manual Tuning: Rotate the [] knob to increase or decrease the frequency in each band by the minimum step value.

6.3.2: Automatic Radio Station Search: Press and hold [ or ] for 2 seconds to quickly search for radio stations in an upward or downward direction using the minimum step value. When a station with a signal is found, the search stops, and the station starts playing.



6.3.3: Full Automatic Radio Station Storage: In the radio broadcast mode, press and hold [] for 2 seconds to initiate a full automatic scan for radio stations. The device will automatically store stations from the lowest to the highest frequency point. During the full automatic scanning process, the LCD will display "SCAN" in the upper left corner and the station's address number in the upper right corner as "M**" (the number represents the station's address number). After completing one

round of scanning, the device will automatically stop the search and start playing the first stored station.

*This device can store up to 20 AM stations, 30 FM stations, and 60 SW stations, for a total of 110 radio stations.

Note: The number of stored radio stations may vary based on the local signal strength and environment.

6.4: Manuelle Stationsspeichermethode:

In the radio broadcast mode, after using the methods described in 6.3.1 & 6.3.2 to search for your desired station frequency, do the following: Light press [] to enter the station storage mode. The LCD will display the station address as " M **," with the "***" station address number flashing. At this point, press [▲ or ▼] to select the station address number. Press [] again to confirm your selection, and the "***" station address will stop flashing. After 5 seconds, the " M***" station address display will exit, indicating that the manual station storage operation is complete.


6.5: Methode zum Entfernen eines Radiosenders


In the radio broadcast mode, after storing radio stations using the methods described in sections 6.3.3 and 6.4, light press [▲ & ▼] to select station numbers. Each light press of [▲ or ▼] will change to the next stored radio station.

Note: If the LCD displays 'M **----,' it means there are no preset radio stations.

7: BT Playback:




7.1 Der Bluetooth-Pairing-Name für dieses Produkt lautet: RF206.

7.2 Drücken Sie im eingeschalteten Arbeitsmodus leicht [], um in den Modus „ BE“ zu wechseln. Das Symbol „ BE“ blinkt und zeigt damit an, dass es auf die Verbindung mit einem Bluetooth-Gerät wartet. Sobald die Verbindung erfolgreich hergestellt wurde, hört das Symbol „ BE“ auf zu blinken.

7.3 Drücken Sie leicht [▲], um zum nächsten Lied zu springen, drücken Sie leicht [▼], um zum vorherigen Lied zurückzukehren, und drücken Sie leicht [], um zwischen Pause und Wiedergabe umzuschalten. Für die entsprechende Steuerung können Sie auch Ihr Mobilgerät nutzen.

8: Verwendung der TF-Karte/USB-Kartenwiedergabe

Setzen Sie die TF-Karte richtig ein. Stecken Sie die USB-Wiedergabekarte richtig ein.




8.1: Drehen Sie den Schalter [] auf die TF-Position, drücken Sie leicht [], um in den „TF“-Kartenmodus/USB-Modus zu wechseln, und die Musik wird automatisch abgespielt. Drücken Sie leicht [], um anzuhalten/abzuspielen.

8.2: Durch leichtes Drücken von [▲] springen Sie zum nächsten Lied, durch leichtes Drücken von [▼] kehren Sie zum vorherigen Lied zurück, durch langes Drücken von [▲] spulen Sie schnell vor und durch langes Drücken von [▼] spulen Sie schnell zurück

8.3: Unterstützt maximal 256 GB.

8.4: Unterstützt die Formate MP3, WMA, WAV, APE und FLAC für die Musikwiedergabe.




9: Zeiteinstellungen


In the power-on or power-off mode, long press [] for 2 seconds to initiate the runtime setting. The hours "***" will start flashing as a prompt. Light press or long press [▲, ▼] to adjust the hour time upwards or downwards. Then, light press [] to move to the minute time, which will also start flashing. Light press or long press [▲, ▼] to adjust the minute time upwards or downwards. Light press []

to confirm the time adjustment or simply stop the operation. The device will automatically confirm the last adjusted time within 10 seconds.



 
Note: The time format for this product is the 12-hour clock system (LCD displaying "AM" represents morning time, and "PM" represents afternoon time).

10: Einstellung der geplanten Einschaltzeit:


 
10.1: Einstellen der geplanten Einschaltzeit: Drücken Sie im Uhranzeigemodus 2 Sekunden lang []. Auf dem LCD-Bildschirm wird die geplante Einschaltstunde mit blinkenden Zeichen „**“ und „AL“ angezeigt. Drücken Sie leicht oder lange auf [▲, ▼], um die geplante Einschaltstunde nach oben oder unten anzupassen. Drücken Sie dann leicht [], um zur geplanten Einschaltminutenzeit zu gelangen, in der außerdem „**“ und „AL“ blinken. Durch leichtes oder langes Drücken von [▲, ▼] können Sie die geplante Einschaltminute nach oben oder unten anpassen. Drücken Sie leicht [], um zu bestätigen. Wenn Sie den Vorgang stoppen, bestätigt das Gerät automatisch innerhalb von 10 Sekunden die eingestellte geplante Einschaltzeit.


 
10.2: Deaktivieren der Funktion „Geplantes Einschalten“: Wenn im Uhranzeigemodus auf dem LCD-Bildschirm das Zeichen „AL“ angezeigt wird, drücken Sie leicht [], um die Funktion „Geplantes Einschalten“ zu deaktivieren. Das Zeichen „AL“ verschwindet dann vom LCD Bildschirm.


11: Einstellen der Zeit für die automatische Abschaltung im Ruhezustand:

Während das Gerät eingeschaltet ist oder sich in einem geplanten Einschaltzustand befindet, drücken Sie 2 Sekunden lang [], um die Sleep-Timer-Einstellung zu aktivieren. Auf dem LCD wird „120“ angezeigt und das Symbol „“ blinkt, um dies anzuzeigen. Drücken Sie leicht [▲ ▼], um die Dauer des Sleep-Timers aus Optionen wie 120-110-100-90-80-70-60-50-40-30-20-10-OFF (in Minuten) auszuwählen. Wenn innerhalb von 3 Sekunden keine weitere Eingabe erfolgt, kehrt das LCD in den Wiedergabemodus zurück und das blinkende „“-Symbol erlischt. In diesem Modus schaltet sich das Gerät innerhalb der ausgewählten Sleep-Timer-Dauer automatisch aus.


12: Locking and Unlocking Function

Long press [] for 2 seconds, and the LCD screen will display the "  " symbol, indicating that the device is locked.

Long press [] for 2 seconds once more, and the "  " symbol will disappear, indicating that the device is unlocked.

Note: The [] Volume Knob, OFF/ON Toggle Switch] are not affected by the lock, while other buttons are locked. To unlock, follow the steps above.

13: Adjusting the Radio Backlight Brightness:

Light press [] to adjust the backlight brightness. You can choose from three options: low brightness, high brightness, or turning off the backlight.

14: Verwendung der Antenne:


Ziehen Sie beim Hören von UKW und SW die Antenne aus und passen Sie Länge und Ausrichtung an, um den besten Empfang zu erzielen.

*Tipp: Wenn Sie starke Störungen durch einen Radiosender bemerken, die zu Kanalüberschneidungen führen, können Sie diese abmildern, indem Sie die Teleskopantenne auf eine kürzere Länge einstellen.

Für AM-Sendungen nutzt dieses Gerät eine eingebaute Magnetantenne zum Empfang von Mittelwellensignalen. Magnetische Antennen haben beim Empfang

von Signalen eine gewisse Richtungsabhängigkeit. Versuchen Sie daher beim Hören von Mittelwellensendungen, das Gerät zu drehen, um die optimale Empfangsposition zu finden.

Externe Antenne: Verbessert den Empfangseffekt im FM/SW-Band.

Verwenden Sie die 3,5-mm-Buchse einer externen Antenne in dieser []

Antennenbuchse Geeignet für den Einsatz in schlechten Signalsituationen.



*Tipp: Die externe Antenne gehört nicht zum Standardzubehör.

15: Wichtige technische Spezifikationen:

Reception Range	AM: 522-1710KHZ FM: 64-108MHZ SW:2.3000-23.000MHZ
Reception Sensitivity	AM: 84dB FM:18dB SW: 26dB
Static Current	≤150uA
Maximum Current	≤800mA
Speaker	4 inches , 4Ω , 8W
Signal-to-Noise Ratio	FM:40dB AM:30dB SW:32dB
Number of Presets in Radio Mode	110 units
Bluetooth Version	VER 5.0
Bluetooth Reception Distance	≤10 meters
DC	DC6V(1.5V×4 AA the battery)
AC	220V-240V,50HZ / 110V,60HZ
Supported Formats for TF/USB Card Playback	Supported playback formats: MP3, WMA, WAV, APE, FLAC
Maximum Supported Capacity for TF Card	256G
Product Dimensions	218x128x73mm
Net Weight of the Product	826g

16. Safety Precautions:

Bevor Sie das Produkt verwenden, stellen Sie bitte sicher, dass Sie diese grundlegenden Sicherheitsrichtlinien befolgen, um einen sicheren und zuverlässigen Betrieb zu gewährleisten:

- ◆ Lesen und verstehen Sie alle Sicherheitshinweise und Nutzungsinformationen.
- ◆ Wenn in der Batterieverbrauchsanzeige ein „  “ mit einem Leerzeichen angezeigt wird oder wenn der Batterierahmen „  “ blinkt, bedeutet dies, dass die Batterie fast leer ist und ausgetauscht werden muss, um eine Unterbrechung des normalen Betriebs zu vermeiden
- ◆ Wenn Sie das Gerät längere Zeit nicht benutzen, entfernen Sie den Akku.
- ◆ Vermeiden Sie die Einwirkung von Regen, Feuchtigkeit oder ätzenden Chemikalien.

- ◆ Halten Sie das Gerät von Hochtemperatur-Wärmequellen fern und setzen Sie es weder hohen Temperaturen noch offenen Flammen aus.
- ◆ Vermeiden Sie längere direkte Sonneneinstrahlung.

User Manual FR

Model: RF206

Portée de réception	AM: 522-1710KHZ FM: 64-108MHZ SW:2.3000-23.000MHZ
Sensibilité de la réception	AM: 84dB FM:18dB SW: 26dB
Courant statique	≤150uA
Courant maximal	≤800mA
Conférencier	4 inches , 4Ω , 8W
Rapport signal sur bruit	FM:40dB AM:30dB SW:32dB
Nombre de préséglages en mode radio	110 units
BT Version	VER 5.0
BT Reception Distance	≤10 meters
DC	DC6V(1.5V×4 AA the battery)
AC	220V-240V,50HZ / 110V,60HZ
Formats pris en charge pour la lecture de cartes TF/USB	Supported playback formats: MP3, WMA, WAV, APE, FLAC
Capacité maximale prise en charge pour la carte TF	256G
dimensions du produit	218x128x73mm
Poids net du produit	826g

Gamma di ricezione	AM: 522-1710KHZ FM: 64-108MHZ SW:2.3000-23.000MHZ
Sensibilità di ricezione	AM: 84dB FM:18dB SW: 26dB
Corrente statica	≤150uA
Corrente massima	≤800mA
Altoparlante	4 inches , 4Ω , 8W
Rapporto segnale-rumore	FM:40dB AM:30dB SW:32dB
Numero di preimpostazioni in modalità radio	110 units
BT Version	VER 5.0
BT Reception Distance	≤10 meters
DC	DC6V(1.5V×4 AA the battery)
AC	220V-240V,50HZ / 110V,60HZ
Formati supportati per la riproduzione di schede TF/USB	Supported playback formats: MP3, WMA, WAV, APE, FLAC
Capacità massima supportata per la scheda TF	256G
Dimensioni del prodotto	218x128x73mm
Net Weight of the Product	826g

Rango de recepción	AM: 522-1710KHZ FM: 64-108MHZ SW:2.3000-23.000MHZ
Sensibilidad de recepción	AM: 84dB FM:18dB SW: 26dB
Corriente estática	≤150uA
Corriente máxima	≤800mA
Orador	4 inches , 4Ω , 8W
Relación señal-ruido	FM:40dB AM:30dB SW:32dB
Número de presintonías en modo radio	110 units
BT Version	VER 5.0
BT Reception Distance	≤10 meters
DC	DC6V(1.5V×4 AA the battery)
AC	220V-240V,50HZ / 110V,60HZ
Formatos admitidos para reproducción de tarjetas TF/USB	Supported playback formats: MP3, WMA, WAV, APE, FLAC
Capacidad máxima admitida para tarjeta TF	256G
Product Dimensions	218x128x73mm
Net Weight of the Product	826g

Reception Range	AM: 522-1710KHZ FM: 64-108MHZ SW:2.3000-23.000MHZ
Mottagningskänslighet	AM: 84dB FM:18dB SW: 26dB
Statisk ström	≤150uA
Maximal ström	≤800mA
Högtalare	4 inches , 4Ω , 8W
Signal-brus-förhållande	FM:40dB AM:30dB SW:32dB
Antal förinställningar i radioläge	110 units
BT-version	VER 5.0
BT Reception Distance	≤10 meters
DC	DC6V(1.5V×4 AA the battery)
AC	220V-240V,50HZ / 110V,60HZ
Format som stöds för uppspelning av TF/USB-kort	Supported playback formats: MP3, WMA, WAV, APE, FLAC
Maximal kapacitet som stöds för TF-kort	256G
Produktens mått	218x128x73mm
Produktens nettovikt	826g