User Manual For RF31 Wide frequency receiver FM/MW/SW/AIR/CB/VHF WORLD BAND RECEIVER



CONTENTS

RF31 radio overview information1-2
Product appearance drawing and component
description3-4
LCD display symbol description5
Operation instructions6-15
Orange backlight15
Receiving TV sound
Main specification17
Using antenna17
Notice
User manual for external antenna19-20

FM/MW/SW/AIR/CB/VHF WORLD BAND RECEIVER

Thanks for purchasing the RF31 digital wide frequency radio. Please read this manual before using. Please keep it well for future reference.

User Manual For RF31

Wide frequency receiver

1.RF31 radio overview information

The radio is a small pocket size. Convenient to carry outside.and it has high reception

It is the entry toy for the radio yuan fans and the auxiliary use product for the off-road yuan fans (VHF channel reception). Flight information for frequent flyer users.

the radio can receive FM/AM/SW/CB/AIR/VHF

please take a notice: the AM band have two modes: AM step

value:9k.AM step value:10k

the radio VHF also band two modes:VHF-N/VHF-W.


users can according to the actual need to adjust by themselves).

About the VHF band more information:

VHF NFM:Receive coast channel/train channel/racing channel/weather band /VHF intercom reception VHF-W:Receiving campus channel /TV sound

The frequency and volume of the product to add and reduce control design independent key, can be manually search station signal and automatic search station signal function, AM step value users can adjust themselves according to actual condition, is a very personalized products. Simple and convenient operation.

2.Product appearance drawing and component description:

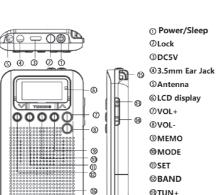

①POWER/SLEEP: For turning on and off the radio.adjust automatic shutdown. 2LOCK:LOCK:for locking the button to prevent it frequency conversion, shutdown,

> ③DC5V Micro USB jack:External power:connect DC 5V external power or charging battery, MICRO USB jack. @3.5mm earplug jack:For personal stereo listening without disturbing others ⑤Seven section Telescopic antenna 6LCD display ⑦VOL+:FOR turning up the volume, turning up preset recall functions

®VOL-FOR turning down the volume, turning down preset recall functions MEMO: FOR present store stations and present recall function MODE: (Mode conversion of each band)

(1) SET:FOR setting time//set SQ function @BAND:Clock state.Turn on the alarm function. Power on state, bands switching ®TUN+:Select station +, adjust time +

(4) TUN-: Select station -, adjust time - function (§ROPE.it is convenient for customer carry.

16Loudspeaker

3.LCD display symbol description:



I.bands*preset recall/store address/SQ ON*OF

number*memo/st*VOL0-33* sensitivity

A:frequency/time display

frequency

C.Lock indication

E.AM frequency unit

F.battery symbol

G.alarm symbol

H.sleep symbol

B.SW/CB/AIR/VHF the minimum step automatically. D.FM/SW/CB/AIR/VHF frequency unit

> Note: if sleep function is not required, press the (1) POWER button for a long time to turn off the radio and turn it on again. ②LOCK(printed a lock)

Power-on state, long press 1 button On the clock state or power-on state.long press the @Lock button for lock the radio.this moment, the radio is locked, any buttons do not

SLEEP: After put into the battery, the radio on the clock state. Long press the ① button, the " 🛌 " sleep symbol display on the LCD top

POWER, the radio turn off.

right corner, the sleep time can be selected 90-80-70-60-50-40-30-20-10.each time press the ① POWER button to choose the sleep time. After choose the sleep time, about 1 second the radio turn on Use the time to reach the selected sleep time, radio will turn off

Start the RSSI Indicator (short for Received Signal Strength Indicator"): on the power-on state, short press 1 POWER button, the LCD display the word "*DB". The sensitivity of the receiving station can be determined based on this parameter

LOCK:for locking the button to prevent it frequency conversion, shutdown, etc;

⑥LCD display,it is convenient for using: LCD digital display, convenient for users to

see frequency points, band conversion, battery usage, band conversion, volume adjustment etc

(7) VOLΛ :FOR turning up the volume, turning up preset recall functions/

®VOLV:FOR turning down the volume, turning down preset recall functions Adjust the volume +/- have two method:

The first:The volume is adjusted up from 00 level to 33 level

short press ⑦/® VOL \ V button, increase or decrease the volume step1 level

The second:Long press 7 /8 VOLA V button, Rapidly increase and decrease the volume. Stop adjusting immediately after release your hand.

ON the present recall model:press the 7/8 VOLA V button are assist to take out the stored memory station.after short press the @ MEMO button, you can find the CH1......CH50 on the LCD, then press the 7 /8 VOLA V "MEMO", it is successfully to preset store button for searching your target preset recall operation number

 MEMO:FOR present store stations and present recall function

Preset store operation instruction: Press 3 /4 TUNING+/- button adjust target

frequency,long press 9 MEMO button,appear "CH01-CH50" on the LCD, and the stored number address"CH01......CH50" is flashing, press the 7/8VOL AV buttons search for the target stored number address.press 9MEMO button again.LCD display"MEMO", after 1 second, it is successfully to preset store operation. For example:FM 87.8MHZ needs to be saved

to CH01. The operation is as follows: Press 3 / 4 TUNING + / - button to 87.8 MHZ, long press 9button MEMO, LCD display "CH01.....CH50" ,press VOL∧∨button to change the station address CH01,then,please short press 9button MEMO again,LCD display

(note: only one frequency point can be stored in the a same address of storage station.) Present recall function operation method: Short press 9 MEMO button, LCD display CH01.....CH50(01......50 they are memory station address numbers), short press VOL ∧ ∨ for selectting the target memory

MODE: (Mode conversion of each band) FM state:put the 3.5mm earplug into the radio,short press the @MODE button,LCD appear "MONO" OR "ST", each time press@MODE button,two model will exchange.("ST" is short for "STEREO")

When the AM step value is 9k,the frequency

range is:522-1710KHZ

VHF state: Narrow band FM-N and broadband FM-W exchanged.short press ® MODE button short press <code>@MODE</code> button,the LCD will and the LCD display the words FM-N or FM-W. display 520KHZ or 522KHZ exchange. Select FM-N:Mainly used for receiving coast 520KHZ it is mean the radio AM step value is 10K, station/train channel/racing channel/weather press the 10 MODE button, the LCD will display band WX/VHF intercom reception /VHF(HAM) (for reference only!It varies from country to 522KHZ it is mean the radio AM step value is 9K. country, depending on the local radio frequency.)

radio /TV TV sound

Select FM-W:Mainly used for receiving campus

When the AM step value is 10K, the frequency USET:FOR setting time/setting SQ function: range is :520-1720KHZ Setting time operation instruction:

Note:in the United states. Canada. Mexico. Australia and other North American and South American countries must set to 10KHZ, other countries must be adjusted 9KHZ. SW state: SW step value is 0.005MHZ, on the SW state, short press 10 MODE button it is METE cycle switching, it is convenient for search for target

2.300/3.200/3.900/5.000/6.030/7.150/10.000/ adjust correct minutes. 11 479/13 600/15 000/17 650/19 00/26 000 AIR state:it is step value 5KHZ/25KHZ exchange.short press 10 MODE button,LCD display 05k or 25K.it is convenient.

POWER-ON state, on CB, AIR bands, long press ①SET button for operation SQ function,Long press (1) SET button exchange SQ-ON/SQ-OFF. About Wait 3 seconds, radio system default mode.

squelch function setting is enabled

On the clock state or connect external DC5v power.the radio on clock state,long press 11 SET button, hour digital flashing, press ③TUNING+/⑭TUNING- for adjusting the correct hours. After adjusted the correct hour, press the **®SET** button again, the minute digital flashing, it is the same with adjust hour method, press ③TUNING+/⑭TUNING- for

Finished the correct time.short press the (11) SET button again or wait about two second.the radio will default the adjusted time (setting time is in the case of backlight in the

Setting SQ(SQUELCH) function:

LCD display "SQ ON" indicates that the

LCD display "SQ OF" indicates that the squelch function setting is closed

②Band:(Setting alarm/bands exchange) Setting alarm operation instruction: On clock state, short press @BAND

button,LCD display alarm symbol " 🕱 ",long press (1) SET button for setting alarm clock.the method is same with the setting color.after long press ①SET button,the hour digital flashing, press the <code>3TUNING+/4TUNING-</code> button for adjust the alarm clock hour, short press (1) SET button, the minute digital is flashing,press 3TUNING+/4TUNING- button for adjust the alarm clock minute, wait about 1second, the system default set time.

If press the ①SET button the third time,LCD will display " Hd" or " bu2", there are two models of the radio setting turned on automatically and setting alarm model. Please pressing the radio on the right side of

3 TUNING + / 4 TUNING - to swap. " this symbol is mean setting the radio

turned on automatically

"bu" this symbol is mean setting alarm model be setting alarm model it is time to alarm time. The radio will ring and press any button to stop ring, the alarm will continue 5 second if do not press any buttons

> Short press (2) BAND button again ,the symbol ් disappear Cancel the alarm function.

Turn on the radio.short press ② BAND button.FM/AM/CB/AIR/VHF (VHF-W and VHF-N) exchange.each time short press for searching your target band. Auto scanning:

Turn on the radio, long press @ BAND button, radio can automatically search and store radio stations.the stations are searched and stored from low frequencies to high frequencies in order, meanwhile, the LCD display "CH01-CH50", and the stored address number is changing after over scanning please press the taking out the stored station.

3TUNING+/4TUNING-(Select station +/-, adjust time +/- function)

can select your target frequency.

Power-on state, bands exchange:

Power-on state, 3TUN+/4TUN- button, you

FM model.default step:0.1MHZ AM model:default step: HZ/10KHZ(can be selecting by customer) SW model:default step: 0.005MHZ

CB mode:default step:0.005MHZ Air mode: default step:0.005MHZ/0.025MHZ(can be selecting by

customer) VHF mode:default step:0.005MHZ Short press (3)TUN+/(4)TUN- button.the

frequency is add/reduce according the system default step value.long press button,the frequency is searched quickly. Long press (3)TUN+/(4)TUN- Let go of your hand, the radio will searching the station

search will stop automatically when a radio station with a signal is found Clock state, when setting time is operation, press the ③TUN+/4/TUN- button

for adjust the correct time.

5. Orange backlight: For the convenient of night using this radio design orange backlight.power-on state.press any buttons, backlight will be on for 10 seconds.

6.receiving TV sound:

digital*minute indication

J.sensitivity symbol

50KHZ. Below are the audio points of several countries. Special note: television sound for FM frequencies, radio interference of the environment influence is bigger, and have a strong regional, transmission distance

Some national TV audio channels

TV SOUND									
(MHZ)	China	United	Australia	New	Indonesia	Italy	CCIR		
		States		Zealand					
Channel 1	56.25		62.75	50.75	53.75	59.25	46.75		
Channel2	64.25	59.75	69.75	60.75	60.75	67.75	53.75		
Channel3	72.25	65.75	91.75	67.75	67.75	87.75	60.75		
Channel4	83.75	71.75	100.75	180.75	180.75	180.75	67.75		
Channel5	91.75	81.75	107.75	187.75	187.75	188.75	180.75		
Channel6	174.75	87.75	180.75	194.75	194.75	197.75	187.75		
Channel7	182.75		-						
Channel8	190.75								
Channel9	198.75								
Channel10	206.75								
Channel11	214.75								
Channel12	222.75								

The fundamental difference between TV and FM radio is that the sound is an odd multiple of

limitations compared with other frequency bands, adjacent region or city coverage often large difference

(MITZ)	Ommu	Offico	/ tuoti uiiu	14011	IIIdoiloola	nuny	OUII			
		States		Zealand						
hannel 1	56.25		62.75	50.75	53.75	59.25	46.75			
hannel2	64.25	59.75	69.75	60.75	60.75	67.75	53.75			
hannel3	72.25	65.75	91.75	67.75	67.75	87.75	60.75			
hannel4	83.75	71.75	100.75	180.75	180.75	180.75	67.75			
hannel5	91.75	81.75	107.75	187.75	187.75	188.75	180.75			
hannel6	174.75	87.75	180.75	194.75	194.75	197.75	187.75			
hannel7	182.75									
hannel8	190.75									
hannel9	198.75									
hannel10	206.75									
hannel11	214.75									
hannel12	222.75									
16										

7. Main specification:

Receiving sensitivity FM: 87.5-108MHz (100KHz STEP) AM: 520-1720KHz SW: 2.3-30MHz CB: 25-28MHz AIR:118-138MHz V SQ:1UV VHF:30-223(FM-N/FM-W Product size: 108.5x61x16MM Speaker: Φ40MM 8Ω 1W Battery: 700mah 3.7v lithium battery External power supply:DC5v Minimum operating voltage: 3.3 Maximum current: >180mA Stereo separation: ≥32DB The distortion degree of: ≤0.5% output power: ≤200MV

8. Using antenna:

External earplug: Φ3.5MM/32ΩX

Listening to FM broadcast: Pull out the antenna, changing antenna length and direction to search for best receiving effect

Note: please shorten the antenna length when disturb by other strong broadcast Listening to AM broadcast

receiving AM broadcast, please change the radio direction properly to achieve best receiving effect for AM broadcast.

Listening to SW broadcast Pull out the antenna, changing antenna length

The radio using built-in magnet antenna for

long press again 2 Lock button for canceling

(notice:when you find the buttons do not have

External power:using the USB cable connect

When the radio is not clearly displayed and the

battery symbol is flashing, please plug in the

DC5V external power supply to charge the

radio. It takes about 3-4 hours to charge the

radio. When it is fully charged, the battery

after connecting earplug. For personal stereo

When listening to FM,SW,CB, AIR and VHF

band, please pull out the radio antenna apart

to facilitate radio signal reception. if you turn

off the radio. Please close the radio antenna to

function please check the radio if be locked)

and direction to search for best receiving effect position.

9.Notice

have function

DC 5V power.

the lock function.

③ DC5V Micro USB jack:

symbol will be fully displayed.

avoid breaking the antenna

listening without disturbing others.

Seven section Telescopic antenna:

43.5mm earplug jack:

Please take out battery when radio not in use to avoid battery leakage.

■ During listening to broadcast, if volume nonstable or LCD display become darken or flashing, may be caused by low battery. Please recharge

Please avoid high press, strong collision, drop or water.

Don't place radio under sunshine, high temperature, high humidity area or store radio at environment of temperature < -5°C or >50°C. ■ Don't clean case with chemical solvent to

■ Don't disassemble the radio or change specification of inner part radio .

avoid damage of radio casing.

User Manual For External Antenna

[Function] Improve SW/FM receive sensitivity

(suitable for external connection when

the indoor signal is poor) [Schematic diagram of external antenna]



Clip type, line length: 3 meters

[specification]

[Characteristics of the profile]

1. It can enhance the receiving capacity

of FM and SW band, and improve the receiving effect of FM and SW

2. Flexible placement and simple operation

3. Suitable for use in signal shielding

[method of application]

1. First, take out the antenna spring and fix it outside the room, which you can be hung by the window. (in case of thunderstorm, do not use)

Then stretch the cord

3. The antenna clamp to the antenna rod antenna head can be used

contact us by email via [support@iraddy.com]

If you have any questions, please feel free to