

To install your Voice-Activated Tape Recorder Switch in the VEC-483KC matching enclosure follow these instructions (*read all instructions before beginning ... take your time*):

1. Find the front panel decal and trim. Be sure to leave excess decal material around the edges. Put the front panel decal on. This is done by:
 - a.) Remove all debris and oil from the face plate. This should be done using a piece of cloth and alcohol.
 - b.) Remove the crack and peel to expose the adhesive.
 - c.) Place the decal on the front panel without securing it completely.
 - d.) Gently rub the alignment circles with your finger--if the circles are centered in the enclosure holes (also check the corner alignment marks) secure the decal by rubbing and removing all air bubbles.
 - e.) If the alignment circles are not centered, adjust the decal accordingly, then secure.
 - f.) Use a penknife, or small Exacto(TM) knife, to cut away the unused edges (*cut from the adhesive side*) and cut out the component holes (*cut from the description side*).
2. Now insert the PC board. This must be done by:
 - a.) Insert the front of the PC board into the metal faceplate with the jacks in their respective holes.
 - b.) Place the nuts onto the jacks and tighten. Ensure that the switch and the microphone are aligned properly.
 - c.) Install the red switch cap on the power switch (SW1).
3. Slide the face plate in the slots at the end of the bottom portion of the enclosure. Loop the battery snap through to the battery compartment. Now place the top portion over the bottom ensuring that the face plate slides into the slots. Secure the two enclosure portions together with the two mounting screws.
4. Finally, place a 9V battery into the battery compartment and attach to the battery snap. Make sure the power switch is off before installing the battery.

