

Uniden®



AppCam Solo 2 Rechargeable Battery

Quick Start Guide

What's in the Box



Rechargeabl Battery x1

Install the Rechargeable Battery to the Camera



Please press the button (on the top of the back casing), and slide the back casing downward to close it. The button also needs to be closed firmly for good weatherproof performance.

! For the weatherproof performance, always cover the USB charging port with the rubber plug.

Charge the Battery



AppCam Solo 2



Power Cable



Rechargeable Battery



AppCam Solo 2 Solar Panel
(Not included in the package)

1. You can charge the battery when it's installed to the camera.
2. You can charge the battery separately.
3. You can charge the battery with Uniden AppCam Solo 2 Solar Panel. Please note that the solar panel is NOT included in the package.

There is a status LED under the micro USB port of the battery, indicating the battery charging status.

- Green LED: Fully charged
- Orange LED: Charging

1. Charge the battery when it's installed to the camera.



2. Charge the battery separately.



3. You can charge the battery with Uniden AppCam Solo 2 Solar Panel. Please note that the solar panel is NOT included in the package.



Important Safeguards on Rechargeable Battery Use

1. Please charge your rechargeable battery with a standard and high-quality DC 5V or 9V battery charger.
2. If you want to power the camera via the solar panel, please note that the camera is **ONLY** compatible with Uniden Solar Panel. You cannot charge this camera with other solar panel brands.
3. Please charge the battery in temperatures between 32°F and 113°F (0°C and 45°C).

Please read the battery warnings and safety document provided in this guide to use your Uniden Solo 2 rechargeable battery safely.

Uniden AppCam Solo 2 is not designed for 24/7 full capacity running or around-the-clock live streaming. It's designed to record motion events and remotely view live streaming only when you need it.

Please learn some useful ways to maximize the battery life in this post:
<https://kb.uniden.com/customer/portal/articles/2949997-appcam-solo-battery-savings>

1. Please charge the rechargeable battery with a standard and high-quality DC 5V or 9V battery charger.
2. If you want to power the battery via the solar panel, please note that the battery is ONLY compatible with Uniden Solo 2 Solar Panel. You cannot charge the battery with other solar panel brands.
3. Please charge the battery in temperatures between 32°F and 113°F (0°C and 45°C).
4. Always use the battery in temperatures between -4°F and 140°F (-20°C and 60°C).
5. Please make sure the battery compartment is clean.
6. Please keep the USB charging port dry, clean and free of any debris and make sure the battery contacts are aligned.
7. Always make sure the USB charging port is clean. Please cover the USB charging port with the rubber plug after the battery has been fully charged.
8. Never charge, use or store the battery near any ignition sources, such as fire or heaters.
9. Always store the battery in a cool, dry and ventilated environment.
10. Never store the battery with any hazardous or combustible objects.
11. Do keep the battery away from children.
12. Do not short-circuit the battery by connecting wires or other metal objects to the positive (+) and negative (-) terminals. Do NOT transport or store the battery with necklaces, hairpins or other metal objects.
13. Do NOT disassemble, cut, puncture, short-circuit the battery, or make it dispose of in water, fire, microwave ovens and pressure vessels.
14. Do NOT use the battery if it gives off an odor, generates heat, becomes discolored or deformed, or appears abnormal in any ways. If the battery is being used or charged, remove the battery from the device or the charger immediately, and stop using it.
15. Always follow the local waste and recycle laws when throwing the used battery away.

WARRANTY

Uniden AppCam Solo 2 Battery

Uniden Corporation Limited 1 Year Warranty

Important: Keep your receipt. Proof of original purchase is required for warranty service

WARRANTOR: Uniden America Corporation
("Uniden") ELEMENTS OF WARRANTY: Uniden warrants, for one year, to the original retail owner, this Uniden Product to be free from defects in materials & craftsmanship with only the limitations or exclusions set out below. Uniden only warrants the Products contained in the original factory packaging.

WARRANTY DURATION: This warranty to the original user shall terminate & be of no further effect 12 months after the date of original retail sale. The warranty is invalid if the Product is (A) damaged or not maintained as reasonable or necessary, (B) modified, altered, or used as part of any conversion kits, sub-assemblies, or any configurations not sold by Uniden, (C) improperly installed, (D) serviced or repaired by someone other than an authorized Uniden service center for a defect or malfunction covered by this warranty, (E) used in any conjunction with equipment or parts or as part of any system not manufactured

by Uniden, or (F) installed or programmed by anyone other than as detailed by the owner's manual for this product.

STATEMENT OF REMEDY: In the event that the product does not conform to this warranty at any time while this warranty is in effect, warrantor will either, at its option, repair or replace the defective unit & return it to you without charge for parts, service, or any other cost (except shipping & handling) incurred by warrantor or its representatives in connection with the performance of this warranty. Warrantor, at its option, may replace the unit with a new or refurbished unit. Warrantor is not responsible for any additional costs associated with reinstallation of product.

Uniden AppCam Solo 2 Battery

THE LIMITED WARRANTY SET FORTH ABOVE IS THE SOLE & ENTIRE WARRANTY PERTAINING TO THE PRODUCT AND THE CONTENTS CONTAINED IN THE ORIGINAL FACTORY PACKAGING & IS IN LIEU OF & EXCLUDES ALL OTHER WARRANTIES OF ANY NATURE WHATSOEVER, WHETHER EXPRESS, IMPLIED OR ARISING BY OPERATION OF LAW, INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES TO THE PRODUCT CAUSED BY IMPROPER INSTALLATION OF THE PRODUCT. THIS WARRANTY DOES NOT COVER ANY COSTS RELATING TO THE REMOVAL, REPLACEMENT, OR INSTALLATION OF ANY PRODUCT.

Some states do not allow this exclusion or limitation of incidental or consequential damages so the above limitation or exclusion may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights, & you may also have other rights which vary from state to state. This warranty is void outside the United States of America & Canada.

PROCEDURE FOR OBTAINING PERFORMANCE OF WARRANTY: If, after following the instructions in the owner's manual you are certain that the Product is defective, pack the Product carefully (preferably in its original packaging). The Product should include all parts & accessories originally packaged with the Product. Include evidence of original purchase & a note describing the defect that has caused you to return it. The Product should be shipped freight prepaid, by traceable means, to warrantor at:

Uniden America Service
C/O Saddle Creek
743 Henrietta Creek Rd., Suite 100
Roanoke, Texas 76262

Uniden®

uniden.com