



BC365CRS
Owner's Manual



PRECAUTIONS

Before you use this scanner, please read and observe the following.

IMPORTANT!

This scanning radio has been manufactured so that it will not tune to the radio frequencies assigned by the FCC for cellular telephone usage. The Electronic Communications Privacy Act of 1986, as amended, makes it a federal crime to intentionally intercept cellular or cordless telephone transmissions or to market this radio when altered to receive them. The installation, possession, or use of this scanning radio in a motor vehicle may be prohibited, regulated, or require a permit in certain states, cities, and/or local jurisdictions. Your local law enforcement officials should be able to provide you with information regarding the laws in your community.

Changes or modifications to this product not expressly approved by Uniden, or operation of this product in any way other than as detailed by this Operating Guide, could void your authority to operate this product.

EARPHONE WARNING!

You can use an optional 32 Ω stereo headset or earphone with this scanner. Use of an incorrect earphone or stereo headset might be potentially hazardous to your hearing. The output of the phone jack is monaural, but you will hear it in both headphones of a stereo headset.

Set the speaker volume to a comfortable level before plugging in either a monaural earphone or a stereo headset of the proper impedance (32 Ω). Otherwise, you might experience some discomfort or possible hearing damage if the volume suddenly becomes too loud because of the volume control or squelch control setting. This is particularly true for the type of earphone that is placed in the ear canal.

WARNING: Uniden does not represent this unit to be waterproof. To reduce the risk of fire or electrical shock, do not expose this unit to rain or moisture.

Uniden® and Bearcat® are registered trademarks of Uniden America Corporation.

Other trademarks used throughout this manual are the property of their respective holders.

Important: If you use the supplied AC adapter to power the scanner but have not installed batteries in the scanner, never turn the scanner off by disconnecting the AC adapter or unplugging it from the AC outlet. This might corrupt the scanner's memory. Always use **POWER** to turn the scanner off before disconnecting AC power.

CONTENTS

PRECAUTIONS	2
IMPORTANT!	2
EARPHONE WARNING!.....	2
IMPORTANT INFORMATION	5
THE FCC WANTS YOU TO KNOW	5
MODIFICATION NOTICE	5
PART 15 INFORMATION	5
SCANNING LEGALLY.....	5
ISED COMPLIANCE.....	6
INFORMATION IMPORTANTE	6
LA FCC VEUT QUE VOUS SACHIEZ	6
AVIS DE MODIFICATION	7
INFORMATION RELATIVE À L'ARTICLE 15	7
UTILISER UN SCANNEUR DE MANIÈRE LÉGALE	7
CONFORMITÉ ISED	8
OBTENIR LE GUIDE D'UTILISATION BCS365CRS EN FRANÇAIS	8
WHAT'S IN THE BOX	9
INTRODUCTION	10
BAND RANGES.....	10
USA Bands	10
Canada Bands	11
FEATURES	12
CONTROLS.....	14
CONTROLS	14
Display	18
SETTING UP THE SCANNER	20
CONNECTING POWER.....	20
CONNECTING AN ANTENNA.....	21
USING THE BACKLIGHT	21
USING THE CLOCK.....	22
SETTING THE CURRENT TIME	22
SETTING THE ALARM TIME	22
USING SNOOZE	23
LISTENING TO FM CHANNELS	23
DIRECTLY SELECTING A CHANNEL	23
USING FM CHANNEL MEMORY	23
SETTING UP SLEEP MODE	23

USING THE SCANNER MEMORIES	24
PROGRAMMING MEMORIES	24
SELECTING A CHANNEL	25
SCANNING MEMORY BANKS	25
LOCKING/UNLOCKING CHANNELS.....	26
USING PRIORITY SCAN.....	26
SETTING CHANNEL DELAY	26
SEARCHING FOR ACTIVE FREQUENCIES.....	26
USING LIMIT SEARCH.....	27
Programming the Limit Search Range Upper/Lower Limits	27
Searching the Selected Range	27
Holding on a Frequency within the Limit Search Range.....	27
SEARCH LOCKOUTS.....	27
TO UNLOCK ALL FREQUENCIES.....	28
LISTENING TO SERVICE CHANNELS.....	28
USING SERVICE SEARCH	28
Selecting a Service to Search	28
LISTENING TO WEATHER CHANNELS	29
WEATHER ALERT DETECTION	29
CARE AND MAINTENANCE	29
GENERAL USE	29
LOCATION.....	29
CLEANING	29
REPAIRS	30
BIRDIES	30
RESETTING THE SCANNER (CLEARING ALL MEMORIES)	30
TECHNICAL SPECIFICATIONS	30
ONE-YEAR LIMITED WARRANTY	31

IMPORTANT INFORMATION

THE FCC WANTS YOU TO KNOW

IMPORTANT! This scanning radio has been manufactured so that it will not tune to the radio frequencies assigned by the FCC for cellular telephone usage. The Electronic Communications Privacy Act of 1986, as amended, makes it a federal crime to intentionally intercept cellular or cordless telephone transmissions or to market this radio when altered to receive them. The installation, possession, or use of this scanning radio in a motor vehicle may be prohibited, regulated, or require a permit in certain states, cities, and/or local jurisdictions. Your local law enforcement officials should be able to provide you with information regarding the laws in your community.

MODIFICATION NOTICE

Changes or modifications to this product not expressly approved by Uniden, or operation of this product in any way other than as detailed by this Users Guide, could void your authority to operate this product.

PART 15 INFORMATION

This scanner has been tested and found to comply with the limits for a scanning receiver, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This scanner generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

There is no guarantee that interference will not occur in a particular installation. If this scanner does cause harmful interference to radio or television reception, which can be determined by turning the scanner on and off, you are encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Move the device away from the component receiving interference.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

SCANNING LEGALLY

Your scanner covers frequencies used by many different groups, including police and fire departments, ambulance services, government agencies, private companies, amateur radio services, military operations, pager services, and wireline (telephone and telegraph) service providers. It is legal to listen to almost every transmission your scanner can receive.

However, there are some transmissions that you should never intentionally listen to. These include:

- Telephone conversations (cellular, cordless, or other private means of telephone signal transmission)
- Pager transmissions
- Any scrambled or encrypted transmissions

According to the Electronic Communications Privacy Act (ECPA), you are subject to fines and possible imprisonment for intentionally listening to, using, or divulging the contents of such a conversation unless you have the consent of a party to the conversation (unless such activity is otherwise illegal). This scanner has been designed to prevent the reception of cellular telephone transmissions and the decoding of scrambled transmissions. This is done to comply with the legal requirement that scanners be manufactured so they are not easy to modify to pick up these transmissions. Do not open your scanner's case to make any modifications that could allow it to pick up transmissions that are illegal to monitor. Modifying or tampering with your scanner's internal components or using it in a way other than as described in this manual could invalidate your warranty and void your FCC authorization to operate it. In some areas, mobile and/or portable use of this scanner is illegal or requires a permit. Check the laws in your area. It is also illegal in many areas (and a bad idea everywhere) to interfere with the duties of public safety officials by traveling to the scene of an incident without authorization.

ISED COMPLIANCE

In Canada, obtaining a license is required before purchasing and operating this scanner.

This device complies with Industry Canada RSS standard(s). As per the Radio Standards Specification for Digital Scanner Receivers, RSS-135, Issue 2, clause 2.1, "Licensing Requirements," reproduced herein: "The equipment covered by this standard is subject to licensing pursuant to subsection 4(1) of the *Radiocommunication Act*."

This device complies with Industry Canada RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

INFORMATION IMPORTANTE

LA FCC VEUT QUE VOUS SACHIEZ

IMPORTANT! Cette radio à balayage a été fabriquée de telle sorte qu'elle ne se règle pas sur les fréquences radio attribuées par la FCC pour l'utilisation des téléphones cellulaires. La loi sur la confidentialité des communications électroniques de 1986, telle que modifiée, fait de l'interception intentionnelle des transmissions téléphoniques cellulaires ou sans fil ou de la

commercialisation de cette radio lorsqu'elle est modifiée pour les recevoir un crime fédéral. L'installation, la possession ou l'utilisation de cette radio à balayage dans un véhicule à moteur peut être interdite, réglementée ou nécessiter un permis dans certains États, villes et/ou juridictions locales. Les responsables locaux de l'application de la loi devraient pouvoir vous fournir des informations sur les lois en vigueur dans votre communauté.

AVIS DE MODIFICATION

Les changements ou les modifications apportés à cet appareil qui n'ont pas été expressément approuvés par Uniden, ou l'utilisation de cet appareil d'une manière autre que celle décrite dans ce Guide de l'utilisateur, peuvent annuler votre droit d'utiliser cet appareil.

INFORMATION RELATIVE À L'ARTICLE 15

Ce scanneur a été testé et déclaré conforme aux limites imposées à un récepteur de balayage, conformément à la partie 15 des règles de la FCC. Ces limites sont conçues pour fournir une protection raisonnable contre les interférences nuisibles dans une installation résidentielle. Ce scanner génère, utilise et peut émettre de l'énergie de fréquence radio et, s'il n'est pas installé et utilisé conformément aux instructions, peut causer des interférences nuisibles aux communications radio. Il n'y a aucune garantie que des interférences ne se produiront pas dans une installation particulière. Si ce scanner provoque des interférences nuisibles à la réception de la radio ou de la télévision, ce qui peut être déterminé en allumant et en éteignant le scanner, nous vous encourageons à essayer de corriger ces interférences par l'une ou plusieurs des mesures suivantes:

- Réorientez ou déplacez l'antenne de réception.
- Éloignez l'appareil du composant qui reçoit les interférences.

Cet appareil est conforme à l'article 15 des règlements de la FCC. Son fonctionnement est soumis aux deux conditions suivantes : (1) cet appareil ne doit pas causer d'interférences nuisibles, et (2) cet appareil doit accepter toute interférence reçue, y compris les interférences pouvant causer un fonctionnement indésirable.

UTILISER UN SCANNEUR DE MANIÈRE LÉGALE

Votre scanneur couvre les fréquences utilisées par de nombreux groupes différents, notamment les services de police et d'incendie, les services d'ambulance, les agences gouvernementales, les entreprises privées, les services de radio amateurs, les opérations militaires, les services de téléavertisseurs et les fournisseurs de services filaires (téléphone et télégraphe). Il est légal d'écouter presque toutes les transmissions que votre scanner peut recevoir. Cependant, il existe certaines transmissions que vous ne devez jamais écouter intentionnellement. Il s'agit notamment de :

- Conversations téléphoniques (cellulaires, sans fil ou autres moyens privés de transmission de signaux téléphoniques)

- Transmissions de téléavertisseurs
- Toutes transmissions brouillées ou cryptées

Selon la loi sur la confidentialité des communications électroniques (Electronic Communications Privacy Act, ECPA), vous êtes passible d'amendes et éventuellement d'une peine de prison si vous écoutez, utilisez ou divulguez intentionnellement le contenu d'une telle conversation, à moins que vous n'ayez le consentement d'une partie à la conversation (à moins que cette activité ne soit autrement illégale). Ce scanneur a été conçu pour empêcher la réception de transmissions téléphoniques cellulaires et le décodage de transmissions brouillées. Ceci est fait pour se conformer à l'exigence légale selon laquelle les scanners doivent être fabriqués de manière à ne pas être faciles à modifier pour capter ces transmissions. N'ouvrez pas le boîtier de votre scanneur pour y apporter des modifications qui pourraient lui permettre de capter des transmissions dont la surveillance est illégale. La modification ou l'altération des composants internes de votre scanneur ou son utilisation d'une manière autre que celle décrite dans ce manuel peut invalider votre garantie et annuler votre autorisation FCC de l'utiliser. Dans certaines régions, l'utilisation mobile et/ou portable de ce scanneur est illégale ou nécessite un permis. Vérifiez les lois en vigueur dans votre région. Il est également illégal dans de nombreuses régions (et c'est une mauvaise idée partout) d'interférer avec les fonctions des responsables de la sécurité publique en se rendant sur les lieux d'un incident sans autorisation.

CONFORMITÉ ISED

Au Canada, il est nécessaire d'obtenir une licence avant d'acheter et d'utiliser ce scanneur. Cet appareil est conforme aux normes RSS d'Industrie Canada. Selon le Cahier des charges sur les normes radioélectriques pour les récepteurs de balayage numérique, CNR-135, version 2, clause 2.1, "Exigences en matière de licence", reproduite ici : "L'équipement couvert par cette norme est soumis à l'obtention d'une licence conformément au paragraphe 4(1) de la *Loi sur la radiocommunication*." Cet appareil est conforme à la ou aux normes RSS d'Industrie Canada. Son fonctionnement est soumis aux deux conditions suivantes : (1) ce dispositif ne doit pas causer d'interférences, et (2) ce dispositif doit accepter toute interférence, y compris les interférences qui peuvent causer un fonctionnement indésirable du dispositif.

OBTENIR LE GUIDE D'UTILISATION BCS365CRS EN FRANÇAIS

Une version française de ce guide d'utilisation est disponible sur le site Web d'Uniden au : www.uniden.com.

1. Sur le site d'Uniden, sélectionnez "Support", puis "Owner's Manuals."
2. Au menu déroulant de sélection des produits, choisissez "Scanners".

3. Sélectionnez le modèle et cliquez sur le drapeau canadien.
4. La version française du guide d'utilisation de ce modèle.

WHAT'S IN THE BOX

Please unpack the box carefully and make sure you have:



BC365CRS Scanner



Telescoping Antenna



AC Adapter

Not Shown:

- Other Printed Materials
- This Owner's Manual

If any item is missing or obviously damaged, contact your place of purchase or visit the Uniden website at www.uniden.com to remedy the situation.

INTRODUCTION

Your BC365CRS scanner is a multi-featured conventional channel scanner. You can easily enter and store frequencies for police, fire/emergency, marine, air, HAM, and other radio services into 500 channels distributed over ten banks. The scanner also lets you listen to NOAA (National Oceanic and Atmospheric Administration) weather broadcasts for valuable information specific to your location. Use your scanner to monitor:

- Analog public safety channels
- Police and fire departments (including rescue and paramedics)
- NOAA weather transmissions
- Business/Industrial radio and utilities
- Marine and amateur (ham radio) bands
- Aircraft (commercial and private) band
- Railroad
- FM Broadcast Stations

BAND RANGES

Your BC365CRS can operate using the common band steps used in the USA or Canada. To select a band plan:

1. Turn off power to the scanner.
2. Turn power back on to the scanner.
For USA bands, press **1** while turning power back on.
For Canada bands, press **2** while turning power back on.

USA Bands

Band No.	Range (MHz)	Step (kHz)	Mode	Service
1	25.00000 - 27.99500	5.0	AM	AM Band
2	28.00000 - 29.99500	5.0	NFM	10 Meter Amateur Band
3	30.00000 - 49.99500	5.0	NFM	VHF Low Band
4	50.00000 - 54.00000	5.0	NFM	6 Meter Amateur Band
5	88.00000 - 107.90000	100.0	FMB	FM Broadcast
6	108.00000 - 136.99166	8.33	AM	Aircraft Band

Band No.	Range (MHz)	Step (kHz)	Mode	Service
7	137.00000 - 150.77000	5.0	NFM	Military Land Mobile 2 Meter Amateur Band VHF High Band Federal Government
	150.77500 - 150.81250	7.5		
	150.81500 - 154.45250	7.5		
	154.45625 - 154.47875	7.5		
	154.48250 - 154.51250	7.5		
	154.51500 - 154.52500	5.0		
	154.52750 - 154.53500	7.5		
	154.54000 - 154.60750	7.5		
	154.61000 - 154.64750	7.5		
	154.65000 - 157.44750	7.5		
	157.45000 - 157.46500	5.0		
	157.47000 - 163.24500	7.5		
	163.25000 - 173.20000	12.5		
	173.20375 - 173.21000	6.25		
	173.21500 - 173.22000	5.0		
	173.22500 - 173.38750	12.5		
	173.39000 - 173.39625	6.25		
	173.40000 - 174.00000	5.0		
8	225.00000 - 380.00000	12.5	AM	Military Air Band
9	406.00000 - 419.99375	6.25	NFM	Fed. Gov. Land Mobile
10	420.00000 - 449.99375	6.25	NFM	70cm Amateur Band
11	450.00000 - 469.99375	6.25	NFM	UHF Standard Band
12	470.00000 - 512.00000	6.25	NFM	UHF TV*

* This scanner cannot decode the digital TV transmissions in use on most channels.

Canada Bands

Band No.	Range (MHz)	Step (kHz)	Mode	Service
1	25.00000 - 27.99500	5.0	AM	AM Band
2	28.00000 - 29.99500	5.0	NFM	10 Meter Amateur Band
3	30.00000 - 49.99500	5.0	NFM	VHF Low Band
4	50.00000 - 54.00000	5.0	NFM	6 Meter Amateur Band

Band No.	Range (MHz)	Step (kHz)	Mode	Service
5	88.00000 - 107.90000	100.0	FMB	FM Broadcast
6	108.00000 - 136.99166	8.33	AM	Aircraft Band
7	137.00000 - 174.00000	5.0	NFM	Military Land Mobile 2 Meter Amateur Band VHF High Band Federal Government
8	225.00000 - 380.00000	12.5	AM	Military Air Band
9	406.00000 - 419.99375	6.25	NFM	Fed. Gov. Land Mobile
10	420.00000 - 449.99375	6.25	NFM	70cm Amateur Band
11	450.00000 - 469.99375	6.25	NFM	UHF Standard Band
12	470.00000 - 512.00000	6.25	NFM	UHF TV*

* This scanner cannot decode the digital TV transmissions in use on most channels.

FEATURES

Channel Memory Scanning — Scans frequencies you have stored in any of the channels or banks at a rate of up to 90 channels per second.

Memory Availability — Store and scan any of up to 500 channels distributed over 10 banks.

Direct Channel Access — Press **0-9** and **HOLD** to directly access any stored frequency.*

Channel Lockout— Skip over stored frequencies (channels) using the Lockout feature to enable faster scanning.

Alarm Clock with Snooze — provides standard radio broadcasts that you can set as your alarm sound.

FM Broadcast — lets you store and search up to 30 preset FM broadcast channels for quick access.

Priority Channel — Designate a specific frequency as a Priority Channel. Then the radio scans and checks that channel every 2 seconds. Select and designate up to 10 frequencies as Priority Channels (one per bank).

Priority DND — Indicates that no priority checks will be made while receiving a transmission.

Duplicate Channel Alert — Lets you know that a selected frequency has already been programmed into memory if you attempt to store it again.

Limit Frequency Searching — Lets you designate lower and upper frequency range and search within that range for active frequencies.

You can then store frequencies in memory as channels for later recall.

Skip Frequency — Skips non-favorite frequencies during Service Search and Limit Search. Up to 50 frequencies can be designated as skip frequencies.

Service Search — Lets you designate one of the five preprogrammed service channels (Police, Fire/EMS, Air, Ham, Marine) to search.

Weather (WX) Scan — Scan the preprogrammed weather channels.

Weather Alert Detection — The scanner sounds an alert tone if it detects a weather alert while in Clock mode.

Scan and Search Speed

- Scan Speed. 100 channels per second maximum in Scan mode.
- Search Speed. 100 steps per second maximum in Search mode.
- Turbo mode. For frequency steps 5kHz apart, searching occurs in Turbo mode which is 300 steps per second.

Clock Display — the scanner, in standby mode, displays the time.

The clock also features an alarm that can sound up to 20 minutes or be shut off manually. A convenient snooze button lets you silence the alarm for an extra 5-minutes.

Delay — you can enable or disable the 2-second delay to resume scanning when a transmission ends. Enabling this feature helps prevent missing a response from one of the parties in the transmission.

LCD Backlight — you can enable or disable the LCD back lighted display.

Key Touch Tone — a tone sounds to confirm you have made a valid key input while a different tone sounds to alert you to an invalid entry.

EEPROM Memory Backup — the scanner uses a non-volatile EEPROM for memory backup.



Battery Alert — A battery icon alerts you to a no battery installed condition, and a battery low voltage condition. An alert tone sounds when the battery needs to be replaced. The backup provides backup for the clock when power is off and will power scanning for a short time.

Auto Power Off — turns the scanner off when the battery power gets too low.

Sleep Mode - Automatically turns the scanner off after a preset time period.

CONTROLS

CONTROLS

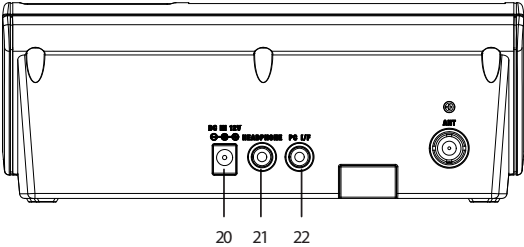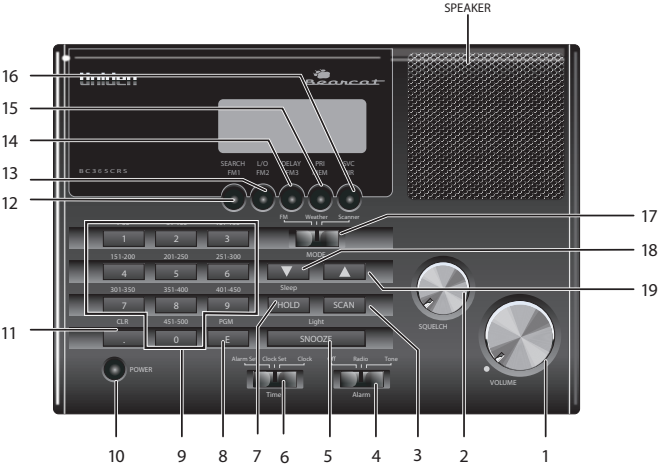

Number	Key/Knob	What it does
1	VOLUME	Increases and decreases volume.
2	SQUELCH	Lets you set the signal level required to receive a transmission. Counter-clockwise = Open. If you open the squelch all the way, you will hear hissing between transmissions. This lets you hear weak signals, but prevents scanning. Clockwise = Close. As you close squelch, a stronger signal is required to stop scanning and open audio. You normally set the control to a point just where hissing on all channels stops between transmissions.
3	SCAN	press to begin scanning the channels or to resume scanning.


Number	Key/Knob	What it does
4	Alarm slide switch	Set to Off to disable alarm; Set to Radio to enable the radio alarm; Set to Tone to enable the tone alarm
5	SNOOZE/ Light	Snooze: Press while the alarm sounds to silence the alarm for 5 minutes. Light: Tap to turn on the backlight for 15 seconds. Press and hold to turn the LCD backlight on permanently. Press and hold again to turn off the backlight.
6	Time slide switch	Use to select your desired operation: Alarm Set; Clock Set; Clock.
7	HOLD/Sleep	HOLD: press to temporarily stop scanning, limit searching, or weather scanning and remain on the channel. The scanner displays the channel on hold. Press again to resume searching or scanning. Sleep: Press and hold to set how long the unit will remain on before it turns itself off.
8	E/PGM	Program mode: Press to enter the Program mode. Then: 3. Enter the desired frequency using the numeric keys. 4. Press E/PGM to store that frequency into the memory. In Limit Search mode, Press E/PGM after entering the frequency to program the upper and lower frequency limits.
9	0 to 9	<ul style="list-style-type: none"> - Press a numeric key to enter a frequency. - Press a numeric key to change a channel (Direct Channel Access feature) - Press a numeric key to enable or disable a channel banks. These channel banks display across the top of the LCD.
10	Power	Press to turn power on and off. The time displays when power is off (Standby mode).
11	./Clr	<ul style="list-style-type: none"> - Press to input a decimal point when you enter a frequency. - Press to cancel a numeric key input (0 to 9) - Press to clear an error display.
12	SEARCH/FM1	In Scanner mode: Press to start a Limit Search or to resume searching. In Service Select mode: Press to select POLICE service. In FM mode, press to select the FM1 memory bank.

Number	Key/Knob	What it does
13	L/O FM2	<p>In Scanner mode:</p> <ul style="list-style-type: none"> - Press to lock or unlock a channel memory in SCAN (HOLD) or PROGRAM mode. - Press to set or clear the frequencies in the skip Frequency list in the Limit Search (HOLD) and Service Search (HOLD) modes. <p>In FM mode, press to select the FM2 memory bank.</p> <p>In Service Select mode: Press to select the FIRE/EMS service.</p> <p>Press and hold to unlock all registered channels or frequencies in the following modes:</p> <ul style="list-style-type: none"> - Scan Hold (unlock all registered channels in the selected bank) - Program - Service Search Hold - Limit Search Hold
14	DELAY/FM3	<ul style="list-style-type: none"> - In Scanner mode, press to turn the delay option on/off. - In FM mode, press to select the FM3 memory bank. - In Service mode, press to select AIR service.
15	PRI/MEM	<ul style="list-style-type: none"> - In Scanner mode, press to set a Priority channel for Scan Hold mode and Program mode. - In Program mode, press to set the Priority channel setting. In SCAN and SCAN HOLD, press to set Priority Scan on or off. - In FM mode, press to select Memory mode to allow quick channel recall using the 0-9 keys. - In Service mode, press to select HAM service.
16	SVC/DIR	<ul style="list-style-type: none"> - In Scanner mode press to change to Service Search mode. - In FM mode, press to change to Direct Entry mode to allow channel frequency selection using the up / down arrows or 0-9 keys. - In Service mode, press to select MARINE service.
17	MODE Switch	Use to select the desired mode: FM ; Weather ; or Scanner . (Slide switch must be set to Clock)

Number	Key/Knob	What it does
18	▼	<p>Press once to:</p> <ul style="list-style-type: none"> - Decrease one channel in these modes: <ul style="list-style-type: none"> • Scan Hold • Service Search Hold • WX Hold • Program Hold - Decrease one frequency in Limit Search Hold mode and Direct entry in Radio mode. - Decrease time in Time Setting and Sleep mode. <p>Press and hold to:</p> <ul style="list-style-type: none"> - Rapidly decrease channels in these modes: <ul style="list-style-type: none"> • Scan Hold • Service Search Hold • WX Hold • Program Hold - Rapidly decrease frequencies in Limit Search Hold mode and Direct entry in Radio mode. - Rapidly decrease time in Time Setting and Sleep mode.
19	▲	<p>Press once to:</p> <ul style="list-style-type: none"> - Increase one channel in these modes: <ul style="list-style-type: none"> • Scan Hold • Service Search Hold • WX Hold • Program Hold - Increase one frequency in Limit Search Hold mode and Direct entry in Radio mode. - Increase time in Time Setting and Sleep mode. <p>Press and hold to:</p> <ul style="list-style-type: none"> - Rapidly increase channels in these modes: <ul style="list-style-type: none"> • Scan Hold • Service Search Hold • WX Hold • Program Hold - Rapidly increase frequencies in Limit Search Hold mode and Direct entry in Radio mode. - Rapidly increase time in Time Setting and Sleep mode.
20	Power jack	DC IN power input jack

Number	Key/Knob	What it does
21	HEADPHONE jack	connects a headphone for privacy or an external speaker. <i>If you connect an external speaker to the scanner's headphone jack, never connect the audio output line to a power supply and ground. This might damage the scanner.</i>
22	PC I/F	Update firmware through this data (PC) connection.

Display

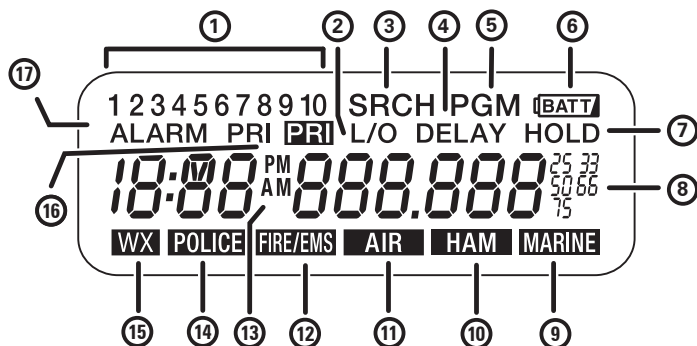

Number	Display	What it means
1	1 to 10	Scan mode: indicates Channel memory Bank FM mode: indicates a radio station
2	L/O	Indicates a Locked Out channel or to skip a frequency while searching
3	SRCH	Displays in Limit Search and Service Search modes Radio mode: Indicates Direct Entry mode
4	DELAY	Indicates a 2 second set delay for a channel before scanning resumes
5	PGM	Indicates Program mode
6	Battery	Solid: Battery power is full Flashes when the battery power is low. Non-flashing: no battery installed
7	HOLD	Indicates a hold in Scan, Search, WX, and Direct Entry mode
8	25, 33, 50, 66, 75	One of these numbers displays to indicate the frequency step. For example, "25" indicates 0.25kHz.

Number	Display	What it means
9	MARINE	Indicates searching commercial and private watercraft communications
10	HAM	Indicates searching amateur radio services
11	AIR	Indicates searching commercial and private Air communications
12	FIRE/EMS	Indicates searching the Fire or Emergency Medical Services
13	AM/PM P M	Indicates AM/PM and appears in Clock mode The letter "P" indicates a Priority channel in Scan mode. The letter "M" indicates the Minute setting in Sleep Time Set mode.
14	POLICE	Indicates a Police service search
15	WX	Indicates the Weather channel
16	PRI PRI	Indicates that the Priority channel scan is active. Reversed indicates that Priority channel DND is active.
17	ALARM	Indicates the alarm is enabled. Flashes when alarm sounds or if Snooze is selected

Notes:

The backlight turns off automatically after 15 seconds from the last key stroke (if not permanently turned on).

The scanner sounds special tones as follows:

- to confirm key entry.
- to indicate an error in key entry.
- to indicate low battery voltage.


SETTING UP THE SCANNER

These guidelines will help you install and use your new scanner:

- If your scanner receives interference or electrical noise, move the scanner or its antenna away from the source. You might also try changing the height or angle of the antennas.
- Use an optional mono earphone or mono headset with proper impedance for private listening.
- Do not use the scanner in high-moisture environments such as in the kitchen or bathroom.
- Avoid placing the scanner in direct sunlight or near heating elements or vents.

CONNECTING POWER

1. Insert the supplied AC Adapter's barrel plug into the power jack on the back of the scanner. Then plug the Adapter into a standard household outlet that supplies 120V AC, 60Hz. The scanner goes into Power Off mode and the clock displays.

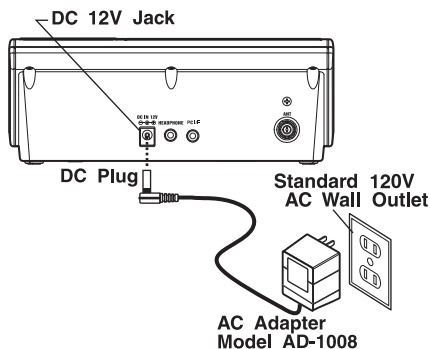


Do not plug the adapter into a switch controlled outlet.

2. Open the battery compartment and insert 3 AA batteries.

Be sure to note the polarity markings in the battery compartment. You can use either alkaline or rechargeable batteries, but the scanner will not recharge batteries in the compartment.

- Use only fresh alkaline AA batteries. Rechargeable batteries can be used, but battery life is shorter than with alkaline batteries.
- Always remove old or weak batteries. Batteries can leak chemicals that destroy electronic circuits.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable) or rechargeable batteries of different capacities.

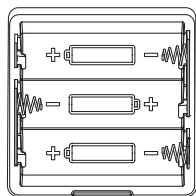

Batteries are intended to provide backup power for the clock and for scanning for a short time. When the backup batteries becomes too low, **BATT appears. Promptly replace the batteries.**

- When you either install batteries or connect the AC Adapter to a standard US wall outlet, the scanner powers on and goes to **STANDBY** mode. The display shows the initial clock time of 12:00 AM. The scanner remains in **STANDBY** mode.

CONNECTING AN ANTENNA


The scanner uses an external telescopic antenna to receive all signals. Connect the supplied rod antenna by pushing the antenna's connector onto the antenna jack on the back of the scanner and twisting it to the desired angle.

You can also use an external antenna (not supplied) to help to bring in weaker signals. Use RG58, 50-Ohm lead with a BNC connector to connect the antenna to the scanner. Connect and mount the antenna according to the instructions provided with the antenna.

CAUTION: Be sure to follow all safety warnings provided with the antenna. Failure to do so could expose you to risk of injury or death and could severely damage the scanner.

USING THE BACKLIGHT

To turn on the backlight for 15 seconds, tap **SNOOZE/Light**. To turn on the backlight permanently, press and hold **SNOOZE/Light** for over 2 seconds. To turn off the backlight, press and hold **SNOOZE/Light** again.

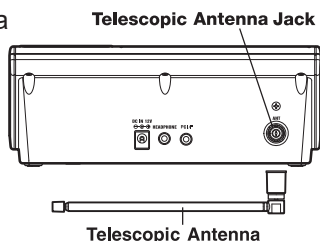

USING THE CLOCK

Your scanner's clock displays whenever you turn off the radio functions. It can also be used as a standard alarm clock.

SETTING THE CURRENT TIME

Follow the steps to set the current time:

1. Move the slide switch to **Clock Set**. The hour digits flash.
2. Press ▲ or ▼ to change the hour by one hour increments or press the number keys to select the present hour. Then press **E/PGM** to set the hour. The minutes digits flash.
3. Press ▲ or ▼ to change the minute setting by one minute or press the appropriate number keys to enter the minutes. The seconds reset to 00. Press **E/PGM**, **AM/PM** flashes.
4. Press ▲ or ▼ to move from AM to PM and back. Make your selection, and then move the slide switch to **Clock**. The scanner exits the clock setting mode.




✎ Seconds resets to zero (0) when you reset the time.

SETTING THE ALARM TIME

Follow these steps to set the alarm time:

1. Move the slide switch to **Alarm Set**. The hours digits flash.
2. Press ▲ or ▼ to change the hour by one hour increments or press the number keys to select the present hour. Then press **E/PGM** to set the hour. The minutes digits flash.
3. Press ▲ or ▼ to change the minute setting by one minute or press the appropriate number keys to enter the minutes. Press **E/PGM** to set the minutes. The **AM/PM** display icon flashes.
4. Press ▲ or ▼ to move from AM to PM and back. Press **E/PGM** to make your selection. To lock in the alarm time, move the slide switch to **Clock**.


To have the BC365CRS alert you at the preset time, slide **Off/Radio/Tone** to either **Radio** or **Tone**. If you set the selector to **Radio**, the alarm will sound with the selected audio source (FM, Scanner, or Weather). If you set the selector to **Tone**, the scanner will sound a tone at the preset time. To silence the alarm, slide **Off/Radio/Tone** to **Off**. If you do not turn off the

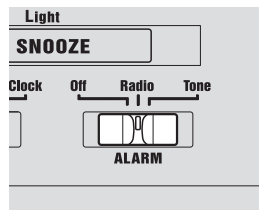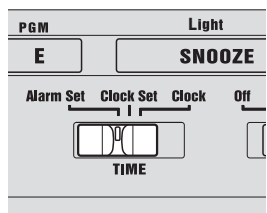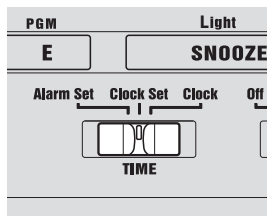

alarm, it will sound for 20 minutes, then reset to alert you again the following day.


USING SNOOZE

When the alarm sounds, press the snooze bar to silence the alarm for 5 minutes.

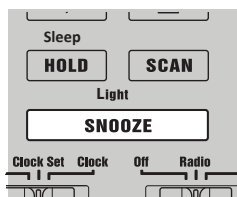

LISTENING TO FM CHANNELS


To listen to FM channels, slide the mode selector to **FM** when power is on. Press the button at the top of the scanner to select the desired source (FM1, FM2, or FM3). Radio stations are programmed into 30 channels for FM1, FM2, and FM3.

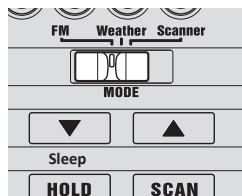

DIRECTLY SELECTING A CHANNEL

Press **SVC/DIR** to select the direct entry mode. Use the **▲/▼** buttons to step through the selected band. The scanner stops on active channels.

You can also enter the channel frequency using the keypad. Enter the channel frequency and press **E**.

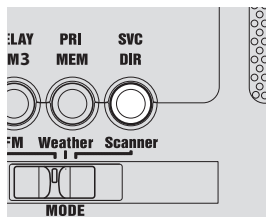

USING FM CHANNEL MEMORY


Your scanner has 30 FM channels for quick channel recall (FM1/FM2/FM3).

To store a channel into memory:

1. Select the band (FM1, FM2, or FM3).
2. Directly select the channel you want to store (see above).
3. While listening to the channel, press and hold the number button that corresponds to the channel you want to save the channel into for 2 seconds. The scanner switches to the Memory mode for the current band.

To quickly recall a channel:

1. Select the band (FM1, FM2, or FM3).
2. Select the channel memory mode by pressing **PRI/MEM**.
3. Tap the number button that corresponds to the channel where the frequency is stored.

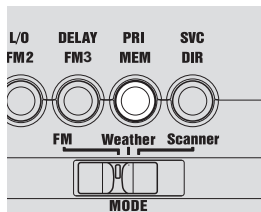

SETTING UP SLEEP MODE


You can set the amount of time the scanner will remain on. For example, if you are going to bed and you want to listen to the radio for a while, you can

set the scanner to turn itself off after 20 minutes. If you are listening to weather reports during the day, you can turn Sleep mode off to keep the scanner from turning itself off.

1. With the scanner power turned on, press and hold **HOLD/Sleep**. The number of minutes currently set for Sleep mode displays.
2. Use **▲/▼** to scroll up or down to select (or use the keypad to directly enter) the minutes the scanner will stay on (1 - 99, or OFF to turn off Sleep mode). Press **E/PGM** to select that number.
3. The screen return to the previous display.

USING THE SCANNER MEMORIES

Your scanner has 500 channels that you can save frequencies into for scanning. The channels are arranged in 10 banks of 50 memories each. While scanning, you can quickly select which bank to scan by pressing the number button that corresponds to the bank you want to turn on or off for scanning. To select the scanner mode, slide the mode switch to **Scanner**.

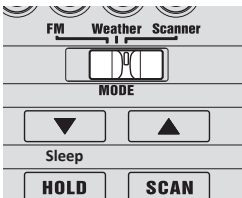

PROGRAMMING MEMORIES

You will first need to determine the frequencies you want to save. This varies widely depending on what you want to listen to and your geographic area. There are many frequency reference sources available on the internet that can get you started. One such source, <http://www.radioreference.com>, has a diverse listing of many conventional frequencies. You might also search for regional hobbyist sites that cover your area or check the database at the FCC's General Menu (<http://www.fcc.gov>) for frequencies of interest.

Make a list of the frequencies you want to program, then organize them in groups. The following table is an example of one way to organize and keep track of your frequencies. The numbers in the left-hand columns correspond to your scanner's channel numbers. Only the first 10 channels of the first three banks are shown here.

BANK 1		BANK 2		BANK 3	
1		51		101	
2		52		102	
3		53		103	
4		54		104	
5		55		105	
6		56		106	
7		57		107	
8		58		108	
9		59		109	
10		60		110	

Follow these steps to enter or change a frequency in a memory:

1. Press **E/PGM** to enter the Program mode (the scanner turns on the PGM icon).
2. If the current channel is not the one you want to program, enter the channel number then press **HOLD**.
3. Enter the frequency, including the decimal point, and then press **E/PGM**.
4. To program the next channel, press **▲** or **▼** and repeat step 3. To program a different channel, repeat from step 2.
5. To exit Program mode, press **HOLD** or **SCAN** or change the scanner's mode.

Notes:

- Any frequency you program replaces the previous channel contents.
- If you enter a frequency you have already stored in a different channel in Step 3, the scanner beeps and displays the channel where you have previously stored the frequency. If you want to store the frequency anyway, press **E/PGM** a second time in Step 3.
- To clear the contents of a channel, enter 0 in Step 3.
- Channels you program are automatically unlocked (see "Locking/Unlocking Channels") and have Delay turned on (See "Setting Channel Delay").

SELECTING A CHANNEL

To select a single channel to monitor, press **HOLD**. The scanner turns on the HOLD icon. Then, select a channel by pressing **▲** or **▼** to go to the channel or input the channel number then press **HOLD**.

SCANNING MEMORY BANKS

To scan the channels you have programmed, press **SCAN**. The scanner scans all unlocked programmed channels in enabled memory banks, stopping on a channel when it detects a transmission. To turn on/off channel banks while

scanning, press the number button that corresponds to the channel bank you want to enable or disable.

LOCKING/UNLOCKING CHANNELS

You can lock channel so that they are not scanned, even if their bank is turned on. Simply press **L/O** when the scanner stops on a transmission on the frequency or manually select the channel, then press **L/O**. The L/O icon displays when it is set to a locked out channel.

To unlock a channel, manually select the channel then press **L/O**. The scanner turns off the L/O icon and includes the channel when scanning its bank.

To unlock all channels related to a specific bank in Scan mode, press and hold **L/O** for 2 seconds. The scanner beeps twice and the L/O icon disappears.

USING PRIORITY SCAN

You can set one channel in each bank as a priority channel. If you turn on the Priority feature, the scanner will check the priority channel in enabled banks every 2 seconds, even if it has stopped on a transmission on another channel.

To set the channel in a bank to be the priority channel, manually select the channel; then, while holding on the memory, press **E/PGM** to put the scanner in Program mode and press **PRI**. The scanner turns on the P icon when it is stopped on a channel designated as priority.

To switch between Priority Scan/Priority DND/Off, press **PRI** while the scanner is scanning or holding on a channel (but not in Program mode). You will notice a short break in audio every 2 seconds as the scanner checks the enabled priority channel. If there is a transmission on a priority channel, the scanner will immediately tune to that channel. If Priority DND is set, the scanner does not check Priority channels during receiving.

SETTING CHANNEL DELAY

You can set the scanner to pause for 2 seconds at the end of a transmission on a channel. This is useful to help prevent missed replies. Delay is turned on by default when you program a channel. To turn Delay off (or back on), select the channel and then press **DELAY**. The scanner turns on the DELAY icon for channel that have been programmed with Delay.

SEARCHING FOR ACTIVE FREQUENCIES

Many people enjoy searching for the unknown frequencies that are in use in their area but are not posted to any site or in any publication. The BC365CRS has two ways to search:

- Limit Searching. Searches between two designated frequencies, creating upper and lower limits.
- Service Searching. Searches for specific types of agencies based on the FCC's standard frequency allocation for such services.

USING LIMIT SEARCH

There are three Limit Search modes:

- **Program Search Range.** This mode allows you to set the upper and lower limits of your search range.
- **Limit Search.** This mode will search for active frequencies within the upper and lower limits designated. It will stop when it locates a frequency.
- **Limit Search Hold.** During Limit Search mode, press **HOLD/Sleep** to stop searching with the search range regardless of whether you have found transmission. Press **HOLD/Sleep** or **SEARCH/AM** to resume searching.

Programming the Limit Search Range Upper/Lower Limits

1. Press **SEARCH** then **HOLD**. The scanner holds on the current search frequency.
2. Enter one of the range limits, then press **E/PGM**.
3. Press **▲** or **▼** then enter the other range limit, and press **E/PGM**.

Searching the Selected Range

After entering the limits (or use the default limits), press **SEARCH**. The scanner starts searching from the lower range up to the higher range. To change the direction of the search, press **▲** or **▼**.

Holding on a Frequency within the Limit Search Range

1. In Limit Search mode, press **HOLD/Sleep**. The scanner holds on the current frequency regardless of its transmission state.
2. Press **▲** or **▼** to change the direction of the search if desired.
3. Press **HOLD/Sleep** again or **SEARCH/AM** to resume searching.

SAVING A FOUND FREQUENCY INTO A CHANNEL

1. When the scanner stops on the frequency you want to save, press **HOLD** to hold on that frequency.
2. Press **E/PGM**. The scanner displays the lowest-numbered empty channel (or channel number 1 if all channels are used).
3. Use **▲/▼** to select the channel to store the frequency, then press **E/PGM** to store the frequency into that channel.

SEARCH LOCKOUTS

If the scanner stops on a frequency that you don't want to hear, you can lock it out. When locked out, the scanner won't stop on the frequency in either Limit Search or Service Search.

Press **L/O** when the scanner stops on the frequency to lock it out. **L/O** displays.

To unlock the frequency:

1. press **HOLD** during a Search.
2. Manually step to the frequency using the **▲/▼** keys.
3. When you have selected the locked out frequency, press **L/O** to unlock it.

TO UNLOCK ALL FREQUENCIES

- 1. Press **HOLD** during a Search.
- 2. Press and hold **L/O**.

LISTENING TO SERVICE CHANNELS

USING SERVICE SEARCH

You can select any of Police, Fire/EMS, Aircraft, Ham, and Marine channels for active frequencies in your area.

Selecting a Service to Search


Press **SVC** to enter the service search mode, then press the button corresponding to the service you want to search. When the scanner stops on a transmission, you can force it to resume searching by pressing **▲** or **▼**.

The BC365CRS searches five preset service frequencies:

- Police
- Fire/EMS
- AIR
- HAM
- Marine

To access these service frequencies:

- 1. Move the Mode slide switch to **Scanner**. The five Service modes display on the LCD above the buttons that control them.
- 2. Press the applicable button to access that Service mode:

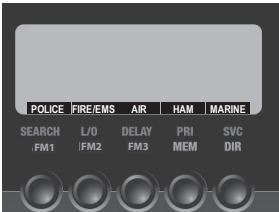

KEY	SERVICE
SEARCH/FM1	POLICE
L/O/FM2	FIRE/EMS
DELAY/FM3	AIR
PRI/MEM	HAM
SVC/DIR	MARINE

3. A Service search begins once a service is selected.

LISTENING TO WEATHER CHANNELS

The scanner lets you easily listen to NOAA weather channels in use in your area. Slide the audio source selector to **Weather**. The scanner scans the preset weather frequencies and stops if it detects a transmission. If you want to check for another frequency in use in your area, press **SCAN** or press **▲** or **▼**. Press **HOLD/Sleep** to hold on the current weather channel.

Seven NOAA weather channels are available across most of the US. To find out which channel is in use in your area, visit the NOAA web site at <http://www.noaa.nws.gov>. Select one of these frequencies if they are in use in your area.

WEATHER ALERT DETECTION

The scanner sounds a weather alert tone if it detects an alert under the following settings:

- Mode = Weather
- Time = Clock
- Power = Off

The weather alert siren tone sounds as long as the scanner detects the alert. If it can no longer detect the alert, the siren tone stops. Press any key to stop the tone and move into WX Hold mode.

CARE AND MAINTENANCE

GENERAL USE

- Turn the scanner off before disconnecting the power.
- If memory is lost, reprogram each channel.
- Always press each button firmly until you hear the entry tone for that key entry.

LOCATION

- Do not use the scanner in high-moisture environments such as the kitchen or bathroom.
- Avoid placing the unit in direct sunlight or near heating elements or vents.
- If the scanner receives strong interference or electrical noise, move it or its antenna away from the source of the noise. If possible, a higher elevation might provide better reception.
- Also try changing the height or angle of the antenna.

CLEANING

- Disconnect the power to the unit before cleaning.
- Clean the outside of the scanner with a mild detergent.
- To prevent scratches, do not use abrasive cleaners or solvents. Be careful not to rub the LCD window.
- Do not use excessive amounts of water.

REPAIRS

Do not attempt any repair. The scanner contains no user serviceable parts. Contact Uniden Customer Care or take it to a qualified repair technician.

BIRDIES

All radios can receive “birdies” (undesired signals). If your scanner stops during Scan mode and no sound is heard, it might be receiving a birdie. Birdies are internally generated signals inherent in the electronics of the scanner.

Press **L/O** to lock out the channel.

RESETTING THE SCANNER (CLEARING ALL MEMORIES)

To reset the scanner to factory defaults, disconnect power to the scanner and remove any batteries if they are installed.. Then, while holding down **2**, **9**, and **HOLD**, reconnect power to the scanner. **All scanner memory contents are erased and the band plan resets to USA.**

Certificated accordance with FCC Rules and Regulations Part 15 Sub-part C as of date of manufacture.

TECHNICAL SPECIFICATIONS

Band Coverage	: USA - 12 Bands
	: Canada - 12 Bands
Weather Service Channel	: 162.4000 MHz 162.5250 MHz 162.4250 MHz 162.5500 MHz 162.4500 MHz 162.4750 MHz 162.5000 MHz
Sensitivity (nominal) 12dB SNAD	: 0.4 μ V 25.0050 MHz 0.3 μ V 40.8400-53.9800 MHz 0.5 μ V 88.1000-107.5000 MHz 0.4 μ V 118.8000-135.5000 MHz 0.3 μ V 138.1500 MHz 0.2 μ V 162.4500 MHz 0.3 μ V 173.2250 MHz 0.4 μ V 225.0500-315.0500 MHz 0.4 μ V 325.0500 MHz 0.3 μ V 406.8750-511.9125 MHz
Channels	: 500 (50 channels x 10 Banks)
Scan Rate	: Up to 90 channels per second

Search Rate	: Up to 90 steps per second (Up to 270 steps per second at 5 kHz step)
Time Accuracy	: +/- 20 seconds per month at normal temperature (25°C ± 5°C)
Audio Output (normal)	: 0.9W Max
Power Requirements	: AD-1008 (120V AC 60Hz) : DC 12.0 V (EXT. power jack) : 3 x AA size Alkaline batteries , 4.5 DC (not included)
Antenna	: Telescoping (included)
External Jacks	: Antenna jack : Headphone Jack : DC 12V Power Jack : PC I/F (Only used for firmware updates)
Accessories	: AC Adapter (AD-1008) : Telescopic Antenna : Owner's Manual
Speaker (internal)	: 8 ohm, 2 watt
Operating Temp	: 14°F (-10°C) to +122°F (+50°C)
Storage Temp	: -4°F (-20°C) to +140 °F (+60 °C)
Size (without antenna)	: 5.8(W) × 8.2(D) × 3.2(H) inches : 147.75(W) × 209.0(D) × 80.7(H) mm
Weight (without antenna, AC adaptor, and batteries)	: 21.2 oz (560g)

Features, specification, and availability of optional accessories are all subject to change without notice.

ONE-YEAR LIMITED WARRANTY

Important: Evidence of original purchase is required for warranty service.

WARRANTOR: UNIDEN AMERICA CORPORATION ("Uniden")

retail owner, this Uniden Product to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

WARRANTY DURATION: This warranty to the original user shall terminate and be of no further effect 12 months after the date of original retail sale. The warranty is invalid if the Product is (A) damaged or not maintained as reasonable or necessary, (B) modified, altered, or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden, (C) improperly installed, (D) serviced or repaired by someone other than an authorized Uniden service center for a defect or malfunction covered by this warranty, (E) used in any conjunction with equipment or parts or as part of any system not manufactured by Uniden, or (F) installed or programmed by anyone other than as detailed by the Operating Guide for this product.

STATEMENT OF REMEDY: In the event that the product does not conform to this warranty at any time while this warranty is in effect, warrantor will repair the defect and return it to you without charge for parts, service, or any other cost (except shipping and handling) incurred by warrantor or its representatives in connection with the performance of this warranty. THE LIMITED WARRANTY SET FORTH ABOVE IS THE SOLE AND ENTIRE WARRANTY PERTAINING TO THE PRODUCT AND IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES OF ANY NATURE WHATSOEVER, WHETHER EXPRESS, IMPLIED OR ARISING BY OPERATION OF LAW, INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow this exclusion or limitation of incidental or consequential damages so the above limitation or exclusion might not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights, and you might also have other rights which vary from state to state. This warranty is void outside the United States of America.

PROCEDURE FOR OBTAINING PERFORMANCE OF WARRANTY: If, after following the instructions in this Operating Guide you are certain that the Product is defective, pack the Product carefully (preferably in its original packaging). Include evidence of original purchase and a note describing the defect that has caused you to return it. The product should be shipped freight prepaid, by traceable means, or delivered, to warrantor at:

Uniden America Corporation
301 International Parkway, Suite 460
Flower Mound, Texas 75022