

BTS1200 Bluetooth Travel Kit User's Guide



Also in this package:

DC (travel)
Power Adapter



AC (indoor)
Power Adapter




Questions? Problems?

Get help on the web at www.uniden.com
or call our Customer Service line at
800-292-2294.

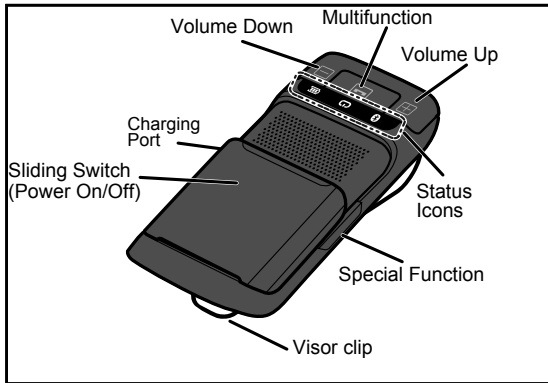


CONTENTS




GETTING TO KNOW THE TRAVEL KIT	4
Status Icons.....	5
Bluetooth Icon Indications.....	5
Audible Indications.....	6
Using the Buttons.....	7
Multifunction ().....	7
Volume Up (+).....	7
Volume Down (-).....	8
Special Function	8
SETTING UP YOUR TRAVEL KIT	9
Charge the Battery.....	9
Pair the Kit to Your Bluetooth Phone	11
After the Travel Kit is Paired	14
USING YOUR TRAVEL KIT.....	14
Power Up/Power Down	14
Making and Receiving Calls	15
Making Calls	15

Answering Calls	15
BTS1200 Common Tasks	15
SPECIAL FEATURES	17
Call Waiting	17
Voice Dial	18
Using the Travel Kit With Two Phones (Multipoint)	19
<i>Incoming Calls</i>	<i>19</i>
<i>Outgoing Calls</i>	<i>20</i>
RESETTING YOUR TRAVEL KIT	20
Cleaning the travel kit.....	21
TROUBLESHOOTING AND MAINTENANCE	22
GENERAL INFORMATION	24
Battery Life	25
Noise or Static on the Travel Kit.....	26
SAFETY AND HANDLING INFORMATION	27
FCC Notice.....	29
Lithium-polymer battery information	31

GETTING TO KNOW THE TRAVEL KIT



STATUS ICONS

Icon	Name	What it means
	Bluetooth	Indicates Bluetooth status.
	Battery	Shows charging status.
	Power	Icon lights if power is on.

BLUETOOTH ICON INDICATIONS

Icon Indication	Meaning
Blinks 3 times.	Power On
Blinks repeatedly.	Pairing Mode
Blinks once every 5 seconds.	Connectable mode

Icon Indication	Meaning
Blinks twice every 5 seconds.	Connected mode
Blinks 3 times every 5 seconds.	While calling/ during a call

AUDIBLE INDICATIONS

Indication	Meaning
Turn-on melody	Power on
2 short beeps	When connected
Melody	Incoming call
2 rising beeps	Active call
2 falling beeps	Ending call
2 short beeps	Low battery

USING THE BUTTONS

Multifunction ()

- Press and release **Multifunction** to redial the last number (while in standby), answer the call (while a call is ringing) or hang up (while on a call).
- Press and hold **Multifunction** for 2 seconds to reject the call (while a call is ringing) or transfer the call to your phone and back (while on a call).

NOTE: See “Voice Dialing” to learn about the Multifunction button’s role in this feature.

Volume Up (+)

- Press and release **Volume Up** to increase the volume (while on a call).

- Press and hold **Volume Up** for 3 seconds to put the current call on hold and switch to a waiting call (while on a call).

Volume Down (-)

- Press and release **Volume Down** to decrease the volume (while on a call).
- Press and hold **Volume Down** for 3 seconds to hang up the current call and switch to a waiting call (while on a call).

Special Function

- Press and hold **Special Function** key for 2 seconds to activate voice dialing on your second phone (while in standby)
- Press and release **Special Function** key to redial the last number on a second phone (while in standby) .

- Press and release the **Special Function** key to mute the microphone. The travel kit beeps every 10 seconds while in Mute mode. Press the Side button again to release mute.

NOTE: The buttons only activate the function when you release them.

SETTING UP YOUR TRAVEL KIT

CHARGE THE BATTERY

Before using your travel kit, charge the battery for at least 3 hours. Charging the battery completely (and keeping it charged) will help you get the longest possible talk and standby time out of the battery. On average, the battery provides about 10 hours of talk time and about 330 hours of standby time.

You can charge the battery through the car's power outlet or through a 12 ~ 24V DC outlet. Both charging adapters are included with your travel kit and both adapters plug into the travel kit's side charging port.

Connect either adapter to the power connector on the side of the unit. Connect the AC adapter to a standard 120 volt AC (regular indoor) power outlet. Connect the DC adapter to a standard 12 volt DC (automobile) power outlet. The Charging Status icon displays and will turn off when charging is complete.

When the battery is low, the unit will beep every 20 seconds. It will power off if it is not recharged in 10 minutes.

CAUTION! Use ONLY the power adapter supplied with the travel kit. Using any other adapter could damage your travel kit, create a fire hazard, or cause a risk of electric shock!

PAIR THE KIT TO YOUR BLUETOOTH PHONE

Pairing “introduces” two Bluetooth devices and gives them permission to connect to each other. If you want to use the travel kit with more than one phone, you need to pair it with each phone separately. Once you pair a phone to the travel kit, the two devices can connect automatically whenever they detect each other. The travel kit goes into autopairing mode automatically when it is first turned on.

1. Turn on the travel kit by sliding its cover up.

2. Press and hold **Multifunction** for 3 seconds until the Bluetooth status icon flashes continuously.
3. On your phone, start a search for Bluetooth travel kits or hands-free devices. (This process may take several seconds, and it will be different for each mobile phone; see your phone's owner's manual for detailed instructions.)
4. Your phone should discover a device called a *BTS1200* or *Handsfree device*. When your phone asks if you want to pair with this device, answer yes.
5. If your phone prompts you for a PIN code or password to pair with the BTS1200, enter **0000**.

NOTE: If your mobile phone supports Bluetooth 2.1, you do not need to enter a PIN.

6. When the travel kit is paired, the Bluetooth LED flashes twice every 5 seconds. Your phone might also display a confirmation message.
7. If your phone asks if you want to change the travel kit's name, you should only change the name if you have more than one BTS1200 that you use with this phone.

Most phones connect to the travel kit as soon as you pair them; if yours won't, turn the travel kit off and back on. If your travel kit still won't connect, check your phone's owner's manual for additional information.

After the Travel Kit is Paired

Each time you turn the travel kit on, it automatically connects to whatever device it was connected to last. If the travel kit loses the connection (e.g., if your phone is out of range), it should reconnect automatically when it detects the phone again. To manually reconnect, press Multifunction.

USING YOUR TRAVEL KIT

POWER UP/POWER DOWN

- To turn on the travel kit, slide the cover up.
- To turn off the travel kit, slide the cover back down.

MAKING AND RECEIVING CALLS

Making Calls

Just dial from your phone as usual. Your phone should automatically send the call to the travel kit. If it doesn't, press and hold **Multifunction** for 2 seconds to manually send the call to the travel kit.

Answering Calls

Press **Multifunction** while the call is ringing.

BTS1200 COMMON TASKS

- Hang up a call. On a call, press **Multifunction**.
- Reject a call. Press and hold **Multifunction** (about 2 seconds).
- Change the volume. On a call, press **Volume Up** for more volume or **Volume Down** for less volume.

- Mute the microphone. To mute the microphone so the caller can't hear you, press the **SIDE** button. While the microphone is muted, the travel kit beeps every 10 seconds as a reminder. To turn the microphone back on, press **SIDE** again.
- Transfer a call between the phone and travel kit. Press and hold **Multifunction** for 2 seconds. The travel kit sends the call to the phone and disconnects from the phone.
- Redial last dialed number. With the phone in standby, press **Multifunction**.
- Activate Voice Dialing. Press and hold **Multifunction** for 2 seconds when the phone is in standby. When the phone beeps, you can use any command you have already programmed into your phone. (Your phone must support voice dialing.)

SPECIAL FEATURES

CALL WAITING

When another call comes in while you're on the phone, the travel kit sounds a tone.

- To put your current call on hold and switch to the waiting call, press and hold **Volume Up** about 3 seconds. Release the button and you'll be connected to the waiting call. Press and hold **Volume Up** again (about 3 seconds) to switch back to the waiting call.
- To hang up your current call and switch to the waiting call, press and hold **Volume Down** about 3 seconds. When you release the button, you'll be connected to the waiting call.

NOTE: To use this feature, you must subscribe to Call Waiting through your service provider and your phone must support the hands-free profile.

VOICE DIAL

If you have a compatible phone for voice dialing, you can speak a name or number and the travel kit will dial it.

1. Press and hold **Multifunction** to activate Voice Dialing.
2. Press and hold **Multifunction** again to deactivate this special feature.

NOTE: This feature may not be compatible with certain mobile phones.

USING THE TRAVEL KIT WITH TWO PHONES (MULTIPOINT)

You can connect your travel kit to two mobile phones. Just pair the travel kit to the first phone following the instructions on page 4. When the first phone is successfully paired, pair the travel kit to the second phone.

NOTE: This feature may not be compatible with certain mobile phones.

Incoming Calls

Only one phone at a time can be on an active call. The travel kit plays a different ring tone for each phone so you know which one is ringing. It stays connected to both phones until a call comes in. If you answer the call, the travel kit disconnects from the other phone for

the duration of the call. When you hang up, the travel kit automatically reconnects to the other phone.

All the button functions remain the same for the first phone (the one you paired first).

To answer the incoming call, press **Multifunction** as usual.

Outgoing Calls

- To use Last Number Redial on the second phone, press and release the **Special Function** button.
- To activate voice dialing on the second phone, press and hold the **Special Function** button (about 2 seconds).

RESETTING YOUR TRAVEL KIT

If you are having trouble with your travel kit or you want to delete all your information (paired device information, etc.), you can reset it.

1. Disconnect the travel kit from the mobile phone.
2. Press and hold **Volume Down** and **Volume Up** about 5 seconds.

NOTE: Resetting the travel kit deletes all saved information; this information can't be recovered.

CLEANING THE TRAVEL KIT

Generally, wiping the travel kit with a dry cloth is all the cleaning it needs. If more cleaning is necessary, dampen a lint-free cloth with water or a cleaner specially designed for electronics and gently wipe the travel kit clean.

CAUTION! Do not expose this product to liquid (water, alcohol, etc.) or submerge in liquid for any reason.

TROUBLESHOOTING AND MAINTENANCE

If you have problems with the travel kit, see the suggestions in the following table. If these don't help, contact customer support (see the front cover for contact information).

If...	Try...
The travel kit won't turn on.	Charging the battery completely.

If...	Try...
The travel kit won't pair with my phone.	<p>Making sure your phone is in pairing mode. Check your phone's manual for instructions on Bluetooth device pairing.</p> <p>Turning the travel kit off. Wait at least 10 seconds, then turn the travel kit on and try again.</p> <p>Resetting the travel kit. Making sure your phone supports the Bluetooth headset profile or hands free profile.</p>
The travel kit paired with my phone, but I can't hear anything through it.	<p>Making sure the call connected and is still active.</p> <p>Making sure the phone transferred the call to the travel kit. Press and hold Multifunction for 2 seconds to transfer the call.</p>

If...	Try...
I can hear the caller, but the audio is very weak or soft.	Turning the speaker volume up. Moving closer to your phone (if you aren't carrying it). Keeping the battery fully charged. (As the battery power starts to run out, the speaker will get softer.)
The travel kit keeps playing a melody or beeping, and I don't know why.	You need to charge the battery. Checking to see if your phone has lost the network signal. Some phones will trigger an alert when they can't connect to the network.

General Information

- You cannot use the travel kit while it is recharging.

- Bluetooth wireless devices have a maximum range of 30 feet (10 m); the actual range will vary depending on current conditions (obstacles, battery power, interference, etc.).
- The travel kit can be connected only to devices that support the Bluetooth travel kit or hands-free profile. This product is not compatible with standard cordless phones.

Battery Life

- With average use, the battery should provide about 10 hours of talk time and 330 hours of standby time.
- A battery that is new or left unused for long periods of time can have reduced capacity the first few times it is used. For maximum battery life, keep your battery charged.
- When the battery power is low, the travel kit will beep every 20 seconds. If it not recharged in 10 minutes, it will power off.

Noise or Static on the Travel Kit

Interference is the most common cause of noise or static on wireless devices. Bluetooth devices operate in the ISM band (2.402 GHz ~ 2.480 GHz); any equipment operating in this frequency range might interfere with the travel kit. Some common interference sources in this range are:

- Wireless LAN equipment or WiFi connections
- Other Bluetooth devices or computers
- Any equipment that uses microwaves, especially microwave ovens
- Certain cordless telephones
- Certain medical equipment and appliances

If you have problems with static during calls, look around for one of these interference sources. Try moving away from the suspected source.

If the noise continues, there may be interference on your phone itself, and any noise in the phone's connection will come through on the travel kit, too. Transfer the call to your phone and see if the audio quality improves. If it doesn't, check around for things that might interfere with your phone.

Safety and Handling Information

Uniden America Corporation DOES NOT represent this product to be waterproof. To reduce the risk of fire, electrical shock, or damage to the product, DO NOT expose this product to rain or moisture.

For maximum product life, do not drop, throw, or crush the travel kit. Do not expose it to humidity, dust, or temperatures above 125° F.

When using the travel kit, always follow basic safety precautions to reduce the risk of fire, electric shock and injury to persons, including the following:

- Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
- Use only the power cord and batteries indicated in this manual. Do not expose the battery (or the device) to flames or dispose of it in a fire: the battery may explode. Check with local authorities for possible battery disposal instructions.
- Do not disassemble, modify, or attempt to repair any component of this product.
- Check the laws and regulations on the use of mobile phones and hands-free equipment in the areas where you drive. Always give full attention to driving and pull off the road and park before making or answering a call if driving conditions require.
- Do not allow children to play with your travel kit since it contains small parts that could become detached and create a choking hazard.

- Turn off your travel kit when pumping gas, handling flammable materials, or in any area with a risk of explosion. In rare occurrences, this product could generate sparks which can cause an explosion or fire. Follow all warning notices in your immediate area!

SAVE THESE INSTRUCTIONS!

FCC Notice

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Privacy of communications may not be ensured when using this product.

To insure the safety of users, the FCC has established criteria for the amount of radio frequency energy various products may produce depending on their intended usage. This product has been tested and found to comply with the

FCC's exposure criteria. For body worn operation, the FCC RF exposure guidelines were also met when used with the Uniden accessories supplied or designed for this product. Use of other accessories may not ensure compliance with FCC RF exposure guidelines and should be avoided.

Industry Canada statement:

This device complies with RSS-210 of the Industry Canada Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE: Radiation Exposure Statement:

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. To maintain compliance with IC RF exposure

compliance requirements, please follow operation instruction as documented in this manual.

Lithium-polymer battery information

This device contains a lithium-polymer battery. The travel kit and battery must be recycled or disposed of properly. Contact your local waste management office for information on battery recycling or disposal.

Two-Year Limited Warranty

Important: Evidence of original purchase is required for warranty service.

WARRANTOR: UNIDEN AMERICA CORPORATION (“Uniden”)

ELEMENTS OF WARRANTY: Uniden warrants, for two years, to the original retail owner, this Uniden Product to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

WARRANTY DURATION: This warranty to the original user shall terminate and be of no further effect 24 months after the date of original retail sale. The warranty is invalid if the Product is a) damaged or not maintained as reasonable or necessary, b) modified, altered, or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden, c) improperly installed, d) serviced or repaired by someone other than an authorized Uniden service center for a defect or malfunction covered by this warranty, e) used in any conjunction with equipment or parts or as part of any system not manufactured by Uniden, or f) installed or programmed by anyone other than as detailed by the owner's manual for this product.

STATEMENT OF REMEDY: In the event that the product does not conform to this warranty at any time while this warranty is in effect, warrantor will either, at its option, repair or replace the defective unit and return it to you without charge for parts, service, or any other cost (except shipping and handling)

incurred by warrantor or its representatives in connection with the performance of this warranty. Warrantor, at its option, may replace the unit with a new or refurbished unit.

THE LIMITED WARRANTY SET FORTH ABOVE IS THE SOLE AND ENTIRE WARRANTY PERTAINING TO THE PRODUCT AND IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES OF ANY NATURE WHATSOEVER, WHETHER EXPRESS, IMPLIED OR ARISING BY OPERATION OF LAW, INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow this exclusion or limitation of incidental or consequential damages so the above limitation or exclusion may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights, and you may also have other rights which vary from state

to state. This warranty is void outside the United States of America and Canada.

PROCEDURE FOR OBTAINING PERFORMANCE OF WARRANTY:

If, after following the instructions in the owner's manual you are certain that the Product is defective, pack the Product carefully (preferably in its original packaging). The Product should include all parts and accessories originally packaged with the Product. Include evidence of original purchase and a note describing the defect that has caused you to return it. The Product should be shipped freight prepaid, by traceable means, to warrantor at:

Uniden America Service
4700 Amon Carter Blvd.
Fort Worth, TX 76155

