

Uniden®



BTS150 High-Definition Speaker Haut-parleur haute définition BTS150

Questions? Problems?

**Get help on the web at www.uniden.com
or call our Customer Service line at 800-292-2294.**

Questions? Problèmes?

**Obtenez de l'aide au www.uniden.com
ou en communiquant avec le soutien à la clientèle au 800-292-2294.**

Table of Contents

Important Safety Instructions	3	BTS150 SPEAKER OPERATION	10
BTS150 HIGH-DEFINITION SPEAKER	3	Basic Cell Phone Operations.....	10
What's Included.....	4	Basic Music Operation	12
SET UP YOUR BTS150 SPEAKER	4	SPECIAL FEATURES	13
Charge the Battery	4	Play Music through a Wired	
Turn on Your Speaker	5	Connection	13
Pair Bluetooth Devices to		TROUBLESHOOTING.....	14
Your Speaker.....	5	SPECIFICATIONS	16
GETTING TO KNOW THE BTS150 SPEAKER 7		Compatibility	16
BTS150 Top.....	7	One-Year Limited Warranty.....	18
BTS150 Back.....	8		
LEDs.....	9		

Important Safety Instructions

- Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
- Do not use this product while driving.
- Use only the power cord and batteries indicated in this manual. Do not expose the battery (or the device) to flames or dispose of it in a fire: the battery may explode. Check with local authorities for possible battery disposal instructions.
- Do not disassemble, modify, or attempt to repair any component of this product.
- Check the laws and regulations on the use of mobile phones and hands-free equipment in the areas where you drive. Always give full attention to driving and pull off the road and park before making or answering a call if driving conditions require.

SAVE THESE INSTRUCTIONS!



BTS150 HIGH-DEFINITION SPEAKER

Uniden's BTS150 high-definition Bluetooth speaker provides clear stereo sound in a compact, portable package. With Bluetooth V2.0 compatibility, the BTS150 pairs with your cell phone to become a speakerphone for hands free conversations. You can also connect your music player (wired or wireless) for crisp, clear audio.

- Bluetooth V2.0.
- Up to 2 Bluetooth devices can be paired with your speaker.
- Supporting A2DP/AVRCP/HFP/HSP profiles.
- Portable
- Up to 5 hours of play from a fully-charged battery.
- Up to 33 ft (10 m).
- Call Waiting feature

The BTS150 speaker is not a data storage device; do not attempt to copy files to it.

What's Included

- BTS150 Speaker
- AC Adapter (ZDA050100US) with USB cable.

SET UP YOUR BTS150 SPEAKER

Charge the Battery

1. Slide the main power switch to the ON position (see page 8).
2. Insert the adapter's mini USB connection into your speaker's USB slot (see page 8).
3. Plug the adapter into your computer.

4. The LEDs flash blue while the battery is charging (charge time = 7.5 hours on a completely empty battery). The LEDs turn solid blue when the battery is fully charged.

Your battery must be fully charged before you can use your speaker.

Turn on Your Speaker

When you turn on your speaker for the first time, it automatically goes into pairing mode. The LEDs rapidly flash red and blue while in pairing mode. After you pair Bluetooth devices to your speaker, the next time you turn it on it searches for these paired devices and then moves into a standby state.

1. Slide the main power switch to the ON position.
2. Press and hold  for at least 3 seconds. A “power on” tone sounds.
3. The LEDs flashes blue and red slowly while looking for Bluetooth devices. It remains steady on (blue) when Bluetooth devices are discovered; otherwise, it keeps flashing.

Pair Bluetooth Devices to Your Speaker

Make sure your speaker has been fully charged and is in pairing mode.

Pair First Bluetooth Device

Pair your first Bluetooth device to your speaker when you turn your speaker on for the first time. Be sure your speaker is in pairing mode (see page 6).

1. Select a Bluetooth V2.0 device (mobile phone or music player) to pair.

2. Select the *Searching* mode on your Bluetooth device (refer to your Bluetooth device's owner's manual for details if necessary).
3. Your Bluetooth device should find *BTS150*; select it and use *0000* for a pairing code if necessary.
4. Verify that you are connected to your speaker. The Bluetooth LED moves to a steady ON state when pairing is complete.


Pair Second Bluetooth Device

When you want to pair the second Bluetooth device:

1. Turn on your speaker.
2. Press and hold  until your speaker beeps twice.
3. Release . The BTS150 is ready to pair.
4. Follow the same procedures for pairing your first Bluetooth device (see page 5).

GETTING TO KNOW THE BTS150 SPEAKER


BTS150 Top

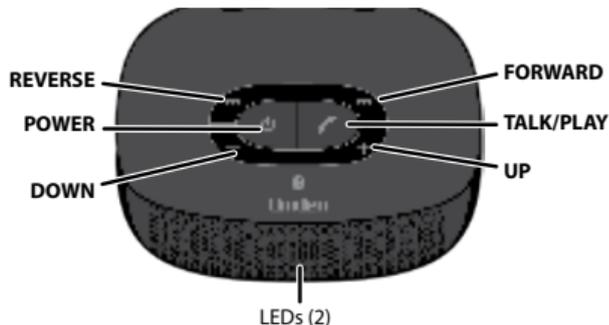

Key name	Icon	Press to ...
REVERSE	⏮	Rewind or skip back in music.
POWER	⏻	<ul style="list-style-type: none">• Turn your BTS150 speaker on/off.• Press and hold to register devices.
DOWN	⏭	Decrease the volume.
FORWARD	⏭	Fast forward or skip ahead in music.

Key name	Icon	Press to ...
TALK/PLAY		<ul style="list-style-type: none"> – Handle phone calls and play music. – Press and hold to register devices. <p>NOTE: This key can also turn your BTS150 speaker on and off.</p>
UP		Increase the volume.

BTS150 Back

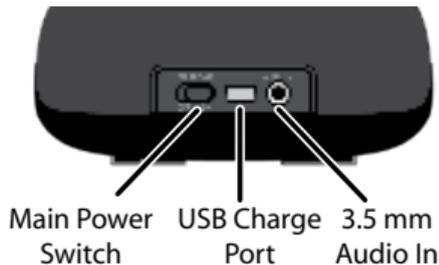

Use this...	To...
Main power switch	turn main power on and off.
USB charge port	connect your speaker to the AC adapter.

Use this...	To...
3.5 mm Audio In	connect non-Bluetooth devices.

LEDs

Two LEDs on the front of your speaker provide visual cues to different processes.

Color	State	Meaning
Blue	On	Power is on.
	Flashing	Slow flash - Battery is charging. Fast flash - Lost Bluetooth connection.
Red	On	Bluetooth is connected but the battery level is low.
	Flashing	Power almost gone and Bluetooth is not connected.
Blue and Red	Flashing	Pairing mode.
LED	Off	Power is off.

BTS150 SPEAKER OPERATION

When you want to turn on your speaker, remember to slide the main power switch to the ON position.

Press and hold  for at least 3 seconds.

The  and  keys control the speaker's volume level during cellphone operation and music playback. Press and release the keys to increase or decrease the volume level one step at a time. Press and hold  and  to quickly raise and lower the volume levels. Your speaker sounds an alert tone when it reaches the maximum upper and lower volume levels.

Basic Cell Phone Operations

When you have an incoming call, the speaker sounds an incoming call tone and the LEDs flash blue. Both the speaker and your cellphone may ring, depending on your cellphone settings.

To...	Do this...
Answer an incoming call	Press any key.
Reject an incoming call	Press and hold  .
End a call	Press  .

To...	Do this...
Switch between your speaker and your cellphone	Press and hold  during an active call.
Redial the last incoming number	From standby, press  twice.
Redial the last number dialed	From standby, press and hold  .

Call Waiting

You can receive call waiting notification when your cellphone is paired to your speaker. The  LED flashes and your speaker sounds an alert tone.

**Your cellphone must subscribe to Call Waiting service to use these features;
contact your telephone provider for more information.**

To...	Do this...
Answer a call waiting call and put first call on hold	Press and release  twice. The existing call is put on hold and the second call is now active.
Switch between current call and calls on hold	Press and release  twice. The current call is put on hold and the call on hold is now active.

To...	Do this...
Answer a call waiting call and hang up first call	Press  ; the first call is ended and the call waiting call is now active.

Basic Music Operation

When you pair a Bluetooth music player to your speaker, you can control operation through your speaker.

To...	Do this...
Play music	Press  . NOTE: When you stop or pause the music playback, the music resumes at the same volume level after you press .
Skip to the next track	Press  .
Fast forward	Press and hold  .
Skip to the previous track	Press  .
Rewind	Press and hold  .

To...	Do this...
Control the volume	Press + to increase or - to decrease the volume.
Pause music	Press  while the music is playing.
Stop playing music	Press and hold  while the music is playing.

SPECIAL FEATURES

Play Music through a Wired Connection

You can still play music through your BTS150 speaker even if your music device is not paired to your speaker. You can physically connect your music device to your speaker with a 3.5 mm minijack cable (not included).

1. Plug one end of the cable into your music device, just like you would a pair of headphones.
2. Plug the other end of the cable into your speaker's 3.5 mm jack labeled **AUDIO IN**.
3. Use your music device to start and control music playback and volume through your speaker.

The following restrictions apply when you are playing music through a wired connection:

- If both a Bluetooth device and a wired device are connected to your speaker, the Bluetooth device will take priority over the wired device.
- The BTS150 does not control the wired device; it only plays music through a wired connection.
- If you are listening to music from the wired device and you press , your speaker will start playing music from the Bluetooth device if available.

TROUBLESHOOTING

If this happens...	Try this...
Disconnection due to Out of Range	Move back into connection range and: <ul style="list-style-type: none">– Turn your speaker off and back on to reconnect to your Bluetooth device.– Press  for reconnection. NOTE: The speaker automatically connects to the last device connected. If you need to reconnect to the first device that was connected, power off and back on.
No “Beep” sound after disconnection of A2DP HFP	Press  and  to connect to A2DP & HFP successfully.

If this happens...	Try this...
Sound is not clear or there is no sound at all	<ul style="list-style-type: none"> - Turn your speaker off and then back on. - Turn off your music device's equalizer. - Check your speaker or Bluetooth device volume level.
Music won't play on the BTS150	<ul style="list-style-type: none"> - Make sure your Bluetooth device has A2DP. - Check if both devices are connected. - Turn your speaker off and then back on to auto-connect with your Bluetooth device.
The BTS150 volume controls are not working.	<ul style="list-style-type: none"> - Change the volume from your Bluetooth device. - If your music device is wired into your speaker, you cannot change the volume through the speaker. - Check the battery level.
LED No Power	<ul style="list-style-type: none"> - Make sure your speaker is turned on. - Make sure your speaker is charged.
Sound is too small / too much distortion	<ul style="list-style-type: none"> - Adjust your speaker or Bluetooth device volume level. - Turn off your Bluetooth device's equalizer.

If this happens...	Try this...
Phone call not answer by BTS150	<ul style="list-style-type: none"> – Make sure your cellphone has HFP. – Verify that both devices are connected. – Restart your speaker to auto-connect with your Bluetooth device.
Music doesn't play after hanging up a call	Press  to resume music.
BTS150 doesn't control the music	Make sure your Bluetooth device has AVRCP.

SPECIFICATIONS

- Total 4W output (2W / Channel)
- Full-range (35 mm) driver / Channel + Passive Radiator
- Li-Ion Batt: 1180mAh
- Playtime: Up to 5 hours in 80% Volume
- Recharging Time: 7.5 hours
- Range: Class 2, 10 m

Compatibility

- Bluetooth 2.0 or above device with A2DP/AVRCP/ HFP / HSP

Safety and Handling Information

For maximum product life, do not drop, throw, or crush the speaker. Do not expose it to humidity, dust, or temperatures above 125 F.

FCC Notice

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Privacy of communications may not be ensured when using this product.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

To insure the safety of users, the FCC has established criteria for the amount of radio frequency energy various products may produce depending on their intended usage. This product has been tested and found to comply with the FCC's exposure criteria. Use of other accessories may not ensure compliance with FCC RF exposure guidelines and should be avoided.

Industry Canada statement

This device complies with RSS-210 of the Industry Canada Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE: Radiation Exposure Statement

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. To maintain compliance with IC RF exposure compliance requirements, please follow operation instruction as documented in this manual.

Lithium-Ion battery information

This device contains a non-removable lithium-ion battery. The battery must be recycled or disposed of properly. Contact your local waste management office for information on battery recycling or disposal.

One-Year Limited Warranty

Evidence of original purchase is required for warranty service.

WARRANTOR: UNIDEN AMERICA CORPORATION ("Uniden")

ELEMENTS OF WARRANTY: Uniden warrants, for one year, to the original retail owner, this Uniden Product to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

WARRANTY DURATION: This warranty to the original user shall terminate and be of no further effect 12 months after the date of original retail sale. The warranty is invalid if the Product is a) damaged or not maintained as reasonable or necessary, b) modified, altered, or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden, c) improperly installed, d) serviced or repaired by someone other than an authorized Uniden service center for a defect or malfunction covered by this warranty, e) used in any conjunction with equipment or parts or as part of any system not manufactured by Uniden, or f) installed or programmed by anyone other than as detailed by the owner's manual for this product.

STATEMENT OF REMEDY: In the event that the product does not conform to this warranty at any time while this warranty is in effect, warrantor will either, at its option, repair or replace the defective unit and return it to you without charge for parts, service, or any other cost (except shipping and handling) incurred by warrantor or its representatives in connection with the performance of this warranty. Warrantor, at its option, may replace the unit with a new or refurbished unit.

THE LIMITED WARRANTY SET FORTH ABOVE IS THE SOLE AND ENTIRE WARRANTY PERTAINING TO THE PRODUCT AND IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES OF ANY NATURE WHATSOEVER, WHETHER EXPRESS, IMPLIED OR ARISING BY OPERATION OF LAW, INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow this exclusion or limitation of incidental or consequential damages so the above limitation or exclusion may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This warranty is void outside the United States of America and Canada.

PROCEDURE FOR OBTAINING PERFORMANCE OF WARRANTY: If, after following the instructions in the owner's manual you are certain that the Product is defective, pack the Product carefully (preferably in its original packaging). The Product should include all parts and accessories originally packaged with the Product. Include evidence of original purchase and a note describing the defect that has caused you to return it. The Product should be shipped freight prepaid, by traceable means, to warrantor at:

Uniden America Service

4700 Amon Carter Blvd.

Fort Worth, TX 76155