

**Uniden®**

**DCX 700**

**Accessory Handset**

**OWNER'S**

**MANUAL**

**OWNER'S MANUAL**

## Welcome

Congratulations on your purchase of the Uniden DCX700 optional handset and charger. This expansion handset is for use with the Digital Spread Spectrum series: DCT746, DCT748, and DCT7488 (model numbers may vary). Each model within this series will support up to four handsets. You can place a fully featured cordless handset anywhere in your home as long as you have AC power is available to connect the handset charging cradle.

### IMPORTANT

The DCX700 expansion handset will not operate unless it has been registered to your main base. This manual describes how to set up and connect your new handset; for instructions on operating your new handset, refer to the owner's manual supplied with your main base.

To purchase expansion handsets (DCX700), visit our web site at [www.uniden.com](http://www.uniden.com).

### Backward / Forward Compatibility

Your phone may be compatible with other Uniden 2.4 GHz Digital Expandable Systems. Please visit our website @ [www.uniden.com](http://www.uniden.com) <<http://www.uniden.com>>.

## Checking the Package Contents

Make sure you have received the following items in the package. If any of these items are missing or damaged, contact the Uniden Parts Department.

- Cordless Handset
- Charging Cradle
- Battery Pack (BT-446)  
(Capacity: 800 mAh, 3.6V)
- AC Adapter (AD-0005)  
(INPUT: 120V AC 60Hz) (OUTPUT: 9V DC 210 mA)
- Beltclip
- This Owner's Manual
- Other Printed Material

Uniden Parts Department at (800) 554-3988  
Hours: M-F 8:00 a.m. to 5:00 p.m. CST.  
or visit our website at  
[www.uniden.com](http://www.uniden.com)

 
## Installing Your Expansion Handset

Follow these three easy steps before using your new cordless handset.

- 1** Install the battery pack.
- 2** Connect the charger and charge your new handset for 15-20 hours.
- 3** Register your new handset to the main base.


### Step 1: Install the Battery Pack

- 1** Press down on the handset battery case cover (use the finger indention for a better grip) and slide the cover downward to remove.
- 2** Plug the battery pack connector (red & black wires) into the jack inside the battery compartment. (The connector notches fit into the grooves of the jack only one-way.) Match the wire colors to the polarity label in the battery compartment, and push the connector in until you hear a click.
- 3** Make sure you have a good connection by slightly pulling on the battery wires. If the connection is secure, the battery jack will remain in place.
- 4** Place the battery case cover back on the handset by sliding it upwards until it clicks into place.
- 5** Place the handset in the charging cradle with the keypad facing forward.

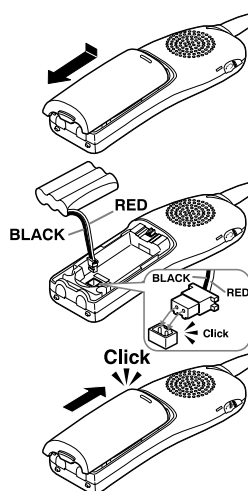


- note**
- **Use only the Uniden battery (BT-446) supplied with your phone.** Replacement batteries are also available through the Uniden Parts Department. (See page 2.)
  - Recharge your handset on a regular basis by returning the handset to the charger after each phone call.

 Rechargeable Nickel-Metal-Hydrate Batteries  
Must Be Recycled or Disposed of Properly

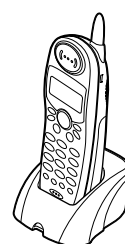

## Step 2: Connect the Charger

 - 1 Connect the AC adapter to the **DC IN 9V** jack and to a standard 120V AC wall outlet.
- 2 Set the charger on a desk or tabletop, and place the handset in the charger with the keypad facing forward.
- 3 Make sure the **charge LED** illuminates. If the LED does not illuminate, check to see that the AC adapter is plugged in and that the handset makes good contact with the charger charging contacts.

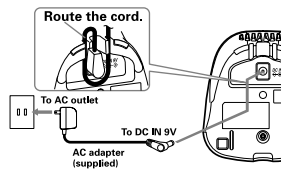

- note**
- Use only the supplied AD-0005 AC adapter. Do not use any other AC adapter.
  - Place the charger close to the AC outlet so that you can unplug the AC adapter easily.
- 4 Charge the handset for 15-20 hours before using.

## Step 3: Register the Handset

**YOU NEED TO REGISTER THE DCX700 TO THE MAIN BASE BEFORE USE!**

- 1 Be sure the handset battery is fully charged.
- 2 For DCT746 and DCT748 models (model numbers may vary) With the main base in standby mode (i.e., not being used), place the extra handset in the main base to begin registration.

### For DCT7488 (corded base model)

- 1) With the main base in standby mode, press the **MENU** soft key on the base.
- 2) Press **△/vol/▲** or **△/vol/▼** on the base to select **HS Registration**, and then press the **OK** soft key.
- 3) Base LCD screen will display the following prompt:  
-On handset press & hold **#** key for 2 sec
- 4) On the handset, press and hold **#** for 2 seconds. To cancel registration, press the **CANCEL** soft key on the base.

### For compatible models (DCT6 series) (model number may vary)

- 1) Disconnect the AC adapter.
- 2) While holding **find handset** (or **intercom** for DCT6485 models), connect the AC adapter.
- Keep pressing the key until the **CHARGE LED** starts to blink.
- 3) On the handset, press and hold **#** until you hear beep.

- 3 While the handset is registering, **Handset Registering** will appear in the handset LCD. When **Registration Complete** is displayed, the handset has been registered to the base. If **Registration Failed** appears, please try these steps again.

## Using Your Expansion Handset

Now that your new handset is registered, it can perform all the same functions as the handsets originally included with your phone. With your new handset, you can

- Transfer calls or intercom between handsets and base (depending on model)
- Use two handsets as 2-way radios in DirectLink mode
- Use two handsets as a baby/room monitor
- Hold 3 or 4-way conference calls (depending on model)
- Access your main base's integrated answering device (if available)
- Access voice mail using handsets or main base (depending on model)


See the owner's manual that came with your main base for complete instructions on operating your new expanded digital phone.

## Battery Information

### Low battery alert

When the batteries are very low and need to be charged, the phone is programmed to eliminate functions in order to save power.

The batteries need to be charged when:

- The empty battery icon  appears.
- Low Battery appears in the display.

If the phone is in standby mode, none of the keys will operate.

If you are on a call, complete your conversation as quickly as possible, and return the handset to the charging cradle.

### Cleaning the battery charging contacts

To maintain a good charge, it is important to clean the charging contacts on the handset once a month.

Using water only, dampen a cloth to clean the charging contacts. Then make sure to go back over the charging contacts with a dry cloth before returning the handset to the charger to charge.



**Caution:** Do not use paint thinner, benzene, alcohol, or other chemical products. Doing so may discolor the surface of the telephone and damage the finish.

## I.C. Notice

### TERMINAL EQUIPMENT

**NOTICE:** This equipment meets the applicable Industry Canada Terminal Equipment Technical Specifications. This is confirmed by the registration number. The abbreviation, IC, before the registration number signifies that registration was performed based on a Declaration of Conformity indicating that Industry Canada technical specifications were met. It does not imply that Industry Canada approved the equipment.

**NOTICE:** The Ringer Equivalence Number (REN) for this terminal equipment is marked on the equipment itself. The REN assigned to each terminal equipment provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed five.

### RADIO EQUIPMENT

The term "IC:" before the radio certification number only signifies that Industry Canada technical specifications were met.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. "Privacy of communications may not be ensured when using this telephone."



As an Energy Star® Partner, Uniden has determined that this product or product models meets the Energy Star® guidelines for energy efficiency. Energy Star® is a U.S. registered mark.

### THE FCC WANTS YOU TO KNOW

Changes or modifications to this product not expressly approved by Uniden, or operation of this product in any way other than as detailed by the owner's manual, could void your authority to operate this product.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Privacy of communications, may not be ensured when using this phone.

To insure the safety of users, the FCC has established criteria for the amount of radio frequency energy various products may produce depending on their intended usage. This product has been tested and found to comply with the FCC's exposure criteria. For body worn operation, the FCC RF exposure guidelines were also met when used with the Uniden accessories supplied or designed for this product. Use of other accessories may not ensure compliance with FCC RF exposure guidelines and should be avoided.

Uniden works to reduce lead content in our PVC coated cords in our products and accessories.

### Warning!

The cords on this product and/or accessories contain lead, a chemical known to the State of California to cause birth defects or other reproductive harm. ***Wash hands after handling.***

## One Year Limited Warranty

**Important:** Evidence of original purchase is required for warranty service.

**WARRANTOR:** UNIDEN AMERICA CORPORATION ("Uniden")

**ELEMENTS OF WARRANTY:** Uniden warrants, for one year, to the original retail owner, this Uniden Product to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

**WARRANTY DURATION:** This warranty to the original user shall terminate and be of no further effect 12 months after the date of original retail sale. The warranty is invalid if the Product is (A) damaged or not maintained as reasonable or necessary, (B) modified, altered, or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden, (C) improperly installed, (D) serviced or repaired by someone other than an authorized Uniden service center for a defect or malfunction covered by this warranty, (E) used in any conjunction with equipment or parts or as part of any system not manufactured by Uniden, or (F) installed or programmed by anyone other than as detailed by the owner's manual for this product.

**STATEMENT OF REMEDY:** In the event that the product does not conform to this warranty at any time while this warranty is in effect, warrantor will either repair or replace the defective unit and return it to you without charge for parts, service, or any other cost (except shipping and handling) incurred by warrantor or its representatives in connection with the performance of this warranty. Warrantor may replace the unit with a new or refurbished unit. **THE LIMITED WARRANTY SET FORTH ABOVE IS THE SOLE AND ENTIRE WARRANTY PERTAINING TO THE PRODUCT AND IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES OF ANY NATURE WHATSOEVER, WHETHER EXPRESSED, IMPLIED OR ARISING BY OPERATION OF LAW, INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES.** Some states do not allow this exclusion or limitation of incidental or consequential damages so the above limitation or exclusion may not apply to you.

**LEGAL REMEDIES:** This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This warranty is void outside the United States of America and Canada.

**PROCEDURE FOR OBTAINING PERFORMANCE OF WARRANTY:** If, after following the instructions in the owner's manual you are certain that the Product is defective, pack the Product carefully (preferably in its original packaging). Disconnect the battery from the Product and separately secure the battery in its own separate packaging within the shipping carton. The Product should include all parts and accessories originally packaged with the Product. Include evidence of original purchase and a note describing the defect that has caused you to return it. The Product should be shipped freight prepaid, by traceable means, to warrantor at:

**Uniden America Corporation**  
Parts and Service Division  
4700 Amon Carter Blvd.  
Fort Worth, TX 76155

(800) 297-1023, 8 a.m. to 5 p.m. Central, Monday through Friday

# Uniden®

May be covered under one or more of the following U.S. patents:

4,523,058	4,595,795	4,797,916	5,381,460	5,426,690	5,434,905	5,491,745
5,493,605	5,533,010	5,574,727	5,581,598	5,650,790	5,660,269	5,661,780
5,663,981	5,671,248	5,696,471	5,717,312	5,732,355	5,754,407	5,758,289
5,768,345	5,787,356	5,794,152	5,801,466	5,825,161	5,864,619	5,893,034
5,912,968	5,915,227	5,929,598	5,930,720	5,960,358	5,987,330	6,044,281
6,070,082	6,125,277	6,253,088	6,314,278	6,418,209		

FOR  
ACCESSORIES,  
GO ONLINE @  
[WWW.UNIDEN.COM](http://WWW.UNIDEN.COM)

**REGISTER ONLINE TODAY!**

**THANK YOU FOR BUYING A UNIDEN PRODUCT.**

A World Without Wires | **Uniden®**

©2004 Uniden America Corporation, Fort Worth, Texas. Contains additional foreign articles. Custom manufactured in China.

**UZZ01869BZ**