

Contents

Quick Reference Guide	3	Making Calls with Memory Dialing	28
Welcome/Features	5	Chain Dialing	29
Controls and Functions	6	Editing a Stored Name and/or Phone Number Erasing a Stored Name and Phone Number	30 32
Getting Started		RocketDial	52
Setting up the Phone	8	RocketDial	33
Before Using, Register Second Handset		Storing and Editing the RocketDial	33
to the Base Unit	13	Making Calls with the RocketDial	33
When to Re-register Handsets	14	Deleting the RocketDial	34
Call Transfer Feature	14	Caller ID Features	
Mounting the Base Unit on a Wall	15	Caller ID	35
Setting Menu Options	17	When the Telephone Rings	35
Basics		Viewing the Caller ID Message List	36
Making and Receiving Calls	20	Deleting Information from the Caller ID List	37
Adjusting the Handset Ringer and		Using the Caller ID List	39
Earpiece Volume	21	5	57
Redial	22	Additional Information	41
Tone Dialing Switch-over	22	Changing the Digital Security Code	41
Traveling Out-of-Range	22	Installing the Beltclip	41
Selecting a Different Channel	23	Headset Installation	41
Find Handsets	23	Note on Power Sources	42
Flash and Call Waiting	23	Maintenance	42
Voice Mail Waiting Indicator	24	Troubleshooting	43
Memory Dialing		General Information	46
Storing Phone Numbers and Names	25	Precautions & Warranty	47
•	25	I.C. Notice	49
Steps for Entering Names and Special Characters	21	Index	50

www.uniden.com

[4]

Welcome Congratulations on your purchase of the Uniden DXI3086-2 series. This cordless phone is designed and engineered to exacting standards for reliability, long life, and outstanding performance.

Note: Some illustrations in this manual may differ from the actual unit for explanation purposes. The color of your cordless telephone may vary.

Features • Dual Handsets

- 2.4GHz Extended Range Technology
- 3 Line Backlit Display
- Caller ID and Call Waiting Caller ID (each handset)
- RocketDial (each handset)
- 20 Number Memory Dialing (each handset)
- 32 Digit Redial
- Flash and Pause
- English or French Display Option
- The Keypad Facing Forward Charging

Be sure to visit our web site: www.uniden.com


Uniden[®] is a registered trademark of Uniden America Corporation. AutoTalk, AutoStandby, UltraClear Plus, Random Code, AutoSecure, and RocketDial are trademarks of Uniden America Corporation.

www.uniden.com

- Tone/Pulse Dialing
- Page/Find handset
- 7 Hour Talk Time/
- 7 Day Standby Time • Handset Earpiece and
- Ringer Volume Control
- Hearing Aid Compatible
- 20 Channel Autoscan
- Call Transfer


[5]

Controls and Functions Dual Handsets

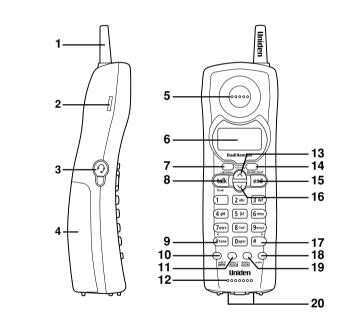

[6] CONTROLS AND FUNCTIONS

- 1. Handset antenna
- 2. Beltclip hole
- 3. Optional headset jack
- 4. Handset battery compartment
- 5. Handset earpiece
- 6. LCD display
- 7. (Caller ID) cid/menu key
- 8. Talk/flash key
- 9. ★/tone/ < (left cursor) key
- 10. Redial/pause key
- 11. Select/channel key
- 12. Handset microphone and ringer speaker
- 13. (Volume) vol/ring/ A (up) key
- 14. RocketDial key
- 15. End key
- 16. (Volume) vol/ring/ \lor (down) key
- 17. #/ > (right cursor) key
- 18. (Memory) mem key
- 19. Delete/transfer key
- 20. Handset charging contacts

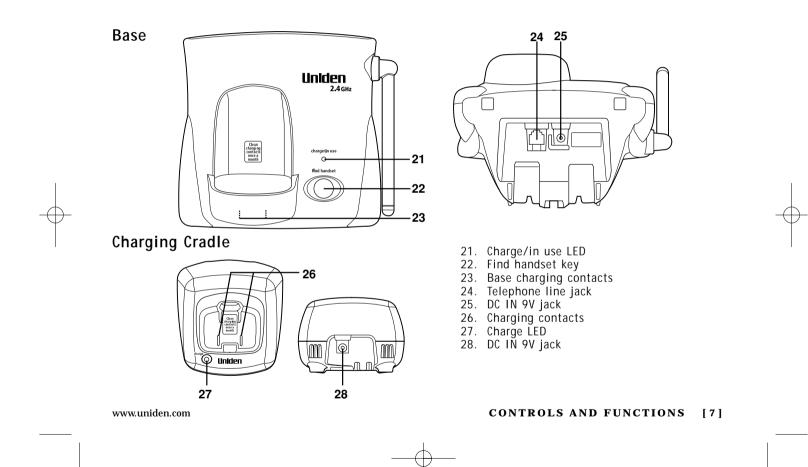



If your home has specially wired alarm equipment connected to the telephone line, be sure that installing the system does not disable your alarm equipment.

If you have questions about what will disable your alarm equipment, contact your telephone company or a qualified installer.


Setting up the Phone

Do the following steps:

A. Choose the best locations C. Connect the base unit and charging cradle B. Install the rechargeable battery packs into both handsets

A. Choose the best location

Before choosing a location for your new phone, read the INSTALLATION CONSIDERATIONS included in the PRECAUTIONS AND IMPORTANT SAFETY INSTRUCTIONS brochure. Here are some important guidelines you should consider:

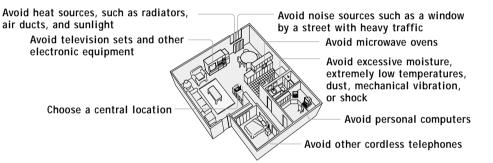


- The location should be close to both a phone jack and a continuous power outlet which is not switchable.
- Keep the base and each handset away from sources of electrical noise such as motors, microwave ovens, and fluorescent lighting.
- Be sure there is sufficient space to raise the base antenna to a vertical position.
- The base can be placed on a desk, tabletop, or mounted on a standard wall plate.

[8] GETTING STARTED

B. Install the rechargeable battery packs into both handsets Both handsets are powered by rechargeable battery packs. The battery recharges automatically when the handset is placed in the base unit or charging cradle.

Charge the handset battery packs for at least 15-20 hours before using your new cordless telephone for the first time! To maximize the charge capacity of your battery pack, DO NOT plug the telephone cord into the base unit and wall jack until the battery is fully charged.

- 1) Press down on the handset battery case cover (use the finger indention for a better grip) and slide the cover downward to remove.
- 2) Plug the battery pack connector (red & black wires) into the small, black jack inside the battery compartment. (The connector notches fit into the grooves of the jack only one-way.) Match the wire colors to the polarity label in the battery compartment, connect the battery and listen for a click to insure connection.
- 3) Make certain you have made a good connection by slightly pulling on the battery wires to insure that there is a secure connection. If the battery connector is not securely connected, the handset will not charge properly.

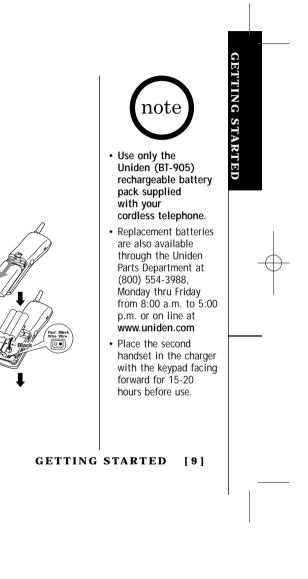


- 4) Place the battery case cover back on the handset by sliding it upwards until it clicks into place.
- 5) Place one handset in the base unit and one handset in the charging cradle for 15-20 hours without interruption. The base and charging cradle unit's LED light labeled (charge/in use or charge) illuminates once the handset is placed in the base or charging cradle. The LED light will illuminate regardless if the battery pack is connected or not.

DO NOT rely on the LED light as an indicator that the battery pack is connected and the handset is charging!

If the base or charging cradle (charge/in use or charge) LED light does not illuminate:

- Check to see if the AC adapter is plugged into each charging cradle and the electrical wall outlet properly. (Use only the supplied AC adapter. Do not use any other AC adapter.)
- Check to see if each handset is sitting correctly in each charging cradle and making good contact with each charging contacts.

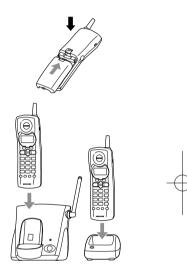

[10] GETTING STARTED

Battery use time (per charge)

- From fully charged (15-20 hours charge time)
- Seven hours continuous use during talk mode
- Seven days when the handset is in the standby mode

Low battery alert

When the battery pack is very low and needs to be charged, the phone is programmed to eliminate functions in order to save power. If the phone is not in use, "Low Battery" appears on the LCD and none of the keys will operate.


If the phone is in use, "Low Battery" flashes and the handset beeps. Complete your conversation as quickly as possible and return the handset to either charging cradle for charging.




The last number dialed in the redial memory, as well as, the names and the numbers stored in the memory locations are retained for up to 30 minutes while you replace the battery pack.

Cleaning the charging contacts

To maintain a good charge, it is important to clean the charging contacts on the handsets, base unit and charging cradle once a month. Use a dry cloth or pencil eraser to clean. If the contacts become very dirty, using water only, dampen a cloth to clean the charging contacts. Then make sure to go back over the charging contacts with a dry cloth before returning the handsets to the base unit or charging cradle to charge.

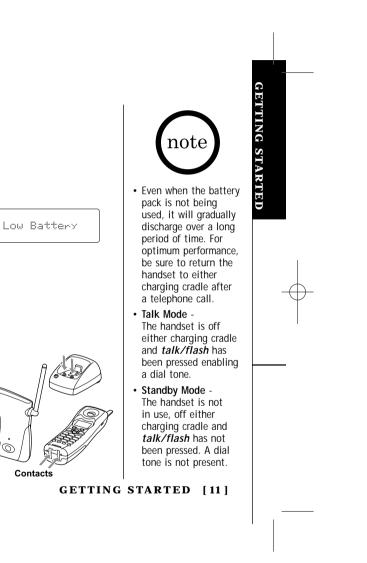

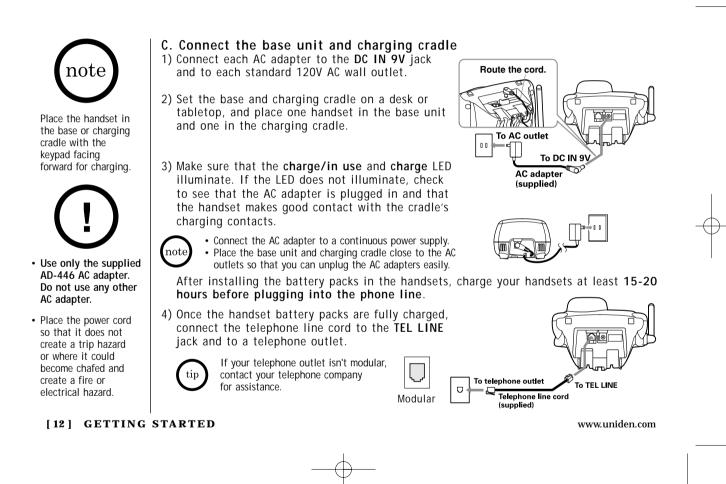

Before Using, Register Second Handset to the Base Unit

When the dual handsets are removed from the packaging, the handset that is placed in the base unit first (to charge battery for 15-20 hours), will automatically be registered to the base unit. (It does not matter which handset you choose to place in the base unit first.)


You will also need to register the second handset by placing it in the base cradle. The second handset WILL NOT operate properly until the registration has been completed. Once the handset is registered, it is ready for use.

Follow these simple steps to register:

- First, install the battery packs in both handsets. Place either handset in the base, then place the second handset in the charging cradle. Charge both handsets for 15-20 hours.
- 2) After fully charging both handsets, remove the handset in the charging cradle, and place it in the base. The **charge/in use** LED light on the base will begin to flash, indicating that the registration is taking place between the second handset and the base.

3) Wait for at least 5 seconds before removing the handset from the base.

Congratulations, the registration has been completed, and your dual handset cordless phone is ready for use!

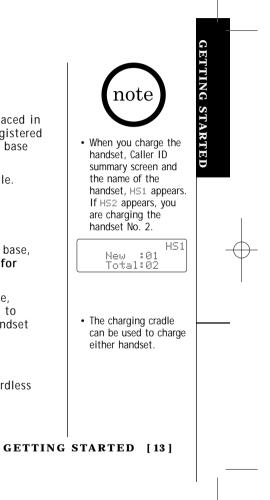



If the second handset's battery becomes very low, the handset must be recharged for 15-20 hours and re-registered to the base unit.

- Make sure to return the handsets to the charging cradles after each phone call.
- Call transfer allows you to transfer outside calls from handset to handset, only one handset at a time can talk with an outside caller.
- If you transfer the call and it is not picked up after 5 minutes, the call will be disconnected.

When to Re-register Handsets

- You'll need to re-register the second handset (follow steps on page 13) each time the digital security code is changed. Refer to page 41 for details regarding the Digital Security Code.
- 2) When there is a power failure for more than one hour:

If power failure occurs (e.g. due to electrical storm or if the unit is unplugged during a move), both handsets will need to be re-registered. To re-register, follow the same registration process on page 13.

Call Transfer Feature

Conveniently, your cordless phone allows you to transfer outside calls from handset to handset, simply by pressing the *delete/transfer* key. Not to worry, conversations will not be interrupted; only one handset at a time can talk with an outside caller. The second handset cannot go off hook to listen to conversations or make an outgoing call while the other handset is in use.

To transfer a call (to the second handset)

- 1) Press *delete/transfer* during a call. The call will automatically be placed on hold and the transfer tone sounds.
- 2) When the other handset receives the call, the transfer tone

stops. To cancel the transfer, press *delete/transfer* or *talk/flash* on the handset.

To receive a transfer call (from the second handset) Pick up the handset (when AutoTalk is set to On), or pick up the

handset and press talk/flash to answer the transferred call. Additionally, you can answer the transferred call by pressing any number key, $\star/tone/<$, or #/> (when AutoTalk is set to On). Transfer Call

Transfer Call

Hold


[14] GETTING STARTED

Mounting the Base Unit on a Wall

Standard wall plate mounting This phone can be mounted on any standard wall plate.

1) Plug the AC adapter into the DC IN 9V jack.

- 2) Wrap the AC adapter cord inside the molded wiring channel as shown.
- 3) Plug the AC adapter into a standard 120V AC wall outlet.
- 4) Plug the telephone line cord into the **TEL LINE** jack. Wrap the cord inside the molded wiring channel as shown.
- 5) Plug the telephone line cord into the telephone outlet.
- 6) Raise the antenna to a vertical position.
- 7) Align the mounting slots on the base with the mounting posts on the wall. Then push in and down until the phone is firmly seated.

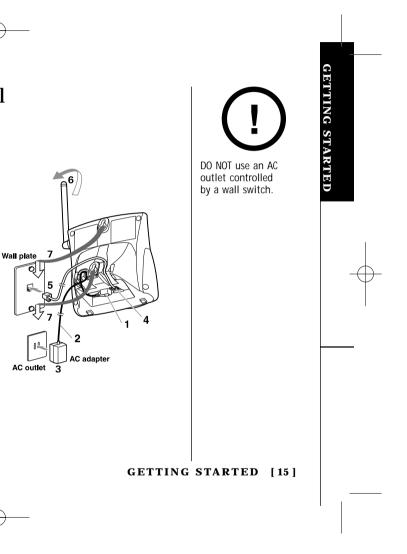


Direct wall mounting

If you don't have a standard wall plate, you can mount your phone directly to the wall. Before doing this, consider the following:

- Avoid electrical cables, pipes, or other items behind the mounting location that could cause a hazard when inserting screws into the wall.
- Try to mount your phone within 5 feet of a working phone jack to avoid excessive lengths.
- Make sure the wall material is capable of supporting the weight of the base and handset.
- Use #10 screws (minimum length of 1-3/8 inches) with anchoring devices suitable for the wall material where the base unit will be placed.

 Insert two mounting screws into the wall, (with their appropriate anchoring device), 3-15/16 inches apart. Allow about 1/8 of an inch between the wall and screw heads for mounting the phone.

2) Refer to steps 1 through 7 on page 15 to mount the telephone.

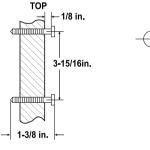

[16] GETTING STARTED

Setting Menu Options

There are five setup options available. They are Caller ID options [AutoTalk, CIDCW (Caller ID on Call Waiting), Area Code], Dial Mode and Language.

AutoTalk allows you to answer the phone without pressing the *talk/flash* key. If the phone rings when AutoTalk is On, simply remove the handset from the base or charging cradle and the phone automatically answers the call. If the phone rings when AutoTalk is Off, you must press *talk/flash* to answer the call.

CIDCW and Dial Mode options can only be set by using Handset 1. If you try to set by using Handset 2, you will not see these options listed on the LCD screen. To confirm which handset is HS1, refer to the display indicating "HS1" or "HS2".

AutoTalk, Area Code and Language options can be set by using either Handset 1 or Handset 2.

Caller ID options

To change your AutoTalk and CIDCW:

- 1) Press and hold *cid/menu*. The following screen appears.
- 2) Use the vol/ring/∧ or vol/ring/∨ key to move the pointer to the selection that you would like to change. Press select/channel to toggle between "On" and "Off" for each settin
- Press end and return the handset to the base unit to complete the setting. The handset returns to the standby mode.

toTalk, CIDCW Tash key.	note	GETTING STARTED
rom the base he phone rings	note	NED
you try to LCD screen. 1" or "HS2". PAuto Talk :Off Area Code : Language :Eng	The Cordless phone features include AutoTalk TM and AutoStandby TM . AutoStandby allows you to hang up by simply returning the handset to the base or charging cradle.	
▶Auto Talk :Off CIDCW :On Area Code :		
setting.		
e setting.		
GETTING	STARTED [17]	



• If your calling area requires 10-digit dialing, do not program this option.

To enter your Area Code

If you enter a 3-digit area code number in the Area Code option, your local area code does not appear in Caller ID messages. Do not program this option, if your calling area requires 10-digit dialing. When reviewing Caller ID messages, you will see only the local seven digit number. For calls received from outside your local area code, you will see a full 10-digit number.

- 1) When the phone is in the standby mode, press and hold *cid/menu*. The Caller ID setting screen appears.
- 2) Press the *vol/ring/∨* key to move the pointer to "Arrea Code".
 3) Press *select/channel*.
- Area Code : Auto Talk :Off CIDCW :On *Area Code :

:Off

:On

∲Auto Talk

CIDCW



- 4) Use the number keys (*O 9*), or *delete/transfer* to enter the 3-digit area code.
- 5) Press *select/channel*. A confirmation tone sounds and the displayed area code is entered.
- 6) Press *end* or return the handset to the base unit or charging cradle to complete the setting. The handset returns to the standby mode.

When the area code has already been stored in memory, the stored area code will be displayed. To change it, use the *delete/transfer* and number keys to enter the new area

note code. Then press *select/channel*. A confirmation tone sounds. To complete the setting, press *end* or return the handset to the base unit or charging cradle.

Auto Talk :Off CIDCW :On Area Code :817

 Make sure your battery pack is fully charged before choosing the dialing mode.

Choosing the dialing mode

Most phone systems use tone dialing which sends DTMF tones through the phone lines. However some phone systems still use pulse dialing such as in rural areas. The default setting is tone dialing. Depending on your dialing system, set the mode as follows:

[18] GETTING STARTED

- 1) When the phone is in the standby mode, press and hold *cid/menu*. The following screen appears.
- 2) Press the *vol/ring/v* key to move the pointer to "Dial".
- 3) Press select/channel to toggle between "Tone" and "Pulse" for each setting.
- 4) Press end and return the handset to the base unit to complete the setting. The handset returns to the standby mode.

Setting the language

- 1) When the phone is in the standby mode, press and hold *cid/menu*. The following screen appears.
- 2) Press the *vol/ring/v* key to move the pointer to "Language".
- 3) Press select/channel to toggle between "Eng" and "Fra." for each setting.
- 4) Press end or return the handset to the base unit or charging cradle to complete the setting. The handset returns to the standby mode.

· If you are not sure of :On your dialing system, set for tone dialing. Make a trial call. If the call connects, leave the :Eng setting as is, otherwise set for pulse dialing. • If your phone system requires pulse dialing and you need to send the DTMF tones for certain situations during a call, you may "switch-over" to tone dialing. (Refer to "Tone Dialing Switch-over" on page 22.)

note

• Dialing mode can only

which handset is HS1,

look at the display indicating "HS1" or

"HS2".

be changed from handset 1. To confirm GETTING

STARTED

GETTING STARTED [19]

∲Auto Talk

Area Code

Area Code

PAuto Talk

Area Code

Area Code 🗄

CIDĊW

Dial ▶Lan9ua9e

ĊĪDĒW

CIDCW

₽Dial

:0ff

:On

∶On

:Off

:

Tone

:

:

:Tone

lote	Handset On Base or Charging Cradle	Handset Off Base or Charging Cradle
To receive a call	Pick up the handset (AutoTalk: On) or pick up the handset and press <i>talk/flash</i> (AutoTalk: Off).	Press <i>talk/flash</i> , any number, <i>*/tone/<</i> or <i>#/></i> keys (AutoTalk: On).
toTalk To make	 Pick up the handset. Press <i>talk/flash</i>. Listen for the dial tone. Dial the number. 	 Press <i>talk/flash</i>. Listen for the dial tone. Dial the number.
a call	OR	OR
	 Pick up the handset. Dial the number, then press talk/flash. 	Dial the number, then press <i>talk/flash</i> .
To hang up	Press end or return the handset to the base or charging cradle (AutoStandby).	
To redial	 Pick up the handset. Press <i>talk/flash</i>. Listen for the dial tone. Press <i>redial/pause</i>. 	 Press <i>talk/flash</i>. Listen for the dial tone. Press <i>redial/pause</i>.
	OR	OR
	 Pick up the handset. Press <i>redial/pause</i>, then press <i>talk/flash</i>. 	Press <i>redial/pause</i> , then press <i>talk/flash</i> .

Adjusting the Handset Ringer and Earpiece Volume

Handset ringer tone and volume

Press the *vol/ring*/ \land or *vol/ring*/ \lor key in standby mode to select one of five ringer tones and volume combinations.

Earpiece volume

Pressing the *vol/ring*/ \wedge or *vol/ring*/ \vee key during a call will change the earpiece volume of the handset. This setting will remain in effect after the telephone call has ended.



If you select "Ringer

off", "<Ringer Off>" appears on the display when you make or receive calls, or when charging the handset.

BASICS



note

When you press the *vol/ring*/ \land key in Maximum mode or the *vol/ring*/ \lor key in Low mode, an error tone sounds.

Temporarily Mute Ringer

If one handset is off the base or charging cradle, simply press the *end* key to temporarily mute the incoming ring only for that handset. The ringer will sound with the next incoming call.

www.uniden.com


BASICS [21]

Redial

The *redial/pause* key redials the last number dialed. The redialed number can be up to 32 digits long.

Tone Dialing Switch-over

Some telephone companies use equipment that requires pulse dialing (sometimes referred to as rotary dialing). If you need to enter tone dialing digits, you can switch-over to tone dialing during the call. For example, entering your bank account number after you have called your bank.

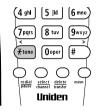

Initially make your call with the pulse dialing mode. Once your call connects, press the \star /tone/ < key. Enter the desired number. These digits will be sent as tone dialing. Once the call ends, the tone mode is canceled and pulse dialing mode resumes.

Traveling Out-of-Range

During a call, as you begin to move your handset too far from your base unit, noise increases. If you pass the range limits of the base unit, your call will terminate within 1 minute.

[22] BASICS

www.uniden.com



• The tone feature only applies when the dial mode is set to pulse.

• This special number can be stored in a memory location. This is referred to as Chain Dialing. (See page 29.)

Selecting a Different Channel


If you encounter interference while using your phone, you can manually change the phone's channel for clear operation. This function works only when the phone is in use. Press *select/channel*. "Scanning" appears on the display, indicating the phone is changing to another channel. For more information on interference, refer to page 47.

Find Handsets

To locate the handsets, press *find handset* on the base. Both handsets beep for 60 seconds.

Paging of both handsets is canceled when pressing any key on either handset or pressing *find handset* again.

Flash and Call Waiting

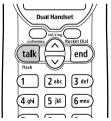

www.uniden.com

If you have "Call Waiting" service and a call waiting tone sounds while you are on a call, press *talk/flash* to accept the waiting call. There is a short pause, then you will hear the new caller. To return to the original caller, press *talk/flash* again.



You must subscribe through your local telephone company to receive Call Waiting Service.



• The UltraClear Plus[™] true compander circuitry virtually eliminates background noise. This innovative technology, together with 20 different channels, provides you with the best possible reception during all your conversations.

 You can change the phone's channel by pressing the select/channel key on either handset. BASIC

 Paging is also canceled when the phone receives an incoming call.

BASICS [23]



You must subscribe to voice mail service from your telephone company in order to use this feature. The voice mail company will provide you with the access number.

Voice Mail Waiting Indicator

If you subscribe to voice mail service, you can use your cordless telephone to access your voice mailbox. The **charge/in use** light on the base of your phone flashes whenever you have messages waiting in your voice mailbox. Just program the **RocketDial** key with your access number and you can get your messages at the touch of a button. (The voice mail service provider will supply you with the access number. This number may be simply a phone number. Refer to the provider's literature.)

You may need to occasionally reset the indicator if it remains On after you have retrieved your messages. To reset the indicator, press and hold *find handset* for 5 seconds.

[24] BASICS

Storing Phone Numbers and Names

Memory Dialing allows you to dial a number using just a few key presses. Your cordless telephone stores up to 20 names/numbers in each handset.

1) Press mem, "Select Memory" is displayed.


- 2) Press the *vol/ring/* or *vol/ring/* key, or enter a number (01 - 20) to select the memory location where you would like to store the number.
- 3) Press *mem* or *select/channel*.
- 4) Press *mem* or *select/channel*. The following screen appears and a cursor flashes indicating that the display is ready for the name to be entered.

If this screen appears, the selected memory location is already stored. Then you must either edit the entry in this location, delete the entry in this location, or select "Go Back" to choose another location.


5) To enter a name (up to 13 characters), use the number keys.

- See the "Steps for entering names and special characters". (See page 27.)
- Use the #/> and */tone/< key to move the cursor to the desired location.
- Use *delete/transfer* to delete characters as needed.
- Press and hold *delete/transfer* to delete all the characters.
- If a name is not required, go to step 6.

www.uniden.com

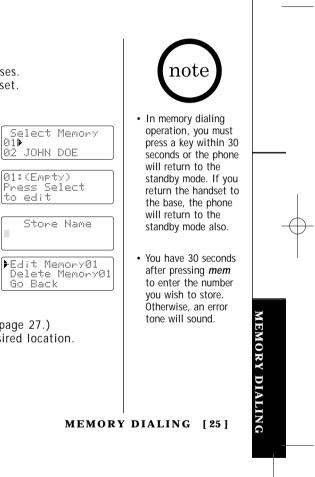

01#

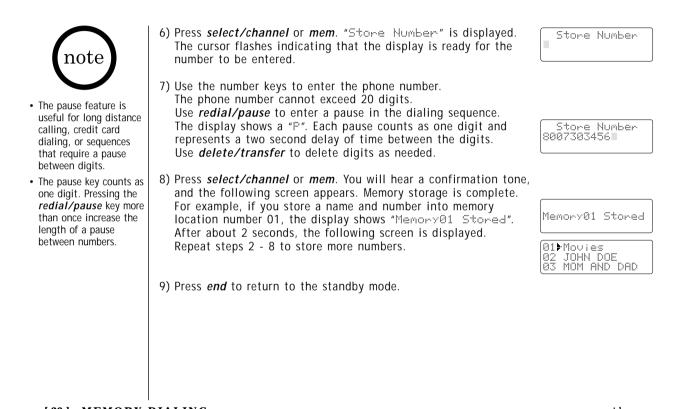

[26] MEMORY DIALING

Steps for Entering Names and Special Characters

Refer to the letters on the number keys to select the desired characters. With each press of a numeric key, the displayed character appears in the following order: Upper case letters first, lower case letters next and finally the number corresponding to the key.

If you make a mistake while entering a name

Use the $\star/tone/<$ or #/> key to move the cursor to the incorrect character. Press *delete/transfer* to erase the wrong character, then enter the correct character. To delete all characters, press and hold *delete/transfer*.

For example, to enter **Movies**.

- 1) Pick up the handset. Press mem.
- 2) Enter a number or press the *vol/ring/* or *vol/ring/* key to select a memory location.
- 3) Press mem or select/channel.
- 4) Press *mem* or *select/channel*. (When there is information already stored in the selected memory location, "Edit MemoryXX" is displayed. See page 30 for information on "Editing a Stored Name and/or Phone Number".)

kevs

- 5) Press 6 then press $\#/\tilde{>}$ to move the cursor to the right.
- 6) Press 6 six times.
- 7) Press **8** six times.
- 8) Press 4 six times.
- 9) Press **3** five times.
- 10) Press 7 eight times.

www.uniden.com

11) When finished, press *mem* or *select/channel*.

To continue to store the telephone number, proceed to step 7 on page 26.


(T)(2abc (3def (4ghi) 5jkl 6mno (7pqrs) (8tuv) (9wxyz


Number of times key is pressed

5 6

4

MEMORY DIALING [27]

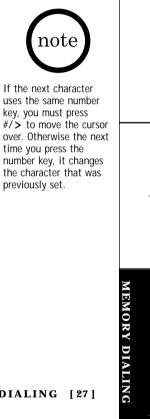

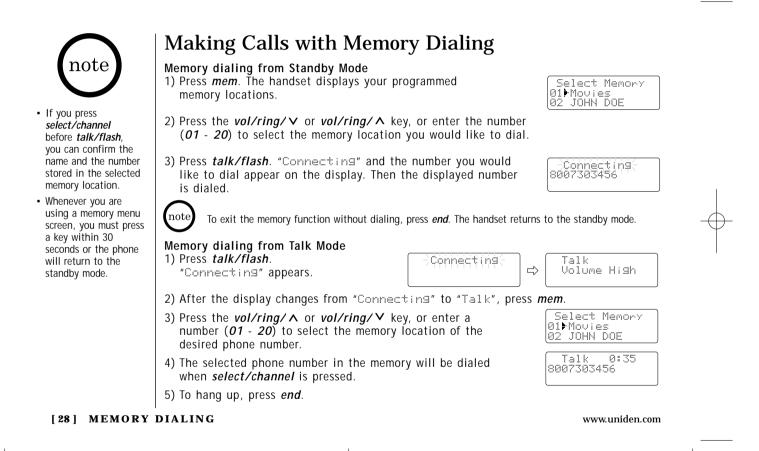

Chain Dialing

The memory locations on the handset are not limited to phone numbers. You can also store a group of numbers (up to 20 digits) that you need to enter once your call connects. This is referred to as Chain Dialing.


An example of this is a bank account number. Once you have called your bank, and are prompted to enter the account number, press *mem* and select the location number where the special number has been stored, then press *select/channel*.

Store your special number with an identifying name. (Refer to "Storing Phone Numbers and Names" on page 25.)

www.uniden.com

MEMORY DIALING [29]

IEMORY DIALING

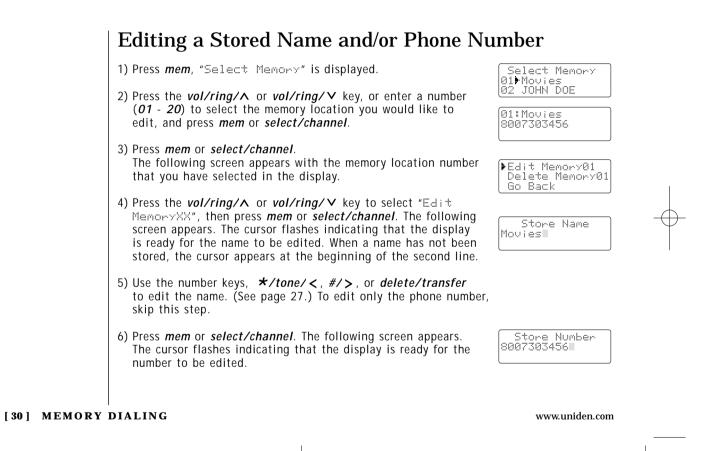



- 7) Use the number key, *redial/pause* or *delete/transfer* to edit the phone number. The phone number cannot exceed 20 digits. (See page 26.) If you don't want to change the phone number, skip this step.
- 8) Press *mem* or *select/channel*. If you changed either name or phone number, a confirmation display shows up. If it is correct, press the *vol/ring/* key to move the pointer to "Yes" and press *select/channel* again. You hear a confirmation tone, and the following screen appears. The memory storage is complete. For example, if you store a name and number into memory location number 01, the display shows "Memory@1_Stored". After about 2 seconds, Select memory is displayed.

9) Press end to return to the standby mode.

Replace Memory?]	
Yes No	
• MU	
1emory01 Stored	
)1 H Movies	
32 JOHN DOE	
33 MOM AND DAD	

www.uniden.com

MEMORY DIALING [31]


IEMORY DIALING

Erasing a Stored Name and Phone Number

- 1) Press mem, "Select Memory" is displayed.
- Press the *vol/ring/*∧ or *vol/ring/*∨ key, or enter a number (01 20) to select the memory location you would like to erase.
- 3) Press mem or select/channel.
- Press *mem* or *select/channel*. The following screen appears with the memory location number that you have selected in the display.
- Press the vol/ring/V key to move the pointer down to "Delete MemoryXX".
- 6) Press *mem* or *select/channel*. The following confirmation screen appears.
- 7) Press the *vol/ring*/ A key to move the pointer to "Ves".
- Press select/channel or delete/transfer. You hear a confirmation tone, and the following screen appears.
- 9) After about 2 seconds, the display returns to the Select memory screen. You may delete the information in another memory location (return to step 2) or press *end* to return to the standby mode.

[32] MEMORY DIALING



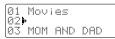

RocketDial

You can store your most frequently dialed number in the RocketDial location in each handset. The RocketDial allows you to dial a number with one key press. (There is no need to press *talk/flash*. The phone will automatically dial the number stored.)


Storing and Editing the RocketDial

- When the phone is in the standby mode, press and hold *RocketDial*. Following display appears. If this screen appears, there is a number already stored. Press the *vol/ring/*∧ or *vol/ring/*∨ key to select "Edit Number", then press *select/channel*.
- 2) Store the number by following step 7 under "Storing Phone Numbers and Names" on page 26.
- 3) Press *select/channel*.

You hear a confirmation tone, and the following screen appears. Memory storage is complete.

Making Calls with the RocketDial

When the phone is in the standby mode, simply press *RocketDial*. The number stored in the RocketDial memory location is instantly dialed.

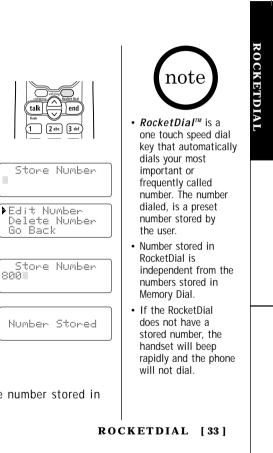

Deleting the RocketDial

- 1) When the phone is in the standby mode, press and hold *RocketDial*. Following display appears.
- Press the vol/ring/∧ or vol/ring/∨ key to select "Delete Number".
- 3) Press *select/channel*. Following display appears.
- 4) Press the *vol/ring/* key to move the pointer to "Ves".
- 5) Press select/channel or delete/transfer. You hear a confirmation tone, and the following display appears. After about 2 seconds, the handset returns to the standby mode.





[34] ROCKETDIAL

Caller ID

You must subscribe to Caller ID service to use this feature.

When the telephone rings, the Caller ID feature allows you to view the caller's name and phone number on the display before you answer the phone. The handset displays the phone number of the incoming call, the name, and time. Additionally, you can dial the displayed number and store the information for memory dialing. Make sure you have turned on the Caller ID/Call Waiting feature. (See page 17.)

When the Telephone Rings

1) When the Caller ID message is received, the display shows the caller's phone number along with the date and time. The incoming call information is stored in the Caller ID record. If the Caller ID service includes the caller's name, the caller's name appears on the display (up to 15 letters).

The date and time received	-5/11 12:30PM
Caller's name ————————————————————————————————————	Jane Smith 214-555-1234

You may receive any one of the following messages: When invalid data is received When a private name is received When a private number is received When a unknown name is received When a unknown number is received

"Incomplete Data" "Private Name" "Private Number" "Unknown Name" "Unknown Number"

www.uniden.com



before the Caller ID message is received (Example: before the second ring), the Caller ID message will not appear.

• When the call is received via a telephone company that does not offer Caller ID service, the caller's phone number and name do not appear. (This includes international calls.)

Ш

FEATUR

• When the call is via a private branch exchange (PBX), the caller's phone number and name may not appear.

CALLER ID FEATURES [35]



· In Caller ID operation, if no key is pressed for more than 30 seconds.

an error tone sounds and the telephone

telephone system that

does not offer Caller

information is stored.

• Each message can be

returns to the

standby mode. · If a call comes in via a

ID service, no

2) When you pick up the phone, the display changes to "Connecting". (AutoTalk feature is set to on.)

Data errors appear as " . note


Viewing the Caller ID Message List


The Caller ID list stores information for up to 30 incoming calls in each handset - even unanswered calls.

1) Press cid/menu.

The summary screen appears. The screen shows the number of new messages and total messages.

2) Press the *vol/ring/V* or *vol/ring/A* key to display the latest or oldest Caller ID message.

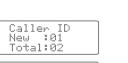

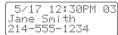

up to 15 characters for the phone number and the name. • The number of calls from the same Caller ID appears next to the


received time. Once you view the new message, the number will disappear.

3) Press the *vol/ring*/v key to see the next message. Or press the *vol/ring*/ \wedge key to see the previous message.

4) Press end to return to the standby mode.

[36] CALLER ID FEATURES



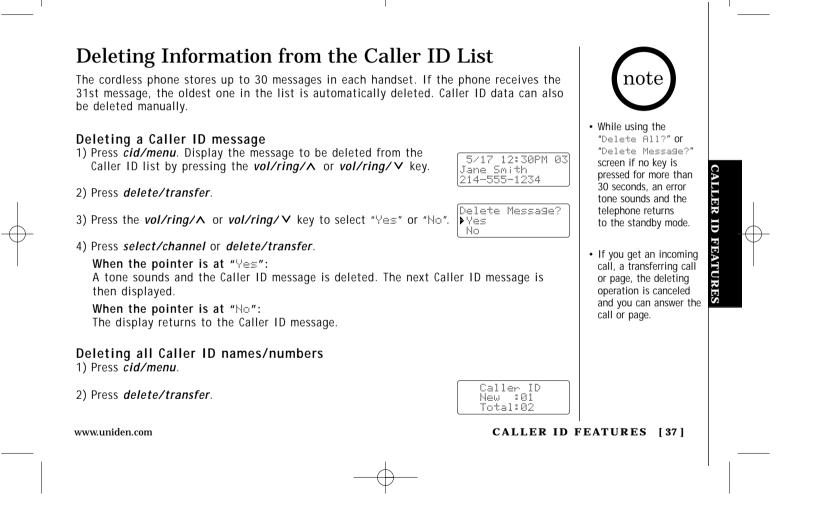

3) Press the *vol/ring*/∧ or *vol/ring*/∨ key to select "∀es" or "No".

4) Press select/channel or delete/transfer.

When the pointer is at "``=": A tone sounds and all stored Caller ID messages are deleted.

When the pointer is at "No": The display returns to the summary screen.



Caller ID Total:00




[38] CALLER ID FEATURES

Using the Caller ID List

Calling a party from the Caller ID list

You can place a call from the Caller ID list. The cordless phone stores up to 30 messages.

 Press *cid/menu*. Select the phone number that you want to dial by pressing the *vol/ring/*∧ or *vol/ring/*∨ key.

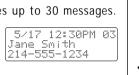

2) Press *talk/flash*. The displayed phone number dials automatically.

-Connecting 2145551234

You can place a call from Talk Mode. Press *talk/flash*, then press *cid/menu*. Select the phone number that you want to dial by pressing the *vol/ring/* or *vol/ring/* key. Press *select/channel*. The displayed phone number will be dialed.

Long Distance calls and Area Code Setting/Cancellation

Pressing 1 while the incoming Caller ID information is displayed (in step 1) will place the prefix "1" in the display to set up for a long distance call. Pressing 3 will set or cancel an area code setting.

• You cannot make a call from the Caller ID list if your cordless telephone is connected to a private branch exchange (PBX).

note

• When a long distance call has been set, "1" appears in the display.

CALLER ID FEATURES [39]

ÐR

FEATU

www.uniden.com

note



You cannot store a

Caller ID message if a

phone number does not

appear in the message.

Storing Caller ID messages in Memory dialing


Messages shown in the Caller ID list can be stored in memory dialing. Using the incoming call information (i.e., Caller ID list), the phone number of the party on the Caller ID list can be stored in memory.

1) Press *cid/menu*.

2) Press mem.

Select the phone number to be stored from the Caller ID list by pressing the *vol/ring/* \wedge or *vol/ring/* \vee key.

5/17 12:30PM 03 Jane Smith 214-555-1234

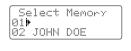

(01 - 20) to select the memory location to be stored.

4) Press *select/channel*.

You hear a confirmation tone, and the number is stored in memory. The display returns to the Caller ID list.

3) Press the *vol/ring*/ \wedge or *vol/ring*/ \vee key or enter a number



If a message has already been stored in the selected memory number location, a confirmation screen is displayed. Press the *vol/ring*/ \land key to select "Yes". Press *select/channel* to overwrite. The display returns to the Caller ID list.

Replace Memory? Yes ⊮No

214-555-1234

5/17 12:30PM 03 Jane Smith

[40] CALLER ID FEATURES



Changing the Digital Security Code

The digital security code is an identification code used to connect each handset and the base unit. Normally, setting the code is not necessary. The first time you charge each handset in the base, the security code is automatically set.

In the rare situation that you suspect another cordless telephone is using the same security code, you can change the code.

1) Remove the handset from the base unit. Press and hold *find handset* on the base.

2) While holding *find handset*, place the handset on the base unit, and leave the handset on the base for more than 3 seconds. A new random security code is set.



You can change the phone's digital security code on either handset. However, you must re-register the other handset (not used to change the digital security code) back to the base unit. See registration on page 13.

Installing the Beltclip

To attach the beltclip


Insert the beltclip into the holes on each side of the handset. Press down until it clicks. To remove the beltclip

Pull both sides of the beltclip to release the tabs from the holes.

Headset Installation

Your phone may be used with an optional headset, the Uniden HS910. To use this feature, insert the headset plug into the headset jack. Your phone is ready for hands-free conversations. (Headset may be purchased by calling the Uniden Parts Department or visiting the web site, see QUICK REFERENCE GUIDE on page 3.)

www.uniden.com

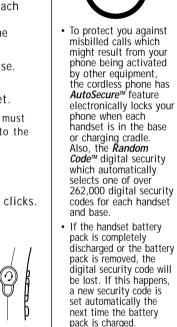

note

FORMAT

ADDITIONAL INFORMATION [41]

Note on Power Sources

Battery replacement and handling

When the operating time becomes short, even after a battery is recharged, please replace the battery. With normal usage, your battery should last about one year. Please contact your place of purchase or the Uniden Parts Department for a replacement battery.

Warning: To avoid the risk of personal injury or property damage from fire or electrical shock, only use the Uniden battery model and Uniden adapter model specifically designated for this product.

Power Failure

During the period that the power is off, you will not be able to make or receive calls with the telephone.

Caution

- Use only the specified Uniden battery pack (BT-905).
- Do not remove the battery from each handset to charge it.
- Never throw the battery into a fire, disassemble it, or heat it.
- Do not remove or damage the battery casing.

Maintenance

When the handset, charging cradle, or base unit becomes slightly dirty Wipe with a soft, dry cloth.

When the handset, charging cradle, or base unit becomes very dirty Wipe with a soft cloth that has been dampened with diluted, neutral detergent. Dry with a dry cloth.

When the charging contacts become very dirty on the handset, charging cradle, and base unit

Using water only, dampen a cloth to clean the charging contacts. Then make sure to go back over the charging contacts with a dry cloth before returning the handset to the base unit or charging cradle to charge.

[42] ADDITIONAL INFORMATION



Caution

Do not use paint thinner, benzene, alcohol, or other chemical products. Doing so may discolor the surface of the telephone and damage the finish.

Troubleshooting

If your phone is not performing to your expectations, please try these simple steps first.

Symptom	Suggestion	
The charge/in use LED or charge LED won't illuminate when the handset is placed in the base or charging cradle.	 Make sure the AC adapters are plugged into each charging cradle and wall outlet. Make sure both handsets are properly seated in each charging cradle. Make sure the charging contacts on both handsets and charging cradles are clean. 	
The audio sounds weak and/or scratchy.	 Move the handset and/or base to a different location away from metal objects or appliances and try again. Press <i>select/channel</i> to help eliminate background noise. Make sure that you are not too far from the base. 	
Can't make or receive calls.	 Re-register both handsets (see page 13). Check both ends of the base telephone line cord. Make sure the AC adapters are plugged into both the base and wall outlet. Disconnect the AC adapter for a few minutes, then reconnect it. Make sure that you are not too far from the base. 	
The handset doesn't ring or receive a page.	 Re-register both handsets (see page 13). The battery pack may be weak. Charge the battery for 15-20 hours. The handset may be too far away from the base unit. Place the base unit away from appliances or metal objects. Make sure the volume setting is not set to Ringer Off. 	
Severe noise interference.	 Keep both handsets away from microwave ovens, computers, remote control toys, wireless microphones, alarm systems, intercoms, room monitors, fluorescent lights, and electrical appliances. Move to another location or turn off the source of interference. 	

www.uniden.com

ADDITIONAL INFORMATION [43]

Symptom	Suggestion
The Caller ID does not display.	 The handset was picked up before the second ring. The call was placed through a switchboard. Call your local telephone company to verify your Caller ID service is current.
Handset No.1 or No.2 is not working.	• Make sure the battery pack is connected to the handset and fully charged.
"Unavailable" message is displayed on the LCD screen of the handset.	 Make sure the other handset is not already in use. Both handsets cannot be in talk mode at the same time. Place the handset in the base for at least 5 seconds to re-register to the base. Make sure the handset is not too far from the base when trying to use.
The handset doesn't communicate with the base or the other handset.	Re-register both handsets (see page 13).Make sure that you have registered the second handset.
No 3-way conversation.	• Only one handset at a time can talk with an outside caller. To allow the other handset to talk to the caller, transfer the call.
"Low Battery" message is displayed on the LCD screen.	Place the handset back in either the charging cradle or base to recharge overnight.
Voice Message Indication does not work.	• Contact your local telephone company to make sure that your telephone receives FSK message signaling.
If you still have a problem.	Call our customer hotline at 1-800-297-1023.

[44] ADDITIONAL INFORMATION

Liquid Damage

Moisture and liquid can damage your cordless phone. In case of accidental submersion, please read the following steps.

Case	Action
If the handset or base is exposed to moisture or liquid, but only affects the exterior plastic housing.	Wipe off the liquid and use as normal.
If moisture or liquid has entered the plastic-housing (i.e. liquid can be heard in the phone or liquid has entered the handset battery compartment or vent openings on the base).	Handset: 1. Remove the battery cover and leave it off for ventilation. 2. Remove the battery pack by disconnecting. 3. Leave the battery cover off and the battery pack disconnected for at least 3 days. 4. Once completely dry, reconnect the battery pack and the battery cover. 5. Recharge the handset's battery pack for 20 hours in the base unit before using the phone.
	Base: 1. Disconnect the AC adapter from the base unit, cutting off electrical power. 2. Disconnect the telephone cord from the base unit. 3. Let dry for at least 3 days.
	IMPORTANT: You must unplug the telephone line while recharging the battery pack to avoid charge interruption.
	CAUTION: DO NOT use a microwave oven to speed up the drying process. This will cause permanent damage to the handset, base and the microwave oven.
	After following these steps, if your cordless telephone does not work, please send to: Uniden America Corporation Parts and Service Division 4700 Amon Carter Blvd. Ft. Worth TX 76155 1-800-554-3988. Monday through Friday 8 a.m. to 5 p.m. CST
vww.uniden.com	ADDITIONAL INFORMATION [45]

General Information

The phone complies with FCC Parts 15 and 68. Operating temperature: -10°C to 50°C (+14°F to +122°F)

AC Adapter Information

AC Adapter part number:	AD-446
Input Voltage:	120V AC 60Hz
Output Voltage:	9V DC 210 mA

Battery Information

Battery part number:	BT-905
Capacity:	600 mAH, 3.6V
Battery use time (per charge	2)
From fully charged	
Talk mode duration:	7 hours
Standby mode duration:	7 days



• To avoid damage to the phone use only Uniden AD-446 and BT-905 with your phone.

• If each handset is left off the base or charging cradle, the actual Talk mode duration will be reduced respective to the amount of time each handset is off the base or charging cradle.

Recharge your phone on a regular basis by returning the handset to the base or charging cradle after each phone call. When the operating time becomes short, even after the battery is recharged, please replace the battery. With normal usage, the battery should last about one year.

A replacement Uniden adapter and battery may be purchased at your local Uniden dealer or by contacting the Uniden Parts Department (800) 554-3988. Hours are from 8:00 a.m. to 5:00 p.m. Central Time, Monday through Friday. We can also be reached on the web at www.uniden.com.

Specifications, features, and availability of optional accessories are all subject to change without prior notice.

[46] ADDITIONAL INFORMATION

Precautions!

- Before you read anything else, please observe the following: Warning!
- Uniden America Corporation DOES NOT represent this unit to be waterproof. To reduce the risk of fire, electrical shock, or damage to the unit, DO NOT expose this unit to rain or moisture.


Rechargeable Nickel-Cadmium Battery Warning

- This equipment contains a rechargeable nickel-cadmium battery.
- Cadmium is a chemical known to the State of California to cause cancer.
- The rechargeable nickel-cadmium battery contained in this equipment may explode if disposed of in a fire
- Do not short-circuit the battery.
- Do not charge the rechargeable nickel-cadmium battery used in this equipment in any charger other than the one designed to charge this battery as specified in the owner's manual. Using another charger may damage the battery or cause the battery to explode

Rechargeable Nickel-Cadmium Batteries Must Be Recycled or Disposed of Properly



- · Uniden voluntarily participates in an RBRC® industry program to collect and recycle nickel-cadmium batteries at the end of their useful life, when taken out of service within the United States. The RBRC® program provides a convenient alternative to placing used nickel-cadmium batteries into the trash or municipal waste stream, which is illegal in some areas.
- Through the RBRC® program, Uniden makes it easy for you to drop off the used battery at local retailers of replacement nickel-cadmium batteries. You may also contact your local recycling center for information on where to return the used battery. Please call 1-800-8-BATTERY for information on Ni-Cd battery recycling in your area. Uniden's involvement in this program is part of its commitment to protecting our environment and conserving natural resources. RBRC® is a registered trademark of the Rechargeable Battery Recycling Corporation.

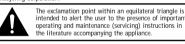

Uniden works to reduce lead content in our PVC coated cords in our product and accessories.

WARNING: The cords on this products and/or accessories contain lead, a chemical known to the State of California to cause birth defects or other reproductive harm. Wash hands after handling.

www.uniden.com

Important Safety Instructions

- When using your telephone equipment, these basic safety precautions should always be followed to reduce the risk of fire, electrical shock, and injury to persons:
- Read and understand all instructions.
- Follow all warnings and instructions marked on the product. 3. Unplug this product from the wall outlet before cleaning. Use a dry cloth for cleaning without liquid or aerosol cleaners.
- Do not use this product near water: for example, near a bathtub. wash bowl, kitchen sink or laundry tub, in a wet basement, or near a swimming pool.
- 5. Do not place this product on an unstable cart, stand, or table. The telephone may fall, causing serious damage to the unit. 6. Slots and openings in the cabinet and the back or bottom are provided for ventilation. To protect the product from overheating, these openings must not be blocked or covered. This product should never be placed near or over a radiator or heat register. This product
- should not be placed in a built-in installation unless proper ventilation is provided. 7. This product should be operated only from the type of power
- source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your dealer or local power company. 8. Do not allow anything to rest on the power cord. Do not locate this
- product where the cord will be damaged by persons walking on it. 9 Do not overload wall outlets and extension cords as this can result. in the risk of fire or electrical shock.
- 10. Never push objects of any kind into this product through cabinet slots, as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
- 11. To reduce the risk of electric shock, do not disassemble this product. Take it to qualified service personnel when service or repair work is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used. 12. Unplug this product from the wall outlet and refer servicing to
- qualified service personnel under the following conditions
- A. When the power supply cord is damaged or frayed. B. If liquid has been spilled into the product.
- . If the product has been exposed to rain or water. D. If the product does not operate normally when following the operating instructions. (Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive repair work by a qualified technician.)
- E. If the product has been dropped or the cabinet has been damaged F. If the product exhibits a distinct change in performance.
- 13. Do not use the telephone to report a gas leak in the vicinity of the leak.

Additional Battery Safety Precautions

- Caution! To reduce the risk of fire or injury to persons by the battery, read and follow these instructions:
- 1. Use only the Uniden battery pack specified in the owner's manual. Do not dispose of the battery pack in a fire. The cell may explode.
- Check the nickel-cadmium battery disposal package insert for disposal instructions.
- 3. Do not open or mutilate the battery pack. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
- 4. Exercise care in handling the battery in order not to short the battery with conducting materials such as rings, bracelets, and keys. The battery or conductor may overheat and cause burns.
- 5. Charge the battery pack provided with or identified for use with this product only in accordance with the instructions and limitations
- specified in the owner's manual provided for this product. 6. Observe proper polarity orientation between the battery pack and
- battery charge

SAVE THESE INSTRUCTIONS! Important Electrical Considerations

Unplug all electrical appliances when you know an electrical storm is approaching. Lightning can pass through your household wiring and damage any device connected to it. This phone is no exception.

The FCC Wants You To Know

Changes or modifications to this product not expressly approved by Uniden, or operation of this product in any way other than as detailed by the owner's manual, could void your authority to operate this product. Your telephone compiles with Part 68 of FCC Rules. You must, upon request, provide the FCC registration number and the REN to your telephone company. Both numbers are on the base unit. NOTE:

You must not connect your phone to: · coin-operated systems

· most electronic key telephone systems

Range

Your new phone is designed to achieve the maximum possible range by transmitting and receiving according to the highest specifications set forth by the FCC. We have rated this phone to operate at a maximum distance with the qualification that the range depends upon the environment in which the telephone is used. Many factors limit range, and it would be impossible to include all the variables in our rating. The Maximum Range rating of this phone is meant to be used as a means of comparison against other range claims.

ADDITIONAL INFORMATION [47]



Telephone Line Problems

The FCC has granted the telephone company the right to disconnect service in the event that your phone causes problems on the telephone line. Also, the telephone company may make changes in facilities and services which may affect the operation of your unit. However, your telephone company must give adequate notice in writing prior to such actions to allow you time for making necessary arrangements to continue uninterrupted service.

If you are having trouble with your telephone service, you must first disconnect your phone to determine if it is the cause of your problem. If you determine that it is the cause, you must leave it disconnected until the trouble has been corrected.

Radio Interference

Radio interference may occasionally cause buzzing and humming in your cordless handset, or clicking noises in the base. This interference is caused by external sources such as TV, refrigerator, vacuum cleaner, fluorescent lighting, or electrical storm. Your unit is NOT DEFECTIVE. If these noises continue and are too distracting, please check around your home to see what appliances may be causing the problem. In addition, we recommend that the base not be plugged into a circuit that also powers a major appliance because of the potential for interference. Be certain that antenna on the unit is fully extended. In the unlikely event that you consistently hear other voices or distracting transmissions on your phone, you may be receiving radio signals from another cordless telephone or other source of interference. If you cannot eliminate this type of interference, you need to change to a different channel.

Finally, it should be noted that some cordless telephones operate at frequencies that may cause interference to nearby TVs and VCRs. To minimize or prevent such interference, the base of the cordless telephone should not be placed near or on top of a TV or VCR. If interference is experienced, moving the cordless telephone farther away from the TV or VCR will often reduce or eliminate the interference.

More Than One Cordless Telephone

If you want to use more than one cordless telephone in your home, they must operate on different channels. Press the channel key to select a channel that provides the clearest communication.

Cordless Telephone Privacy

Cordess telephones are radio devices. Communications between the handset and base of your cordless telephone are accomplished by means of radio waves which are broadcast over the open airways. Because of the inherent physical properties of radio waves, your communications can be received by radio receiving devices other than your own cordless telephone unit. Consequently, any communications using your cordless telephone wing not be private.

Installation Considerations Selecting a Location

Before choosing a location for your new phone, there are some important guidelines you should consider:

- The location should be close to both a phone jack and continuous power outlet. (A continuous power outlet is an AC outlet which does not have a switch to interrupt its power.)
 Keep the base and handset away from sources of electrical noise
- Such as motors or fluorescent lighting.
 Be sure there is sufficient space to fully extend the base antenna.
- Be sure there is sufficient space to fully extend the base antenna.
 The base can be placed on a desk or tabletop or mounted on a standard telephone wall plate.
- You should charge your new phone for 15-20 hours before completing the installation or using the handset.

Telephone Line Outlets

There are two types of phone outlets:

Modular Jack

Most phone equipment available now uses modular jacks. Phone cords are fitted with a molded plastic connector which plugs into this type of jack. If you do not have modular phone jacks, contact your local telephone company for information about their installation. Hardwired Jack

Some equipment is wired directly to a phone jack, and these types of installations require a modular jack converter. This type of installation is not difficult; however, you should contact your Uniden telephone dealer or a telephone supply store for advice about the proper adapter or converter for your particular situation.

Connecting the Telephone Cords

Consider these safety guidelines before connecting the telephone cords: Caution!

- Never install telephone wiring during a lightning storm.
- Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected.
 Use caution when installing or modifying telephone lines.

Applying Power to the Base

This phone requires an AC outlet, without a switch to interrupt power, and the included AC adapter. To relieve strain on the DC plug when the phone is placed on a desk or table, wrap the power cord around the strain relief notch on the back of the base.

NOTE: Place the power cord so that it does not create a trip hazard, or where it could become chafed and create a fire or other electrical hazards.

One Year Limited Warranty

Important: Evidence of original purchase is required for warranty service. WARRANTOR: UNIDEN AMERICA CORPORATION ("Uniden") ELMENTS OF WARRANT': Uniden warrants, for one year, to the original retail owner, this Uniden Product to be free from defects in materials and craftsmanship with only the limitations or exclusions est out below. WARRANTY DURATION: This warranty to the original user shall terminate and be of no further effect 12 months after the date of original retail sale. The warranty is invalid if the Product is (A) damaged or not maintained as reasonable or necessary. (B) modified, altered, or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden, (C) improperty installed, (D) serviced or repaired by someone other than an authorized Uniden service center for a defect or maintained or parts or as part of any system not manufactured by Uniden, or (F) installed or programmed by anyone other than as detailed by the owners manual for this product.

STATEMENT OF REMEDY: In the event that the product does not conform to this warranty at any time while this warranty is in effect, warrantor will either, at its option, repair or replace the defective unit and return it to you without charge for parts, service, or any other cost (except shipping and handling) incurred by warrantor or its representatives in connection with the performance of this warranty. Warrantor, at its option, may replace the unit with a new or refurbished unit. THE LIMITED WARRANTY SET FORTH ABOVE IS THE SOLE AND ENTIRE WARRANTY PERTAINING TO THE PRODUCT AND IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES OF ANY NATURE WHATSOFVER. WHETHER EXPRESS, IMPLIED OR ARISING BY OPERATION OF LAW, INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow this exclusion or limitation of incidental or consequential damages so the above limitation or exclusion may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This warranty is void outside the United States of America and Canada.

PROCEDURE FOR OBTAINING PERFORMANCE OF WARRANTY: If, after following the instructions in the owner's manual you are certain that the Product is defective, pack the Product carefully (prefeably in its original packaging). The Product should include all parts and accessories originally packaged with the Product. Include evidence of original purchase and a note describing the defect that has caused you to return it. The Product should be shipped freight prepaid, by traceable means, to warrantor at:

Uniden America Corporation Parts and Service Division 4700 Amon Carter Blvd. Fort Worth, TX 76155 (800) 297-1023, 8 a.m. to 5 p.m. Central, Monday through Friday

www.uniden.com

[48] ADDITIONAL INFORMATION

I.C. Notice

TERMINAL EQUIPMENT

NOTICE: This equipment meets the applicable Industry Canada Terminal Equipment Technical Specifications. This is confirmed by the registration number. The abbreviation, IC, before the registration number signifies that registration was performed based on a Declaration of Conformity indicating that Industry Canada technical specifications were met. It does not imply that Industry Canada approved the equipment.

NOTICE: The Ringer Equivalence Number (REN) for this terminal equipment is marked on the equipment itself. The REN assigned to each terminal equipment provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed five.

RADIO EQUIPMENT

The term "IC:" before the radio certification number only signifies that Industry Canada technical specifications were met.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. "Privacy of communications may not be ensured when using this telephone".

www.uniden.com

ADDITIONAL INFORMATION [49]

ADDITIONAL NFORMATION



Α

В

Battery pack Information...... 46 Maintenance 11, 42 Preparing and charging 12 Replacement and handling 42 Beltclip installation 41

С C

•	
Caller ID	
Caller ID service 3	35
Call Waiting 2	23
Deleting	37
Setting Caller ID options 1	7
Using 3	39
Viewing 3	36
Call Transfer Feature1	4
Channel 2	23
Connection 1	2

D

Dialing mode 18 Digital security code 41

[50] ADDITIONAL INFORMATION

E, F, G General information 46

H Headset installation	41
I, J, K, L	
I.C. Notice	49
Interference	48

M, N, O

Maintenance	42
Making a call	20
Memory dialing	
Editing a stored name	
and/or phone number	30
Erasing a stored name	
and phone number	32
Making calls with memory dialing	28
Storing phone numbers and names	25
Mounting on a wall	15

P, Q

Package contents 3	
Precautions 47	
Quick reference guide 3	

R

Receiving a call	20
Redialing a call 20,	22
Ringer tone and volume	21
RocketDial	33

Language 19 **S**

Second Handset	. 13
Setting menu options	. 17
Setting up the handset	9
Setting up the phone	8

T, U, V, W, X, Y, Z

Technical information	46
Troubleshooting	43
Voice mail waiting indicator	24
Warranty	48

At Uniden, we'll take care of you!

If you need any assistance with this product, please call our Customer Hotline at

1-800-297-1023

PLEASE DO NOT RETURN THIS PRODUCT TO THE PLACE OF PURCHASE.

Our Uniden representatives will be happy to help you with any matters regarding the operation of this unit, available accessories, or any other related matters.

Thank you for purchasing a Uniden product. Hours: M-F 8:00 AM to 5:00 PM CST.



For information on the accessibility features of this product, please call 1-800-874-9314 (V/TTY)

Uniden

 May be covered under one or more of the following U.S. patents:

 4,523,058
 4,595,795
 4,707,916
 5,381,460
 5,426,690
 5,434,905

 5,491,745
 5,493,605
 5,530,100
 5,747,275
 5,581,598
 5,660,790

 5,660,269
 5,661,780
 5,663,881
 5,671,243
 5,696,471
 5,717,312

 5,732,355
 5,764,407
 5,786,249
 5,768,436
 5,794,152

 5,001,466
 5,825,161
 5,864,619
 5,893,034
 5,612,868
 5,915,227

 5,929,598
 5,930,720
 5,960,338
 5,973,303
 6,044,281
 6,070,082

 6,125,227
 6,253,088
 6,254,281
 6,314,278
 6,418,209
 5,412,278

© 2003 Uniden America Corporation, Fort Worth, Texas Custom manufactured in China.

Contains additional foreign articles. UPZZ01007MZ