

uniden®

FX Numeric Display Pager



Operating Guide

Contents

Introduction	3
Pager Controls	4
Display Indicators	5
Turning the Pager On and Off	6
Receiving and Displaying Messages	7
Receiving Messages with Quick View On	9
Receiving Messages with Quick View Off	11
Receiving an Urgent Message	12
Freezing the Display	13
Repeated Messages	13
Tone-Only Messages	13
Unreadable Messages	14
Reading Stored Messages	15
Full Memory Indicator	16
Display Light	17
Unread Message Reminder	17
Urgent Message Reminder	17
Canceling the Urgent Message Reminder	18
Deleting Messages	19
Deleting One Message	19
Deleting All Messages	20
Setting Up the Pager	21
Setting the Alert Mode and Duration	21
Selecting the Alert Tone	
WITHOUT Messages in Memory	23
Selecting the Alert Tone	
WITH Messages in Memory	24
Turning Quick View On or Off	
WITHOUT Messages in Memory	25
Turning Quick View On or Off	
WITH Messages in Memory	26
Turning Auto-Hyphen On or Off	
WITHOUT Messages in Memory	27

Turning Auto-Hyphen On or Off with Messages in Memory	28
Setting Time Functions	29
Setting the Time WITHOUT Messages in Memory	29
Setting the Time WITH Messages in Memory	31
Turning the Time Stamp On or Off WITHOUT Messages in Memory	34
Turning the Time Stamp On or Off WITH Messages in Memory	34
Using the Pager Alarm	35
Turning the Alarm On or Off and Setting the Alarm WITHOUT Messages in Memory	35
Turning the Alarm On or Off and Setting the Alarm WITH Messages in Memory	37
Message Tags	39
Turning User Messages On or Off WITHOUT Messages in Memory	40
Turning User Messages On or Off WITH Messages in Memory	41
Viewing the Message File WITHOUT Messages in Memory	42
Viewing the Message File WITH Messages in Memory	43
Storing Words in the Message File	45
Changing a Message Tag WITHOUT Messages in Memory	46
Changing a Message Tag WITH Messages in Memory	48
Replacing the Battery	50
Care and Maintenance	51
FCC Notice	52

Introduction

 
Congratulations on your purchase of the FX Numeric Display Pager! This compact state-of-the-art pager can store and display 30 messages of up to 24 digits each.

The FX Pager has *Quick View* and *Auto-Hyphen* for easy viewing of messages. Other features include

- User-Programmable Message Tags
- Time Stamp/Message Number Display for stored messages
- Multiple Alert Tones
- Silent (Vibrate) Alert
- 24-Hour Clock
- Daily Alarm
- Display Light

To ensure that you understand all of the pager's features and capabilities, please read this Operating Guide carefully before you use the pager.


Pager Controls

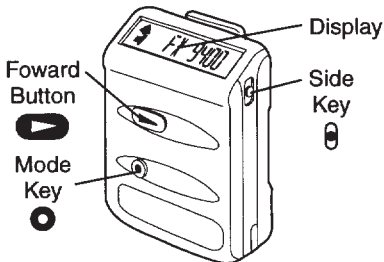

Side Key—Turns the pager on and off. See "Turning the Pager On and Off" on Page 6.

Forward and Mode Keys—Used separately and together as described in this Operating Guide, these keys control all of the pager's many features.

 Display Indicators

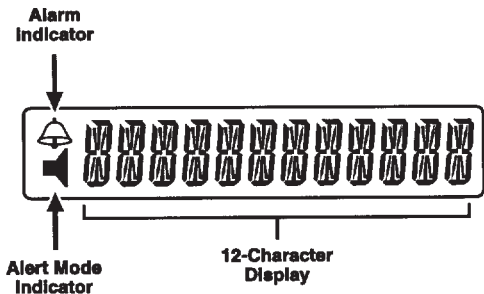


12-Character Display—Displays menu items, message tags, status indicators, and incoming messages.

 
 
Alert Mode Indicator—Shows the audio alert mode is selected. If the pager is in the silent (vibrate) mode, this indicator does not appear.

Alarm Indicator—Appears when the alarm is turned on.

Turning the Pager On and Off


To turn on the pager, press  and you see the standby display.

- Standby display **without** messages stored in memory
- Standby display **with** messages stored in memory



When you turn on the pager, it sounds test tones (or gives test vibrations) and scrolls through a series of test displays to show you it is working properly.

See "Setting the Alert Mode and Duration" on Page 21 and "Selecting the Alert Tone" on Pages 23 and 24.

To turn off the pager, press and hold down  until you see the power off display (only the current time).



Receiving and Displaying Messages

Pager operation for receiving messages varies depending on whether Quick View is on or off. The default setting is Quick View off. See "Turning Quick View On or Off" on Pages 25 and 26.

Notes:

- Depending on pager setup, message *elements* can include the Time Stamp (and message number), a Message Tag, and the actual message. See "Turning the Time Stamp On or Off" on Pages 33 and 34 and "Message Tags" on Page 39.

MSG 1 08139A

Time Stamp (Optional)

-0-URGENT

MessageTag (Optional)

214-555-1212


Actual Message (Part 1)

2104

Actual Message (Part 2)

- Press ◀ or ● to stop the pager alert and cancel the *unread message reminder* for the current message. See "Unread Message Reminder" on Page 17.



- At the end of a message, the display automatically returns to standby if you don't press any key for eight seconds. Four small zeros indicate messages are stored in memory.
- If you press  once to view a message that contains more than one display full of information, or that contains multiple message elements, the pager automatically scrolls through all message elements. The display changes every eight seconds. Then, the standby display automatically returns.

◀ 0000 12113P

Standby Mode
with Message in Memory

MSG 1 08139A

Time Stamp (Optional)

-0-URGENT

MessageTag (Optional)

214-555-1212

Actual Message (Part 1)

 
2104

Actual Message (Part 2)

Receiving Messages

with Quick View On


1. When the pager receives a message, it beeps or vibrates. Press ◀ or ● to stop the alert.
2. Whether or not you press any key, the message automatically appears.

A rectangular display box containing the number 3214444.

Typical Message

Once you press a button, the message scrolls through all its elements and the display returns to standby.

 
3. All message elements scroll on the display with the screen changing every eight seconds.

A rectangular display box containing the text MSG 1 08139A.


Time Stamp (Optional)

A rectangular display box containing the text --0--URGENT.

 MessageTag (Optional)

A rectangular display box containing the text 214-555-1212.

 Actual Message (Part 1)

A rectangular display box containing the text 2104.

Actual Message (Part 2)

Notes:

- If you don't press any key, the message continues scrolling. Three minutes later, the pager beeps (or vibrates) to remind you of the message. This *unread*

message reminder repeats
up to 10 times.

If you receive another
message during this time, the
first message is stored and
the new message scrolls.



- To read the message again, press  as needed.

 
Receiving Messages

with Quick View Off

1. When the pager receives a message, it beeps (or vibrates) and **CALL** appears on the display. Press any key to stop the alert tone.

A rectangular display box with a thin border. Inside, the word "CALL" is on the left and the alphanumeric string "08139A" is on the right.


2. Press  to view the message. Press  again, if there are other elements (Time Stamp or Message Tag) in the message.

A rectangular display box with a thin border. Inside, the text "MSG 1" is on the left and "08139A" is on the right.

Time Stamp (Optional)

A rectangular display box with a thin border. Inside, the text "-0-URGENT" is centered.

 Message Tag (Optional)


A rectangular display box with a thin border. Inside, the phone number "214-555-1212" is centered.

Actual Message (Part 1)

A rectangular display box with a thin border. Inside, the number "2104" is centered.

 
Actual Message (Part 2)

If you don't press any key, the pager beeps (or vibrates) three minutes later, to remind you of the message. This *unread message reminder* repeats up to 10 times. See "Unread Message Reminder" on Page 17.

3. To read the message again, press  as needed.

Receiving an Urgent Message

When Quick View is on, URGENT appears on the display and the message automatically follows.



When Quick View is off, press any key to stop the alert tone or vibration. Then, press ◀ to view the message.

Notes:

 
- A message is tagged as urgent when the pager's User Message feature is on and the sender begins the message with a special code. See "Message Tags" on Page 39.
- If you set the pager to the audio alert mode and it receives an urgent message, the loud beep tone sound regardless of the alert tone you selected. (See "Selecting the Alert Tone" on Pages 23 and 24.)
- If you set the pager to the silent (vibrate) mode, it vibrates normally when it receives an urgent message.

Freezing the Display

If you want to stop the display from scrolling, simply press and hold down .

Repeated Messages

If a new message is identical to a message already stored in memory, RP and the number of the original message appear as part of the Time Stamp display. See "Turning the Time Stamp On or Off" on Pages 33 and 34.



RP 3 11:15A

Tone-Only Messages

 
The pager displays **TONE ONLY** when it receives a call without a message. Such a message could be an automatic page from your telephone answering system or simply someone who calls your pager number but does not enter any message.



TONE ONLY

Unreadable Messages


If the pager receives a message that is partially or totally unreadable, each unreadable character is replaced with a lower case 'u.' Such messages can be caused by poor signal conditions.






Reading Stored Messages

The pager stores and numbers up to 30 messages. Messages are arranged from newest to oldest. The oldest stored message is number 1 and so on.

If you delete a message, the remaining messages are renumbered so that there are no gaps in the numbering.

A message can have up to four parts ... the Time Stamp (and message number), a Message Tag, and the actual message ... depending on which pager features are active. Repeatedly press  to move through the messages from newest to oldest.

 
- Press and hold down  to freeze the display on the current message element.
- When you stop pressing , the pager automatically scrolls through the remaining elements of the current message and returns to the standby mode.




Time Stamp (Optional)




MessageTag (Optional)



Actual Message (Part 1)



Actual Message (Part 2)



- **If the Time Stamp and User Message features are on**, UR appears at the left of the Time Stamp display for an urgent message.

A rectangular digital display with a black border. It shows the text 'UR 3 12100A' in a monospaced font. 'UR' is on the left, '3' is in the middle, and '12100A' is on the right.

- **If the pager receives an urgent message when the Time Stamp is off and User Message is on**, URGENT is displayed as the first element of the message.



A rectangular digital display with a black border. It shows the word 'URGENT' in a monospaced font, centered within the display.

Memory Full Indicator

When the memory is full, FULL appear on the display. If you receive another message the oldest message is automatically deleted.

A rectangular digital display with a black border. It shows the text 'FULL 12134A' in a monospaced font. 'FULL' is on the left, and '12134A' is on the right.

Display Light

Press and hold down  or  for about two seconds to turn on the display light. The light automatically turns off about two seconds after the display returns to standby.


Unread Message Reminder

 
If you do not read a message when it is received, the pager sounds a tone (or vibrates) once every three minutes to remind you of the message. The tone repeats 10 times, or until you read the message.



Urgent Message Reminder


If you receive an urgent message and do not read it, a loud beep tone sounds every two minutes. This tone sounds every two minutes until you cancel it. See “Canceling the Urgent Message Reminder” on Page 18.

Canceling the Urgent Message Reminder

1. Press  to view the urgent message.



 2. Press and hold down 
and  until you hear a short beep.




 
Deleting Messages

Your pager allows you to delete messages one at a time or to delete all messages at once.


Deleting One Message

Note: You cannot delete an urgent message until you cancel the *urgent message reminder*. See "Canceling the Urgent Message Reminder" on Page 18.

1. Repeatedly press  until you see the message you want to delete.

 


32 14444

2. Press and hold down  —the display alternates between DELMSG ? and the message.



DEL MSG ?




32 14444

3. While continuing to hold down , press  to delete the message.



DELETED

 4. The display automatically returns to standby.



0000 121 13P

Deleting All Messages

Note: If there is an urgent message stored in memory, you cannot delete all messages until you cancel the *urgent message reminder*. See "Canceling the Urgent Message Reminder" on Page 18.

1. Press ●

◀ AUDIO ALERT

or

SILENT ALERT

2. Press ◀

DELETE ALL ?

3. Press and hold down ● —the display alternates between DELETE ALL and ARE YOU SURE ?

ARE YOU SURE



DELETE ALL ?

4. While continuing to hold down ● , press ◀ to delete all messages.

ALL DELETED

5. The display returns to standby.

◀ ■■■■■ 10:20A

Setting Up the Pager

This section tells you how to set up the following pager features: Alert Mode & Duration, Alert Tone, Quick View, and Auto-Hyphen.

Setting the Alert Mode and Duration

You can set your pager to give one of eight audio alerts or a silent alert (vibration) when it receives a message. You can also set the pager to give a periodic reminder when a message is not read, or to give a non-stop alert.

Note: You *must* change the alert *mode* to get to the alert *duration* setting. You can change back the alert *mode* setting by repeating this procedure

1. Press ● . The alert *mode* (SILENT ALERT OR AUDIO ALERT) that *is not* currently active appears.

◀ AUDIO ALERT

or

SILENT ALERT

2. Press ● again to select the new alert *mode*. The current alert *duration* setting (REMINDER ? OR NON-STOP ?) appears.

REMINDER ?

or


NON-STOP ?

3. Press  to display the desired alert duration.

REMINDER ?

on

NON-STOP ?

4. Press  to select the new alert duration setting. The pager gives a test alert (tone or vibration).

0000 12:13P

Selecting the Alert Tone

WITHOUT Messages in Memory

1. Press ●
2. Press ◀
3. Press ●
4. Press ● . The current alert tone setting appears.
5. Press ◀ as necessary to display the desired new alert tone setting (ALERT 1, ALERT 2, ALERT 3, ALERT 4, ALERT 5, ALERT 6, ALERT 7, or ALERT 8).
6. Press ● to store the new setting. A test of the new alert tone automatically sounds.

SILENT ALERT

SETUP MENU

ALERT SET

ALERT 1

ALERT 2

▶----- 101288

Selecting the Alert Tone

WITH Messages in Memory

1. Press ●
2. Press ◀
3. Press ◀
4. Press ●
5. Press ● . The current alert tone setting appears.
6. Press ◀ as necessary to display the desired new alert tone setting (ALERT 1, ALERT 2, ALERT 3, ALERT 4, ALERT 5, ALERT 6, ALERT 7, or ALERT 8).
7. Press ● to store the new setting. A test of the new alert tone automatically sounds.

SILENT ALERT

DELETE ALL ?

SETUP MENU

ALERT SET

ALERT 1

ALERT 2

◀ --- 10:28A

Turning Quick View On or Off

WITHOUT Messages in Memory

1. Press ●

SILENT ALERT

2. Press ◀

SETUP MENU

3. Press ●

ALERT SET

4. Press ◀

QUICK VIEW

5. Press ● . The current Quick View setting appears.

QUICK ON

OR

QUICK OFF

6. Press ◀ to select the desired Quick View setting.

7. Press ● to store the new setting.

◀ --- 10128A

To turn Quick View On or Off

WITH Messages in Memory

1. Press ●
2. Press ◀
3. Press ◀
4. Press ●
5. Press ◀
6. Press ● . The current Quick View setting appears.
7. Press ◀ to select the desired Quick View setting.
8. Press ● to store the new setting.

SILENT ALERT

DELETE ALL ?

SETUP MENU

ALERT SET

QUICK VIEW

QUICK ON

OR

QUICK OFF

◀ 10/28A

Turning Auto-Hyphen On or Off

WITHOUT Messages in Memory

When on, the Auto-Hyphen feature adds hyphens to phone numbers to make them easier to read.

1. Press ●

SILENT ALERT

2. Press ◀

SETUP MENU

3. Press ●

ALERT SET

4. Press ◀

QUICK VIEW

5. Press ◀

AUTO HYPHEN

6. Press ● . The current Auto-Hyphen setting appears.

HYPHEN ON

OR

HYPHEN OFF

7. Press ◀ to select the desired Auto-Hyphen setting.

8. Press ● to store the new setting.

◀ 0000 12:13P

Turning Auto-Hyphen On or Off

WITH Messages in Memory

When on, the Auto-Hyphen feature adds hyphens to phone numbers to make them easier to read.

1. Press ●
2. Press ◀
3. Press ◀
4. Press ●
5. Press ◀
6. Press ◀
7. Press ● . The current Auto-Hyphen setting appears.
8. Press ◀ to select the desired Auto-Hyphen setting.
9. Press ● to store the new setting.

SILENT ALERT

DELETE ALL ?

SETUP MENU

ALERT SET

QUICK VIEW

AUTO HYPHEN

HYPHEN ON

OR

HYPHEN OFF

◀ 0000 121 13P

Setting Time Functions

You should set the time before you use the pager's Alarm or Time Stamp features.

Setting the Time

WITHOUT Messages in Memory

You can set the time for the 12-hour (a.m./p.m.) or 24-hour (military) format.

 
1. Press ●
2. Press ◀
3. Press ◀
4. Press ●
5. Press ● . The current time setting appears with the hour indicator(s) flashing.



SILENT ALERT




SETUP MENU



TIME MENU



 
TIME SET



TIME- 12:34P

6. Press ◀ to set the desired hour. Be sure the A (a.m.) or P (p.m.) is correct in the 12-hour mode.

 7. Press ● . The minutes flash.




8. Press ◀ to set the desired minute.

9. Press ● . The time mode (12H or 24H) indicator flashes.

10. Press ◀ to select the desired time mode.

 11. Press ● to store the new time settings.



Setting the Time

WITH Messages in Memory

You can set the time for the 12-hour (a.m./p.m.) or 24-hour (military) format.

1. Press ●

SILENT ALERT

2. Press ◀

DELETE ALL ?

3. Press ◀

SETUP MENU

4. Press ◀

TIME MENU

5. Press ●

TIME SET

6. Press ● . The hour and A or P flash.

 
TIME- 12:34P

7. Press ◀ to set the desired hour. Be sure the A (a.m.) or P (p.m.) is correct in the 12-hour mode.

8. Press ● . The minutes flash.

TIME- 12:34P

9. Press ◀ to set the desired minute.
10. Press ● . The time mode (12H or 24H) indicator flashes.
11. Press ◀ to select the desired time mode.
12. Press ● to store the new time settings.



Turning the Time Stamp On or Off

WITHOUT Messages in Memory

When the Time Stamp is on, a message number and the time display precede each message.

1. Press ●

SILENT ALERT

2. Press ◀

SETUP MENU

3. Press ◀

TIME MENU

4. Press ●

TIME SET

5. Press ◀

TIME STAMP

6. Press ● . The current Time Stamp setting appears.

STAMP ON ?

OR

STAMP OFF ?

7. Press ◀ to select the desired Time Stamp setting.

8. Press ● to store the new setting.










 

 






◀ 0000 12:13P

◀ 0000 12:13P

Turning the Time Stamp On or Off

 WITH Messages in Memory

 When the Time Stamp is on, a message number and the time display precede each message.

1. Press  
2. Press  
3. Press  
4. Press  
5. Press  
6. Press  
7. Press  . The current Time Stamp setting appears.

OR

8. Press  to select the desired Time Stamp setting.
9. Press  to store the new setting.


Using the Pager Alarm

Your pager has a 24-hour, daily alarm. You must turn on the alarm before you can set it.

Turning the Alarm On or Off

and Setting the Alarm Time

WITHOUT Messages in Memory

1. Press ●
2. Press ◀
3. Press ◀
4. Press ◀
5. Press ● . The current alarm setting appears.
6. Press ◀ to select the desired alarm setting.

SILENT ALERT

SETUP MENU

TIME MENU

 
ALARM SET

⏰ ALARM ON ?

OR


ALARM OFF ?

7. Press **●** . If you turned on the alarm. The alarm time display appears with the hour and A or P flashing. Proceed to the next step.




8. Press **◀** to set the alarm-time hour.

 9. Press **●** . The minutes digits begin flashing.



10. Press **◀** to set the alarm-time minutes.

 11. Press **●** to store the alarm setting.



Turning the Time Alarm On or Off

and Setting the Alarm Time WITH Messages In Memory

1. Press ●
2. Press ◀
3. Press ◀
4. Press ◀
5. Press ◀
6. Press ● . The current alarm setting appears.
7. Press ◀ to select the desired alarm setting.

SILENT ALERT

DELETE ALL ?

SETUP MENU

TIME MENU

 
ALARM SET

⏏ ALARM ON ?

OR


ALARM OFF ?

8. Press **●** . If you turned on the alarm. The alarm time display appears with the hour and **A** or **P** flashing. Proceed to the next step.



9. Press **◀** to set the alarm-time hour.

 10. Press **●** . The minutes digits begin flashing.



11. Press **◀** to set the alarm-time minutes.

12. Press **●** to store the alarm setting.



Message Tags

Your pager comes preprogrammed with six message tags. You cannot change the first tag -0-URGENT but you can reprogram the remaining five.

The preprogrammed Message Tags are

- 0-URGENT
- 1-HOME
- 2-OFFICE
- 3-HUSBAND
- 4-WIFE
- 5-CHILD

If you turn on the User Message feature, the person calling your pager can tag their message by beginning the message with the appropriate code.

Note: Your pager service can change the first character of the codes to any number (0 - 9), #, [,], or * instead of -. Be sure to check with your pager service.

See "Turning User Messages On or Off" on Pages 40 and 41.

Turning User Messages On or Off

WITHOUT Messages in Memory

1. Press ●

SILENT ALERT

2. Press ◀

SETUP MENU

3. Press ◀

TIME MENU

4. Press ◀

ALARM SET

5. Press ◀

USER MENU

6. Press ●

USER MESSAGE

7. Press ● . The current User Message setting appears.

USER MSG OFF

OR

USER MSG ON

8. Press ◀ to change the User Message On/Off setting.

9. Press ● to save the new setting.

◀ 0000 12:13P

Turning User Messages On or Off

WITH Messages in Memory

1. Press ●
2. Press ◀
3. Press ◀
4. Press ◀
5. Press ◀
6. Press ◀
7. Press ●
8. Press ● . The current User Message setting appears.
9. Press ◀ to change the User Message On/Off setting.

SILENT ALERT

DELETE ALL ?

SETUP MENU

TIME MENU

ALARM SET

USER MENU

USER MESSAGE

USER MSG OFF

OR

USER MSG ON

10. Press ● to save the new setting.

◀ 0000 121 13P

Viewing the Message File

WITHOUT Messages In Memory

1. Press ●

SILENT ALERT

2. Press ◀

SETUP MENU

3. Press ◀

TIME MENU

4. Press ◀

ALARM SET

5. Press ◀

USER MENU

6. Press ●

USER MESSAGE

7. Press ◀

MESSAGE FILE

8. Press ●. The first message, -0-URGENT, appears.

-0-URGENT

9. Press ◀ to scroll through all six messages.

10. Press ● to return to the standby screen.

◀ 0000 12:13P

Viewing the Message File

WITH Messages in Memory

1. Press ●

SILENT ALERT

2. Press ◀

DELETE ALL ?

3. Press ◀

SETUP MENU

4. Press ◀

TIME MENU

5. Press ◀

ALARM SET

6. Press ◀

USER MENU

7. Press ●

USER MESSAGE

8. Press ◀

 
MESSAGE FILE

9. Press ● . The first message, -0-URGENT, appears.

-0-URGENT

10. Press ◀ to scroll through all six messages.

11. Press ● to return to the standby display.



Storing Words in the Message File

You can store new messages in the message file using any touch-tone telephone. You cannot change message ~~0-URGENT~~, but you can replace the other messages with any word up to eight characters.

The following are the special codes for storing messages from a touch-tone telephone.

A=2	H=44	O=666	W=9
B=22	I=444	P=7	X=99
C=222	J=5	R=77	Y=999
D=3	K=55	S=777	Q=1
E=33	L=555	T=8	Z=11
F=333	M=6	U=88	Space=00
G=4	N=66	V=888	

If the word contain two consecutive letters that are entered using the same telephone number key, you must separate the two letters with a single zero. If the next letter uses a different key, the zero is not necessary. For example, storing the message WILLIAM requires the following sequence:

9	4	4	4	5	5	5	0	5	5	5	4	4	4	2	6	
└───┘			└───┘			└───┘			└───┘			└───┘				
W			I			L			L			I			AM	

Changing a Message Tag

WITHOUT Messages in Memory

- | | |
|---|--------------|
| 1. Press ● | SILENT ALERT |
| 2. Press ◀ | SETUP MENU |
| 3. Press ◀ | TIME MENU |
| 4. Press ◀ | ALARM SET |
| 5. Press ◀ | USER MENU |
| 6. Press ● | USER MESSAGE |
| 7. Press ◀ | MESSAGE FILE |
| 8. Press ● . The first message, -0-URGENT, appears. You cannot change this message. | -0-URGENT |
| 9. Press ◀ to display the message you want to change. | -2-OFFICE |

10. Press and hold down ◀ and ● until the message flashes to place the pager in programming mode.

Note: The display light comes on.

11. Call your pager and dial the number sequence that represents the new message. The letters appear in the display.

-2-WILLIAM

12. Press ●

13. Press ◀ to select another message tag to change.

-5-CHILD

14. Repeat Steps 10 through 12 to change other message tags.

15. Press ● to return to the standby mode.

◀ 0000 121 13P

Changing a Message Tag

WITH Messages in Memory

- | | |
|---|--------------|
| 1. Press ● | SILENT ALERT |
| 2. Press ◀ | DELETE ALL ? |
| 3. Press ◀ | SETUP MENU |
| 4. Press ◀ | TIME MENU |
| 5. Press ◀ | ALARM SET |
| 6. Press ◀ | USER MENU |
| 7. Press ● | USER MESSAGE |
| 8. Press ◀ | MESSAGE FILE |
| 9. Press ● . The first message, -0-URGENT, appears. You cannot change this message. | -0-URGENT |
| 10. Press ◀ to display the message you want to change. | -2-OFFICE |

11. Press and hold down ◀ and ● until the message flashes to place the pager in programming mode.

Note: The display light comes on.

12. Call your pager and dial the number sequence that represents the new message. The letters appear in the display.

-2-WILLIAM

13. Press ●. The flashing stops.

14. Press ◀ to select another message to change.

-5-CHILD

15. Repeat Steps 11 through 13 to change other message tags.

16. Press ● to return to the standby mode.

◀ -5-CHILD 101288

Replacing the Battery

When the battery's power is low, the pager displays **BATTERY LOW** and sounds a four-second soft tone about every 30 minutes. Replace the battery as soon as possible.

 
BATTERY LOW

Caution: A built-in memory saver holds information in memory for two minutes while the battery is removed. Have a new battery ready to install before you remove the old one.

1. Slide off the battery cover.
2. Remove the old battery and install a fresh AAA battery.

Note: Be sure to observe the **+/-** symbols in the battery compartment.

3. Re-install the battery cover.

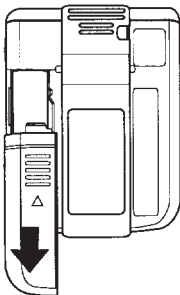

Care and Maintenance

- Keep your pager dry. If it gets wet, immediately wipe it dry.
- Use and store your pager only in normal temperature environments.
- Keep your pager away from dust and dirt.
- To clean your pager, wipe it occasionally with a damp cloth. Do not clean it with harsh chemicals or solvents.

FCC Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions.

- This device may not cause harmful interference.
- This device must accept any interference received, including any interference that may cause undesired operation.

uniden®

© 1995 Uniden America Corporation.

All rights reserved.

Printed in the Philippines