


GMR2872-2CK/GMR2875-2CK

- 15 GMRS / 7 FRS Channels
- 142 Privacy Codes (CTCSS Tone and DCS Code)
- Up to 28 Mile Range*
- Submersible design
- Direct Call
- 143 Group Codes
- Silent Mode
- 10 Selectable Call/Ring Tone Alerts
- Backlit LCD Display
- Roger Beep
- Vibrate Reminder (GMR2875 Only)
- Power Boost Button for Maximum Range
- All Call
- Auto Channel Change Call
- Battery Charger
- Battery Level Meter
- Channel Monitor
- Channel Scan
- Group Scan
- Keypad Lock
- NOAA Emergency / Weather Channels
- Emergency Weather Alert



*Range may vary depending on environmental and/or topographical conditions.

GMR2872-2CK/GMR2875-2CK RADIO

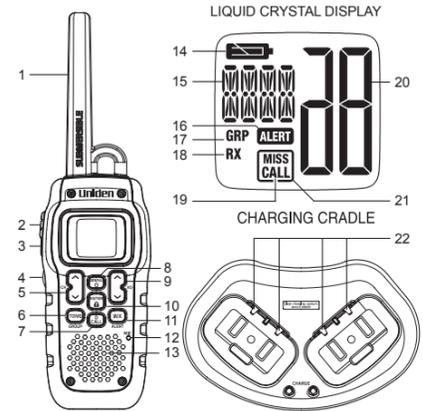

- | | |
|-----------------------------|----------------------------|
| 1 Antenna | 13 Speaker |
| 2 PTT (Push-To-Talk) Button | 14 Battery Level Indicator |
| 3 Power Boost Button | 15 Sub Code Indicator |
| 4 Monitor Button | 16 Alert Indicator |
| 5 Channel Up/Down Key | 17 Group Indicator |
| 6 Tone/Group Key | 18 Receive Indicator |
| 7 D-call Key | 19 Call Indicator |
| 8 Menu/Power Key | 20 Channel Indicator |
| 9 Volume Up/Down Key | 21 Missed Call Indicator |
| 10 Enter/Lock Key | 22 Charging Contacts |
| 11 Weather/Alert Key | |
| 12 Microphone | |

Congratulations on your purchase of the Uniden GMR2872-2CK/GMR2875-2CK (General Mobile Radio Service) waterproof radio. This lightweight, palm-sized, radio is a state-of-the-art device, equipped with many valuable features. Use it at sporting events, to stay in contact with family and friends, hiking, skiing, outdoors, or in a neighborhood watch for vital communication - even outside by the pool!

Your radio complies with JIS7 water-resistant standards, which means the radio can be submerged in 1.0 meters of water for 30 minutes without damage.

After your radio is submerged in water, you might notice that the sound is distorted. This is because there is still water remaining in and around the speaker and microphone. Just shake the radio to clear excess water, and the sound should return to normal.

Note: If your radio is exposed to salt water, clean your radio thoroughly with fresh water, and dry it before turning it on.

PACKAGE CONTENTS

Your package contains two radios, two rechargeable NiMH battery packs (#BP38), one AC adapter (#AD-314), one charging cradle (#RC1282), two belt clips and this reference guide. You can operate the unit using the rechargeable NiMH battery pack.

To order the following optional accessories, visit our web site @www.uniden.com or call 1-800-554-3988 during business hours.

Use only Uniden accessories.

- NiMH Battery Pack - #BP38
- Charging Cradle - #RC1282
- AC Adapter - #AD-314

GMRS LICENSE

The radio operates on the General Mobile Radio Service (GMRS) frequencies when using Channels 1-7 and channels 15-22. You must have a GMRS license issued by the Federal Communications Commission to legally use these channels. For licensing information and application forms, visit the FCC online at: www.fcc.gov/wtb/uls or call the FCC hotline at 1-800-418-3676. If you have any questions, you can contact the FCC direct at 1-888-225-5322. No license is required for operation on channels 8-14 or operation on any channel in Canada.

INSTALL THE BATTERY

Your radio uses a supplied NiMH battery pack.

To install the NiMH battery pack:

- 1) Make sure the radio is off.
- 2) Turn the screw holding the battery compartment counterclockwise with a screwdriver, and hold up the battery cover.
- 3) Put the NiMH battery pack in the battery compartment applying the battery contacts to the lower charge contacts. Be sure to follow the instructions written on the battery pack's label. Installing the battery pack incorrectly will prevent the unit from operating.
- 4) Before placing the battery cover back on the radio, check the rubber seal around the battery compartment and the ribbon of the battery pack: make sure that the seal is in good condition and that there is no foreign matter under the seal.
- 5) Replace the battery compartment door. Tighten the screws securely.

Note: If the rubber seal appears worn, nicked, or dried out, replacement seals are available from www.uniden.com or call 1-800-554-3988 during business hours.

USING THE RADIO BATTERY LEVEL AND LOW BATTERY ALERT

This radio has a battery level meter that indicates the status of the batteries. When the battery level is low, the battery level meter icon flashes and then BATT appears after 30 seconds. Recharge the NiMH battery pack immediately.

Warning! To avoid the risk of personal injury or property damage from fire or electrical shock, only use the Uniden accessories specifically designated for this product.

CHARGING THE RADIO

Your radio includes charging cradle and rechargeable battery packs. Follow these instructions to recharge the radios in a charging cradle.

Make sure to turn the radio OFF before placing the radio in the charging cradle.

Using the Charging Cradle

- 1) Connect the adapter's plug to DC IN 9V jack of the charging cradle and plug the other end into an AC outlet.

- 2) Set the charging cradle on the desk or tabletop, and place the radio in the charging cradle with the keypad facing forward.
- 3) Make sure that the LED illuminates. Charge the battery pack for 16 hours and remove the radio from the charging cradle after charging.

Note:

- Charge time may vary depending on the battery life remaining.
- For fastest charging, turn off the radio before charging.

Warning!:

- The charging cradle is not waterproof. If the charging cradle falls into water, unplug it before attempting to remove it from the water. Allow the cradle to dry completely before reconnecting the power.
- Wipe off dirt or shake water from your radio before placing in the charging cradle if your radio is soiled or wet.

USING THE RADIO

In order to get the most out of your new radio, read this reference guide completely before attempting to operate the unit.

Turning the Radio On and Adjusting the Volume

- 1) Press and hold the **MENU/☺** to turn the radio ON.
- 2) To change the volume level, press the **VO^** or **V** to increase or decrease the volume level then press **ENTER/⏏**.
- 3) Press and hold the **MENU/☺** to turn the radio OFF.

Choosing a Channel

Your radio has 22 channels and 142 Privacy codes you can use to talk to others. In order to speak to someone, both your radios must be set to the same channel and Privacy code.

To choose a channel:

Press **CH^** or **V** to increase or decrease the channel number displayed.

- To change the channel continuously, press **CH^** or **V**, then repeatedly press and hold **CH^** or **V** for more than 1 second.

Note: Channels 1-7 and 15-22 have a typical range of up to 28 miles by pressing the **Power Boost**. **HI** is displayed when you select a GMRS channel, and **LO** is displayed when you select a FRS channel.

SETTING UP GROUP MODE

In order to use Group Mode you need to initialize a couple of settings in your radio:

- Set the radio to Group Mode
- Set a Group Code
- Set a Unit Number
- Set a "Nickname"

Setting the Radio to Group Mode

To set the radio to Group Mode, which enables Direct Call, Auto Channel Change and All Call, press and hold **TONE/GROUP** for 2 seconds. The radio displays **GRP** and group code.

Note: In group mode, you cannot receive transmissions from other radios unless they are also set to the same channel and group code.

Setting the Group Code

Set the group code for your radio group from 0-142. Everyone in your group must select the same group code in order to communicate with each other.

1) Tap **TONE/GROUP** in group mode. Press **CH^** or **V** to select the group number.

2) Press **ENTER/⏏** or **TONE/GROUP** to return to normal operation.

Setting the Unit Number

Each radio in your group needs to be set to a unique unit number, from 1-16.

- 1) Press **MENU/☺**. Advance through the menu until **UNIT** appears, and then press **ENTER/⏏**. The current unit number flashes.
- 2) Press **CH^** or **V** to select the desired unit number.
- 3) Press **ENTER/⏏** to continue to the next section.

Setting Your Nickname

Your nickname appears on other units' displays when you make a All Call or direct call. This is also the name that appears on other radio displays when someone wants to make a direct call to you. When no nickname is set, the unit number appears.

Automatically Changing Channels

Auto Channel Change lets you easily coordinate a channel change for everyone in your group. You might want to do this when you find you are getting a lot of interference on your current channel. Or, you can use this feature to change from a low-power channel (8-14) to one of the high-powered channels (1-7, 15-22) if you need more range (or to a low-power channel if you need longer battery life).

- 1) Press **MENU/☺**. Advance through the menu until **UNIT** appears, and then press **ENTER/⏏**. The current unit number flashes, then tap **ENTER/⏏**. The radio displays n - - - - (or your current nickname) with the first place in the nickname flashing.

- 2) Press **CH^** or **V** to select the letter, then **ENTER/⏏** to advance to the next letter until you have entered your nickname.
- 3) Press **MENU/☺** to confirm the setting and exit the menu.

Using Group Mode

Group mode lets you make direct calls to other people in your group without alerting the entire group and also lets you quickly change everyone in your group to another channel from a single radio. Before using group mode, follow the instructions in "Setting Up Group Mode" on every radio in your group. Then, to record the unit ID and everyone's nickname in every radio, send a call to "All" from each radio one time (see "Sending a Direct Call").

Sending a Direct Call

Direct Call lets you call everyone in your group at once, or call a single person in your group without anyone else in the group knowing. It is like a "speed dial" directly to the person(s) you want to talk to.

To call everyone in your group, press **D CALL** in group mode. The radio flashes **ALL**. Then, press **D CALL** or **ENTER/⏏**. Everyone in your group receives a call "chirp" for about 3 seconds. When the chirp ends, begin your conversation.

Note: When you make a direct call to "all," your radio also sends out your nickname or ID so that it will show up in the call list for everyone in your group.

To call one person in your group, without having other people know, press **D CALL** in group mode. Then, use **CH^** or **V** to select the person you want to call and press **D CALL** or **ENTER/⏏**. Your radio sounds tones for 3 seconds as it sends the call. When the selected person answers, you can begin your conversation. You can silence the call tones at any time by pressing **PTT** or **Power boost**.

Your conversation remains private between you and the person you called until 15 seconds after your last conversation. Then, your radio automatically exits private mode.

To start an auto channel change, on any radio in the group tap **MENU/☺**. Advance through the menu until **CHCX** appears, then press **ENTER/⏏**. The current channel flashes. Use **CH^** or **V** to select the target channel. You can check whether the selected channel is clear. Then press **D CALL** or **ENTER/⏏**. Your radio chirps for about 10 seconds while it sends out the channel change signal. As each radio receives the channel change signal, it chirps once, then changes to the new channel.

To ensure all radios make it to the new channel, we recommend you:

- Make sure you are in an open environment, where the radio will get the best range.
- Optimize range during the channel change signal by raising the radio over your head to give the best possible height.
- Do a "roll call" on the new channel after the move to be sure no one was left behind. If you missed someone, return to the previous channel and issue the signal again.

USING THE RADIO IN STANDARD MODE

Use the radio in standard (not group) mode when you need to be able to communicate with radios that do not have the group feature.

Choosing a Privacy Code

You can select a Privacy Code from 1-142 for each channel. **oFF** (OFF) indicates no Privacy code selected and your radio can receive a signal regardless of the code settings of the transmitting radio.

- 1) Press **TONE/GROUP**. The Privacy code indicator flashes.
- 2) Press **CH^** or **V** to increase or decrease the code. You can also select **oFF**.
- 3) Press **ENTER/⏏** or **TONE/GROUP** to return to normal operation.

Note: Only tones 1-38 are standard across radio brands. Other settings might differ from brand to brand. See the specifications for the specific tones used for each setting.

Channel Scan Feature

Your radio has a channel scan feature that lets you easily scan all 22 channels. When an active channel is detected, the radio pauses on that channel until the channel is clear. Then after a 2-second delay, the radio resumes scanning. Pressing **PTT** or **Power boost** while the scan is paused on a channel lets you transmit on that channel.

To turn on channel scan:

Press **MENU/☺**. The radio displays **SCAN**, and then press **ENTER/⏏**. The channel number changes as the radio rapidly cycles through the channels.

To turn off channel scan:

Press **MENU/☺**, **PTT**, **Power boost**, **D CALL** or **WX/ALERT**.

Talking on Your Radio

To talk to others using the radio:

- 1) Press and hold **PTT** or **Power boost** and speak in a clear, normal voice about 2-3 inches away from the microphone. While you transmit, **TXHI** or **TXLO** appears on the display according to the type of channel. To avoid cutting off the first part of your transmission, pause slightly after pressing **PTT** or **Power boost** before you start talking.
- 2) When you finish speaking, release **PTT** or **Power boost**. You can now receive incoming calls. While receiving, **RX** appears on the display.

Note: When you press **Power boost**, **BOOS** appear on the display. The radio transmits at maximum power when a GMRS channel is selected. If **Power boost** is continuously pressed, 1 minute after you start pressing **Power boost** the transmission stops and you hear a boost timeout error tone.

Monitor Mode Feature

Your radio lets you listen for weak signals on the current channel at the press of a key.

To turn on the Monitor Mode:


- For brief listening, press **MON**. **MON** appears and **RX** flashes.
- Press and hold **MON** for 2 seconds until two beeps sound for continuous listening. The receiver circuit stays open, so you hear both the noise and weak signals.

To turn off Monitor Mode:

Press **MON** to return to the previous mode. **MON** and **RX** disappear.

Navigating through the Normal Menu

To access the advanced features of your radio has a Menu function. In order to use Auto Channel Change, you need to set your radio to Group Mode.

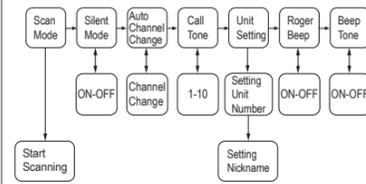

- 1) To enter the menu, press **MENU/☺**.
- 2) Additional presses of **MENU/☺** advances you through the menu. After the last menu item, the radio exits to the previous mode.
- 3) Other ways to exit the Menu function are:
 - a. Press **PTT**, **Power boost**, **MON**, **D CALL**, **WX/ALERT** or **TONE/GROUP**.
 - b. Wait 10 seconds until the radio automatically returns to the previous mode.

Setting Silent Mode

When you turn on the silent mode, all incoming calls are muted: the radio flashes the display backlight, the channel indicator, **SLNT** and **CALL** to alert you to an incoming call. If you do not respond to the call within 15 seconds, the backlight turns off. The GMR2875 will also vibrate to remind you that you missed a call. Silent mode is disabled for 15 seconds when you transmit, receive, or press any other button.

To set the silent mode:

- 1) Enter the menu. Advance through the menu until the **SLNT** appears, then press **ENTER/⏏**. The current setting flashes.
- 2) Press **CH^** to display **on**, then press **ENTER/⏏**.

Note: To prevent unwanted silent alerts, be sure to use a Privacy code or group code whenever you use the Silent mode feature. You can hear the received voice when you turn on channel scan and an active channel is detected even during silent mode.

Missed Call Alerts

If you receive an incoming call while silent mode is on and do not respond, the radio will turn on the Missed Call icon. If you are using the Group Mode, the radio will also indicate the person who made the call.

The GMR2875 will additionally remind you of a missed call by vibrating every minute after the call for 3 minutes.

Transmitting a Call Tone

Your radio is equipped with 10 selectable call tones that are transmitted when you press **D CALL** in standard mode. The selected tone will be also heard when someone places a direct call to you.

To select a call tone:

- 1) Enter the menu. Advance through the menu until **CALL** appears, then press **ENTER/⏏**. The current call tone number (1-10) flashes.
- 2) Press **CH^** or **V** to increase or decrease the number to the desired call tone. Each tone will be heard through the speaker.

To transmit the selected call tone, press **D CALL**. The selected tone is transmitted for a fixed length of time. Call Tone is cancelled if you press **PTT** or **Power boost**.

Roger Beep

Roger beep is a beep that is sent to notify the end of transmission. You can hear the roger beep can be heard through the speaker when both roger beep and Beep Tone are on. When roger beep is on and Beep Tone is off, you do not hear the roger beep, but it is transmitted to your party.

To adjusting the roger beep, enter **MENU/☺**. Advance through the menu until **RGR** appears, then press **ENTER/⏏**. The current setting flashes.

To turn OFF roger beep:

Press **CH^** to display **oF**, then press **ENTER/⏏**.

To turn ON roger beep:

Press **CH^** to display **on**, then press **ENTER/⏏**.

Adjusting the Sound (Beep Tone)

Your radio sounds a beep each time you press a key (except for **PTT** and **Power boost**). To adjusting the sound, enter **MENU/☺**. Advance through the menu until **TONE** appears, then press **ENTER/⏏**. The current setting flashes.

To turn OFF this beep:

Press **CH^** to display **oF**, then press **ENTER/⏏**.

To turn ON this beep:

Press **CH^** to display **on**, then press **ENTER/⏏**.

Key Lock

Press and hold the **ENTER/⏏** until the **LOCK** appears. To exit Keylock on mode, press and hold **ENTER/⏏** again.

Note:

- While in keylock on mode, you can still use the radio to receive transmissions, use **D CALL** in Standard mode, **VO^** or **V**, **PTT**, **Power boost**, **MON**, and **MENU/☺** to turn on or off the radio.

