

Uniden®

LightCam 40HD

Installation Guide



CUSTOMER CARE

At Uniden®, we care about you!

If you need assistance, please do NOT return this product to your place of purchase.

Save your receipt/proof of purchase for warranty.

Quickly find answers to your questions by:

1. Reading your owner's manual.
2. Visiting our customer support website at www.uniden.com.

Images in this manual may differ slightly from your actual product.

Uniden surveillance products are not manufactured and/or sold with the intent to be used for illegal purposes. Uniden expects consumer's use of these products to be in compliance with all local, state and federal law. For further information on video surveillance and audio recording legal requirements, please consult your local, state and federal law.

© 2018 Uniden America Corporation

All rights allowed by law are hereby reserved. Information in this document is subject to change without notice.

CONTENTS

CUSTOMER CARE	2
OVERVIEW	5
REQUIREMENTS	5
WHAT'S IN THE BOX	5
PARTS OF THE LIGHTCAM 40HD	6
INSTALL THE CAMERA	6
CONSIDERATIONS	6
PROCEDURES	6
FCC/INDUSTRY CANADA	
INFORMATION.....	9
FCC PART 15/IC COMPLIANCE	9

UNIDEN

LIGHTCAM 40HD

INSTALLATION MANUAL





OVERVIEW

Thanks for choosing Uniden LightCam 40 HD spotlight camera. This Installation Guide provides basic hardware installation and setup information so you can quickly get your system installed and for further setup. Download the Quick Start Guide from www.uniden.com for details.

 
REQUIREMENTS

- The light control requires 120-volts AC.
- This product is intended for use with the enclosed gasket and with a junction box marked for use in wet locations (not included).
- Phillips-head screwdriver.

WHAT'S IN THE BOX

			
LightCam 40HD	Mounting Screws (2)	Wire Connectors (2)	Gasket

PARTS OF THE LIGHTCAM 40HD

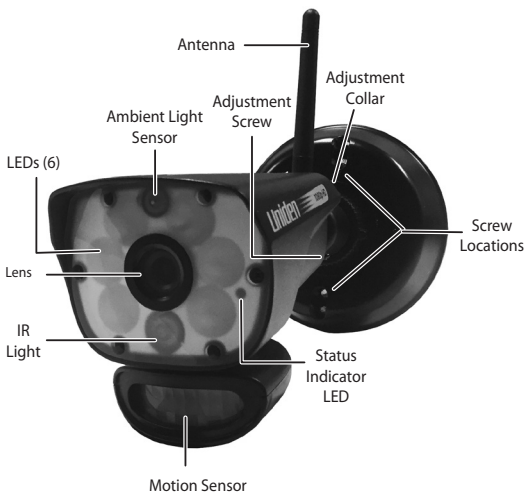

INSTALL THE CAMERA

Install the LightCam 40HD in a verticle (from the ceiling or eaves) or horizontal (against a wall) position. Installation instructions are identical for either position.

CONSIDERATIONS

 
- If there is no junction box for wiring in the location where you want to install this camera, you must add a junction box.
- Do not install the camera where the sun will shine directly into the lens.

PROCEDURES

1. Turn off power to the junction box where the camera will be located.


WARNING: TURN POWER OFF AT THE CIRCUIT BREAKER OR FUSE BOX. DO NOT ASSUME TURNING POWER OFF AT A WALL SWITCH WILL TURN OFF ALL POWER TO THE AREA YOU NEED.

2. Pull wires from mounting location (ceiling/eaves, wall, etc).
3. Pull the camera wires through the gasket; press gasket flush to mounting base.

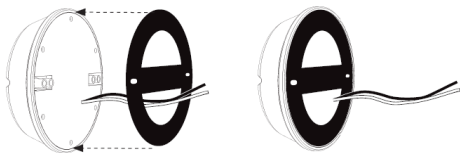


4. Strip 3/4-inch of the wire coating from the camera wires. Twist each camera wire with its corresponding house wire twice (white to white, black to black). Top each connection with wire caps.

 
If there is a ground wire, tuck it into junction box.

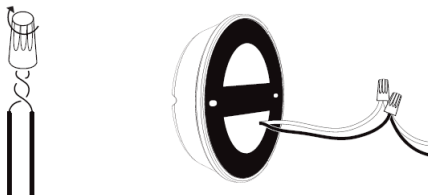

 5. Tuck wiring into the junction box.
6. Align the mounting base screw holes with the screw holes in the junction box. Verify that the gasket is evenly positioned around the base. Using a Phillips' head screwdriver, screw the camera base to the junction base with the screws provided. Do not over-tighten.

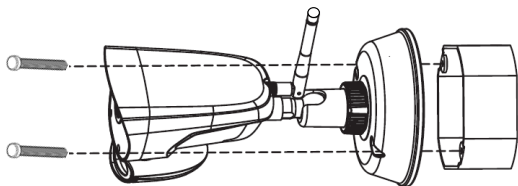

 7. Position the camera roughly where you want it. Tighten the adjustment collar.
8. Loosen the small adjustment screw on the side of the stand. Fine-tune the camera position and then tighten the screw. Again, do not over-tighten.

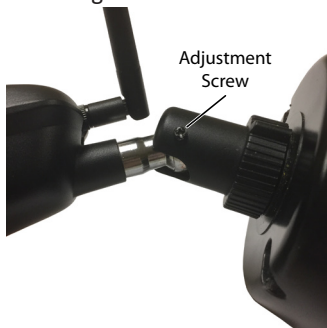

9. Caulk edge of mounting base with silicone weather-resistant sealant (not included).
10. Turn power back on.

One-Year Limited Warranty

Important: Evidence of original purchase is required for warranty service.

WARRANTOR: Uniden America Corporation (“Uniden”)

ELEMENTS OF WARRANTY: Uniden warrants, for one year, to the original retail owner, this Uniden Product to be free from defects in materials & craftsmanship with only the limitations or exclusions set out below.

WARRANTY DURATION: This warranty to the original user shall terminate & be of no further effect 12 months after the date of original retail sale. The warranty is invalid if the Product is (A) damaged or not maintained as reasonable or necessary, (B) modified, altered, or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden, (C) improperly installed, (D) serviced or repaired by someone other than an authorized Uniden service center for a defect or malfunction covered by this warranty, (E) used in any conjunction with equipment or parts or as part of any system not manufactured by Uniden, or (F) installed or programmed by anyone other than as detailed by the owner’s manual for this product.

STATEMENT OF REMEDY: In the event that the product does not conform to this warranty at any time while this warranty is in effect, warrantor will either, at its option, repair or replace the defective unit & return it to you without charge for parts, service, or any other cost (except shipping & handling) incurred by warrantor or its representatives in connection with the performance of this warranty. Warrantor, at its option, may replace the unit with a new or refurbished unit.

THE LIMITED WARRANTY SET FORTH ABOVE IS THE SOLE & ENTIRE WARRANTY PERTAINING TO THE PRODUCT & IS IN LIEU OF & EXCLUDES ALL OTHER WARRANTIES OF ANY NATURE WHATSOEVER, WHETHER EXPRESS, IMPLIED OR ARISING BY OPERATION OF LAW, INCLUDING, BUT NOT LIMITED TO ANY IMPLIED

WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow this exclusion or limitation of incidental or consequential damages so the above limitation or exclusion may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights, & you may also have other rights which vary from state to state. This warranty is void outside the United States of America & Canada.

PROCEDURE FOR OBTAINING PERFORMANCE OF WARRANTY: If, after following the instructions in the owner's manual you are certain that the Product is defective, pack the Product carefully (preferably in its original packaging). Disconnect the battery from the Product & separately secure the battery in its own separate packaging within the shipping carton. The Product should include all parts & accessories originally packaged with the Product. Include evidence of original purchase & a note describing the defect that has caused you to return it. The Product should be shipped freight prepaid, by traceable means, to warrantor at:

Uniden America Service
C/O Saddle Creek
743 Henrietta Creek Rd. , Suite 100
Roanoke, TX 76262

