

# Uniden®

## MHS335BT

FLOATING VHF MARINE RADIO

RADIO VHF MARITIME FLOTTANTE



OWNER'S MANUAL  
GUIDE D'UTILISATION

# MAKING A DISTRESS CALL

Lift the red cover. Press and hold the **DISTRESS** key for three seconds. Your radio transmits your ship's location every few minutes until you receive a response.



Lift the red cover and press the white **DISTRESS** button underneath.

**NOTE:** If the radio displays *Enter User MMSI*, cancel the automatic distress call and make a normal voice distress call.

## Making a Voice Distress Call

Speak slowly - clearly - calmly.

For future reference, write your ship's name & call sign here:

1. Make sure your radio is on.
2. Press the **16/P** key to switch to Channel 16 (156.8 MHz). (If the corner of the display does not show 16, press the **16/P** key again until it does.)
3. Press the **PUSH-TO-TALK** key and say: "**MAYDAY -- MAYDAY -- MAYDAY.**"
4. Say "**THIS IS** {name of your ship (three times)} and call sign/ship registration number (once)."
5. Repeat "**MAYDAY** {name of your ship}" once.
6. Tell where you are: (what navigational aids or landmarks are near, or read the latitude and longitude from your GPS).
7. State the nature of your distress (e.g. are you sinking, medical emergency, man overboard, on fire, adrift, etc. ).
8. State the type of assistance you need (medical, towing, pumps, etc.).
9. Give number of persons aboard and conditions of any injured persons.
10. Estimate present seaworthiness of your ship (e.g. how immediate is the danger due to flooding or fire or proximity to shore).
11. Briefly describe your ship, giving ship name (e.g. "Blue Duck is 32 foot cabin cruiser, white hull, blue deck house").
12. Say: "**I WILL BE LISTENING ON CHANNEL 16.**"
13. End message by saying "**THIS IS** {name or call sign of your ship}, **OVER.**"
14. Release the **PUSH-TO-TALK** key and listen.

*If you do not get an answer after 30 seconds, repeat your call, beginning at step 3, above.*

---

# FAIRE UN APPEL DE DÉTRESSE

Soulevez le couvercle noir. Maintenez **DISTRESS** enfoncé pendant trois secondes. Votre radio transmettra l'emplacement de votre bateau toutes les quelques minutes jusqu'à ce que vous receviez une réponse.



Soulevez le couvercle et appuyez sur le bouton **DISTRESS** blanc en dessous.

**Remarque :** Si la radio affiche *Enter User MMSI*, annulez l'appel de détresse automatique et effectuez un appel de détresse vocal normal.

## Faire un appel de détresse

**Parlez lentement – clairement – calmement.**

Pour toute référence ultérieure, écrivez ci-dessous le nom et l'indicatif d'appel de votre bateau:

1. Vérifiez si votre radio est en marche.
2. Appuyez sur la touche **16/P** afin de commuter au canal 16 (156,8 MHz). (Si le canal 16 n'apparaît pas à l'affichage, appuyez de nouveau sur la touche **16/P** jusqu'à ce qu'il soit affiché.)
3. Appuyez sur le bouton **Push-to-Talk** et dites: "**MAYDAY -- MAYDAY -- MAYDAY**".
4. Donnez l'identité de votre navire en disant : "**ICI {nom de votre bateau (trois fois) ou indicatif d'appel et le numéro d'identification de votre bateau (une fois)}**".
5. Dites "**MAYDAY {nom ou indicatif d'appel de votre bateau}** une fois".
6. Donnez votre position : (quels sont les points de repère ou aides à la navigation près de vous ou lisez les coordonnées de longitude et de latitude apparaissant sur votre dispositif GPS).
7. Révélez la nature de votre détresse (par exemple, nous sommes en train de couler, urgence médicale, un homme à la mer, un incendie, nous sommes à la dérive, etc.
8. Révélez la nature de l'aide désirée (médicale, remorquage, essence, etc.)
9. Donnez le nombre de personnes à bord et les conditions des blessés, s'il y en a.
10. Donnez la condition de navigabilité actuelle de votre navire, tel que le degré de l'urgence par rapport une inondation, et une incendie.
11. Donnez une brève description de votre navire en donnant le nom du bateau (par exemple, "Blue Duck est un yacht de croisière de 32 pieds, avec une coque blanche et un rouf bleu.).
12. Dites : "**JE VAIS ÉCOUTER SUR LE CANAL 16**".
13. Terminez le message en disant "**ICI {nom ou indicatif d'appel de votre bateau}, À VOUS**".
14. Relâchez le bouton **Push-to-Talk** du microphone et écoutez.

**Si vous n'obtenez pas de réponse après 30 secondes, répétez l'appel en commençant à l'étape 3 ci-dessus.**

# Table of Contents

## INTRODUCTION .....E-3

FEATURES .....E-3

WHAT'S INCLUDED .....E-4

PARTS OF THE MHS335BT .....E-5

Front View .....E-5

Back View .....E-6

Charger .....E-6

READING THE IDLE SCREEN..E-6

Display Icons and

What They Mean .....E-7

## HOW IT WORKS.....E-7

USING THE POP-UP

KEYBOARD .....E-8

MENUS .....E-8

*DISTRESS MESSAGE* Menu...E-10

*GENERAL SETUP* Menu .....E-10

*RADIO SETUP* Menu.....E-11

*GPS* Menu.....E-12

*WAYPOINT SETUP* Menu .....E-12

*BLUETOOTH* Menu .....E-12

*DSC SETUP* Menu .....E-12

*ABOUT* Menu .....E-13

*RESET (To Factory Defaults)*

Menu .....E-13

USING SOFT KEYS.....E-13

MOB Soft Key .....E-13

WX Soft Key.....E-14

CALL Soft Key .....E-14

HILO Soft Key .....E-16

TRI Soft Key.....E-16

MEM Soft Key .....E-16

SCAN Soft Key .....E-16

COMP Soft Key.....E-17

NAV Soft Key .....E-17

WPT Soft Key .....E-17

BT Soft Key .....E-17

SPKR Soft Key.....E-18

OPERATION MODES .....E-18

Normal .....E-19

Scan.....E-20

Weather .....E-22

## SETTING UP THE

**HARDWARE .....E-23**

ATTACHING THE ANTENNA...E-23

INSTALLING THE BATTERY ...E-23

USING THE ALKALINE

BATTERY TRAY .....E-23

CONNECTING POWER .....E-24

MOUNTING THE CHARGER...E-24

Charging the Battery .....E-25

Charging the Radio with

Battery Pack Installed.....E-25

Charging the Battery

Pack Only .....E-25

Important Notes on

Charging the battery.....E-25

## SETTING UP YOUR RADIO ...E-25

TURNING IT ON .....E-25

ENTERING THE USER

MMSI .....E-25

SETTING IT UP.....E-26

Acquiring GPS Location.....E-26

Changing the Volume .....E-26

Setting the Squelch Level .....E-26

Setting the UIC Channel

Mode (USA/CAN/INTL) .....E-27

Setting Key Lock.....E-27

Setting WX Alert Mode.....E-27

Setting FIPS Codes .....E-27

Adjusting the Backlight.....E-27

Adjust the LCD Contrast .....E-28

Turning the Key Beep On

and Off.....E-28

OPERATING THE RADIO .....E-28

Making a Transmission .....	E-28
Changing the Transmission Level.....	E-28
Saving the Channel into Memory .....	E-29
Using the LED Light.....	E-29

## **DIGITAL SELECTIVE**

### **CALLING FEATURES**

#### **(DSC) .....E-29**

WHAT IS DSC? .....	E-29
--------------------	------

MMSI NUMBERS .....	E-29
--------------------	------

Entering MMSI Numbers .....	E-30
-----------------------------	------

USING THE DIRECTORIES ....	E-30
----------------------------	------

Individual Directory .....	E-30
----------------------------	------

Group Directory.....	E-31
----------------------	------

MAKING DSC CALLS .....	E-32
------------------------	------

Calling a single station	
--------------------------	--

(Individual Call) .....	E-33
-------------------------	------

Calling a particular group	
----------------------------	--

of ships (Group Call) .....	E-33
-----------------------------	------

Calling all ships	
-------------------	--

(All-Ships Call).....	E-34
-----------------------	------

MAKING AN AUTOMATIC	
---------------------	--

DISTRESS CALL .....	E-34
---------------------	------

Canceling an automatic	
------------------------	--

distress call .....	E-35
---------------------	------

Resending an automatic	
------------------------	--

distress call .....	E-35
---------------------	------

Receiving an automatic	
------------------------	--

distress call	
---------------	--

acknowledgement .....	E-35
-----------------------	------

Receiving a distress call .....	E-35
---------------------------------	------

DSC CALLS .....	E-35
-----------------	------

Individual DSC Call .....	E-35
---------------------------	------

Group DSC Call .....	E-35
----------------------	------

Answer a DSC Call .....	E-36
-------------------------	------

DSC Call Logs .....	E-36
---------------------	------

Making or Returning a Call .....	E-37
----------------------------------	------

TEST CALLS.....	E-37
-----------------	------

Making Test Calls (Test) .....	E-37
--------------------------------	------

Receiving Test Call Setup .....	E-37
---------------------------------	------

POSITION REQUEST	
------------------	--

AND REPLY.....	E-38
----------------	------

Enabling Automatic	
--------------------	--

Position Reply .....	E-38
----------------------	------

POS Request.....	E-38
------------------	------

Position Send .....	E-38
---------------------	------

AUTO POLLING.....	E-38
-------------------	------

### **GPS FEATURES .....E-39**

GPS OPERATION	
---------------	--

OVERVIEW .....	E-39
----------------	------

GPS MENU .....	E-39
----------------	------

### **NMEA FEATURES .....E-40**

Chartplotter Connection .....	E-41
-------------------------------	------

NMEA Output .....	E-41
-------------------	------

### **ADDITIONAL FEATURES .....E-41**

Renaming Channels .....	E-41
-------------------------	------

### **UNIDEN MARINE APP .....E-42**

### **MAINTENANCE AND**

### **TROUBLESHOOTING .....E-42**

### **SPECIFICATIONS.....E-43**

REFERENCE TABLES .....	E-44
------------------------	------

Channel Descriptions and	
--------------------------	--

What They Mean .....	E-44
----------------------	------

MARINE RADIO CHANNEL	
----------------------	--

CHART .....	E-45
-------------	------

WEATHER CHANNELS AND	
----------------------	--

FREQUENCIES (US, CAN,	
-----------------------	--

AND INTL).....	E-50
----------------	------

EMERGENCY ALERT	
-----------------	--

(SAME) SYSTEM .....	E-50
---------------------	------

Types of Events .....	E-50
-----------------------	------

No Response Event Code .....	E-52
------------------------------	------

## **REGULATIONS AND SAFETY**

### **WARNINGS.....E-52**

Maritime Radio Services

Operation.....E-52

Basic Radio Guidelines .....E-52

### **RBRC Information .....E-54**

### **COMPLIANCE .....E-54**

#### **Three-Year Limited**

**Warranty .....E-55**

# UNIDEN®

## FLOATING VHF MARINE RADIO

### MHS335BT

#### INTRODUCTION

Uniden's MHS335BT is a floating, hand-held class D DSC radio with an integrated GPS receiver. It is also Bluetooth capable so you can use Uniden's smartphone app (iOS and Android) to set up the radio and text message other VHF text message capable radios. You can enter other information such as DSC directory information and update the radio's firmware.

#### FEATURES

Your radio provides the following key features:

- **Submersible design.** Complies with floating JIS8/IPX8 water-resistant standards, which means the radio can be submerged in 4.9 feet of water for up to 30 minutes without damage.

#### NOTES:


The radio will only meet this rating if fully assembled and all rubber seals and bungs are well maintained and correctly fitted. This means that the speaker microphone bung is inserted, and the battery pack (or case) and antenna are attached and securely fastened.

After your radio is submerged in water, the sound might be distorted. This is because there is still water remaining in and around the speaker and microphone. Just shake the radio to clear excess water, and the sound should return to normal.

If your radio is exposed to salt water, clean it thoroughly with fresh water and dry it before turning it on.


The charger is not waterproof.

- **Memory Scan mode.** Lets you save channels to memory and monitor them in quick succession.
- **High/LO power level select.** Lets you boost the transmitter power from 1W to 2.5 or 6W for added transmission distance.
- **Battery level display and low battery alert.**
- **Dual and Triple Watch operation.** These different watch modes let you monitor up to two Coast Guard Distress/Hailing channels and one weather channel along with one regular marine channel.
- All marine VHF channels for the U.S., Canada, and international waters
- **Emergency 16/09 Channel monitoring.** Set unit to scan one or both of these emergency channels regularly within normal scanning cycles.
- **Class D second receiver** is dedicated to monitoring the DSC watch channel 70 to ensure that no incoming messages are missed.

- **National Oceanic and Atmospheric Administration (NOAA) Weather Channel watch.** Sounds a warning tone when a hazard alert is issued.
- **LCD and key backlight/Flashlight/SOS Strobe.** Pressing the **Light/Lock** () **/LOCK** key initiates various light options (see page E-5).
- **Key Lock.** Locks keys to prevent accidentally changing channels or entering data.
- **Selectable Backlight Timer.** Lets you select the length of time the backlight will be on.
- **DSC.** Lets you call other ships or groups using their unique identification code. This radio complies with International Class D DSC standards for Handheld GPS/VHF marine transceivers.
- **GPS (Favorite Position mode).** Lets you save your current position as well as manually enter other positions. You can save positions into a directory to return to them as desired.
- **Waypoints.** Create a list of coordinates and use that list to navigate to various destinations.
- **NMEA input/output.** Lets you connect to a chartplotter and, through menus, determine what NMEA data you want to receive.
- **10 weather channels** available for monitoring.
- **MOB (Man Overboard).** Lets you lock onto the current position when a Man Overboard situation occurs.
- **Compass Display.** Lets you determine the way you want the radio to display your course - by showing your course and direction or by showing location on a north-south-east-west display. Automatically auto-plots to a received DSC distress call.

## WHAT'S INCLUDED

*NOTE: Some of the graphics in this manual may vary slightly from the actual product.*

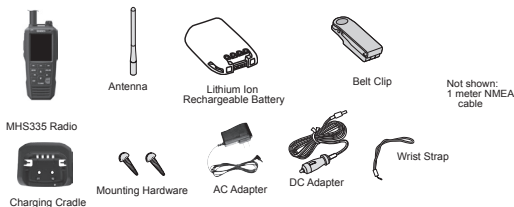


If any pieces are missing or damaged, contact Customer Service at [www.uniden.com](http://www.uniden.com).




## PARTS OF THE MHS335BT


### Front View

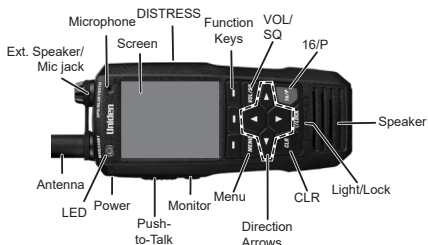


Note: Thermal sensor on back.

Key	Press to...	Press and hold to...
<b>POWER</b>	N/A	Turn radio on and off.
<b>Push-to-Talk</b>	N/A	Transmit on a current TX power.
<b>MON</b>	Quickly open and close squelch (single press/release).	Open Squelch.
Soft Function Keys (3)	Activate function assigned to that key. Function displays on screen above key. See page E-13.	NA
<b>MENU</b>	Open the menus.	NA
◀ / ▲ / ▶ / ▼	Move up, down, left, or right on a screen.	NA
<b>CLR</b>	Returns to the IDLE screen.	NA
<b>Light/LOCK</b> (  /LOCK)	<ul style="list-style-type: none"> <li>- Press once to activate the LCD and key backlight.</li> <li>- Press twice to activate LED steady on (Flashlight).</li> <li>- Press three times to activate the SOS strobe light.</li> <li>- Press a fourth time to turn the LED off.</li> </ul>	Lock key input to prevent input errors.
<b>16/P</b>	Cycle through call channel, channel 16, channel 9, and back to the starting channel.	NA
<b>VOL/SQ</b>	Press once: Adjust volume. Press twice: Adjust squelch.	NA
<b>DISTRESS</b>	Activate DISTRESS screen.	Send out default distress signal.

## Back View

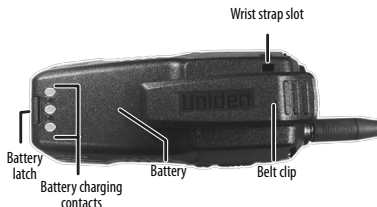


## Charger

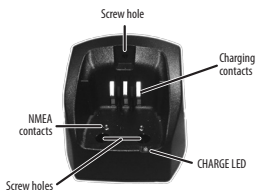



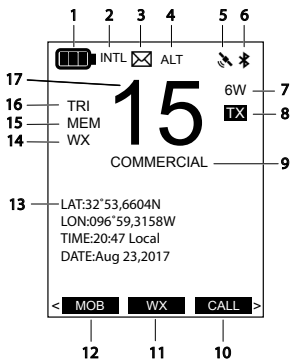

## READING THE IDLE SCREEN

The Idle screen shows different information depending on what you are doing. Not all icons display on every screen. This dummy Idle screen displays many of the possible icons. The table below shows possible icons and what they mean.



## Display Icons and What They Mean

Number	Icon	What it means
1		Battery level
2	<b>INT</b>	Channel mode (USA, INTL, or CAN)
3		Displays when mail is available.
4	<b>ALT</b>	Weather Alert
5		Flashes when satellite acquired. Does not display if no satellite acquired.
6		Displays when Bluetooth is turned on.
7	<b>1W, 2.5W, or 6W</b>	Power output.
8	<b>TX</b> or <b>RX</b>	Indicates Transmitting (TX) or Receiving (RX).
9	Various Text	Channel Name
10	Soft Key #3	Name of soft key (see page E-13).
11	Soft Key #2	Name of soft key (see page E-13).
12	Soft Key #1	Name of soft key (see page E-13).
13	GPS Data	Latitude, Longitude, Time, and Date at current position.
14	<b>WX</b>	Displays when Weather mode active.
15	<b>MEM</b>	Displays when a channel is saved into memory.
16	<b>TRI</b>	Displays TRI (Triple) or DUAL (Dual) watch mode as set in Menus.
17	Channel Number	Current channel number.

## HOW IT WORKS

The MHS335BT uses a 3-part operating structure: Menus, Soft Keys, and a pop-up keyboard. These elements work with each other to quickly set up and operate your radio.

- Menus - Press the **MENU** key to access the menus (see page E-8).


- **Soft Keys** - The soft keys relate to the three keys on the bottom of the screen. Many of these keys can access functions that are set up through the menus (see page E-13).
- **Pop-Up Keyboard** - Some of the menus and soft keys require alphanumeric input. The radio brings up a keyboard for this. You can change the keyboard from alphanumeric characters to special characters.

## USING THE POP-UP KEYBOARD

When you need to enter text, a digital keyboard pops up. "Type" on this keyboard by using the ▲, ▼, ►, and ◀ keys on the radio's keypad to move a cursor through the keyboard.

Choose **SELECT** to select that character and move to the next spot. choose

- The **ABC/abc** key switches between capital and lower case letters.
- Select the **@&?** key to switch to the special character keyboard. Select **ABC/abc** to switch back to an alphanumeric keyboard.
- After using the ▲, ▼, ►, and ◀ keys on the radio's keypad to select a letter, choose **SELECT** to "type" the letter. The letter then displays on the screen.
- Select the ◀ and ► keys to move the cursor backwards or forwards into the entry.
- Select **ENTER** to move the cursor to the next line.
- Select **del** to delete the character to the left of the cursor.

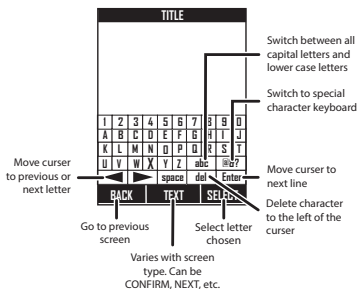

## MENUS


Various menus let you establish guidelines and parameters for sending and receiving calls. Menus also let you set your radio's characteristics such as brightness, code selection, and contrast.

The **MENU** key accesses menus that let you set the way your radio operates. The following Menus display on the screen.

- **DISTRESS MESSAGE** (see page E-10 for details)
- **GENERAL SETUP** (see page E-10 for details)
- **RADIO SETUP** (see page E-11 for details)
- **GPS** (see page E-12 for details)
- **WAYPOINT SETUP** (see page E-12 for details)
- **BLUETOOTH SETUP** (see page E-12 for details)
- **DSC SETUP** (see page E-12 for details)
- **ABOUT** (see page E-13 for details)

- RESET (see page E-13 for details)

Use the UP ( ▲ ) and DOWN ( ▼ ) keys to find a menu category. Choose the *SELECT* soft key to select and go to that menu.

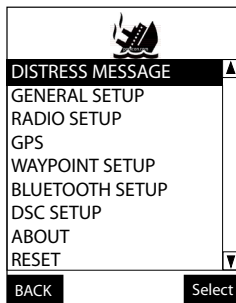

MENU	DESCRIPTION	REF. PAGE
DISTRESS MESSAGE	Types of distress messages such as flooding, capsizing, and man overboard.	Page E-10
GENERAL SETUP	Basic radio configuration such as backlight, key beep, and reset to factory defaults.	Page E-10
RADIO SETUP	Basic radio configuration such as channel mode, priority channel, and scan type.	Page E-11
GPS	Set up GPS configuration such as time offset, unit of measure, and direction.	Page E-12
WAYPOINT SETUP	Establish Waypoint and route directories and routing information.	Page E-12
BLUETOOTH SETUP	Turn Bluetooth on and off and provide a broadcast identifier (name) for your radio.	Page E-12
DSC SETUP	Configure DSC calling and directories.	Page E-12
ABOUT	Displays radio, GPS, and Bluetooth firmware version numbers.	Page E-13
RESET (To Factory Defaults)	Reset the radio to factory defaults. All programming is lost, but not the MMSI number.	Page E-13

## ***DISTRESS MESSAGE Menu***

Select a distress message type to transmit when you use the ***DISTRESS*** key on the side of the radio. See page E-34 for information on how to send a distress message.

<b>MENU ITEM</b>	<b>DESCRIPTION</b>
Undesignated	Send this type when you, your crew, and/or your ship are in clear danger and there is no time to search for a more inclusive designation to use.
Fire, Explosion	Send this type if there has been an explosion or a fire on the ship and you are in immediate danger.
Flooding	Send this type if your ship is taking on water and you are in immediate danger.
Collision	Send this type if your ship has collided with another ship or obstruction.
Grounding	Send this type if the ship has run aground.
Capsizing	Send this type if the ship is capsizing.
Sinking	Send this type if the ship is sinking.
Adrift	Send this type if the ship is adrift and unable to navigate on its own.
Abandoning Ship	Send this type if you and the crew must evacuate the ship.
Piracy	Send this type if your ship is under attack or unauthorized boarding.
Man Overboard	Use this type if someone has gone overboard and you are unable to assist/locate them.

Distress messages are always transmitted on channel 70 at maximum RF power (6W).

## ***GENERAL SETUP Menu***

You can set up how your radio operates through the ***GENERAL SETUP*** menu.

<b>MENU ITEM</b>	<b>DESCRIPTION</b>
Backlight	Set how bright the backlight is and how long the backlight stays on. Backlight level: Off, 1 - 5 (Default = 3). Backlight duration: Always on, 5 sec , 10 sec, 20 sec, or 30 sec.
Contrast	Set how dark the screen images are against the background. Contrast levels are 1 - 8 (Default = 4). (See page E-28.)
Key Beep	With Key Beep turned on (default), the radio will beep every time you press a key.

MENU ITEM	DESCRIPTION
SOS Strobe	The LED on the front of the radio acts as a strobe light. Set water activation and timeout duration here.
Inactivity Timer	Set how long the radio remains inactive before it times out.
Key Assignment	Reassign soft key functions to different keys.
Reset Radio to Factory	Return your radio to the factory defaults. You will lose all programming.

### ***RADIO SETUP Menu***

Use the *RADIO SETUP* menu to fine tune how the radio will operate. For example, you can rename channels, set channel modes, etc.

MENU ITEM	DESCRIPTION
Channel Mode	Set to USA, CAN (Canada), or INTL (International). (See page E-27.)
Weather Radio	Turn weather alerts on or off (see page E-27) and enter S.A.M.E codes (see page E-27).
Dual/Tri Watch	Turn Dual or Triple Watch on and off (see page E-19).
Priority Channel	Select a channel to be the priority channel when scanning. (See page E-17.)
2nd Priority Channel	Select a channel to be the secondary priority channel when scanning. (See page E-17.)
Scan Type	Select a scanning type: Priority Scan or Memory Scan (see page E-17.)
Scan Pause Timer	Set how long scanning will pause when the <i>SCAN</i> soft key is pressed.
Channel Name	Rename a channel (see page E-41).
Noise Cancel	Select noise cancelling for received or transmitted signals.
Receive Audio Pitch	Set audio pitch. <ul style="list-style-type: none"> <li>- Normal</li> <li>- Mid Range</li> <li>- Highs &amp; Lows Boost</li> <li>- Lows Boost</li> <li>- Highs Boost</li> </ul>

## **GPS Menu**

The GPS section on page E-39 provides an overview of the GPS menu options and how they work.

## **WAYPOINT SETUP Menu**

Waypoints (also called landmarks) mark specific points in traveling between two locations. They serve as directional indicators. For example, once you reach a specific waypoint, you need to adjust your course to reach the next waypoint (and as you continue, your destination). See page E-17 for details on setting up waypoints.

<b>MENU ITEM</b>	<b>DESCRIPTION</b>
Waypoint Directory	Displays a list of all available waypoints.
Current Position	Displays latitude, longitude, time, SOG, and COG.
Route Directory	Displays a list of routes stored in the directory.
Routing Method	Automatic or Manual.
Route Display	Displays routes on a compass screen.
Arrival Alarm	Enter the distance at which you want the radio to alert you that you are close to the destination.

## **BLUETOOTH Menu**

Smart phones can discover your radio when you turn Bluetooth on with this menu. You can also change your radio's broadcast identifier (name).

## **DSC SETUP Menu**

You can configure your DSC operation through this menu.

<b>MENU ITEM</b>	<b>DESCRIPTION</b>
Enter Radio MMSI	Enter the radio's MMSI number to use DSC features.
Individual Directory	Add, edit, or delete individual directory entries.
Group Directory	Set up a group with an Group MMSI. Send this GROUP MMSI number to other ships. Those ships are now part of the group you created.
Individual Reply	Set whether incoming individual calls, position requests, and test calls receive an automatic acknowledgement or must be acknowledged manually.
Individual Ack	Set an able (or unable) to reply automatic message to be sent.
Individual Call Ring	Set the amount of time a call will ring before it times out.
Auto MOB Set	Turn Auto MOB on and off.



MENU ITEM	DESCRIPTION
Wait to Pos Fix	Set how long the radio takes to acknowledge a POS fix.
Auto Polling Time	Set how long the radio takes between polling activities.
Auto Pos Polling	Automatically requests position information from up to 7 individuals.
DSC Alarm Setup	Turn DSC alarms on and off.

### ABOUT **Menu**


This menu displays the current software version for the radio, GPS, and Bluetooth.

### RESET (To Factory Defaults) **Menu**

Using this menu resets the unit to factory defaults, except for the MMSI number. Select **OK** to confirm the reset. Otherwise, select **Exit** to cancel.

## USING SOFT KEYS

**MENU** operations can set up the radio's configuration and databases. Soft keys use that information to perform quickly accessed procedures. For example, you can add ships to call (name and MMSI numbers) through **MENU/DSC SETUP/Individual Directory**. Then select **CALL/INDIVIDUAL CALL** through the soft keys and the ship you added through the menus displays.

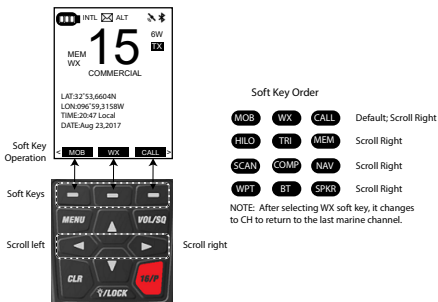

### MOB Soft Key

The Man Overboard (MOB) soft key does not require setup through the menus.

1. Select the **MOB** soft key and the screen automatically marks your current location as MOB. The MOB screen displays the latitude, longitude, time, BRG (Bearing to Destination), and DIST (Distance to Destination). The radio's GPS supplies this information automatically. The soft keys change to **BACK**, **DEL**, and **NAV**.

2. Select **BACK** to return to the previous mode and keep the current MOB information.
3. Select **DEL** to delete the current MOB information and return to the previous mode.
4. Select **NAV** to activate the COMPASS screen. Navigate to your destination

### WX Soft Key

Select the **WX** soft key to display the last WX channel accessed (**WX** changes to **CH**). The screen displays the latitude, longitude, and time. Press ▲ and ▼ to scroll through weather channels. Select **CH** to return to the last marine channel.

### CALL Soft Key

The **CALL** soft key opens a **CALL** menu. You can use this menu as a "shortcut" to making different kinds of calls. You can also send and receive position requests and view the DSC call logs.

Some call types use the information previously set up in the menus to configure the call parameters. For example, if you select **INDIVIDUAL CALL** through the **CALL** soft key, a list of ships that were set up through **MENU/DSC SETUP/Individual Directory** displays.

Call Menu Option	Setup	Operation
DISTRESS MESSAGE	None	Select the <b>CALL</b> soft key and select <b>DISTRESS MESSAGE</b> .  Scroll to distress message type and choose <b>SELECT</b> .
INDIVIDUAL CALL	Enter individual ships through <b>MENU/DSC SETUP/Individual Directory</b> .	Select the <b>CALL</b> soft key and select <b>INDIVIDUAL CALL</b> .  Scroll to the individual ship and choose <b>SELECT</b> .  Select <b>SEND</b> on the <b>INDIVIDUAL CALL</b> screen.
GROUP CALL	Set up a Group name and MMSI number through <b>MENU/DSC SETUP/Group Directory</b> .  Give this MMSI number to the ships included in the group.	Select the <b>CALL</b> soft key and select <b>GROUP CALL</b> .  Scroll to the group name and choose <b>SELECT</b> .  Select <b>SEND</b> on the <b>GROUP CALL</b> screen.
ALL SHIPS CALL	None	Select the <b>CALL</b> soft key and select <b>ALL SHIPS CALL</b> .  Select either <b>SAFETY</b> (hazards in the water) or <b>URGENCY</b> (people at risk).

Call Menu Option	Setup	Operation
TEST CALL	Enter individual ships through <b>MENU/DSC SETUP/Individual Directory</b> .	Select the <b>CALL</b> soft key and select <b>TEST CALL</b> . The list of the ships entered previously displays.  Select a ship and choose <b>SELECT</b> . A <b>TRANSMITTING TO</b> message displays.
POSITION REQUEST	Enter individual ships through <b>MENU/DSC SETUP/Individual Directory</b> .	Select the <b>CALL</b> soft key and select <b>POSITION REQUEST</b> . The list of the ships entered previously displays.  Select a ship and choose <b>SELECT</b> . A <b>POSITION REQUEST</b> screen displays. Select <b>SEND</b> .
POSITION SEND	Enter individual ships through <b>MENU/DSC SETUP/Individual Directory</b> .	Select the <b>CALL</b> soft key and select <b>POSITION SEND</b> . The list of the ships entered previously displays  Select a ship and choose <b>SELECT</b> . A <b>POSITION SEND</b> screen displays your current GPS location. Select <b>SEND</b> .
DSC LOG	None	Select the <b>CALL</b> soft key and select <b>DSC LOG</b> . The <b>DSC LOG</b> screen displays a list of options: <i>Transmitted Log, Received Log, and Delete Log</i> .  Select either the <i>Transmitted Log</i> or the <i>Received Log</i> and choose <b>SELECT</b> . That log displays <i>Distress</i> or <i>Others</i> . Selecting of these logs displays the MMSI number of all calls you've transmitted or received. Select an MMSI number and choose <b>SELECT</b> . Information for that call displays.  If you select <b>DELETE LOG</b> , you then have the option of selecting <i>TX Log</i> or <i>RX Log</i> to delete specific entries.  Select <i>Delete All Log</i> to delete all entries for both the TX and RX logs.

Call Menu Option	Setup	Operation
AUTO POLLING	<p>Enter individual ships through <b>MENU/DSC SETUP/Individual Directory</b>.</p> <p>Set the amount of time between polling requests through <b>MENU/DSC SETUP/Auto Polling Time</b>.</p>	<p>Select the <b>CALL</b> soft key and select <i>Auto Polling</i>. The screen displays <i>Activate</i> and <i>Selected ID</i>.</p> <p>Choose <b>SELECTed ID</b> to choose an individual ship to poll.</p> <p>The <i>Polling List</i> screen displays. Choose <b>SELECT</b>. The Individual ships entered into the Individual Directory displays. Select a ship. Go back to the <i>Auto Polling</i> screen, select <i>Activation</i>.</p> <p>After you get an acknowledgement, scroll to <b>COMP</b> soft key. The ship's location should display on the <i>Compass</i> screen.</p>

### **HILO Soft Key**

Select the **HILO** soft key to change the transmission power from 1.5W to 6W to 2.5W. The transmission power icon displays. (See page E-6 for the transmission power icon LCD placement.)

**NOTE: If the maximum output for a specific channel is 1W only, the output power stays to 1W and the radio sounds an error tone.**

### **TRI Soft Key**

This soft key displays as what is set in **MENU/RADIO SETUP/Dual/Tri Watch**. If that setting is TRI, then TRI displays. If the setting is DUAL, then DUAL displays. See page E-6 for the Dual/Triple icon LCD placement.

#### **SETUP**

Go to **MENU/RADIO SETUP/Dual/Tri Watch**. Select *Dual* or *Triple*.

#### **OPERATION**

Select **TRI** soft key. The screen scans the current channel and the priority channels set in the menus. The TRI icon displays on the LCD (see page E-6).

**NOTE: If DUAL is set in the menus, then the screen scans the current channel and just the Priority channel; it does not scan the 2nd Priority Channel.**

### **MEM Soft Key**

Select the **MEM** soft key to save the current channel into memory. If the channel is already saved into memory, selecting this key will remove it from memory. (See page E-6 for the MEM icon LCD placement.)

### **SCAN Soft Key**

The **SCAN** soft key lets you scan combinations of channels saved into memory and priority channels. Set priority/second priority channels and the channel type through menus.

## SETUP

1. Select **MENU/RADIO SETUP/Priority Channel**. Select a DSC channel for priority channel. (Default = 16)
2. Select **MENU/RADIO SETUP/2nd Priority Channel**. Select another DSC channel for the 2nd Priority Channel. (Default = 9)
3. Select **MENU/RADIO SETUP/Scan Type**. Options are *Priority* (scans both priority channels and channels saved to memory) or *Memory* (scans only channels saved in memory).

## OPERATION

1. Select **SCAN** soft key.
2. Radio scans channels according to Main menu setup.

### COMP Soft Key

The *Compass* (**COMP**) soft key activates the compass screen. Select the *N-UP* soft key and the screen orients to north. When you're in N-UP mode, the soft key changes to *C-UP* mode. Select the *C-UP* soft key and the compass orients to the course's next Waypoint, as shown by a black dot.

### NAV Soft Key

Select this soft key to select a previously stored route or waypoint as your destination.

### WPT Soft Key

Waypoints are location coordinates you've entered into the system. Select the **WAYPOINT** soft key to select waypoints to navigate to.

**NOTE:** *The radio shares memory space with ROUTE and can save up to 200 waypoints*

## SETUP

Search the internet for the location you want (use "coordinates" as part of the search term) and enter the coordinates through the **MENU/WAYPOINT SETUP /Edit** screen. For example, search for "Key West Naval Hospital coordinates."


### BT Soft Key

You can send and receive text messages, review text messages, and turn Bluetooth on and off through this soft key.

## SENDING TEXT MESSAGES

**NOTE:** *You can send texts from your radio or from your mobile device using the Uniden Marine app, available for Android and iOS.*

1. Select the **BT** soft key and select *New Message*. Select an individual contact to receive the message and then **SELECT**. A pop-up keyboard displays (*NEW MESSAGE*) with the *TO:* area filled in with the contact selected previously.

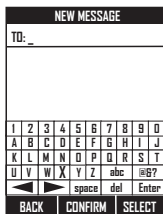

2. Enter your text message, selecting **SELECT** after each letter. Select **NEXT**, and then **SEND**. Select **EXIT** to return to the previous mode.

## VIEW MESSAGING

Select *Rx Message* or *Tx Message* from the **BT** soft key menu. A list of MMSI numbers representing calls displays. Select a message and choose **SELECT**.

## BLUETOOTH ON/OFF

Select *Bluetooth Set* from the **BT** soft key menu. Turn BT on or off (default).

## SPKR Soft Key

If you drop the radio in water, select the **SPKR** soft key to sound a loud tone. The vibrations from this tone help remove water from the speaker.

## OPERATION MODES

Your radio has three main operation modes: Normal, Scan, and Weather.

Mode	What it does	Use it when you want to...	To turn it on/off
Normal	Monitors a single marine channel and lets you talk on that channel.	Monitor a channel or talk to another radio.	From any mode, press <b>CLR</b> . The Idle screen displays. Select a different mode to turn Normal mode off.
Scan	<ul style="list-style-type: none"> <li>- Monitors priority channels set in the Main menu.</li> <li>- Monitors all the channels you save into memory.</li> </ul>	<ul style="list-style-type: none"> <li>- Monitor up to 2 additional channels in addition to the channels saved in memory.</li> <li>- Check a small group of regularly-used channels for traffic.</li> </ul>	Select <b>SCAN</b> soft key to start scanning. Select <b>SCAN</b> again to stop.

Mode	What it does	Use it when you want to...	To turn it on/off
Weather	Monitors the selected NOAA weather channel.	Hear the current or forecasted weather.	Press <b>MENU</b> . Go to <b>RADIO SETUP/Weather Radio</b> .

In addition to the three operation modes, your radio provides three different watch modes which you can activate during any operation mode. In the watch modes, the radio briefly checks for activity on a specific channel, then returns to its previous operation.

Watch mode	What it does	To turn it on/off
Weather Alert Watch	Checks the last-used weather channel for hazard alerts every few seconds.	From <b>MENU</b> , select <b>RADIO SETUP</b> . Go to <b>Weather Radio</b> and select <b>WX Alert</b> to turn on or off.
Dual Watch	Checks the priority channel for activity every few seconds. (Default priority channel = 16)	From <b>MENU</b> , select <b>RADIO SETUP</b> . Go to <b>Dual/Tri Watch</b> and select <b>Dual</b> to turn Dual Watch on or <b>Triple</b> to turn Triple Watch on (and Dual Watch off).
Triple Watch	Checks the priority and second priority channels for activity every few seconds. (Priority channel default - 16; second priority channel default = 9)	From <b>MENU</b> , select <b>RADIO SETUP</b> . Go to <b>Dual/Tri Watch</b> and select <b>Triple</b> to turn Triple Watch on or <b>Dual</b> to turn Dual Watch on (and Triple Watch off).


**Note: Private ships must monitor channel 16. Whenever they are underway. Water-going ships should have either Triple Watch or Dual Watch on at all times.**

### Normal

- To transmit, remove the radio from the charger, then press and hold **Push-to-Talk**. Release the key when you are finished talking.
- For the best sound quality, hold the microphone about two inches from your mouth while you're talking.
- Press **▲** to move up one channel at a time. Press and hold the key to scroll quickly up the channels.
- Press **▼** to move down one channel at a time. Press and hold the key to scroll quickly down the channels.
- To change the transmit power, press the **HILO** soft key. The transmit power cycles through 1W, 2.5W, and 6W, then back to 1W again.

## NORMAL MODE WITH WEATHER ALERT

If you activate Weather Alert (**MENU/RADIO SETUP/WX Alert**) while operating in Normal mode, the radio checks the most recently used weather channel every seven seconds. If it detects a weather or other hazard alert, it will switch to that weather channel. (If you are actively transmitting, the radio waits until you finish your transmission before checking the weather channel.)

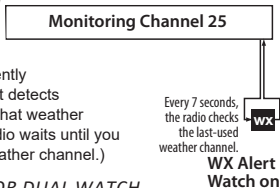

## NORMAL MODE WITH TRIPLE WATCH OR DUAL WATCH

If you activate Triple Watch while operating in Normal mode (**MENU/RADIO SETUP/Dual/Tri Watch/Triple**), the radio checks the priority and second priority channels every few seconds along with the current marine channel. With Dual Watch turned on, the radio only checks the priority channel and the current marine channel. The radio will not check either of the priority channels while you are actively transmitting; it waits until your transmission is finished and then checks the channels.

### Scan

There are two Scan modes - Priority and Memory.

### SCAN/PRIORITY MODE

Priority mode scans through the channels saved into memory and then the priority channel [set in the **MENU/Radio Setup** (see page E-11)]. For example: Memory Channel 1 --> Priority Channel --> Memory Channel 2 --> Priority Channel --> etc.

### SCAN/PRIORITY MODE WITH WEATHER ALERT ON

If Weather Alert is turned on with Priority mode, the radio alternately scans through the channels saved into memory and the priority channel (Memory Channel 1 --> Priority Channel --> Memory Channel 2 --> Priority Channel --> Memory Channel X ) and then scans the most recently used Weather channel.


### SCAN/MEMORY MODE

You can save any channel into memory and then use Scan mode/Memory Scan to monitor those channels from lowest to highest. If the radio detects a signal on a channel, it stays on that channel as long as the signal is received; when the signal stops, the radio continues scanning.

### SCAN/MEMORY MODE WITH WEATHER ALERT ON

If Weather Alert is turned on with Memory mode, the radio scans through the channels saved into memory and then scans the most recently used Weather channel. (Memory Channel 1 --> Memory Channel 2 --> Memory Channel N, and then scans the most recently used Weather channel.)



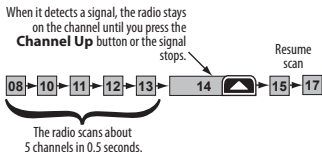


## USING THE RADIO IN SCAN MODE

- To activate Scan mode, set the radio to either *Priority Scan* or *Memory* in **MENU/RADIO SETUP/Scan Type**. If you select *Memory*, the radio scans channels saved in memory. If you select *Priority*, go to **MENU/RADIO SETUP** and set the priority channel. The radio scans this channel in addition to channels saved in memory.
- You must have at least two channels in memory to start a scan.
- You can transmit while scanning.
- To save a channel into memory, select the channel, then scroll to the **MEM** soft key. Select it to save that channel into memory. The MEM icon displays whenever you tune to that channel.
- To remove a channel from memory, set the radio to that channel, then select the **MEM** soft key again. The MEM icon no longer displays and that channel is no longer saved in memory.
- When the radio stays on a channel, press **▲** to leave that channel and resume scanning.
- To end the scan, select the **SCAN** soft key again. The radio remains on the last scanned channel.

## SCAN MODE WITH WEATHER ALERT

When you activate Weather Alert (**MENU/RADIO SETUP/Weather Radio**) while in Scan mode, the radio checks the most recently-used weather channel every seven seconds.

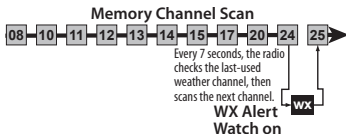


- If the radio receives a weather alert while scanning, it beeps to alert you that there is an alert on a weather channel. Press any key to stop the alert.
- A *Weather Alert Reception Confirmation* screen displays. Select **OK** to display a confirmation screen.
- The next screen gives you the option of switching to the weather channel (**YES**) or returning to the marine channel (**NO**).

## Scan Mode with Triple Watch or Dual Watch

 If you activate Triple Watch (**MENU/RADIO SETUP/Dual/Tri Watch** menu or **TRI** soft key) while operating in Scan mode, the radio checks the priority and second priority channels

(default = channels 16 and 9) every two seconds, then goes on to scan the next channel in memory. With Dual Watch turned on, the radio only checks the priority channel:



Press **MENU/RADIO SETUP/Dual/Tri Watch** menu or **TRI** soft key again to cancel Triple Watch mode.


Select **Dual** from **MENU/RADIO SETUP/Dual/Tri Watch** to set up Dual watch.

### **BOTH WEATHER ALERT AND TRIPLE/DUAL WATCH IN SCAN MODE**

You can activate Weather Alert Watch and Triple/Dual Watch at the same time. Press **MENU/RADIO SETUP/Dual/Tri Watch** or the **TRI** soft key to turn on the Triple/Dual watch; turn on WX Alert through **MENU/RADIO SETUP/Weather Radio**.

If Dual watch is activated, the radio scans the priority channel, the current marine channel, and then the most recently used weather channel.

If Triple watch is activated, the radio scans the priority channel, the second priority channel, the current marine channel, and then the most recently used weather channel.

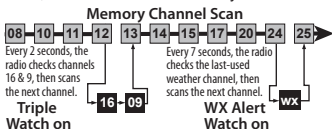

## **Weather**

The NOAA weather channels now cooperate with the FCC to alert you of other hazards besides weather (child abduction alerts, nuclear, biological, etc.). In Weather mode, the radio monitors one of the 10 NOAA weather channels. If a weather alert signal is received in Weather Alert mode, the radio sounds an alert tone.

### **USING THE RADIO IN WEATHER MODE**

- You cannot transmit while in Weather mode.
- To enter Weather mode, select the **WX** soft key.
- To turn off the radio's alert tone, press any key.
- To cancel Weather mode and return to the previous marine channel, select the **CH** soft key.


### **WEATHER MODE WITH WEATHER ALERT WATCH**

If you activate Weather Alert Watch through **MENU/RADIO SETUP/Weather Radio/WX Alert** while operating in Weather mode, it operates as a type of "sleep mode." The radio stays on

the weather channel and mutes the speaker. If the radio detects an alert, it sounds an alert tone and turns the speaker back on. This mode is very useful when you are anchoring for the night but want to keep informed of hazards.

### WEATHER MODE WITH TRIPLE WATCH OR DUAL WATCH

If you activate Triple Watch (**MENU/RADIO SETUP/Dual/Tri Watch** menu or the **TRI** soft key) while operating in Weather mode, the radio checks the priority and second priority channels, then the current marine channel, and then the most recently used weather channel.

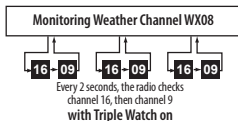

With Dual Watch activated (**MENU/RADIO SETUP/Dual/Tri Watch** menu) while in Weather mode, the radio checks the priority channel, the current marine channel, and then the most recently used weather channel.

## SETTING UP THE HARDWARE

### ATTACHING THE ANTENNA

The antenna detaches from the radio for easy shipping or storage. To attach the antenna to your radio, screw it tightly onto the anchor post at the top of the radio.

### INSTALLING THE BATTERY

Your radio comes with a rechargeable Lithium Ion battery; for shipping safety, the battery is not installed at the factory. The empty alkaline battery tray is installed as a placeholder.

1. Insert the hook on the battery into the notch at the top of the battery compartment.
2. Lower the battery until it rests flat in the compartment.
3. Bring the battery latch up and snap it into place.

### USING THE ALKALINE BATTERY TRAY

The radio also comes with an alkaline battery tray that holds four AAA-type alkaline batteries (not included). You can use alkaline batteries as a backup for the Li-Ion Polymer battery so you can still use your radio while your Li-Ion Polymer battery is recharging.

**CAUTION:** *If you are using your radio in a cold-weather environment, Uniden recommends using non-rechargeable Lithium batteries.*

**When using alkaline batteries, transmit power is limited to a maximum of 2.5W.**

Follow these steps to use the alkaline battery tray:

1. Hold the lower part of the tray in one hand with the three battery contacts facing down. Use your thumb to hold the notch on the lower part of the tray.

2. With your other hand, grip the upper part of the tray and lift the cover open.
3. Align the batteries' positive and negative terminals with the drawing on the tray and snap each battery into place.



4. Insert the two hooks on the lower part of the tray into the notches on the cover; close the cover. (The cover fits snugly but you should not have to force it closed.)
5. Install the alkaline battery tray in your radio just as you do the Li-Ion Polymer battery (see page E-15).



**WARNING!** The tray is designed to prevent the accidental charging of alkaline batteries. Never use alkaline batteries in the radio without the alkaline battery tray. Do not attempt to modify the battery tray design.

## CONNECTING POWER

Plug the AC or DC Power Adapter into the charger through a jack on the bottom of the charger.



## MOUNTING THE CHARGER

**Connect power to the charger before mounting the charger into position.**

You can mount the charger on any flat surface.

1. Use the two holes at the base of the charger as a template to mark the drill holes.
2. Using a 1/8-inch (or 3 mm) drill bit, drill two holes 1/2 inch (13mm) deep.
3. Use the provided screws to attach the charger to the surface.

**NOTE:** The charger must be mounted at least 2 feet (24 inches) from the compass to prevent magnetic interference with either device.

## Charging the Battery

Your radio includes a charger and a rechargeable battery pack. You can recharge the battery pack in the charger by itself or installed in the radio. Being able to charge the battery pack by itself is especially useful if you purchase a second rechargeable battery; you can always have a charged battery available.

### Charging the Radio with Battery Pack Installed

1. Insert the radio into the charger, making sure that it slots into the guide bars and the CHARGE LED on the charger turns red (charging).
2. The battery is fully charged when the LED turns green.

### Charging the Battery Pack Only

1. Unlatch the battery from the radio case. Remove it.
2. Insert the battery into the charger, making sure that the battery slots into the guide bars and the CHARGE LED on the charger turns red (charging).
3. The battery is fully charged when the LED turns green.



#### Cautions:

- Use only the battery and charger supplied with this radio. Using a different charger or battery can damage the radio and create a risk of fire or shock.
- The charger is not waterproof. If the charger falls into the water, unplug it before attempting to remove it from the water. After you remove the charger from the water, please contact Customer Service (see the back cover page for contact information).
- Wipe off dirt or shake water from your radio before placing in the charger if your radio gets dirty or wet.

### Important Notes on Charging the battery

- Charge the battery fully before using the radio.
- Don't use the charger when the ambient temperature is below 0° C (32° F) or above 45° C (113° F).
- If the radio is powered down, the battery can charge in about five hours. (If the radio is powered on, the battery takes longer to charge.)

## SETTING UP YOUR RADIO

### TURNING IT ON

Press the **POWER** key for at least two seconds until the UNIDEN splash screen displays. Release the **POWER** key. Press and hold it to turn the unit off.

### ENTERING THE USER MMSI

When you power up your radio for the first time, it displays *MMSI Not Entered* and then displays a Marine mode screen. User MMSI numbers are unique and cannot be entered more than once. See Page E-29 for general information about MMSI numbers and how to get your specific User MMSI number and enter it.

*If you must change your user MMSI, instructions are on the Uniden website ([www.uniden.com](http://www.uniden.com)).*

if you choose to not enter your specific MMSI number at initial start up, you can still use many of your radio's features. However, you cannot use DSC features.

## SETTING IT UP

Even though you can change your radio's settings at any time, you will probably want to establish initial settings when you turn it on for the first time. You can adjust some of these settings on an as-needed basis, but some settings might only be set once and not need adjustment at all.

### Acquiring GPS Location

The MHS335BT automatically acquires your current GPS location when it is turned on. Turn on the radio and point the antenna towards the sky. It will triangulate your location and save it.

**NOTE:** Do not let anything obstruct the antenna, such as a metal cabin ceiling. If the radio displays an Unable to Acquire message, move to an unobstructed location for the antenna.

### Changing the Volume


To change the speaker volume, press **VOL/SQ** to enter Volume Setting mode. Press ▲ to increase the volume or ▼ to decrease it (Volume levels = 0 - 15).

### Setting the Squelch Level

The MHS335BT recognizes signals as transmissions if they exceed a signal strength threshold. Adjusting the squelch sets this threshold level. Increasing squelch requires a signal to be stronger to be seen as a transmission. If you set the squelch too high, you will risk not receiving transmissions that are lower than that threshold. Reducing the squelch allows weaker signals to be accepted. However, if you lower the squelch too much, you will hear white noise all the time.

The squelch feature reduces static on the speaker by filtering out any background channel noise. At the lowest squelch level, the speaker plays all signals, including any channel noise. Setting the squelch level higher filters out noise and lets only actual radio transmissions through.

While listening to a channel, press and hold **VOL/SQ** to enter Squelch Setting mode. Press ▲ to increase the squelch or ▼ to decrease it (Squelch levels = 0 - 15). The following graphic shows squelch set high enough that only the strongest signals get through.

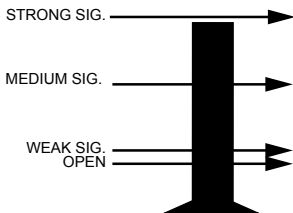



**NOTE:** Setting the squelch level too high may prevent you from hearing weaker transmissions. If you are having difficulty hearing a transmission, try setting the squelch level lower.

### Setting the UIC Channel Mode (USA/CAN/INTL)

You can select marine channels for the USA, Canada, or International waters.

1. Press **MENU**, then select **RADIO SETUP/Channel Mode**. The **CHANNEL MODE** screen displays.
2. Select **USA**, **CAN**, or **INTL** and select the **SELECT** soft key. The **RADIO SETUP** screen displays again.
3. Select **BACK** twice to return to the Idle screen.

### Setting Key Lock

You can lock the keypad through pressing and holding the /**LOCK** key. **KEY LOCK** displays if you press a key while keylock is on. Unlock it by pressing and holding the /**LOCK** key again. **UNLOCK** displays.

**NOTE:** Key Lock does not affect **PTT** or the **Distress** key. If **DISTRESS** is pressed, Key Lock turns off and **UNLOCK** displays.

### Setting WX Alert Mode

1. Press **MENU**, then select **RADIO SETUP/Weather Radio**.
2. Select **WX Alert**. The **WX ALERT** screen displays with the options to turn this alert on or off.
3. Select **ON**. The **WEATHER RADIO** screen displays again.
4. Select **BACK** to return to the **RADIO SETUP** screen.
5. Turn WX Alert off through these same menus.

### Setting FIPS Codes

FIPS codes identify counties in the United States. FIPS codes allow you to receive only the Specific Area Message Encoding (S.A.M.E.) alert occurring in a specific area. You can enter a maximum of 30 FIPS codes.

**NOTE:** For USA FIPS codes by state, see [http://www.nws.noaa.gov/mirs/public/prods/maps/cnty\\_fips\\_list.htm](http://www.nws.noaa.gov/mirs/public/prods/maps/cnty_fips_list.htm). For Canadian FIPS codes, see <https://www.ec.gc.ca/meteo-weather/default.asp?lang=En&n=E5A4F19C-1>.

1. Press **MENU** then select **RADIO SETUP/Weather Radio/S.A.M.E FIPS Code**.
2. Select **Add**. The **Add FIPS Code** screen displays.
3. Enter the FIPS codes for your area (find them on the websites mentioned previously) and select **STORE**. The **S.A.M.E.FIPS Code** screen displays again.

Edit and delete FIPS codes in a similar manner.

### Adjusting the Backlight

The backlight LCD function can be set to automatically dim after a set time.

1. Press **MENU** then select **GENERAL SETUP/Backlight**. The **Backlight** menu displays.
2. Select **Backlight Level** and press **▲** or **▼** to adjust the brightness (Off, 1 - 5).
3. Select **Backlight Timeout** and press **▲** or **▼** to set the length of time the backlight

stays on before turning off:

- 5 sec
  - 10 sec
  - 20 sec
  - 30 sec
  - Always On
4. After making a backlight timeout selection, choose **SELECT**. The **BACKLIGHT** screen displays again. Select **BACK** four times to return to the Idle screen,

### ***Adjust the LCD Contrast***

This feature lets you adjust the LCD's contrast level.

1. Press **MENU** then select **GENERAL SETUP/Contrast**. The **Contrast** screen displays.
2. Press **▲** or **▼** to select a contrast level (1 - 8, Default = 4) then choose **SELECT**. The **GENERAL SETUP** screen displays again.
3. Select **BACK** twice to return to the Idle screen.

### ***Turning the Key Beep On and Off***

Key beep is the tone that sounds when you press a key.

1. Press **MENU** then select **GENERAL SETUP/Key Beep**. The **KEY BEEP** screen displays.
2. Select **On (Default)** or **Off**. The **GENERAL SETUP** screen displays again.
3. Select **BACK** twice to return to the Idle screen.

## **OPERATING THE RADIO**

### ***Making a Transmission***

Select the channel you want to transmit on, then press and hold the **Push-to-Talk** key. Begin talking. Release the **Push-to-Talk** key when you're finished talking to let the other party respond.

- To prevent stuck microphone problems or situations where the **Push-to-Talk** key is pushed accidentally, the radio limits your talk time to 5 minutes in a single transmission.
- For the best sound quality, hold the microphone about two inches away from your mouth.

### ***Changing the Transmission Level***

In most situations, 1W transmission power is all you need. If you find yourself far away from other ships and have trouble getting a response, you may need to increase the transmission power.

To increase the transmission power in increments:

1. Select the channel you want to transmit on.
2. Select the **HILO** soft key to change the TX output power from 1W to 6W to 2.5W, then back again to 1W.
3. **1W**, **6W**, or **2.5W** displays. The transmit power remains at the new setting on that channel until you change it again.

**NOTE: If you try to change transmission power output but the channel is only 1W, the radio sounds an error tone and stays at 1W.**



Some channels (for example, channels 13 and 67) limit the transmission power to 1W. When you tune to a limited-power channel, the radio automatically switches to 1W.


### **Changing the Channel**

Press the ▲ or ▼ keys briefly to scroll through the channels one channel at a time. Press and hold the ▲ or ▼ keys to quickly scroll through the channels.




### **Saving the Channel into Memory**

1. When you are on a channel you want to save to memory, press ◀ or ▶ to scroll through the soft keys until you find the *MEM* soft key.
2. Select the *MEM* soft key. The channel you are on is saved to memory and the MEM icon displays
3. Select the *MEM* soft key when you are on a saved channel to delete that channel from memory.

### **Using the LED Light**

This feature turns on an LED light. If you press /LOCK twice, the radio turns on the high-intensity LED strobe on your radio. The LED flashes "S O S" in international Morse Code.

**NOTE:** *Your radio operates normally when the SOS strobe is activated.*

1. Press /LOCK twice. The LED turns on like a flashlight.
2. Press /LOCK again (three times). The LED blinks in a Morse code SOS pattern.
3. Press /LOCK again (four times). The LED goes off.

## **DIGITAL SELECTIVE CALLING FEATURES (DSC)**

### **WHAT IS DSC?**

Digital Selective Calling (DSC) is a standard that allows you to call other ships using their unique identification code (the Maritime Mobile Service Identity or MMSI number), just like you would call a phone number. To call another station, just enter that station's MMSI number and choose the voice channel you want to talk on. The radio uses channel 70 to transmit your MMSI number to the other station along with the voice channel you requested. If the other station accepts your call, both radios automatically switch to the requested voice channel so you can talk to the other station.

DSC provides a system for automated distress calls. At the touch of a key, the radio can transmit your MMSI number, the nature of your distress, and your current position based on data from your GPS receiver. The radio repeats the distress call every few minutes until it receives an acknowledgement.

The DSC standard dedicates a VHF channel—channel 70—to digital transmissions only. Since digital transmissions require less bandwidth voice transmissions, channel 70 avoids the problems of busy voice channels.

### **MMSI NUMBERS**

In order to use DSC features, you must be assigned an individual User MMSI number and program that number into your radio.

You can get more information on MMSI numbers at these resources:

- The dealer where you purchased the radio
- Recreational boaters can obtain an individual MMSI number from the Boat Owner's Association of the U.S. (<http://www.boatus.com/mmsi/> or call 800-563-1536) or Sea Tow Services International ([http://seatow.com/boating\\_safety/mmsi.asp](http://seatow.com/boating_safety/mmsi.asp))
- Commercial boaters need a ship station license to get an MMSI number. For more information, visit the Federal Communications Commission (FCC) website at <http://wireless.fcc.gov/marine/fctst14.html>.

## Entering MMSI Numbers

When you turn your MHS335BT on for the first time, you have the option of entering your MMSI number at that point. If you choose not to enter your MMSI number then, you will still be able to use your radio; however, you will not be able to use any DSC features.

### ENTERING YOUR USER MMSI NUMBER

**NOTE:** Be sure you have the correct User MMSI number before entering it in the radio. The radio only allows you to enter the User MMSI once. If you need to re-enter the User MMSI number, visit <http://support.uniden.com/marine-radios/> for assistance.

1. Press **MENU** then select **DSC SETUP/Enter Radio MMSI**. The **Enter MMSI Number** screen displays.
2. Enter the MMSI number using the **▲** and **▼** keys. Select **NEXT** to enter the MMSI number again to confirm.
3. Select **FINISH** to save the MMSI number. The radio displays the Idle screen.

## USING THE DIRECTORIES

The directories lets you store up to 80 individual MMSI numbers of other ships and 20 group MMSI numbers. From the directories, you can add, edit or delete MMSI numbers.

### Individual Directory

#### ADD

1. Press **MENU** then select **DSC SETUP/Individual Directory/ADD**. The **INDIVIDUAL DIRECTORY** screen displays.
2. Select **ADD**, then **NAME**; choose **SELECT**.
3. A pop-up keyboard displays (see page E-8). Use the directional arrows to navigate through the keyboard. Choose **SELECT** after each letter.

When the name is complete, select **FINISH**. The **INDIVIDUAL DIRECTORY** screen displays again. Select **MMSI** and choose **SELECT**.

4. Use **▲** and **▼** to enter the MMSI number. Choose **SELECT** after each character. When the ninth digit is correct, select **FINISH**.
5. The radio displays the new MMSI number and name and asks you to confirm. To save this MMSI number and name, select **SAVE**. To cancel this MMSI number entry, select **DELETE**.

## **EDIT**

1. Press **MENU** then select *DSC SETUP/Individual Directory/EDIT*. The *INDIVIDUAL DIRECTORY* screen displays with a list of all the names entered into the directory.
2. Select a name and choose *SELECT*.
3. The name and MMSI number display. Select which item you want to edit and choose *SELECT*.
4. Either a popup keyboard displays to edit the name or the MMSI number displays. When you've finished editing, save your edits.

## **DELETE**

1. Press **MENU** then select *DSC SETUP/Individual Directory/DELETE*. The *INDIVIDUAL DIRECTORY* screen displays a list of all the names entered into the directory.
2. Select a name and choose *SELECT*.
3. The entry is deleted.

## **Group Directory**

### **ADD**

Unlike the user MMSI number, you don't have to get a group MMSI number from a specific organization. The first digit of a group MMSI is fixed at "0;" otherwise, you can create a number yourself. (If you are part of a boating club, for example, your club's leadership may have a list of approved group MMSI numbers to use.) You can also change the group MMSI number as often as you want.

1. Press **MENU** then select *DSC SETUP/Group Directory/ADD*. The *GROUP DIRECTORY* screen displays.
2. Select *ADD*. Enter the group name and the Group MMSI number. Group MMSI numbers always start with a 0, so that digit is already entered for you.
3. Choose *SELECT*. The radio asks you to confirm.
4. To save this MMSI number, choose *SELECT*. To cancel this MMSI number, select *DELETE*.

### **EDIT**

1. Press **MENU** then select *DSC SETUP/Group Directory/EDIT*. The *GROUP DIRECTORY* screen displays with a list of all the groups entered into the directory.
2. Select a group and choose *SELECT*.
3. The group's name and MMSI number display. Select which item you want to edit and choose *SELECT*.
4. Either a popup keyboard displays to edit the group name or the MMSI number displays. When you've finished editing, save your edits.

## DELETE

1. Press **MENU** then select *DSC SETUP/Group Directory/DELETE*. The *GROUP DIRECTORY* screen displays a list of all the groups entered into the directory.
2. Select a group name and choose **SELECT**.
3. The group entry is deleted.


## MAKING DSC CALLS

There are essentially four different types of DSC voice calls:

Call type	What it does	When to use it
Distress	Alerts all ships that you need assistance and sends them your current position.	In an emergency only.
Individual	Calls a single station using the User MMSI.	When you want to talk to another station.
Group	Calls all the ships that have the same Group MMSI as yours.	Any time you want to talk with the whole group you are traveling with at the same time.
All Ships	Calls all ships within range of your radio.	Safety warnings (e.g., debris in the water) or any urgent situation.

Suppose you are coordinating safety for a sailboat race. Before the race starts, you instruct all the racers to enter your group MMSI number into their radios. During the race:

- Throughout the race, you use group calling to update the racers on the time, race status, and any course corrections.
- A power boat full of spectators comes too close to the race path. You use individual calling to contact the power boat and advise them to stay clear of the race.
- You see a rowboat entering the area, but since it doesn't have a radio, you can't communicate with the rowboat. You use all ships calling to alert all the other ships in the area of the possible danger.

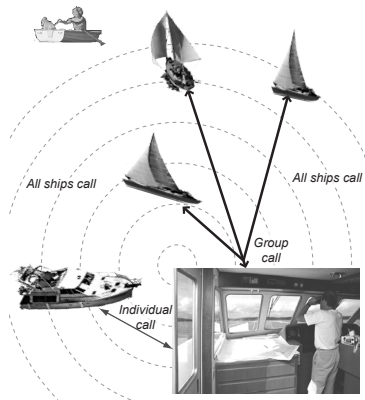

### **Calling a single station (Individual Call)**

To call a single station with DSC, follow these steps:

1. Scroll through soft keys to select **CALL** soft key. **CALL** menu displays.
2. The radio displays the ships listed in your Individual Directory (see page E-30). Select the ship you want to call and choose **SELECT**.
3. The radio displays the ship you selected to transmit to and the transmission channel. Select **SEND**.
4. The radio displays the ship called and the elapsed time since the call was transmitted.
5. The radio automatically switches to channel 70 to transmit the call request.
  - When the other station accepts the call, both radios switch to the selected response channel for voice transmission.
  - If the other station did not respond on the channel you selected, you can select **RESEND** or **BACK**.

### **Calling a particular group of ships (Group Call)**

Group calling calls all the ships that share your group MMSI. You must have a group MMSI programmed into the radio to make a group call, and the ships you are calling must have this same group MMSI programmed into their radios in the group directory (see page E-31).

1. Scroll through soft keys to select **CALL** soft key. **CALL** menu displays.
2. Select **GROUP CALL**.
3. A list of groups displays (see page E-31 to create groups). Press ▲ and ▼ to scroll through the list and select the group to call.

4. The next **GROUP CALL** screen shows the group and what channel you're transmitting to. After selecting **SEND**, the radio switches to channel 70 to transmit the call request and the screen displays a random countdown clock as it waits for an acknowledgement.
5. After the countdown clock ends, you can either resend the group call, go back to the Idle screen, or let the radio generate another countdown clock.
6. After the radio receives an acknowledgement, it automatically switches to the designated response channel.

### **Calling all ships (All-Ships Call)**

All ships calling contacts all DSC radios within range of your ship. You should only use all ships calling in the event of a Safety warning (such as debris in the water) or to request assistance in an Urgency (any situation where your ship has a serious problem but is not yet in distress).

1. Scroll through soft keys to select **CALL** soft key. **CALL** menu displays.
2. Select **ALL SHIPS**. The **ALL SHIPS CALL** screen displays, showing two options: **SAFETY** and **URGENCY**.
3. Select either option and then enter the channel to transmit on. Select **SEND**.
4. The next screen displays the type of ALL SHIPS CALL sent, the channel the call was sent on, and a random countdown clock.
5. After the countdown clock ends, you can either resend the group call, go back to the Idle screen, or let the radio generate another countdown clock.
6. After the radio receives an acknowledgement, it automatically switches to the designated response channel.

## **MAKING AN AUTOMATIC DISTRESS CALL**

After you have programmed your MMSI number, your radio can transmit an automated distress call on channel 16 at 6W with your current location and nature of the distress. The Distress Alert alarm sounds and the radio then monitors channel 16 for a response and repeats the distress call every few minutes until it receives an acknowledgement.

1. If you have not already selected a distress message type (see page E-10), go to **MENU/DISTRESS MESSAGE**. Select the nature of the alert from the list. The screen returns to the Main menu.

Undesignated	Sinking	Fire, Explosion	Man Overboard
Adrift	Flooding	Abandoning Ship	Capsizing
Collision	Piracy	Grounding	

2. Press and hold the **DISTRESS** key on the side of the radio for about 3 seconds. The Distress Alert alarm sounds and the radio acquires GPS location if needed. After 10 seconds, the radio transmits the distress call, starts a random countdown timer, and waits for an acknowledgement.
3. After the timer counts down, another random countdown timer begins unless you take action Pause, Cancel, or Manually Resend).

**NOTE:** If no MMSI number has been programmed, the radio prompts you to enter your MMSI number.

### ***Canceling an automatic distress call***

While the radio is waiting for a response, it gives you the option of canceling the call. To cancel the distress call, select the **CANCEL** soft key. A confirmation screen displays; select the **YES** soft key.

### ***Resending an automatic distress call***

Select the **RESEND** soft key.

### ***Receiving an automatic distress call acknowledgement***

Once you receive an acknowledgement that the distress call was received, you must manually mute the acknowledgement alarm. Select the **MUTE** soft key.

### ***Receiving a distress call***

When you receive a distress call, the Receiving DSC Distress Call alarm sounds. Press any key to silence the alarm.

**NOTE: This radio does not have the ability to acknowledge a distress call. Only the Coast Guard or an authorized Search and Rescue agency can acknowledge a DSC distress call.**

The soft keys change to **QUIT** (return to the Idle screen), **PAUSE**, and **INFO** (view longitude, latitude, and time sent information).

## **DSC CALLS**

### ***Individual DSC Call***

If your radio receives an individual DSC call from another station, it sounds an incoming call alarm and displays the MMSI number of the station calling you.

Press any key to stop the alarm. The soft keys change to **QUIT** (return to the Idle screen), **PAUSE**, and **INFO** (view longitude, latitude, and time sent information).

1. After you silence the alarm and the soft keys change. Select the **PAUSE/CONT** soft keys. The **INDIVIDUAL RECEIVE** screen displays.
2. This screen displays a channel option. Select the **ABLE** soft key to propose a different channel or **UNABLE** to send an **UNABLE TO COMPLY** message and return to the Idle screen.
3. After selecting **ABLE**, the **SELECT CHANNEL** screen displays a list of available channels. Scroll to one and choose **SELECT**.
4. The **INDIVIDUAL RECEIVE** screen displays. Select the **CONT** soft key.
5. The radio sends the **ABLE TO COMPLY** message and switches to the working channel.

### ***Group DSC Call***

If your radio receives a group DSC call from another station, it sounds an incoming group call alarm and displays the name/MMSI number of the group calling you.

1. Press any key to stop the alarm.
2. The soft keys change to **QUIT** (return to the Idle screen), **PAUSE**, and **INFO** (view longitude, latitude, and time sent information). The radio also changes to the requested working channel.

## Answer a DSC Call

1. After you silence the alarm and the soft keys change, select the *PAUSE then CONT* soft keys. The *INDIVIDUAL RECEIVE* screen displays.
2. This screen displays a channel option. Select the *ABLE* soft key to propose a different channel or *UNABLE* to send an Unable to Comply message and return to the Idle screen.
3. After selecting *ABLE*, the *SELECT CHANNEL* screen displays a list of available channels. Scroll to one and choose *SELECT*.
4. The *INDIVIDUAL RECEIVE* screen displays. Select the *CONT* soft key.
5. The radio sends the *ABLE TO COMPLY* message and switches to the working channel.

## DSC Call Logs

Your radio keeps track of the calls you send and receive. The DSC logs are useful if you have been off your ship or away from your radio and want to see who has tried to contact you. The radio displays the last 50 transmitted calls and the last 50 received calls that it received. If you have unread incoming DSC calls, the radio displays a Message icon. When you display all Distress and Other receiving logs, the message icon disappears.

1. Select the *CALL* soft key, then the *DSC LOG*. Three call logs display: *TRANSMITTED LOG*, *RECEIVED LOG*, and *DELETE LOG*.
2. Select *TRANSMITTED LOG* to see the last 50 calls transmitted by the radio. Select *RECEIVED LOG* to see the last 50 calls received by the radio. Select *DELETE LOG* to delete entries in a specific log.
3. Calls are listed in the order they were received, with the newest call shown first. The display blinks if there are new calls you have not reviewed. The *Message* icon also displays.
4. Select the call you want to see the details of and use ▲ and ▼ to see all of the information for that call. The log displays different information depending on type of call received.

DSC Call Type	Receive Log Information
Distress	MMSI (or name), position, time, nature code.
Distress Acknowledge	MMSI (or name), distress MMSI, position, time, nature code.
All Ships	MMSI (or name), category code, communication channel number.
Group	MMSI (or name), category code, communication channel number.
Individual	MMSI (or name), category code, communication channel number.
Individual Acknowledge	MMSI (or name), Completed/Unattended, category code, communication channel number.



DSC Call Type	Receive Log Information
Test	MMSI (or name), category code.
Test Acknowledge	MMSI (or name), category code.
Pos Reply	MMSI (or name), position, time, category code.
Pos Request	MMSI (or name), category code.
Pos Send	MMSI (or name), position, time, category code.

- From the log menu, select *EXIT* to close the *RECEIVE LOG* screen and return to the previous mode.

### ***Making or Returning a Call***

- From the *CALL* soft key, select *DSC LOG*.
- Select either *TRANSMITTED LOG* or *RECEIVED LOG*. A list of calls displays.
- Scroll up or down to select a call. The *VIEW LOG* displays the call details.
- Select *CALL* from the *VIEW LOG* soft keys.

## **TEST CALLS**

### ***Making Test Calls (Test)***

***NOTE: You can use the test call feature to make sure your radio is working and configured correctly. To avoid overloading coastal receiving stations, you should limit test calls to these stations to once a week.***

***NOTE: Many coastal stations have specific frequencies and MMSI numbers you should use for making test calls. Before making a test call to a coastal station, be sure to check the Local Notice to Mariners (LNM), issued every week by the US Coast Guard. The LNM's for each region are available online at <http://www.navcen.uscg.gov/?pageName=lnmMain>.***

- Select *CALL* from the soft keys. The *CALL* screen displays.
- Scroll to *TEST CALL* and choose *SELECT*. The list of ships from the Individual Directory displays.
- Select a ship. The next screen, *TEST CALL*, displays the name of the ship you just selected; select *SEND*.
- A *WAITING FOR ACK* message displays on the *Test call* screen.
- If you do not receive an acknowledgement, either resend the transmission or select *BACK* to return to the Idle screen.

### ***Receiving Test Call Setup***

When another station sends you a test call, you can select options to answer the test call manually or have the radio answer automatically.

- Press ***MENU*** to display the menu options.
- Select *DSC SETUP/DSC Alarm Setup/Test Call* and choose *SELECT*.
- Select *On* for the radio to automatically send an acknowledgement when it receives a test call. Select *Off* to answer the call manually.
- The screen returns to the *DSC ALARM SETUP* menu.

## POSITION REQUEST AND REPLY

### Enabling Automatic Position Reply

If you want the radio to automatically transmit your current position whenever it receives a position request, you can enable automatic position reply. Most boaters activate automatic position reply for safety reasons or because they subscribe to a marine towing service. Sometimes—for example, in some competitive situations—you may not want other ships to get your position without your manual confirmation.

1. Press **MENU** then select **DSC SETUP/Individual Reply**. The screen displays *Individual Call ACK, Position Request ACK, and Test Call Ack options*.
2. Select either *Auto* or *Manual* for either option and then choose **SELECT**.

### POS Request

Any time you need to know where another ship currently is—to find your boating partners, to respond to a request for assistance, etc.—you can send a position request to their radio:

1. Select **CALL** soft key. The **CALL** screen displays.
2. Select **POSITION REQUEST**. The **POSITION REQUEST** screen displays the list of ships you entered into the Individual directory.
3. Select a ship and choose **SELECT**. A Position Request screen displays for confirmation. Select **SEND**.
4. The radio sends out a position request to that ship and waits for acknowledgement.
5. If you do not receive an acknowledgement, select **BACK** to return to the Idle screen.

### Position Send

If you are requesting assistance, using an all ships call to give a safety warning, or have received a Position Request, you can send your current position so other ships know where you are:

1. Select **CALL** soft key. The **CALL** screen displays.
2. Select **POSITION SEND**.
3. The radio displays the names listed in your directory; use ▲ and ▼ to choose the ship you want to contact and choose **SELECT**. If you want to contact a station that is not in your directory, select *Manual*.
4. The radio prompts you to enter the MMSI number you want to call. Enter the MMSI number the same way you enter directory entries (see page 22). Enter all nine digits and choose **SELECT**.
5. The radio displays the name and MMSI number of the station you are about to contact along with your current position information. Select **SEND**. To cancel the transmission, select **BACK**.
6. The radio transmits your current position information to the other station.

If you have unread incoming DSC calls, the radio displays a message icon. You can review who has called through the DSC logs. The radio displays the last 50 transmitted calls and the last 50 received calls (see page E-36).

## AUTO POLLING

Auto Polling lets you request an automatic position update from up to 7 individuals. You can also send your position automatically to up to 7 individuals.

1. Go to *DSC Setup/Auto Pos Polling* and select *Auto Pos Request* (to request positions from other individuals) or *Auto Pos Report* (to report your position to other individuals.)
2. Go to *DSC Setup/Auto Polling Time* and select how often the radio requests or reports the information.
  - 30 sec
  - 1 min
  - 2 min
  - 3 min
  - 5 min
3. Select the *CALL* soft key and select *Auto Polling*. Choose *Selected ID*. A blank list for your selected contacts displays.
4. Select an blank row. Your Contact List displays the individual contacts previously entered (see page E-32). Scroll through the list and select a contact.
5. The Selected ID list displays again with that contact.
6. Repeat these procedures for up to 7 contacts.
7. Select *BACK* and then select *Activation*.
8. Select *Start* to begin or *Stop* to end auto polling.

***A down arrow (↓) displays on the main screen when receiving polling information. An up arrow (↑) displays when sending polling information***

## GPS FEATURES

### GPS OPERATION OVERVIEW

Your GPS system provides more than just your specific location. The *MOB* (Man Overboard) soft key (see page E-13) lets you immediately save your current position so rescuers can converge on that exact man overboard location. The *Favorites* menus let you create a directory of favorite places and their coordinates so you can easily return there. Using the GPS setup menus, you can determine power-saving options, measurement increments, and time settings.

The radio is factory-preset to search for your geographic location when it is turned on for the first time.

### GPS MENU

The GPS menu options are:

MENU OPTION	DESCRIPTION
GPS Signal Coverage	Displays latitude, longitude, and time as well as a map of active satellites within range. (Active satellites display as black dots; inactive satellites display as white dots.)
GPS Satellite Signal	Displays a list of satellite numbers and signal strength.

MENU OPTION	DESCRIPTION
Battery Save	Select what percentage of your battery power should be saved. <ul style="list-style-type: none"> <li>- Auto (Default - the radio decides how to reserve power (for example, minimize background tasks/checks)</li> <li>- 40%</li> <li>- 50%</li> <li>- 70%</li> <li>- 90%</li> </ul>
Time Offset	Select length of time (in half-hour increments) to offset the time set on the radio.
Time Display	Area: Choose between local time or UTC (UCT/GMT) Format: Choose 12-hour or 24-hour style
Daylight Saving Time	Set Daylight Savings Time: On/Off
Direction	Choose Course Up (oriented by your course direction) or North Up (oriented to compass north).
Location Accuracy	Location in degrees (DDD), minutes (mm), and seconds (ss).
D-GPS	D-GPS is a means of correcting GPS variances. Turn D-GPS off in the southern hemisphere.
Units of Measure	Set Speed (Knots, MPH, or KM/H), Distance (Nautical Mile, Staute Mile, or Kilometer), or Altitude (Feet or Meter) as the radio's unit of measure.
NMEA Output	Select the NMEA output (see page E-40).
Stationary Position	Turn stationary positioning on or off.

## NMEA FEATURES

Your radio supports NMEA 0183 (version 4.10), a standard for data communication between marine instruments.

NMEA sentences contain different sets of data related to your ship. The MHS335BT supports the following sentences:

DATA	RMC	GLL	GGA	GSV	GSA
UTC Time	O	O	O	X	X
Status (Valid/Invalid)	O	O	O	X	X
Latitude/Longitude	O	O	O	X	X

DATA	RMC	GLL	GGA	GSV	GSA
Speed	O	X	X	X	X
Course	O	X	X	X	X
Date	O	X	X	X	X

X = Data Not Provided

O = Data Provided

### Chartplotter Connection



Connect to Chartplotter

If you have difficulty getting your chartplotter to receive data from your radio, check the chartplotter's configuration. It should be set to the following parameters:

Baud rate	4800 bps
Data bits	8
Parity	None
Stop bits	1
Data amplitude	Over 3.0 V
Drive capability	Over 10 mA

### NMEA Output

When the radio receives a DSC call (Distress, Position Reply, or Position Send), it outputs a DSC/DSE sentences from the NMEA output port in the following formats:

- \$CDDSC,12,3081234000,,07,00,0354013946,0657,,,S,E\*6D
- \$CDDSE,1,1,A,3081234000,00,60875646\*13

## ADDITIONAL FEATURES

### RENAMING CHANNELS

If you discover that a marine radio channel has a different common name in your local area, you can change the name of that channel to make it easier for you to use (see the channel lists beginning on page E-45 for the default channel names). To rename a channel, follow the steps below:

1. Press **MENU** and select **RADIO SETUP/Channel Name**. The screen displays the list of channels with their names.
2. Press **▲** or **▼** to select the channel you want to change and then select **RENAME**.

3. A popup keyboard displays. Enter a new name. When you have entered the name, select *FINISH*.
4. The channel list displays again with the new name.
5. When you are satisfied with the channel list, select *BACK* to return to the Idle screen.

## UNIDEN MARINE APP

Uniden's Marine Radio app lets you configure your MHS335BT and send text messages from your mobile device. The app is available for iOS and Android. Go to the Apple App store, Google Play, or Amazon to download this free app.

## MAINTENANCE AND TROUBLESHOOTING

Due to its rugged design, your radio requires very little maintenance. However, it is a precision electronic instrument, so you should follow a few precautions:

- If the antenna has been damaged, do not transmit except in an emergency situation. Doing so may cause further radio damage.
- You are responsible for continued FCC technical compliance of your radio.
- Arrange for periodic performance checks with your Uniden dealer.

Problem	Things to Try
The radio won't turn on.	<ul style="list-style-type: none"> <li>- Verify that the battery is installed correctly.</li> <li>- Charge the radio.</li> </ul>
The power LED on the charger doesn't turn on.	<ul style="list-style-type: none"> <li>- Don't use the charger when the ambient temperature is below 0° C (32° F) or above 45° C (113° F).</li> <li>- Make sure the charging contacts on the radio and charger are clean.</li> <li>- Replace the battery.</li> </ul>
The radio won't transmit.	<ul style="list-style-type: none"> <li>- Make sure you are not in Weather or Scan mode.</li> <li>- Make sure you are not trying to transmit on a receive-only channel or transmit at the wrong power level for this channel (see the channel lists starting on page E-45).</li> <li>- Check the battery power level; if it's low, charge the battery before trying to transmit.</li> <li>- Make sure the duration of each transmission is less than 5 minutes.</li> <li>- Try transmitting on a different channel.</li> </ul>
I can't hear anything from the speaker.	<ul style="list-style-type: none"> <li>- Adjust the squelch level; it is probably too high.</li> <li>- Adjust the volume level; it is probably too low.</li> <li>- If the radio has been exposed to water, there may be water on the speaker. Remove the water and allow the radio to dry out.</li> </ul>
Noise comes out of the speaker all the time	Adjust the squelch level; it is probably too low.

Problem	Things to Try
I can transmit, but no one can hear me.	Check your UIC channel settings: does the area you are in use different channel assignments?
I'm not getting hazard alerts.	Make sure Weather Alert Watch is turned on.
The display flashes, and I don't know why.	The channel number on the display will flash if the radio is in a Watch mode or in Scan mode. Try turning off scanning, Weather Alert Watch, Triple Watch, or Dual Watch beginning on Page E-20.
Scan won't start.	Be sure you have channels saved into Favorites.
No beeps sound.	Key beep is set to OFF. Turn Key Beep on.
I cannot send DSC calls.	<ul style="list-style-type: none"> <li>- Make sure the MMSI (DSC self ID) is entered.</li> <li>- Turn ON the DSC Switch in the menus.</li> </ul>
I cannot receive GPS position data.	Reposition the radio so that nothing blocks the antenna from the satellite signal.
Where can I find my radio's serial number?	The serial number is on a plate inside the battery compartment.
When I turn on the radio, I get a message that "positioning data is not acquired."	Be sure there are no obstructions between the radio's antenna and the sky. If you are inside the cabin, move outside.

## SPECIFICATIONS

General	
Channels	All US/International/Canada marine channels
	10 Weather channels
Freq. Control	PLL
Freq. Tol.	Transmit: 1.5 PPM (at 77°F/25°C)
	Receive: 1.5 PPM (at 77°F/25°C)
Oper. Temp.	-4°F (-20°C) to +122°F(+50°C)
Antenna	Flexible Whip
Microphone	Built-in Electret type
Display	Liquid Crystal Display
Speaker	16Ω 1.0 W
Power Source	Rechargeable Lithium Ion Battery 7.4V 1800 mAh

Size (without antenna, and belt clip)	6.122 (H) x 2.562 (W) x 1.633 (D) inch 155.5 (H) x 65.1 (W) x 41.5 (D) mm
Size (with antenna and belt clip)	11.791 (H) x 2.562 (W) x 2.173 (D) inch 299.5 (H) x 65.1 (W) x 55.2 (D) mm
Weight (without battery, antenna, and belt clip)	6.673 oz (189.2g)
Weight (with battery, antenna, and belt clip)	10.945 oz (310.3g)
Battery Weight	3.135 oz (88.9g)
Antenna Weight	0.686 oz (19.46g)
Belt Clip Weight	0.449 oz (12.75g)
<b>Transmitter</b>	
Frequency Range	156~158 MHz
Frequency Stability	±2.5 PPM max
Power Output	1W, 2.5W, and 6W
Spurious Emissions	-30 dBm @ HI; -30 dBm @ LO (nominal)
Current Drain	1.5 A (6W)
<b>Receiver</b>	
Type	Double Conversion Super Heterodyne Phase Locked Loop system for Local Oscillator
Frequency Range	156~164 MHz
Sensitivity	0.24 µV for 12dB SINAD
Squelch Sensitivity	Threshold 0.2µV
Audio Frequency Response	+5.5 dB @ 500 Hz; -6 dB @ 2000Hz
Adjacent Channel Selectivity	73 dB @ ±25 kHz
Audio Output Power	≥0.8 W @MAX VOLUME
Current Drain	Squelched: 90mA; Max. Audio: 350mA

## REFERENCE TABLES

### *Channel Descriptions and What They Mean*

The table below lists the display name or channel description used in the following tables and what each description means.

Channel name/description	Used for
DISTRESS SAFETY AND CALLING	primarily emergency messages and distress calls
INTERSHIP SAFETY	safety messages from one ship to another, or from a ship to Coast Guard aircraft



Channel name/description	Used for
NON-COMMERCIAL (recreational or voluntary ships only)	messages about the needs of the ship, including fishing reports, rendezvous, scheduling repairs and berthing information
COMMERCIAL (working ships only)	messages about the needs of the ship or the business the ship is engaged in
PUBLIC CORRESPONDENCE/ MARINE OPERATOR	calls to the marine operator at a public coast station. Marine operators can connect you to the telephone network so you can make and receive calls. (There is usually a charge for this service.)
PORT OPERATIONS/VTs (ship traffic system)	messages about the movement and safety of ships in or near ports, locks or waterways. In certain major ports, some channels may be restricted to specific types of port operations messages.
NAVIGATIONAL/BRIDGE TO BRIDGE	messages about ship navigation, for example, passing or meeting other ships, maneuvering through locks, or navigating around drawbridges. Messages must be short!
STATE CONTROL	messages about government regulation and control, boating activities, or assistance to ships; also used to talk to ships and coastal stations operated by state or local governments
DIGITAL SELECTIVE CALLING	DSC signals only (no voice communications allowed at any time)

## MARINE RADIO CHANNEL CHART

Ch No.	U	I	C	TX	RX	S/D	Channel Type/Name
01		x	x	156.050	160.650	D	Marine Operator
1001	x			156.050	156.050	S	Vessel Traffic System/Commercial
02		x	x	156.100	160.700	D	Marine Operator
03		x	x	156.150	160.750	D	Marine Operator
1003	x			156.150	156.150	S	US Gov't only; Coast Guard
04		x		156.200	160.800	D	Marine Operator
04A			x	156.200	156.200	S	Canadian Coast Guard
05		x		156.250	160.850	D	Marine Operator

Ch No.	U	I	C	TX	RX	S/D	Channel Type/Name
05A			x	156.250	156.250	S	Vessel Traffic System
1005	x			156.250	156.250	S	Vessel Traffic System/Commercial
06	x	x	x	156.300	156.300	S	Inter-ship safety
07		x		156.350	160.950	D	Marine Operator
7A			x	156.350	156.350	S	Commercial
1007	x			156.350	156.350	S	Commercial
08	x	x	x	156.400	156.400	S	Commercial (International: Inter-Ship)
09	x	x	x	156.450	156.450	S	INT and CAN: Boater Calling Channel US: Non-Commercial
10	x	x	x	156.500	156.500	S	Commercial
11	x	x	x	156.550	156.550	S	Vessel Traffic System
12	x	x	x	156.600	156.600	S	Vessel Traffic System
13	x	x	x	156.650	156.650	S	Bridge to Bridge US and CAN: 1W
14	x	x	x	156.700	156.700	S	Vessel Traffic System
15	x			Inhibit	156.750	Receive Only	Environmental
15		x	x	156.750	156.750	S	Environmental INT and CAN: 1W
16	x	x	x	156.800	156.800	S	Distress, Safety, Calling
17	x	x	x	156.850	156.850	S	Government Maritime Control CAN: State Control
18		x		156.900	161.500	D	Port Operation
18A			x	156.900	156.900	S	Commercial
1018	x			156.900	156.900	S	Commercial
19		x		156.950	161.550	D	Port Operation, Ship Movement
19A			x	156.950	156.950	S	Canadian Coast Guard
1019	x	x		156.950	156.950	S	Commercial
2019		x		161.550	161.550	S	

Ch No.	U	I	C	TX	RX	S/D	Channel Type/Name
20	x	x	x	157.000	161.600	D	Port Operations CAN: 1 Watt Only
1020	x	x		157.000	157.000	S	Port Operations
2020		x		161.600	161.600	S	
21		x		157.050	161.650	D	Port Operations
21A			x	157.050	157.050	S	Canadian Coast Guard
21B*			x	INHIBIT	161.650	S	Continuous Marine Broadcast (CMB) Service
1021	x			157.050	157.050	S	Coast Guard Only
22		x		157.100	161.700	D	Port Operations, Ship Movement
22A			x	157.100	157.100	S	Canadian Coast Guard Liaison and Airtime Safety Information Broadcasts Announced on Channel 16
1022	x			157.100	157.100	S	US Coast Guard Liaison and Airtime Safety Information Broadcasts Announced on Channel 16
23		x	x	157.150	161.750	D	Marine Operator
23B*			x	INHIBIT	161.750	S	MB Service
1023	x			157.150	157.150	S	US Coast Guard Only
24	x	x	x	157.200	161.800	D	Marine Operator
25	x	x	x	157.250	161.850	D	Marine Operator
25B*			x	INHIBIT	161.850	S	CMB Service
26	x	x	x	157.300	161.900	D	Marine Operator
27	x	x	x	157.350	161.950	D	Marine Operator
28	x	x	x	157.400	162.000	D	Marine Operator
28B*			x	INHIBIT	162.000	S	CMB Service
60		x	x	156.025	160.625	D	Marine Operator
61		x		156.075	160.675	D	Marine Operator

Ch No.	U	I	C	TX	RX	S/D	Channel Type/Name
61A			x	156.075	156.075	S	Canadian Coast Guard
1061	x			156.075	156.075	S	Public Coast: Coast Guard East Coast: Commercial Fishing Only
62		x		156.125	160.725	D	Marine Operator
62A			x	156.125	156.125	S	Canadian Coast Guard
63		x		156.175	160.775	D	Marine Operator
63A			x	156.175	156.175	S	Port Operations
1063	x			156.175	156.175	S	VTS
64		x	x	156.225	160.825	D	Marine Operator
64A			x	156.225	156.225	S	Port Operation
1064	x			156.225	156.225	S	Marine Operator Port Operation, Ship Movement
65		x		156.275	160.875	D	Marine Operator
65A			x	156.275	156.275	S	Port Operations
1065	x			156.275	156.275	S	Port Operation
66		x		156.325	160.925	D	Marine Operator
66A			x	156.325	156.325	S	Port Operations Canada: 1 Watt Only
1066	x			156.325	156.325	S	Port Operations
67	x	x	x	156.375	156.375	S	Bridge-to-Bridge International: Port Operations
68	x	x	x	156.425	156.425	S	Non -Commercial
69	x	x	x	156.475	156.475	S	Non-Commercial
70	x	x	x	Inhibit	156.5250	DCS Only	DSC
71	x	x	x	156.575	156.575	S	Non-Commercial
72	x	x	x	156.625	156.625	S	Non-Commercial US: Non-Commercial, Ship-to-Ship
73	x	x	x	156.675	156.675	S	Port Operations
74	x	x	x	156.725	156.725	S	Port Operations

Ch No.	U	I	C	TX	RX	S/D	Channel Type/Name
75	x	x	x	156.775	156.775	S	Port Operations (1 Watt Only)
76	x	x	x	156.825	156.825	S	Port Operations (1 Watt Only)
77	x	x	x	156.875	156.875	S	Port Operations US and INT: Ship to Ship US and CAN: 1 Watt Only
78		x		156.925	161.525	D	Port Operations
78A			x	156.925	156.925	S	Non-Commercial, Inter-Ship
1078	x	x		156.925	156.925	S	Non-Commercial
2078		x		161.525	161.525	S	
79		x		156.975	161.575	D	Port Operations
79A			x	156.975	156.975	S	Inter-Ship
1079	x	x		156.975	156.975	S	Commercial
2079		x		161.575	161.575	S	
80		x		157.025	161.625	D	Port Operations
80A			x	157.025	157.025	S	Inter-Ship
1080	x			157.025	157.025	S	Commercial
81		x		157.075	161.675	D	Port Operations
81A			x	157.075	157.075	S	Canadian Coast Guard
1081	x			157.075	157.075	D	Government
82		x		157.125	161.725	D	Port Operations
82A			x	157.125	157.125	S	Canadian Coast Guard
1082	x			157.125	157.125	S	Government
83		x		157.175	161.775	D	Port Operations
83A			x	157.175	157.175	D	Canadian Coast Guard
83B*			x	INHIBIT	161.775	S	Canadian CG Continuous Marine Broadcast (CMB) Service
1083	x			157.175	157.175	S	Coast Guard
84	x	x	x	157.225	161.825	D	Marine Operator
85	x	x	x	157.275	161.875	D	Marine Operator
86	x	x	x	157.325	161.925	S	Marine Operator
87	x	x	x	157.375	157.375	S	Marine Operator

Ch No.	U	I	C	TX	RX	S/D	Channel Type/Name
88	x	x	x	157.425	157.425	S	U: Commercial (Ship-to-ship) I: Marine Operator C: Port Operation
* = New Channel, Continuous Marine Broadcast (CMB) Service							

## WEATHER CHANNELS AND FREQUENCIES (US, CAN, AND INTL)

Ch No.	RX Freq	Name on display
WX01	162.5500	162.550 MHz
WX02	162.4000	162.400 MHz
WX03	162.4750	162.475 MHz
WX04	162.4250	162.425 MHz
WX05	162.4500	162.450 MHz
WX06	162.5000	162.500 MHz
WX07	162.5250	162.525 MHz
WX08	161.6500	161.650 MHz
WX09	161.7750	161.775 MHz
WX10	163.2750	163.275 MHz

## EMERGENCY ALERT (SAME) SYSTEM

### Types of Events

- A WARNING is an event that alone poses a significant threat to public safety and/or property, probability of occurrence and location is high, and the onset time is relatively short.
- A WATCH meets the classification of a warning, but either the onset time, probability of occurrence, or location is uncertain.
- An EMERGENCY is an event that, by itself, would not kill or injure or do property damage, but indirectly may cause other things to happen that result in a hazard. For example, a major power or telephone loss in a large city alone is not a direct hazard, but disruption to other critical services could create a variety of conditions that could directly threaten public safety.
- A STATEMENT is a message containing follow up information to a warning, watch, or emergency.

Event	SAME Code	Type
Blizzard Warning	BZW	Warning

Event	SAME Code	Type
Coastal Flood Watch	CFA	Watch
Coastal Flood Warning	CFW	Warning
Dust Storm Warning	DSW	Warning
Flash Flood Watch	FFA	Watch
Flash Flood Warning	FFW	Warning
Flash Flood Statement	FFS	Statement
Flood Watch	FLA	Watch
Flood Warning	FLW	Warning
Flood Statement	FLS	Statement
High Wind Watch	HWA	Watch
High Wind Warning	HWW	Warning
Hurricane Watch	HUA	Watch
Hurricane Warning	HUW	Warning
Hurricane Statement	HLS	Statement
Severe Thunderstorm Watch	SVA	Watch
Severe Thunderstorm Warning	SVR	Warning
Severe Weather Statement	SVS	Statement
Special Marine Warning	SMW	Warning
Special Weather Statement	SPS	Statement
Tornado Watch	TOA	Watch
Tornado Warning	TOR	Warning
Tropical Storm Watch	TRA	Watch
Tropical Storm Warning	TRW	Warning
Tsunami Watch	TSA	Watch
Tsunami Warning	TSW	Warning
Winter Storm Watch	WSA	Watch
Winter Storm Warning	WSW	Warning
Avalanche Watch	AVA	Watch
Avalanche Warning	AVW	Warning
Child Abduction Emergency	CAE	Emergency
Civil Danger Warning	CDW	Warning
Civil Emergency Message	CEM	Emergency
Earthquake Warning	EQW	Warning
Evacuation Immediate	EVI	Warning

Event	SAME Code	Type
Fire Warning	FRW	Warning
Hazardous Materials Warning	HMW	Warning
Law Enforcement Warning	LEW	Warning
Local Area Emergency	LAE	Emergency
911 Telephone Outage Emergency	TOE	Emergency
Nuclear Power Plant Warning	NUW	Warning
Radiological Hazard Warning	RHW	Warning
Shelter in Place Warning	SPW	Warning
Volcano Warning	VOW	Warning
Test Message	ADR	Test
Practice/Demo Warning	DMO	Test
Required Monthly Test	RMT	Test
Required Weekly Test	RWT	Test

### **No Response Event Code**

TXB	Transmitter Backup On
TXF	Transmitter Carrier On
TXO	Transmitter Carrier On
TXP	Transmitter Primary On

## **REGULATIONS AND SAFETY WARNINGS**

**WARNING!** Read this information before using the radio.

### **MARITIME RADIO SERVICES OPERATION**

**Warning!** This transmitter will operate on channels/frequencies that have restricted use in the United States. The channel assignments include frequencies assigned for exclusive use of the U.S. Coast Guard, use in Canada, and use in international waters. Operation on these frequencies without proper authorization is strictly forbidden. See page E-45 for tables of the available channels and their uses. If you are still not certain which channels to use, see the FCC maritime radio page at the FCC website (<http://wireless.fcc.gov/marine/>) or contact the FCC Call Center at 1-888-CALL-FCC. For individuals requiring a license, such as commercial users, you should obtain a license application from your nearest FCC field office (for US users) or Industry Canada (for Canadian users).

### **BASIC RADIO GUIDELINES**

You should familiarize yourself with the rules on marine radios and be aware of which rules apply to your ship. Complete guidelines for all ship and marine radio types can be found at the US Coast



Guard website under the topic Radio Info for Boaters (the direct link is <http://www.navcen.uscg.gov/?pageName=mtBoater>). Here are a few guidelines that affect nearly all boaters.

- If you have a VHF radio on your ship, you must maintain a watch on channel 16 (156.800 MHz) whenever the radio is not being used to communicate. Starting in 2004, if a radio is carried, it must be on and set to channel 16 whenever your ship is underway.
- If you hear a distress call, wait a few minutes to let a shore station or Coast Guard ship respond. If no other station has responded after 5 minutes, you must respond to the distress call.
- Do not make false mayday or distress calls as a prank or to test your radio. (This is essentially like making a false 9-1-1 call; you may be subject to fines.)

## **FCC/Industry Canada Information**

Certification: FCC Part 80 or RSS-182

Output Power: 6W

Emission: 16K0F3E

Transmitter Frequency Range: 156.025-157.425 MHz

This device complies with Part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

Unauthorized changes or modifications to this equipment may void compliance with the FCC Rules. Any change or modification must be approved in writing by Uniden. Changes or modifications not approved by Uniden could void the user's authority to operate the equipment.

## **FCC RF Exposure Information**

In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of the radio complies with the FCC guidelines and these international standards.

Never allow children to operate the radio without adult supervision and the knowledge of the following guidelines.

**WARNING!** It is up to the user to properly operate this radio transmitter to insure safe operation. Please adhere to the following:

Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the radio, or violate FCC regulations.

Do not use the radio with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for a replacement antenna.

To maintain compliance with FCC RF exposure requirements, the radio must be used with a maximum duty cycle not exceeding 50% in a typical push-to-talk radio use time. DO NOT transmit for more than 50% of total radio use time.

## **Body-Worn Operation**

This device was tested for typical body-worn operations using the supplied belt-clip. To maintain compliance with FCC RF exposure requirements, body-worn operations are restricted to the supplied belt-clip. For hand-held operation, the radio should be held 1 inch from the user's face. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements and should be avoided. For more information about RF exposure, please visit the FCC website at [www.fcc.gov](http://www.fcc.gov).

## Lithium Ion Battery Warning

This equipment contains a rechargeable Lithium Ion battery. The rechargeable Lithium Ion battery contained in this equipment may explode if disposed of in a fire.

Do not short-circuit the battery.

Do not charge the rechargeable battery used in this equipment in any charger other than the one specified in the owner's manual. Using another charger may damage the battery or cause the battery to explode.

**NOTE: Li-Ion batteries must be recycled or disposed of properly.**

Avoid exposing the battery (whether attached to the radio or not) to direct sunlight, heated cars, or temperatures below -4°F (-20°C) or above +140°F (+60°C). Exposing the chemical contained within the battery pack to temperatures above +140°F (+60°C) may cause the battery to rupture, fail, or reduce performance.

In case of exposure to the cell contents, wash the affected area thoroughly, and seek medical attention.

## RBRC INFORMATION

As part of our commitment to protect the environment and conserve natural resources, Uniden voluntarily participates in an RBRC® industry program to collect and recycle used Li-Ion batteries within the US.

Please call 1-800-8-BATTERY for information on Li-Ion battery recycling in your area.

(RBRC® is a registered trademark of the Rechargeable Battery Recycling Corporation.)



## COMPLIANCE

### FCC Part 15

The equipment has been tested and found to comply with the limits for a Class B device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment. Any change or modification must be approved in writing by Uniden.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Tout changement ou modification non approuvé expressément par la partie responsable pourrait annuler le droit à l'utilisateur de faire fonctionner cet équipement. Tout changement ou modification doit être approuvé par écrit par Uniden.

Avis de conformité à la FCC : Ce dispositif a été testé et s'avère conforme à l'article 15 des règlements de la Commission fédérale des communications (FCC). Ce dispositif est soumis aux conditions suivantes: 1) Ce dispositif ne doit pas causer d'interférences nuisibles et; 2) Il doit pouvoir supporter les parasites qu'il reçoit, incluant les parasites pouvant nuire à son fonctionnement.

In order to comply with FCC RF Exposure requirements, this device must be installed to provide at least 7.9 in (20 cm) separation from the human body at all times.

## IC

This device complies with Industry Canada's license-exempt RSSs. Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil est conforme aux normes CNR d'Industrie Canada destinés aux appareils radio exempts de licence. Son fonctionnement est soumis aux deux conditions suivantes :

- 1) Cet appareil ne doit pas causer d'interférences nuisibles et;
- 2) Il doit pouvoir accepter les interférences, incluant celles pouvant nuire à son fonctionnement normal.

In order to comply with FCC/ISED RF Exposure requirements, this device must be installed to provide at least 7.9 in. (20 cm) separation from the human body at all times.

Afin de se conformer aux exigences d'exposition RF FCC/ISED, ce dispositif doit être installé pour assurer une séparation d'au moins 20 cm du corps humain à tout moment.

## THREE-YEAR LIMITED WARRANTY

WARRANTOR: UNIDEN AMERICA CORP. ("Uniden")

ELEMENTS OF WARRANTY: Uniden warrants, for three years, to the original retail owner, this Uniden Product to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

WARRANTY DURATION: This warranty to the original user shall terminate and be of no further effect 36 months after the date of original retail sale. The warranty is invalid if the Product is (A) damaged or not maintained as reasonable or necessary, (B) modified, altered, or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden, (C) improperly installed, (D) serviced or repaired by someone other than an authorized Uniden service center for a defect or malfunction covered by this warranty, (E) used in any conjunction with equipment or parts or as part of any system not manufactured by Uniden, or (F) installed or programmed by anyone other than as detailed by the Operating Guide for this product.

**STATEMENT OF REMEDY:** In the event that the product does not conform to this warranty at any time while this warranty is in effect, warrantor will repair the defect and return it to you without charge for parts, service, or any other cost (except shipping and handling) incurred by warrantor or its representatives in connection with the performance of this warranty. THE LIMITED WARRANTY SET FORTH ABOVE IS THE SOLE AND ENTIRE WARRANTY PERTAINING TO THE PRODUCT AND IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES OF ANY NATURE WHATSOEVER, WHETHER EXPRESS, IMPLIED OR ARISING BY OPERATION OF LAW, INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow this exclusion or limitation of incidental or consequential damages so the above limitation or exclusion may not apply to you.

**LEGAL REMEDIES:** This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This warranty is void outside the United States of America.

**PROCEDURE FOR OBTAINING PERFORMANCE OF WARRANTY:** If, after following the instructions in this Operating Guide you are certain that the Product is defective, pack the Product carefully (preferably in its original packaging). Include evidence of original purchase and a note describing the defect that has caused you to return it. The Product should be shipped freight prepaid, by traceable means, or delivered, to warrantor at:

Uniden America Corporation  
C/O Saddle Creek  
743 Henrietta Creek Rd., Suite 100  
Roanoke, TX, 76262









**QUESTIONS?**  
Visit our website at  
[www.uniden.com](http://www.uniden.com) or  
call 1-800-297-1023.

**QUESTIONS?**  
Contactez-nous au  
[www.uniden.com](http://www.uniden.com) ou  
appelez 1-800-297-1023.