

Uniden®

moov™

Wireless Stereophonic Sound Speaker



IMPORTANT SAFETY

PRECAUTIONS

When using your equipment, always follow basic safety precautions to reduce the risk of fire, electric shock and injury to persons, including the following:

- This equipment is NOT waterproof. DO NOT expose it to rain or moisture.
- DO NOT immerse any part of the product in water. Do not use this product near water, e.g., near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
- To avoid any risk of electric shock from lightning, avoid handling any electronic devices (except battery-powered ones) during an electrical storm.
- Use only the power cord indicated in this manual. Check with local codes for possible special disposal instructions for the internal Lithium Polymer batteries.
- Never tug or pull on any power cord; be sure to leave some slack in the cord when placing your equipment, and always use the plug to unplug the power cord from the wall outlet.
- Never leave power cords where they can become crushed, cut, or frayed; when running power cords, avoid letting them rub against any sharp edges or lie across any high traffic areas where people might trip over them.
- Do not use the device if the adapter cords or plugs have been damaged, the unit has been exposed to liquids, or the unit has been dropped, or is damaged.

⚠ SAVE THESE INSTRUCTIONS!

For best results:

To avoid damage to your equipment, follow these simple precautions:


- Do not drop, puncture or disassemble any part of the equipment. There are no user-serviceable parts inside.
- Do not expose the equipment to high temperatures, and avoid leaving the equipment in direct sunlight for more than a few minutes. Heat can damage the case or electrical parts.
- Do not place heavy items on top of the equipment or expose the equipment to heavy pressure.
- Clean only with a dry cloth.

Failure to follow the instructions in this operating manual will void the warranty. Uniden assumes no liability for damages to property or injury to persons caused by improper handling or failure to comply with these safety instructions.

WHAT'S IN THE BOX


- moov wireless speaker (1)
 - AC Adapter (1)
 - 3.5mm stereo cable (1)
 - Owner's Manual (1)
- ⚠ If any items are missing or damaged, contact our Customer Care Line at 1-800-297-1023 immediately!

GETTING TO KNOW THE MOOV

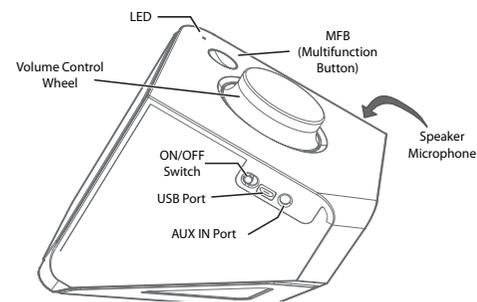

SETTING UP YOUR MOOV

POWER ON/OFF

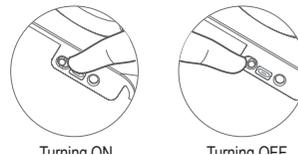

CHARGE THE BATTERY


Charge the battery completely before using your moov.

1. Connect the AC adapter to the speaker USB port.

2. Plug the other end into a power supply (120V AC, (standard indoor).
 3. The LED turns red and remains on while the battery is charging. It turns off when charging is complete.
- ⚠ When the battery is low, the speaker beeps once every minute. When you hear the beeping, recharge the speaker.

PAIR MOOV WITH BLUETOOTH DEVICES

1. Turn on your moov speaker. If this is the first time you have turned on the speaker, it will go into pairing mode automatically. (If this is not the first time, press MFB for 3 seconds until the LED blinks as blue.)

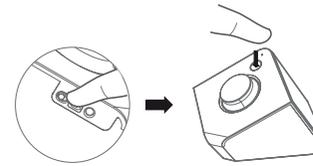

2. Set your mobile phone or Bluetooth device to discovery mode (Visibility on).
3. Set your mobile phone or Bluetooth device to discover the moov, then locate the Bluetooth device list.
4. From the Bluetooth device list, select "moov."
5. If you are prompted for a passkey, enter "0000" (four zeroes) and tap OK.
6. Your Bluetooth device indicates when pairing is complete.
7. The moov speaker announces "Connected" and the blue LED blinks 2 times every 5 seconds.

Auto Reconnect

Your moov speaker will try to reconnect to the last connected Bluetooth device when you turn on the speaker.

Simple Pairing


If your devices support Bluetooth v2.1 or higher, you don't need the passkey to pair them with the speaker.

Easy Pairing

Your moov speaker automatically goes into pairing mode the first time you use it.

ADDING ANOTHER SOURCE

Adding another audio device to the moov speaker requires using a 3.5mm stereo cable (included) with a 3.5mm plug on one end to connect with the AUX port on the moov.

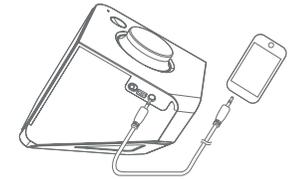

OPERATING YOUR MOOV

PLAYING MUSIC

Press the MFB to play or pause music.

MAKING A CALL

To do this ...	Try this ...
Redial last number	Press MFB twice.
Activate or deactivate voice dialing	Press and hold MFB for 1 second. ⚠ Make sure your phone supports the voice dial function. (Check your mobile phone instruction manual.)
Answer/hang up	Press MFB.
Decline an incoming call	Press and hold MFB for 1 second.
Transfer a call between the moov and your mobile phone	Press and hold MFB for 1 second.
Control the volume	Turn the volume control wheel. ⚠ The speaker will beep when you have reached the minimum or maximum volume levels.
Mute/unmute the microphone	Hold the MFB for 3 seconds.

RESETTING THE SPEAKER

Press and hold the MFB button for 3 seconds while in pairing mode.

STATUS

Status	LED	Beep/ Voice
Power on	LED flashes blue 3 times.	Power on
Pairing mode	LED flashes blue rapidly.	
Disconnect mode	LED flashes blue every five seconds.	Disconnected
Connected mode	LED flashes blue 2 times every 5 seconds.	Connected
Making a call	LED flashes blue 3 times every 5 seconds.	
Incoming call	LED flashes blue 2 times every 2 seconds.	Ringtone
Playing music	LED flashes blue 3 times every 5 seconds.	
Mute		2 beeps every 10 seconds.
Reset	LED flashes blue 5 times.	Beep once a minute.
Low Battery		Beep.
Charging	LED steady on (red).	
Charging Complete	Red LED turned off.	

TROUBLESHOOTING

If...	Try...
The speaker will not turn on	Making sure it is charged or connected to a power outlet.
There is no audio from Bluetooth devices	<ul style="list-style-type: none"> Turning up the volume on your Bluetooth devices. making sure the speaker is not muted. Making sure your Bluetooth devices are in range. Making sure your Bluetooth devices are connected to the speaker.
There is distortion	<ul style="list-style-type: none"> Making sure moov is charged up. Making sure your speaker and Bluetooth devices are within range.

If...	Try...
You are unable to connect	<ul style="list-style-type: none"> Making sure your devices are Bluetooth compatible. Making sure Bluetooth compatibility on your device is turned on. Making sure your Bluetooth devices are within range.

SPECIFICATIONS

Model Name	moov
Bluetooth Core Spec	Bluetooth Spec 3.0
Profile	HSP/HFP1.5, A2DP, AVRCP
Bluetooth Class	Class 2
Coverage Range	10 meters
Continuous play time	Approx. 10 hours
Standby time	Approx. 500 hours
Weight	1100g
Charging voltage	DC 5.0 V
Charging time	Approx 3 hours
Operating Temperature	+14°F to +122°F (-10°C to +50°C)
Storage Temperature	-4°F to +158°F (-20°C to +70°C)
Output Power	6W (2CH; 3W x 2)
Battery	Lithium Polymer 3.7V, 1500mAh

RECYCLING AND DISPOSAL INFORMATION

- Do not dispose of electronic devices or any of their components (especially batteries and LCD displays) in your municipal trash collection.
- Consult your local waste management authority or a recycling organization like Earth911.com to find an electronics recycling facility in your area.

FCC Compliance Information Part 15 Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subjected to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with limits for a Class B digital device, pursuant to Part 15 of the FCC rules and ETSI (EN) 300328. These limits are designed to provide reasonable protection against harmful interference in residential installations. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the

instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television equipment reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Move the equipment away from the receiver.
- Plug the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for additional suggestions.

CAUTION! Any changes or modifications to this equipment not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

IC Compliance Information

Radio Equipment Notice

The term "IC:" before the radio certification number only signifies that Industry Canada technical specifications were met. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. "Privacy of communications may not be ensured when using this device".

CE Compliance Information

Products with CE Marking comply with EMC Directive (2004/108/EC); low voltage Directive (73/23/EEC); R&TTE(1999/5/EC) issued by the Commission of the European Community. Compliance with these directives implies conformity to the following European Norms:

- EMC: EN 301 489
- LVD: EN 60950
- Radio: EN 300 328

One Year Limited Warranty

Important: Evidence of original purchase is required for warranty service.

WARRANTOR: UNIDEN AMERICA CORPORATION ("Uniden").

ELEMENTS OF WARRANTY: Uniden warrants, for one year, to the original retail owner, this Uniden Product to be free from defects in materials & craftsmanship with only the limitations or exclusions set out below.

WARRANTY DURATION: This warranty to the original user shall terminate & be of no further effect 12 months after the date of original retail sale. The warranty is invalid if the Product is (A) damaged or not maintained as reasonable or necessary, (B) modified, altered, or used as part of any conversion kits, subassemblies, or any configurations not sold

by Uniden, (C) improperly installed, (D) serviced or repaired by someone other than an authorized Uniden service center for a defect or malfunction covered by this warranty, (E) used in any conjunction with equipment or parts or as part of any system not manufactured by Uniden, or (F) installed or programmed by anyone other than as detailed by the owner's manual for this product.

STATEMENT OF REMEDY: In the event that the product does not conform to this warranty at any time while this warranty is in effect, warrantor will either, at its option, repair or replace the defective unit & return it to you without charge for parts, service, or any other cost (except shipping & handling) incurred by warrantor or its representatives in connection with the performance of this warranty. Warrantor, at its option, may replace the unit with a new or refurbished unit. THE LIMITED WARRANTY SET FORTH ABOVE IS THE SOLE & ENTIRE WARRANTY PERTAINING TO THE PRODUCT & IS IN LIEU OF & EXCLUDES

ALL OTHER WARRANTIES OF ANY NATURE WHATSOEVER, WHETHER EXPRESS, IMPLIED OR ARISING BY OPERATION OF LAW, INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow this exclusion or limitation of incidental or consequential damages so the above limitation or exclusion may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights, & you may also have other rights which vary from state to state. This warranty is void outside the United States of America & Canada.

PROCEDURE FOR OBTAINING PERFORMANCE OF WARRANTY: If, after following the instructions in the owner's manual you are certain that the Product is defective, pack the Product carefully (preferably in its original packaging). The Product should include all parts & accessories originally packaged with the Product. Include evidence of original purchase & a note describing the defect that has caused you to return it. The Product should be shipped freight prepaid, by traceable means, to warrantor at:

Uniden America Service
743 Henrietta Creek Rd.
Roanoke, TX 76262

(800) 297-1023, 8 a.m. to 5 p.m., Central, Monday through Friday