

# *Operating Guide*

**uniden**

ISS

**uniden**

**UDS 200**

Digital Satellite  
System

---

## Digital Satellite System

---

### What is the DSS® System?

---

Welcome to the high-tech, sophisticated world of digital satellite system television, often just called a DSS® system. This is the ultimate in broadcasting technology, providing a picture and audio quality once only available in laser disc or CDs. There are many advantages to the DSS system like the small dish antenna, digital quality, and hundreds of program choices. And your new UDS 200 also offers you features not commonly found on other receivers.

### UDS System Features

---

- ☐ StarSight™ Direct Tuning — Tune directly to a desired channel by program title.
- ☐ One Touch Record — Just press one button to easily set the timer to record or view a program.
- ☐ Theme Search — Easy theme search by category and sub-category.
- ☐ 60 Favorite Channels — Program up to 60 favorite channels for instant access.
- ☐ Information Key — With the touch of a button, display information about the current program or about a program in the guide.
- ☐ Single Channel Guide — From most guides, you can bring up a list of programs for a desired channel.
- ☐ Open/Closed Program Guide — Quickly close the program guide into a “channel surf” mode which allows you to see what is currently on a channel.
- ☐ Parental Lock, Rating, & Spending Limits — Using a password for access, you can lock out unwanted channels or set rating and spending limits.
- ☐ Universal Remote Control — Your remote control can also control your television, VCR, and cable box, or laser disc player.
- ☐ Receiver Control Codes — Your remote control can be programmed so that you can have multiple DSS receivers in your home.
- ☐ S-Video & A/V Outputs — Your receiver has both types of outputs so it can easily be integrated with other home equipment, including home theater equipment.
- ☐ Wide Band Data Port — This port allows you to connect the DSS system to future services and accessories as they become available. Some additional equipment may be necessary.

 
---

## Controls and Functions

---

### Remote Control

---

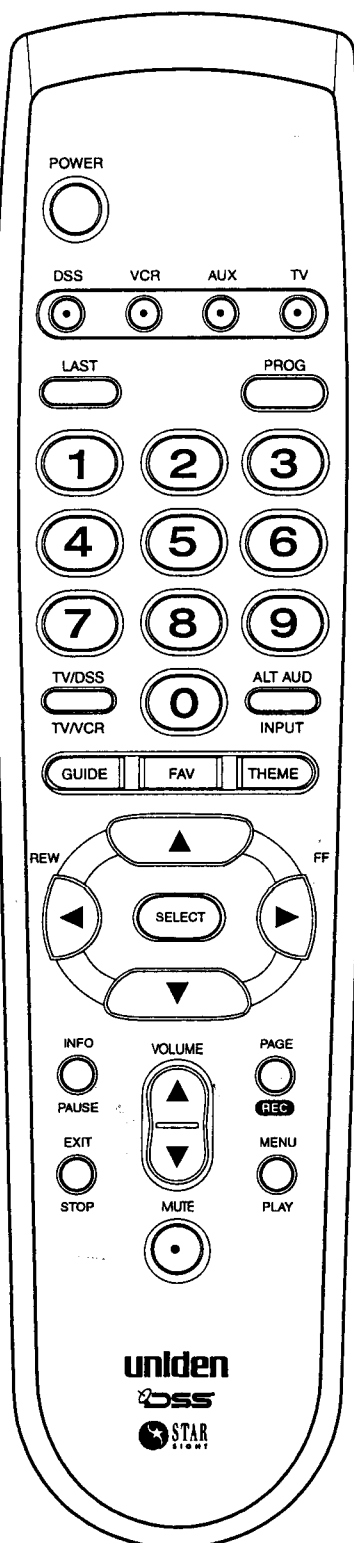

**POWER** Turns a selected device on/off.

**DSS** Select this mode to control your satellite receiver.

**VCR** Select this mode to control your VCR.

**AUX** Select this mode to control an auxiliary device such as a cable box, second VCR, or second TV.

**TV** Select this mode to control your TV.

**PROG** Use to enter the remote codes for TV, VCR, and AUX devices.

**LAST** Switches to the previous channel, or changes between channel numbers and channel letters when a guide is displayed.

**DIGIT KEYS (0-9)** Use to enter numbers such as channels or passwords.

**TV/DSS (TV/VCR)** Switches the TV output between DSS and TV, and, while in VCR mode, switches between the VCR and TV.

**ALT AUD (INPUT)** Changes to alternate audio in DSS mode, or selects TV input in TV mode.

**GUIDE** Displays the Program Guide.

**THEME** Displays the Themes List for selecting programs from specific categories.

**FAV** Displays the Favorite List for quickly selecting your favorite channels.

**ARROW KEYS** Changes channels in normal viewing, or moves the cursor while in the program guides or menus.

**SELECT** Confirms menu choices, stores screen or program changes you've made, and advances to other options or screens.

**INFO (PAUSE)** Displays information about a program, or pauses a VCR or laser disc while in VCR mode.


**PAGE (REC)** Displays the paging screen or starts One-Touch Record while in DSS mode. It start your VCR's record feature while in VCR mode.

**EXIT (STOP)** Cancels all screens and returns to normal viewing in DSS mode, or stops a VCR while in VCR mode.


**MENU (PLAY)** Displays Main Menu in DSS mode, or plays a VCR in VCR mode.

**VOLUME (MUTE)** Controls the Volume and Mute in all modes when programmed.

## Front Panel

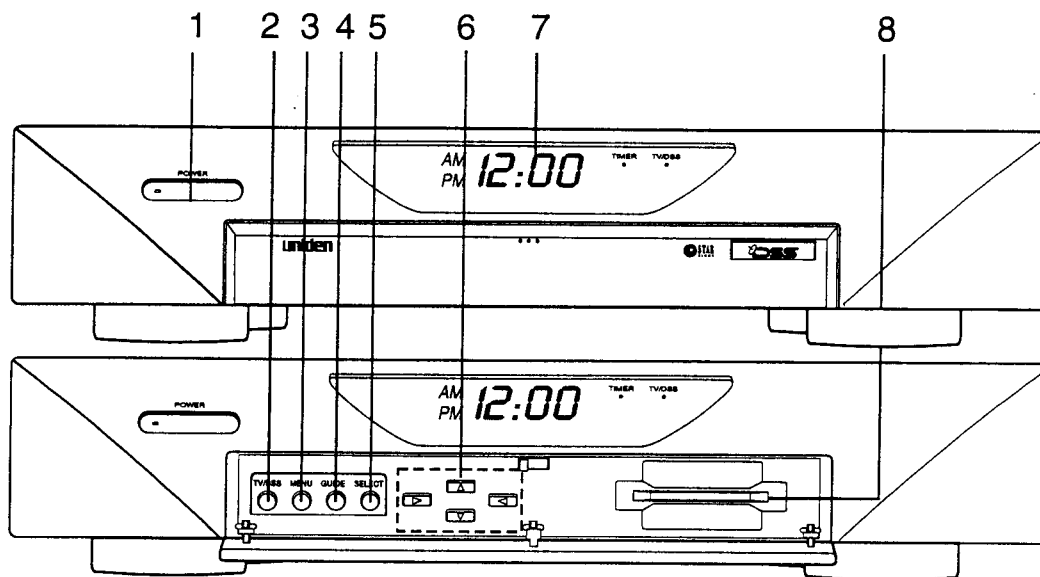 


1. **POWER** Turns the receiver on/off. The LED is green when the receiver is on, and it is red when the receiver is on and you have messages.
2. **TV/DSS** Switches between the TV signal or the DSS signal.
3. **MENU** Displays the Main Menu so you can access the DSS system features.
4. **GUIDE** Press once to display the Program Guide, and press again to display the Single Channel Guide.
5. **SELECT** Confirms menu choices, stores screen or program changes you've made, and advances to other options or screens.
6. **ARROW KEYS** These keys can be used to change channels, select a program from a guide, or to enter information.
7. **FRONT PANEL INDICATORS** (See explanation below)
8. **ACCESS CARD** Your Access Card provides system security and authorization to a DSS program provider.

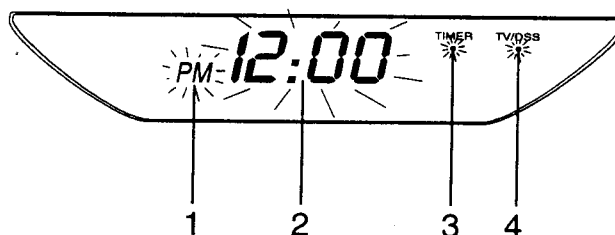 

1. **AM/PM INDICATOR** Displayed only when the unit is off.
2. **SEGMENT DISPLAY** While the unit is off, the current time is displayed. While the unit is on, the current channel is displayed.
3. **TIMER LED** Lights when a program is set up in the Timer.
4. **TV/DSS LED** Lights when the TV signal is selected while the receiver is on.

## Rear Panel

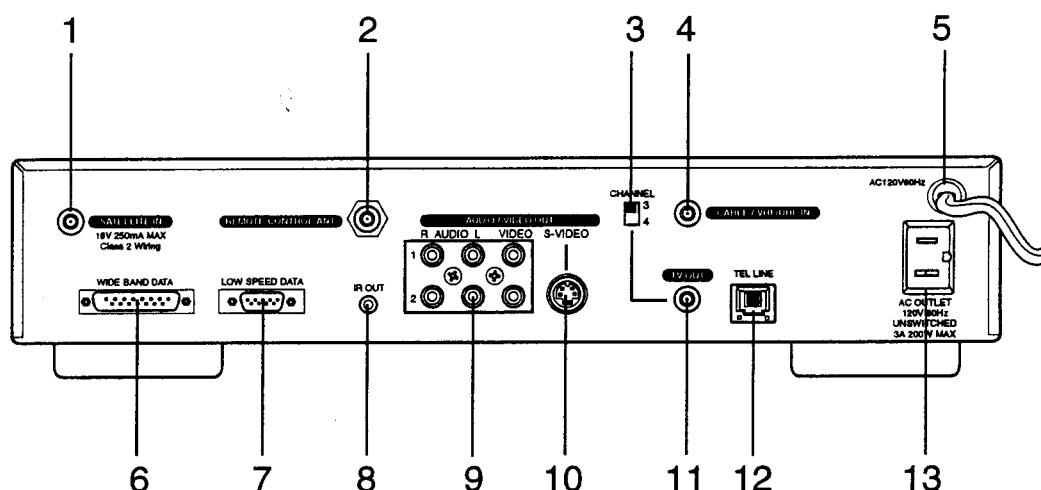 

1. **SATELLITE IN** Connects the satellite antenna cable to the DSS receiver.
2. **REMOTE CONTROL ANTENNA** Connect the UHF Antenna to use the UHF Remote.
3. **CHANNEL** This switch allows you to set which channel the receiver will transmit the DSS signals on while using the receiver.
4. **CABLE/VHF IN** Connects your cable signal or off-air antenna signal to your DSS receiver.
5. **AC CORD** A polarized power cord which supplies AC to your DSS system.
6. **WIDE BAND DATA PORT** This port allows you to connect the DSS system to future services and accessories as they become available.
7. **LOW SPEED DATA PORT** Used for applications like Computer Interface.
8. **IR OUT** Controls the VCR for timer recordings.
9. **AUDIO AND VIDEO OUTPUT JACKS** Connects your DSS receiver to your TV or VCR. These provide better sound and picture quality than TV OUT. Use these jacks if your TV has audio/video capability.
10. **S-VIDEO** Video output connector which offers a high-quality video link between your DSS receiver and TV or VCR. If your TV has **S-VIDEO** capability, use this jack with the audio/video outputs to connect your DSS receiver to your TV.
11. **TV OUT** Connect this modulated RF output to the VHF input on your TV or VCR.
12. **TEL LINE** Modular phone plug to connect your DSS receiver to your telephone system. The DSS system requires a phone line to communicate with your service provider.
13. **AC OUTLET** Unswitched auxiliary AC outlet rated at 3A (200W).

---

## Basic Operations

---

### Power On

---

- There are two ways to turn your DSS receiver on:
- ☐ Press the Power button on the front of the receiver
  - ☐ Press the Power button on your remote

### Adjusting the Volume

---

If your remote control is programmed to control your TV, then the Volume and Mute control your TV while in DSS mode.

**Note:** See "Programming Your Remote" on page 91 for more information about setting your remote to control your TV.

### Changing Channels

---

There are two ways to change channels while watching your DSS receiver:

- ☐ Press the Channel ▲ and ▼ keys
- ☐ Enter the Channel Number using the Remote Keypad

#### Using the Arrow Keys

---

If you press either the ▲ or ▼ key to change channels, your receiver tunes to each channel sequentially.

Press the Channel ▲ key once to select the next higher active channel,

—or—

Press the Channel ▼ key to choose the next lower active channel.

If you press and hold the ▲ or ▼ key, the receiver will change channels quickly.

#### Using the Remote Keypad

---

 
You can also tune directly to a channel by entering its number on the remote's keypad. For example, to change to channel 221, press ②, ②, ① on your remote. Once the last digit is entered, your receiver immediately tunes to the channel.

If you only enter the first digit of the channel and press **SELECT**, your receiver will tune to the first available channel above what you selected.

For example, if channel 203 is the first channel after channel 200, and you press ② and **SELECT**, the receiver changes to channel 203. The same happens when only two digits are entered, followed by **SELECT**.

## Channel Banner

Each time you change the channel, the Channel banner appears and shows the current channel, program, time and date. To display this screen in Normal Viewing, press **INFO** on your remote.

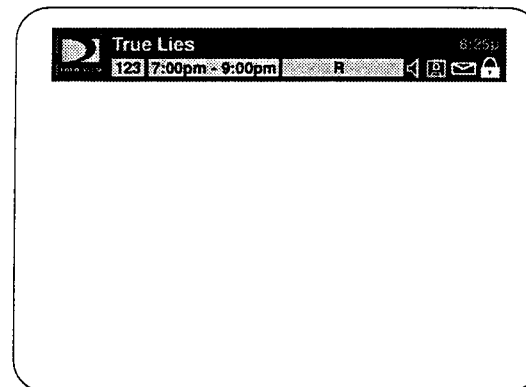

The Channel Banner contains useful information:

- ☐ Channel Logo — The logo matches the channel tuned.
- ☐ Program Title, Time, and Rating — The Channel Banner shows the program's title, its start and stop times, and its MPAA rating.
- ☐ Alternate Audio Icon — This icon displays when the program you're watching is broadcasting alternate audio.
- ☐ Data Services Icon — This icon displays when the program you're watching is broadcasting data services for a computer.
- ☐ Message Icon — The message icon displays when you have received mail from your service provider.
- ☐ System Lock Icon — This icon indicates if your system is unlocked, locked, or is in temporary session unlock.
- ☐ Current Time — The current time is displayed in the right corner of the Channel Banner.


## Channel Information

 You can find out more information about most programs using **INFO**.

Press **INFO** to display the Channel Banner.

Then press **INFO** again to display the program description, when available.

Press **INFO** to return to Normal Viewing.

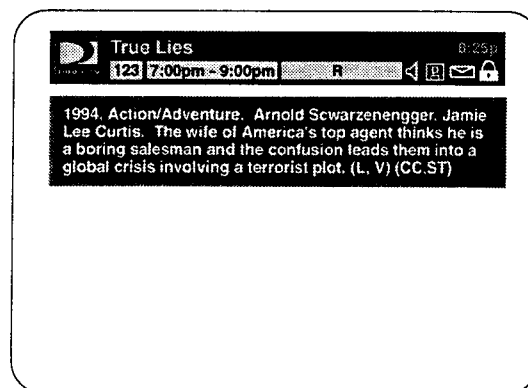

---

## On Screen Programming

---

### What is On-Screen Programming

---

You have probably heard this term many times, but you may not be really familiar with what it means. Simply, On-Screen Programming makes it easier for you to do the things you want without having to read through lots of information. Just press a button on your remote, read the screen, and select what you want. It's that easy!

For example, let's say you want to know what's on tonight. You could get your daily newspaper or TV magazine, find the right section or day, and then try to find the program you want. Or, you could just turn your TV and DSS system on, take your remote, and press **GUIDE**. Every program available from your service provider can be displayed on-screen. You just scan through the easy-to-read program guide.

If you see something you want to watch, but want to know more about it or who is in it, just press **INFO**. And the description of the show, its time, who's in it, and its rating immediately displays. Your UDS 200 will save you time and make choosing what you want as simple as pressing a button.

### How It Works: Highlighting and Selecting

---

You're probably thinking it's going to take a long time to learn this, right? Well, if you'll remember one simple tip — Highlight and Select. You'll be an expert as soon as you point your remote at your DSS system! There are only a few buttons on your remote that you'll need to learn, and you'll have mastered, "Highlight and Select."

### The Arrow Keys and Select

---

On your remote there are five keys grouped together which allow you to quickly choose any on-screen item: **▲▼◀▶** and **(SELECT)**. You just press the arrow keys to highlight an item you want on a screen. Once something is highlighted, press **(SELECT)** to choose it. Selecting an item tells your receiver to go ahead and make the change you've indicated. That's it! That's all there is to On-Screen Programming. If you want to move the highlight up, press the **▲** key. To move the highlight down, press the **▼** key. Each time you press a key, the on-screen highlight moves in the direction of the arrow. When you've highlighted what you want, press **(SELECT)**.



 
## Direct Entry Method

To make it even faster to highlight certain choices, some items on a screen are numbered, such as Menu Items or Channels. To highlight a numbered item, press the number on your remote's keypad. When the number is entered, the highlight moves directly to the entry and selects it. This is a big help if, for example, your changing channels.

Let's say you pressed **GUIDE** and the on-screen Program Guide is displayed. Now you have highlighted channel 202 but you want to skip to Channel 740. You could press the down arrow ▼ and scroll through many channels to get there or just press **(7)**, **(4)**, **(0)** on the keypad and the on-screen highlight would move directly to Channel 740. This is helpful time-saver is referred to as the "Direct Channel Entry."

## Paging through Menus

One of the great things about the DSS system is there are lots and lots of programs! But, they can't always fit on one screen, so you may see a guide with arrows pointing off the screen or a "window indicator." These indicators just means there is more to see.

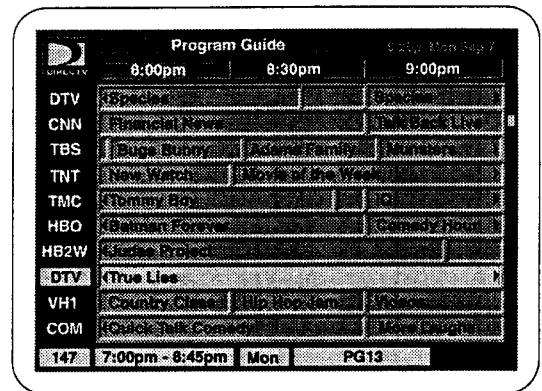

Consider the example above about changing channels. You can use Direct Entry, or you can use the Page Feature. Press **PAGE** on your remote. Now each time you press ▲ or ▼ the screen moves 9 channels at a time instead of just one. If you press the ► key, the Program Guide displays upcoming programs. You can find any program, on any channel, quickly and easily.

## Getting Help

"What if I forget?" or "What if I'm not sure what to do?" Well, **HELP** is usually a choice on every screen. There are two types of help information:

 
- ☐ Quick Instructions
- ☐ Help Screens

## Quick Instructions

Your DSS receiver is programmed to provide you with the information you need to answer most of your questions right on each screen, so you don't have to look somewhere else. If you're not sure what something is or what it does, highlight the item and look at the yellow help bar at the bottom of the screen. There will usually be a short instruction telling you what the option does. Quick Instructions change automatically and can usually answer your question without having you display another Help Screen.

## Help Screens

If you want more information about the screen or feature you're working with, notice the Help Button at the bottom right corner of the screen. This button typically reads (9-HELP), or it may just read (HELP). If you highlight this and press **(SELECT)**, a new help screen displays.

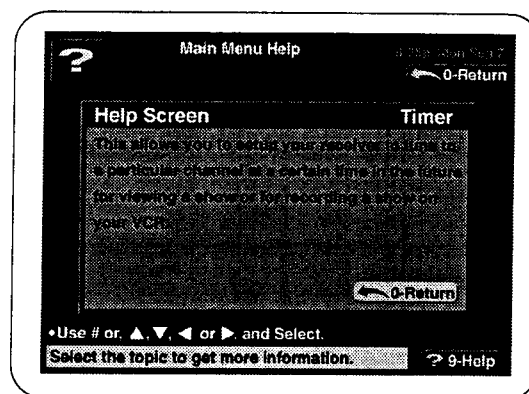

For example, you can get more information about the timer feature by using Help. If you select the Help Button, you would see this screen.

To exit the help screen and return to where you were, simply press **(SELECT)** or **(0)** on your remote keypad.

## Return to Normal Viewing

You can return to Normal Viewing anytime you want. Just press **EXIT** on your remote to cancel all screens and return to the last channel you were watching. So don't hesitate to explore each menu or screen. If you're not sure what to do, press **EXIT** and start again. Remember, most changes are not stored until you press **(SELECT)**, and you'll always be able to return to any screen and cancel any change you don't want.

---

## The Main Menu

---

 
The Main Menu provides you access to many of the special features of your UDS 200 receiver, such as the Timer Screen, Password Setting, and Options Menu.

To display the Main Menu:

Press **MENU** on the Front Panel

—or—

Press **MENU** on your Remote Control.

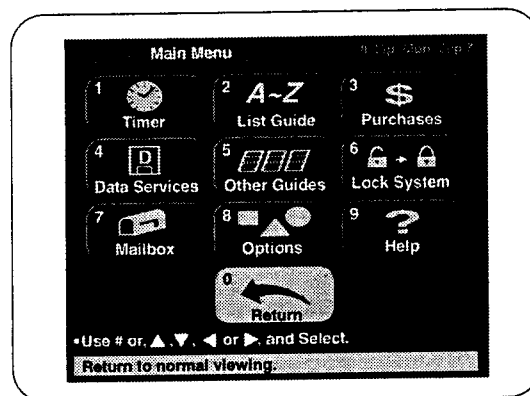

---

## Features

---

The following is a list of features available on the Main Menu.

- ☐ **Timer**—Set your receiver to view or record upcoming programs.
- ☐ **List Guide**—Display the programs you select in alphabetical order.
- ☐ **Purchases**—Review your past and future purchases.
- ☐ **Data Services**—Select and receive data services provided by your program provider.
- ☐ **Other Guides**—Display other types of program guides.
- ☐ **Lock/Unlock System**—Enable or disables your lock and limits.
- ☐ **Mailbox**—Read and delete messages sent to you by your service provider.
- ☐ **Options**—Select the Options Menu
- ☐ **Help**—Displays the Help Menu Screen.
- ☐ **Return**—Returns you to Normal Viewing.

## The Timer

### Programming the Timer

- The Timer Feature is used to store up to 8 upcoming events. The Timer remembers when the program starts and ends and what channel it will be shown on. The UDS 200 also controls your VCR when a program is stored in the Timer.

There are three ways to program an event in the UDS 200:

- ☐ Manual Entry
- ☐ Automatic Programming
- ☐ One-Touch Recording (OTR)

 
 
### Manual Timer Entry

To manually enter a program in the Timer, follow these steps:


1. Press **MENU** on your remote.
2. Highlight **Timer** on the Main Menu and press **SELECT**, or press **1**.

If the system is locked, the Password Screen displays before a program is stored because **ALL LOCKS AND LIMITS ARE DISABLED** for Timer events. So if the program is shown on a channel which is locked, or if the program exceeds your rating or spending limit, the Timer will still tune to the channel at the selected date and time.

3. Enter your personal 4-digit password to continue.

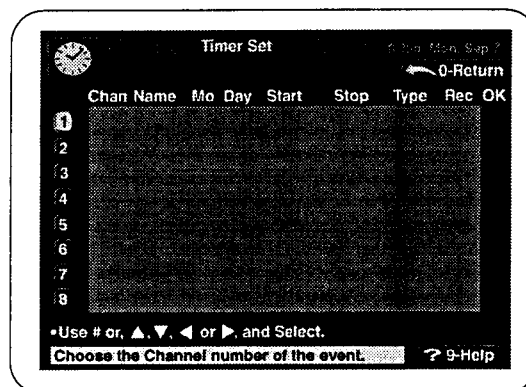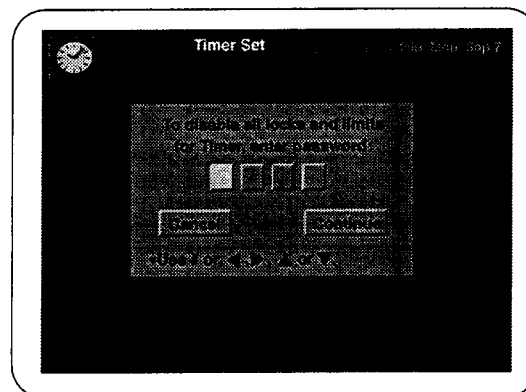

 
4. Highlight one of the 8 events you want to program, and press **SELECT** or enter the event number directly.

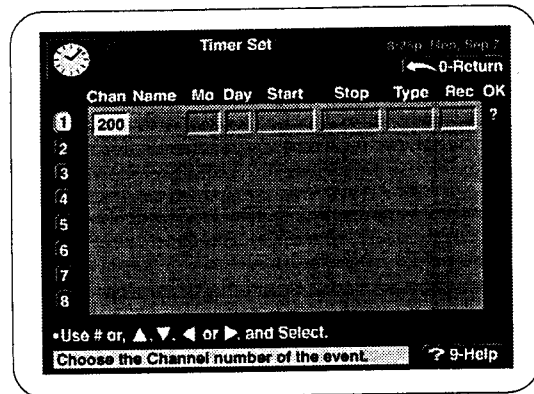

**Note:** If an event is stored, the Delete, Change, Disable Screen displays. See "Changing an Event" on page 26.


5. Enter channel number of the program you want to store in the timer on your remote.

 **Note:** The channel number of the last channel tuned automatically displays. To select this channel, press the **▶** key until the Month Field is highlighted.

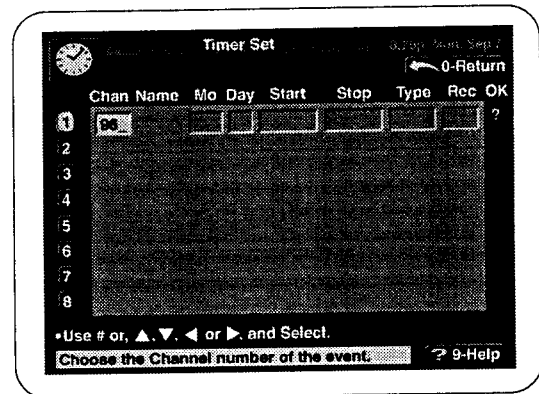


**Note:** If you want to use **▲** and **▼** to enter numbers in a field, you must remember to press **▶** to continue. For example, in the channel field the first dash is flashing, if you press **▲** until 2 displays, you must press **▶** before entering the next digit of the channel number. After entering all the digits, you must press **▶** again to advance to the next field.

 6. Use the **▲** or **▼** arrow keys to choose the Month, and press **▶** to advance to the Day Field.

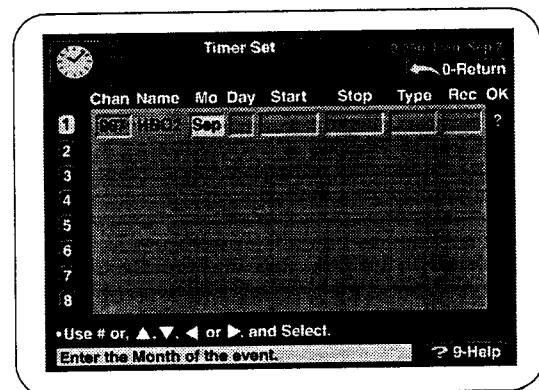


7. Use the ▲ or ▼ keys or the number keys on your remote to enter the day.

 Press ► to Highlight the next field.

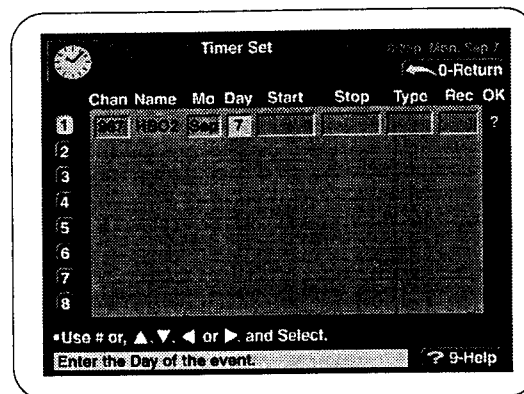


8. When the Start Entry Field is highlighted, your receiver automatically rounds the current time to the next half-hour and displays this. For example, if it's 8:20p, then 8:30p automatically displays.

 Use the ▲ or ▼ keys or the number keys on your remote to enter the start time, and Highlight the a/p designator.

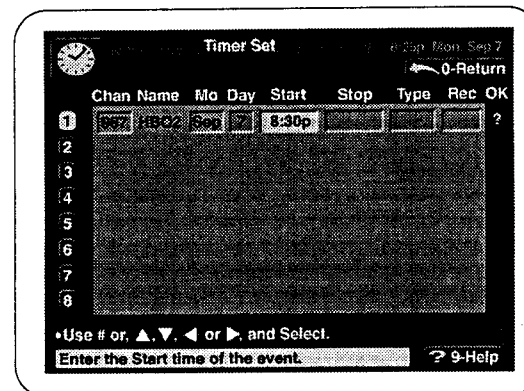

9. Change the a/p designator with either the ▲ or ▼ keys, and Highlight the Stop Entry Field.
10. When the Stop Entry Field is selected, your receiver automatically displays the next half-hour after the Start time. For example, if 8:30p is the Start time, then 9:00p appears.

 Use the ▲ or ▼ keys or the number keys on your remote to enter the stop time, and Highlight the a/p designator.

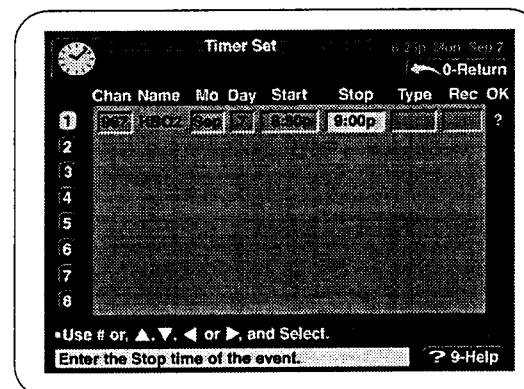


11. Change the a/p designator with either the ▲ or ▼ keys, and Highlight the Type Entry Field.

12. Use the ▲ or ▼ keys to choose the type of event, and press **SELECT**.

There are three types of events:

 **Once**—This type of event only occurs one time. After the event has been completed, the event information is removed from the Timer screen.

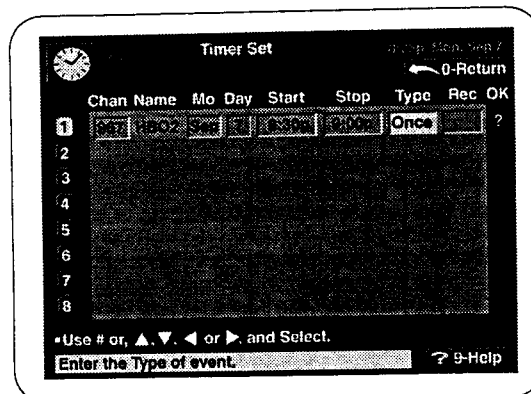

**Daily**—This type of event occurs each weekday—Monday through Friday. The event information is not removed from the Timer Screen after the event occurs.

 
**Weekly**—This type of event occurs one day every week. The event information is not removed from the Timer Screen after the event occurs.

13. Use the ▲ or ▼ keys to choose the record option you want, and then press **SELECT**.


If you choose **Yes**, the UDS 200 will control your VCR

—or—

If you choose **No**, the UDS 200 will not turn your VCR on when the program begins.

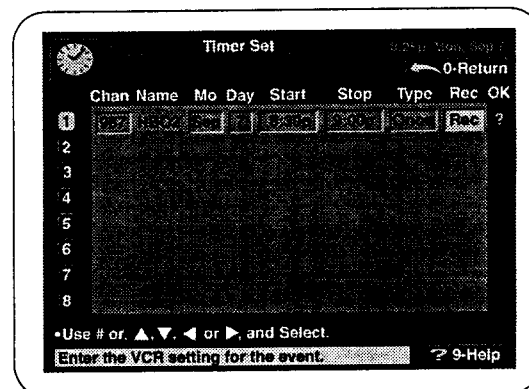

 14. A check-mark appears next to the event to indicate the program is stored and enabled provided there are no errors. After the event is stored, the standard Timer screen returns.

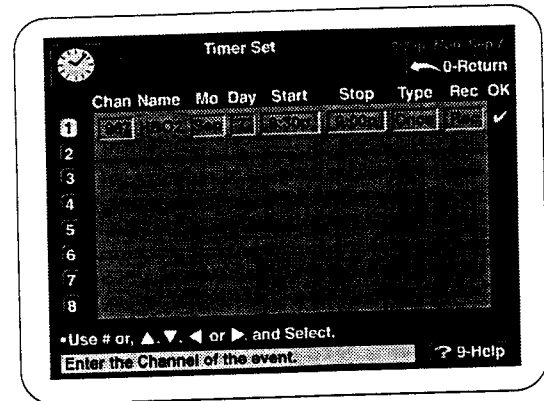

If there are errors in the timer information, then a question mark (?) will appear next to the event, and a warning displays. The event is disabled and the receiver will not tune to the program until the error or conflict is corrected.


After a program is saved in the Timer, you can make changes, delete the event, or disable the event.

### Automatic Programming

 Your UDS 200 has many different on-screen guides, such as the Program Guide, Themes Guide, and Favorite Guide. These guides display current and upcoming programs. If you Highlight an upcoming program and press **SELECT**, you can automatically store the program in the Timer for future viewing or recording.


To use the Automatic Programming feature, follow these steps:

1. Press **GUIDE** on your remote.

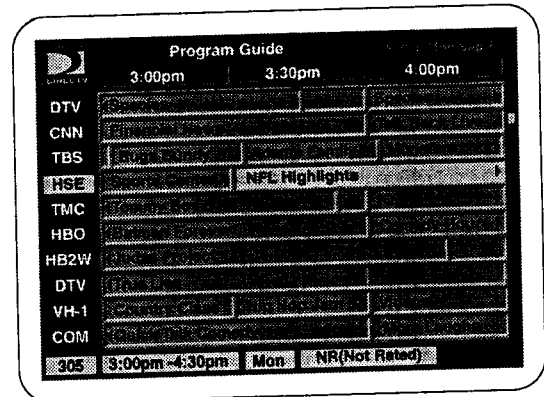



 2. Highlight an upcoming program, and press **SELECT**.

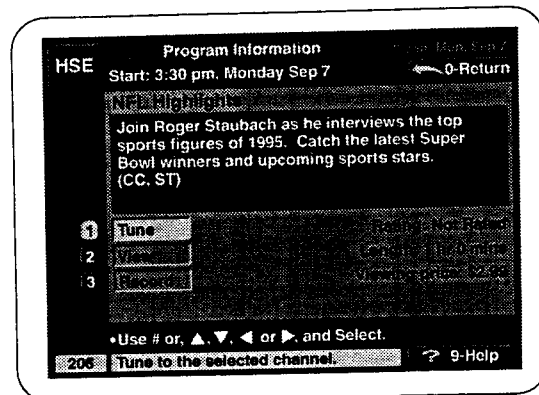


3. You can choose one of these options for subscription programs:
  - ☐ 1-Tune (go to Step 4)
  - ☐ 2-View (go to Step 5)
  - ☐ 3-Record (go to Step 7)
  - ☐ 0-Return (go to Step 9)

**Note:** For Pay-Per-View Programs, see page 85.

4. Highlight 1-Tune and press **SELECT** to remove the Program Information Screen and tune to the channel.
5. Highlight 2-View and press **SELECT** to store the program in the Timer and turn the VCR control option off.

 **Note:** The DSS system will tune to the program when it's on, but will not control your VCR. This option does not record the event.

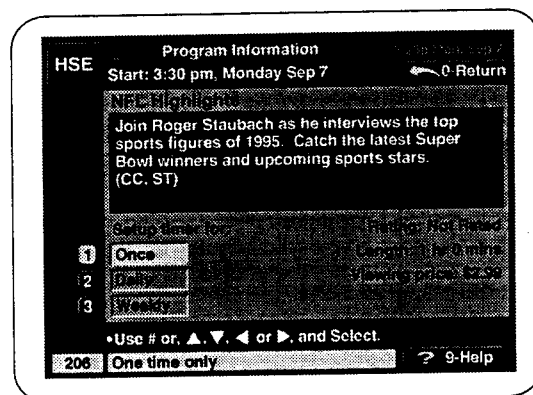

There are three types of viewing events:

 
**Once**—This type of event only occurs one time. After the event is completed, the event information is removed from the Timer.

**Daily**—This type of event occurs each weekday—Monday through Friday. The event information is not removed from the Timer Screen after the event occurs.

**Weekly**—This type of event occurs one day every week. The event information is not removed from the Timer Screen after the event occurs.


6. Use the ▲ or ▼ keys to choose the type of event, and press **SELECT**.

A screen similar to this displays.

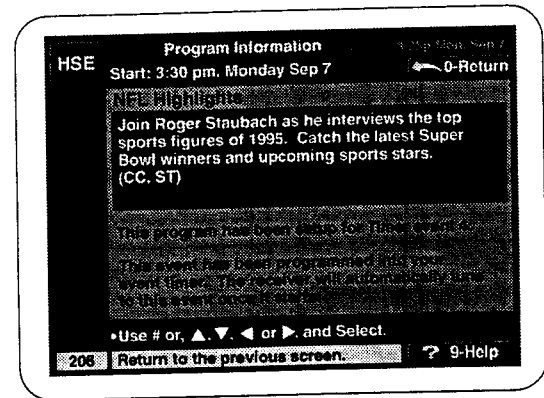

7. Highlight **3-Record** and press **SELECT** to store the program in the Timer and turn the VCR control option on.

 **Note:** The DSS system will tune to the program when it's on, and will also control your VCR. This option records the event.

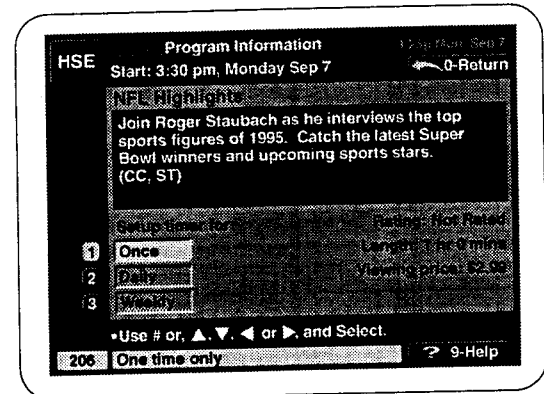

There are three types of recording events:

 
**Once**—This type of event only occurs one time. After the event is recorded, the event information is removed from the Timer.

**Daily**—This type of event occurs each weekday—Monday through Friday. The event information is not removed from the Timer Screen after the event is recorded.

**Weekly**—This type of event occurs one day every week. The event information is not removed from the Timer Screen after the event is recorded.

8. Use the ▲ or ▼ keys to choose the type of event, and press **SELECT**.

A screen similar to this displays.

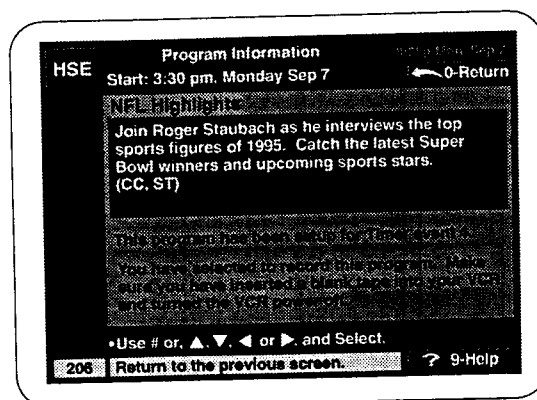

9. If you select Return, the Program Information Screen is removed, and the guide you were in displays.

**Note** Press **EXIT** to remove all screens and return to Normal Viewing.


### One-Touch Recording (OTR)

 One-Touch Recording allows you to record a program simply by touching one button on your remote.

To use the One-Touch Record feature, follow these steps:


1. Display an on-screen guide.

For example, press **GUIDE** on your remote to display the Program Guide.

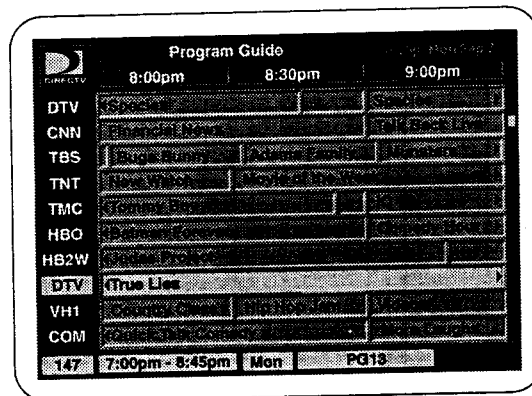

2. Highlight a program from the guide and press and hold **REC** for three seconds on your remote.

 A screen similar to this displays.

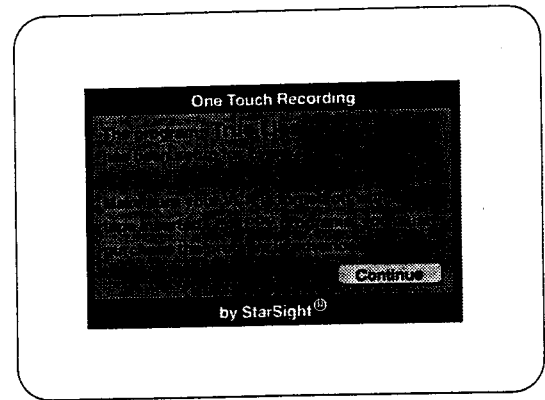

**Note** You do not have to display a guide if you want to record the program you're watching, simply press and hold **REC**. If a program is showing when you use the **OTR** feature, the current time is used as the start time for the program.

Your receiver will remain on the channel unless **EXIT** on your remote is pressed to cancel the recording.

Always check to make sure a tape is in your VCR, and it is off before using **OTR**.

## **VCR Control Commands**

When **Rec** is set to **Yes** in the Timer, the UDS 200 sends these commands to your VCR before a program begins:

 
- ☐ **Power** — Turns the VCR on just prior to the start of the program
- ☐ **Channel Number** — Sends the channel change command that matches your VCR setting. (If the setting is in "Line Out," no channel number is sent.)
- ☐ **Record** — Starts the VCR record option.
- ☐ **Stop** — Stops the VCR when the program ends.
- ☐ **Power** — Turns the VCR off.

For information about how to set your DSS system to work with your VCR, see "Set up VCR" on page 48 .

## Changing an Event

To make a change to a Timer Entry, follow these steps:


1. Display the Timer Screen, and Highlight the event you want to change.
2. Press **SELECT** to display a Change Screen similar to this.

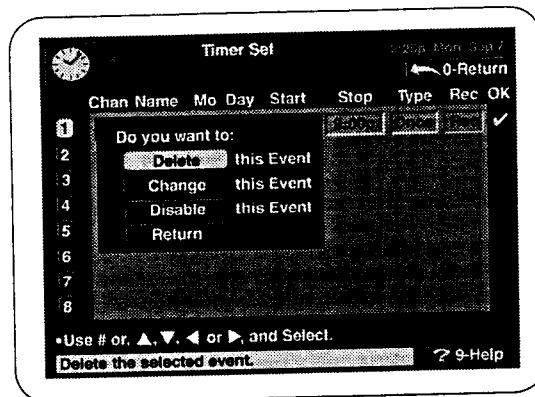

3. You can choose to Delete, Change, Disable/Enable, or Return.


## Deleting the Event

 If you select **Delete**, then all of the information for the event is cleared, and the event number is highlighted so you can make another entry.

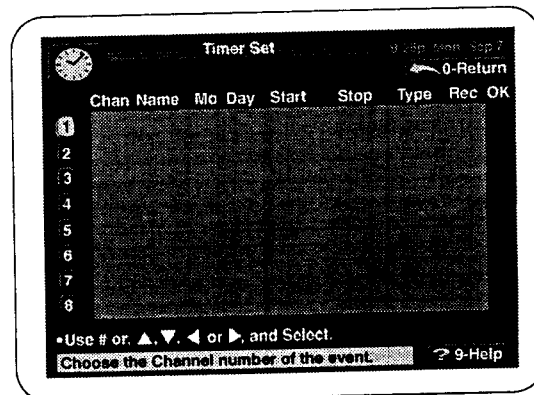

## Changing the Event

 If you select **Change**, then none of the information is cleared and the Timer Screen returns. The check-mark changes to “?”.

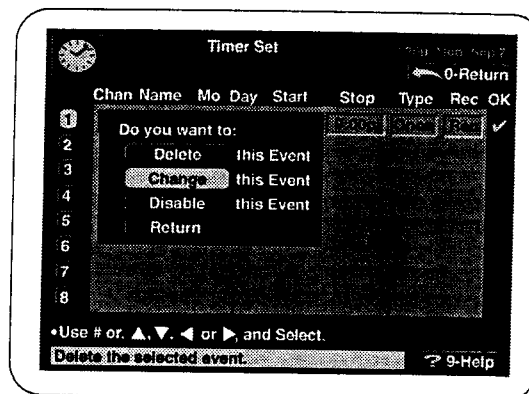


Make the changes you want following the steps in “Programming the Timer” above. After the changes are made, press **SELECT** to store the new information. If there are no conflicts, the check-mark displays next to the event.

## Disabling/Enabling the Event

 To Disable/Enable any event stored in the Timer.

1. Display the Timer Screen, and Highlight and Select the event you want to change.

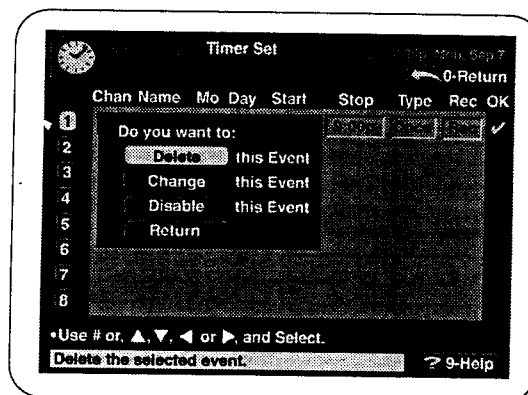


2. If the event has a check-mark in the OK field, Disable displays. Highlight Disable and press **(SELECT)** to disable the event

—or—

If the event has a question mark in the OK field, Enable displays instead. Highlight Enable and press **(SELECT)** to enable the event again.

 
When you disable an event, you're not deleting it, you're simply telling the Timer to ignore the event. It remains stored until you decide to enable it later or delete it from the Timer. Remember though, a disabled event takes up one of the eight available events used to store other programs.

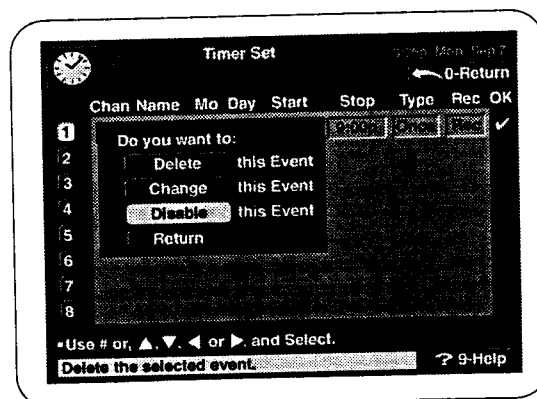

## Program Start Announcement

When a Timer event is about to start, a warning message displays one minute before the Event starts.

 If you don't interrupt the Timer function, the program starts as scheduled, or you can Highlight **Continue** and press **(SELECT)** and the program will start as scheduled.

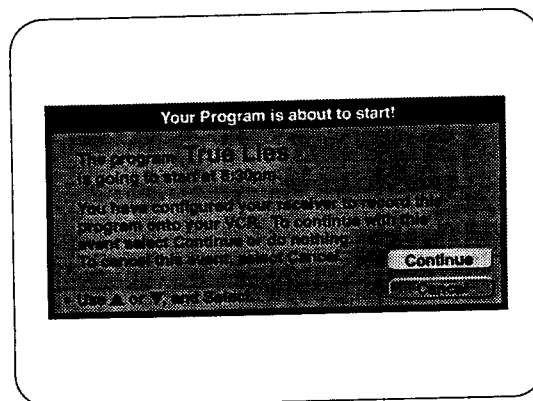

You can cancel the the event by Highlighting **Cancel** and pressing **(SELECT)**. If you select **Cancel**, then Start Warning Screen cancels, and the program will not display.

## During the Event

During an event, you cannot control any functions on the receiver. All remote control keys as well as the Front Panel keys blocked. You can, however, press **EXIT**. If you press **EXIT**, the event is canceled.

## Program Guide for Timer Events

If an event is programmed in the Timer, then the Program Guide will show a timer icon in the program's time slot which indicates that a program is stored in the Timer.

 
## List Guides

The List Guide allows you to select a category and one or more sub-categories for programs which are then displayed in alphabetical order. This is helpful if you're trying to find out if your all-time favorite movie is showing!


To set up the List Guide, follow these steps:

1. Press **MENU** on your remote.
2. Highlight List Guide on the Main Menu and press **SELECT** or press **(2)**.
3. Highlight the category you want, and press **SELECT**.

Highlight **OK** and press **SELECT** again.

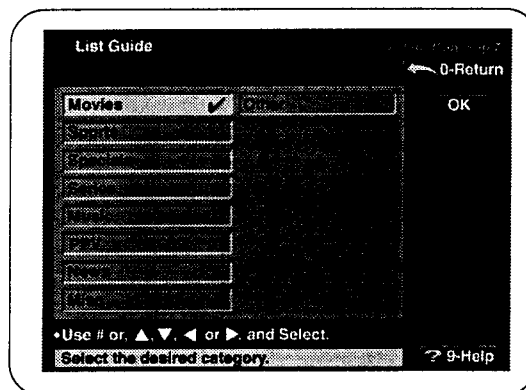


 4. Highlight and **SELECT** each sub-category you want, and then Highlight **OK** and press **SELECT** again.

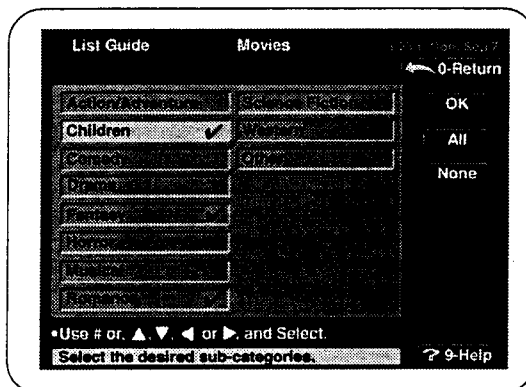



 5. A guide similar to this displays.

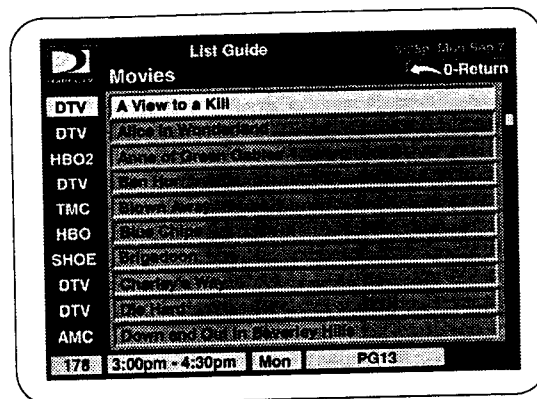

When the List Guide displays, you can:


- ☐ Highlight and tune to a program which is on
- ☐ Get more Information about a program
- ☐ Page through the programs or page through upcoming events
- ☐ Display a Single Channel Guide for a Highlighted channel.

## Purchases

 The Purchases feature allows you to review the purchases you made or cancel purchases if they have not been viewed.

To review your purchases, follow these steps:


1. Press **MENU** on your remote.
2. Highlight Purchases and press **SELECT** or press **3**.

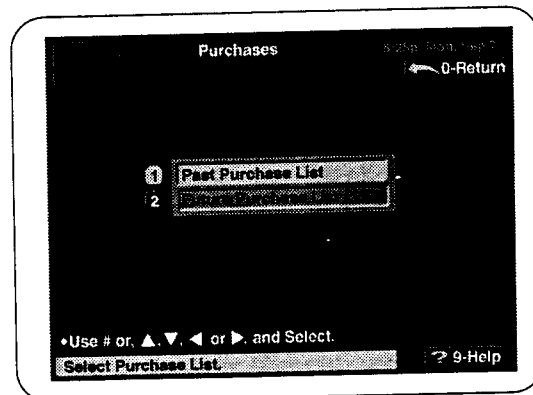


3. Highlight either Future or Past Purchases, and press **SELECT**.

4. If you select Past Purchases, a screen similar to this displays.

 
Use the ▼ or ▲ keys to review your past purchases.

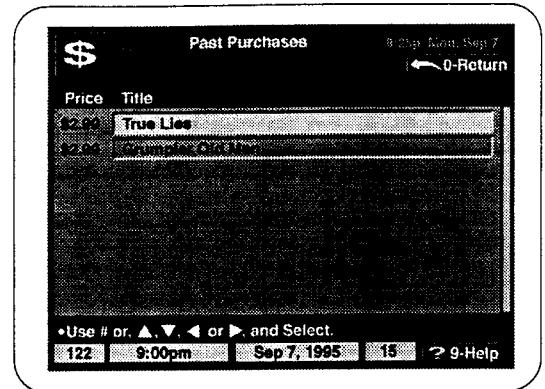

 5. If you select Future Purchases, a screen similar to this displays.

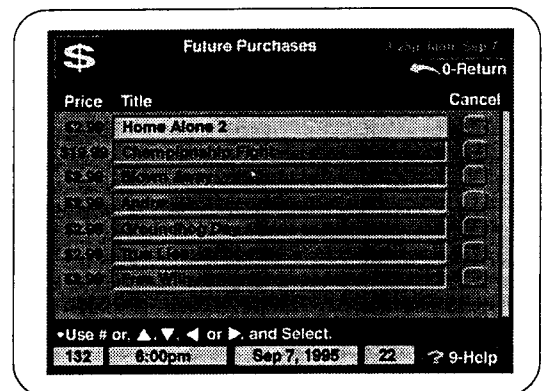

 
6. Highlight **Cancel** next to a purchase and press **SELECT** to cancel the upcoming event.

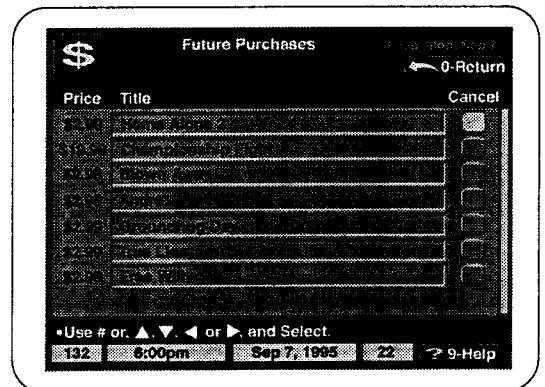

7. Highlight **Yes** to cancel the purchase

—or—

 Highlight **No** to return to the Future Purchases screen.

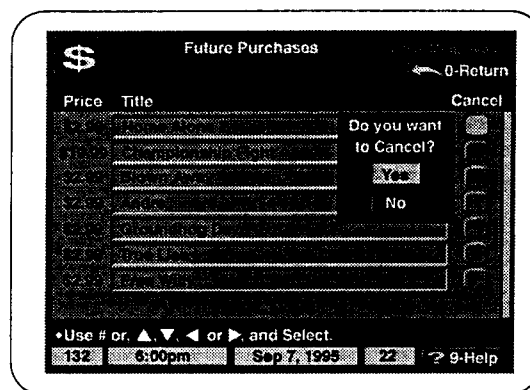


## Data Services

Your DSS receiver can receive Data Services if they are broadcast by your service provider. When you select a channel which includes the Data Services, the DATA ICON displays in the Channel Information Banner.

To view the Data Services Screen, follow these steps:

 1. Press **MENU** on your remote.
2. Highlight Data Services and press **(SELECT)** or press **(4)**.

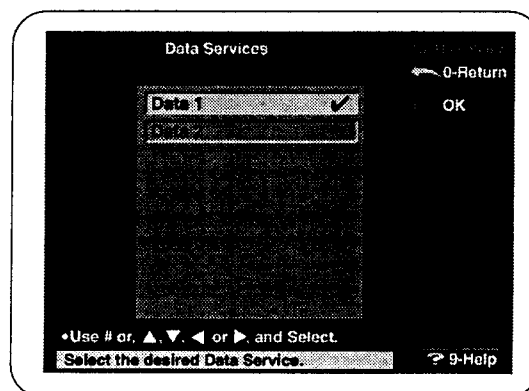


3. Highlight the Data Service you want and press **(SELECT)**.
4. Press **EXIT** on your remote to return to Normal Viewing.

## Other Guides

 The Other Guides feature allows you to quickly access some of the special guides available to you, like the Attractions or Preview Guides.

To display the Other Guides Screen, follow these steps:

1. Press **MENU** on your remote.
2. Highlight Other Guides and press **(SELECT)** or press **(5)**.

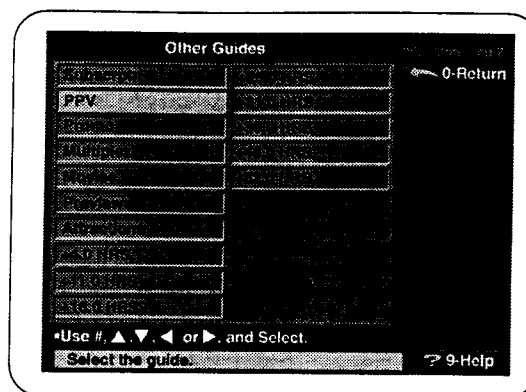

3. Choose the guide you want, and press **(SELECT)** to display the guide.

**Note:** Most of the features available in the program guides are available when using this feature.

## Lock/Unlock System

 
### Locking Your System

All of the Spending Limits, Rating Limits, and Parental Locked channels are active (i.e. enforced) **only** when your receiver is locked. So if you set Spending or Rating Limits or decide to lock certain channels so they cannot be watched, remember you must also lock your system.


To Lock your system, follow these steps:

1. Press **MENU** on your remote.
2. Highlight Lock System and press **(SELECT)** or press **(6)**.

3. Use your remote keypad to enter a 4-digit password.

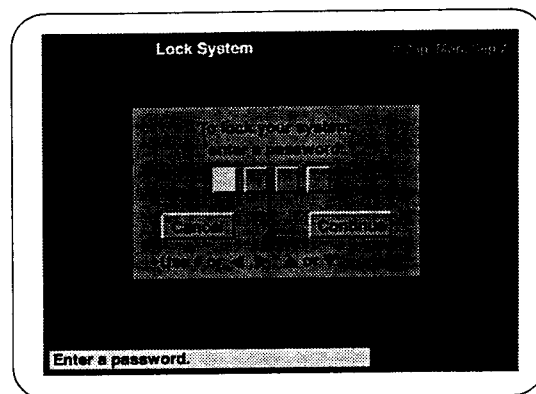


 4. Use your remote keypad to confirm your new password.

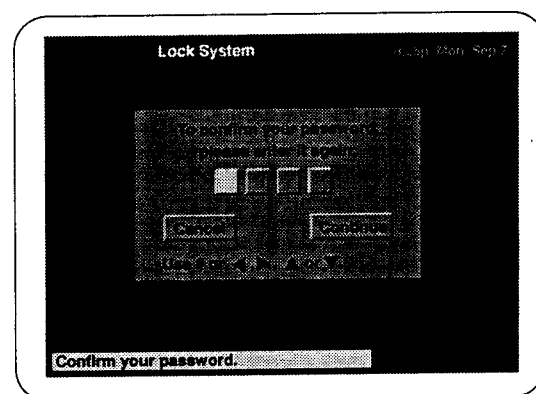

Once your password is confirmed, your system is locked. All Spending Limits, Rating Limits, and Channel Locks are now active.

 
5. You can always tell if your system is locked because the lock icon appears when the Channel ID Banner displays.

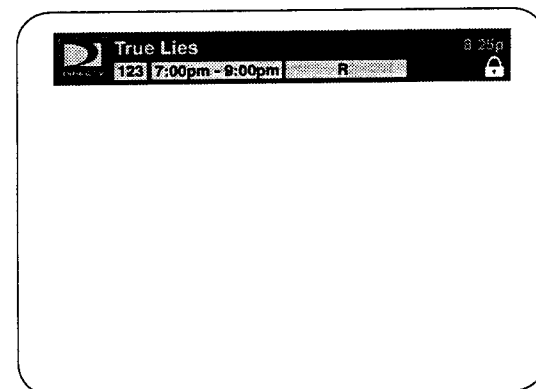


## Unlocking Your System

To Unlock your system, follow these steps:

 1. Press **MENU** on your remote.
2. Highlight UnLock System and press **(SELECT)** or press **(6)**.
3. To unlock your system, use your remote keypad to enter your 4-digit password.

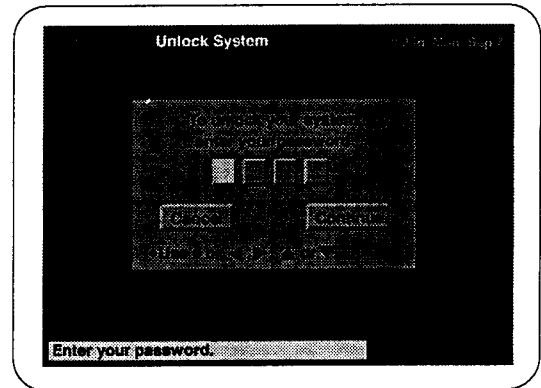

 4. After entering the last digit on your remote keypad, **Continue** is automatically selected and the Main menu displays.

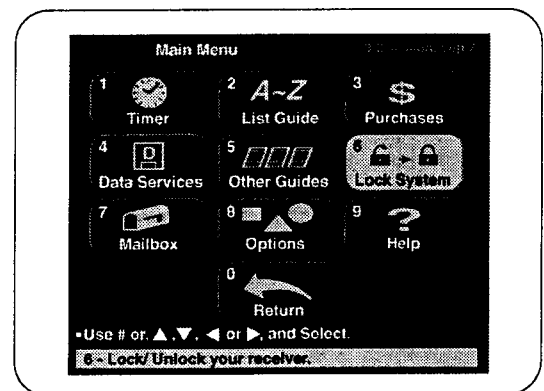


**Note** If you forget your password, call your Service Provider for assistance.

Once your password is confirmed, your system is unlocked. All Spending Limits, Rating Limits, and Channel Locks are now inactive.


## Session Unlock

 
If your system is locked and you choose a channel which exceeds a Spending Limit, Rating Limit, or is Parental Locked, a message displays telling you the channel is blocked. To temporarily unlock your system and view the channel, follow these steps:

1. Press **(SELECT)**.
2. Use your remote keypad to enter your password.

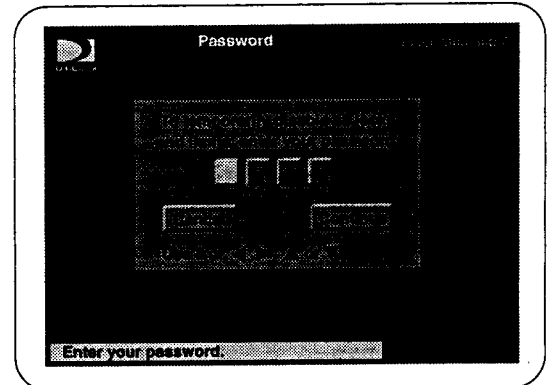

After you have entered your password, the channel you want displays. However, your system is temporarily unlocked, so all Spending Limits, Rating Limits, and Parental Locks are now inactive.

 3. You can always tell if your system is temporarily unlocked because the unlock icon  appears when the Channel ID Banner displays.

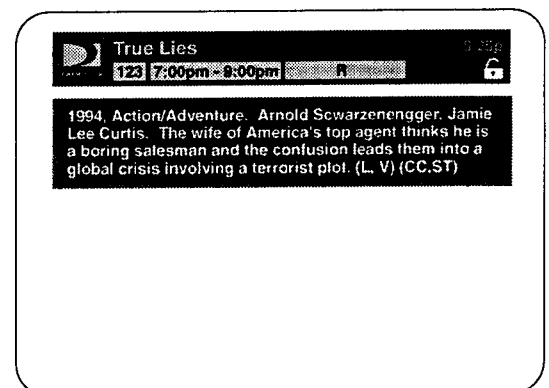

When you turn your DSS system off, the Session Unlock is canceled. The next time you turn your DSS system on, it will be locked and all Spending Limits, Rating Limits, and Parental Locks will be active again.

## Mailbox

Your mailbox allows your Program Provider to send you information about new services or special features.

### How To Tell When You Have Mail

Your receiver indicates that you have new messages in two different ways:

1. If your receiver is off, the Power key on the front panel flashes red

—or—

 
If your receiver is on, the Power Key is red and it flashes when there is a new message.

2. The Mail Icon displays in the Channel Information Banner when there is a new message.

### To Read Your Mail

To view your messages:

1. Press **MENU** on your remote.
2. Highlight Mailbox and press **(SELECT)** or press **(7)**.

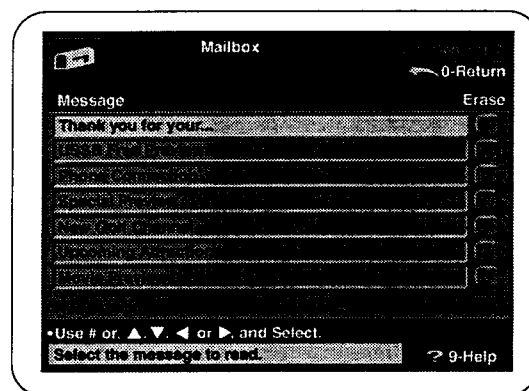


3. Highlight the message you want to read, and press **(SELECT)** to display the message.
4. Press **0-Return** to return to your Mailbox Screen.




## To Erase a Message

 1. Display your Mailbox Screen.

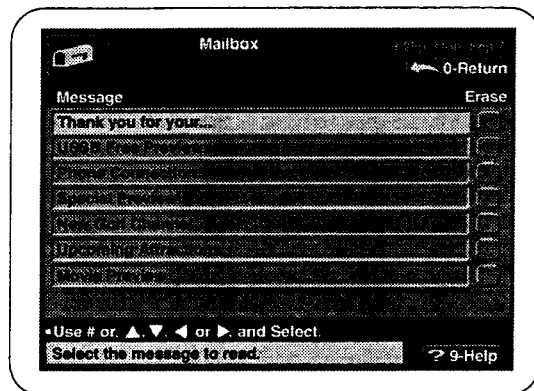

 2. Highlight Erase next to the message you want to delete, and press **(SELECT)**.

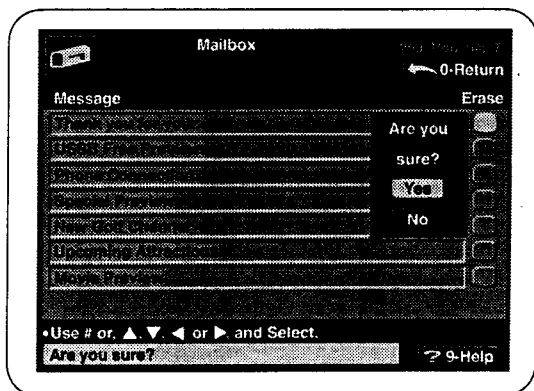

3. Choose **Yes** to delete the message

—or—

Choose **No** to cancel and save the message.

**Note:** There are certain messages which are automatically erased after a period of time.


---

## The Options Menu

 ---

The Options Menu provides access to features which allow you to modify your UDS 200 to meet your specific needs. For example, you can set Locks and Limits or adjust installation settings. To display the Options Menu, follow these steps:

1. Press **MENU** on your remote.
2. Highlight Options and press **SELECT** or press **(8)**.

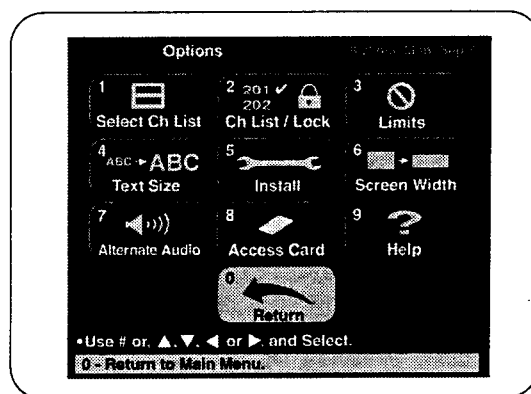

---

## Features

---

 
The following features are available on the Options Menu.

- ☐ Select Channel List—Choose between the Master or Custom Channel Lists
- ☐ Channel List/Lock—Sets up your Custom Channel List or Lock a Channel to prevent its viewing.
- ☐ Limits—Sets the Rating and Spending Limits.
- ☐ Text Size—Changes the screen text sizes.
- ☐ Install—Displays the Installation Screen.
- ☐ Screen Width—Change the aspect ratio for your screen.
- ☐ Alternate Audio—Change the default alternate audio.
- ☐ Access Card—Change Access cards.
- ☐ Help—Displays the Help Screen.
- ☐ Return—Returns you to the Main Menu.

## Selecting a Channel List

The Select Channel List lets you to display only the channels selected in your Custom Channel List or display the Master Channel List which includes all the channels broadcast by your service provider.

1. Press **MENU** on your remote.
2. Highlight Options and press **(SELECT)** or press **(8)**.
3. Highlight the Channel List and press **(SELECT)** or press **(1)**.

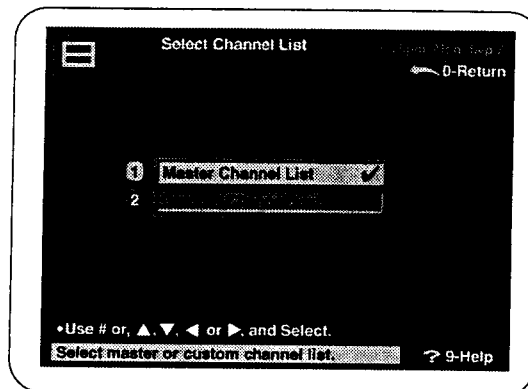

4. Highlight either the Master Channel List or Custom Channel List and press **(SELECT)**.
5. Highlight **0-Return** and press **(SELECT)** to return to the Options Menu.

## Channel List/Lock

 
The Custom Channel List/Channel Lock feature allows you to select the channels you want in your custom channel list, and it allows you to prevent the viewing of certain channels in both the Master Channel List and the Custom Channel List.

### Setting up a Custom Channel List

1. Press **MENU** on your remote.
2. Highlight Options and press **(SELECT)** or press **(8)**.
3. Highlight ChList/Lock and press **(SELECT)**.


4. Enter your personal 4-digit password, if necessary.

When you first display this screen, all the channels provided are selected. A check-mark appears to the right of each channel number. If you turn the check-mark off, the channel is removed from your Custom Channel List.

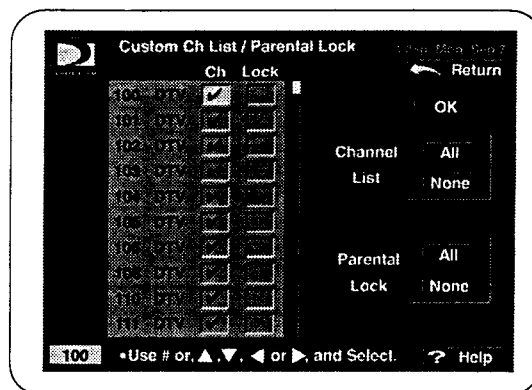

When you choose **Custom Channel List** from the Options Menu, then only the channels checked in the Custom Ch List display when you use the ▲ or ▼ keys on your remote to change channels. Also, only these channels appear in the guides.

 5. Highlight a channel's Ch box and press **SELECT** to turn off the check mark.

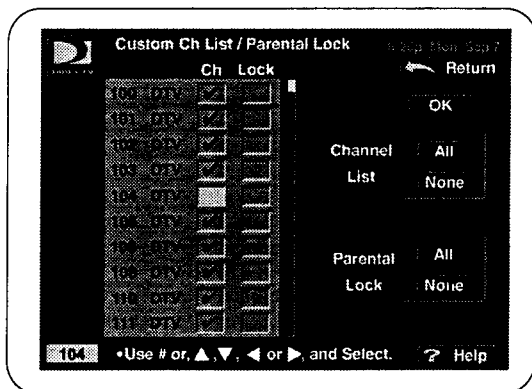

6. To quickly select all the channels, press **All** next to **Channel List**

—or—


To quickly deselect all the channels, press **None** next to **Channel List**.


**Note:** If you uncheck all the channels and select OK, then no channels will appear in your program guides.

7. After choosing the channels for your Custom Channel List, Highlight **OK** and press **SELECT** to store the changes you've made.

## Locking a Channel

 
1. Press **MENU** on your remote.
2. Highlight Options and press **SELECT** or press **(8)**.
3. Highlight ChList/Lock and press **SELECT** or press **(2)**.
4. Enter your personal 4-digit password, if necessary.


When you first display this screen, no channels are locked. The lock symbol for each channel is blank. If you lock a channel, the  icon appears to the right of the channel number.

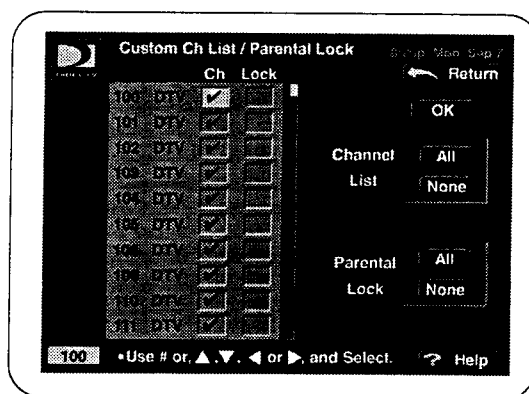

**Note:** If you lock out a channel, you can still tune to the channel during normal viewing; however, if your system is locked, you must enter your password before the program displays.

5. To lock a channel, Highlight its lock box and press **SELECT**.

 This locks the channel and displays the  icon.

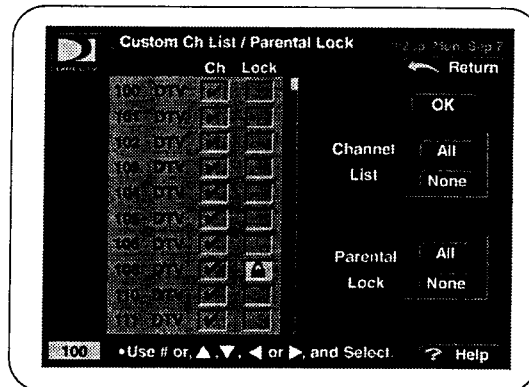

6. To quickly lock all the channels, press **All** next to **Parental Lock**

—or—

To quickly unlock all the channels, press **None** next to **Parental Lock**.


7. After choosing the channels you want locked, highlight **OK** and press **SELECT** to store the changes you've made.

## Limits

 
Set spending or rating limits for a program or a channel with this option.

### Setting the Rating Limit


1. Press **MENU** on your remote.
2. Highlight Options and press **(SELECT)** or press **(8)**.
3. Highlight Limits and press **(SELECT)** or press **(3)**.
4. Enter your personal 4-digit password, if necessary.

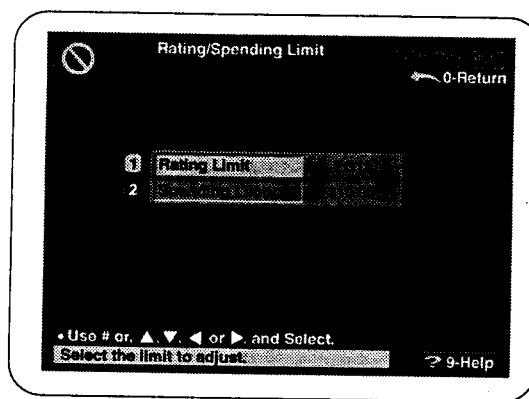


 5. Highlight Rating Limit and press **(SELECT)** or press **(1)**.

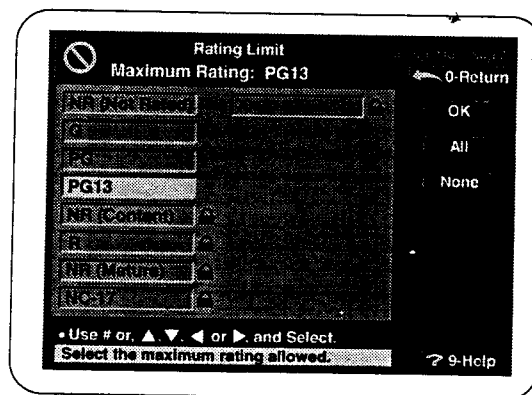

- Use the ▲ or ▼ key to Highlight the new rating limit you want, and press **SELECT**.

 For example, to set R as the new limit, Highlight R and press **SELECT**. Each rating above R will now have a  icon next to it.

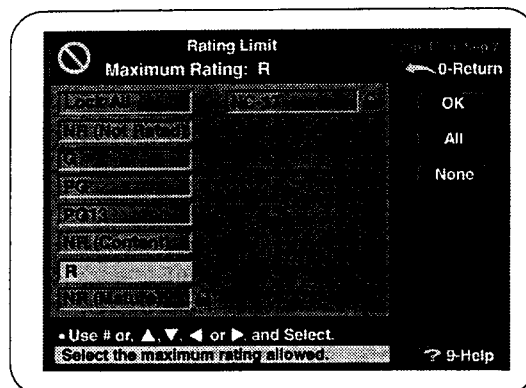

**Note** If you select All, then all your channels will be locked


—or—

If you select None, then no channels will be locked.


- Select **OK** to store the new limit.

## Setting the Spending Limits

 - Press **MENU** on your remote.
- Highlight Options and press **SELECT** or press **(8)**.
- Highlight Limits and press **SELECT** or press **(3)**.
- Enter your personal 4-digit password, if necessary.

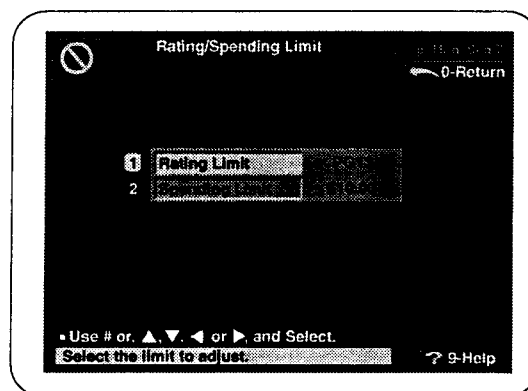

 5. Highlight **Spending Limit** and press **SELECT** or press **2**.

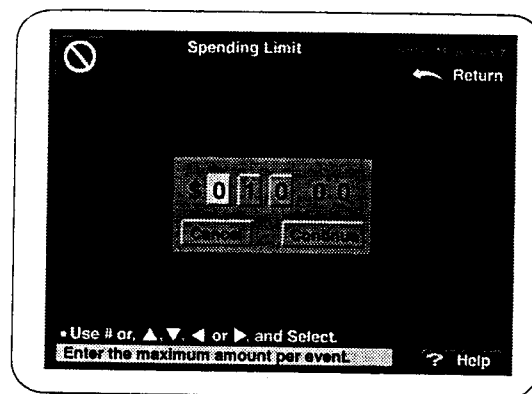


6. Enter the amount directly using either your remote keypad or the **▲**, **▼**, **◀**, or **▶** arrow keys.  
If you use arrow keys you must highlight **Continue** after entering the maximum amount for each program.
7. Highlight **Continue** and press **SELECT** to set the new spending limit.

**Note:** Remember, this is the spending limit for each program.

## Changing the Default Text Size

 This feature allows you to change the size of the text in some of the Menus and Screens.

1. Press **MENU** on your remote.
2. Highlight **Options** and press **SELECT** or press **8**.
3. Highlight **Text Size** and press **SELECT** or press **4**.

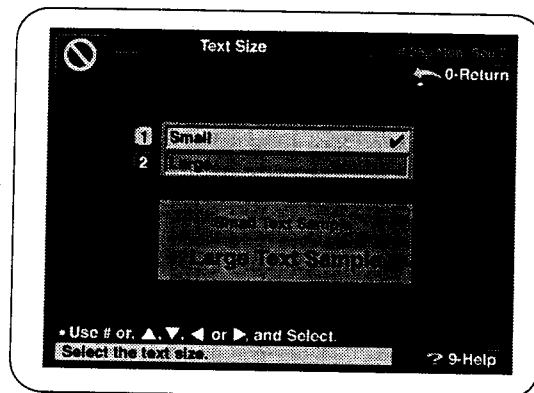

4. Highlight either **Small** or **Large** and press **SELECT**.



## Install Screen

The Install Screen provides useful information which is required when installing your antenna.

 
**Note** Refer to the Installation Guide included with your satellite dish for information about the following Installation Screen choices:

- ☐ Entering a Zip Code
- ☐ Entering the Latitude
- ☐ Changing the Transponder Setting

## Running a System Test

The System Test provides a way for you to test the signal, tuning, phone connection, and access card for your receiver.


1. Press **MENU** on your remote.
2. Highlight Options and press **SELECT** or press **(8)**.
3. Highlight Installation and press **SELECT** or press **(5)**.

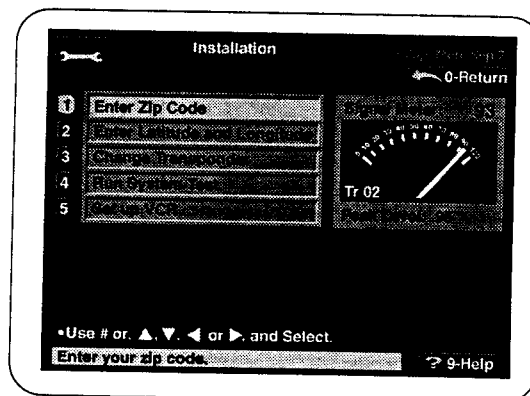

4. Highlight **Run System Test** and press **SELECT** or press **(4)**.


Questions marks “??” appear next to the item tested. When the receiver passes a test, **Pass** displays and the next test starts.

 When the Access Card test is complete, the card number displays if there isn't an error.

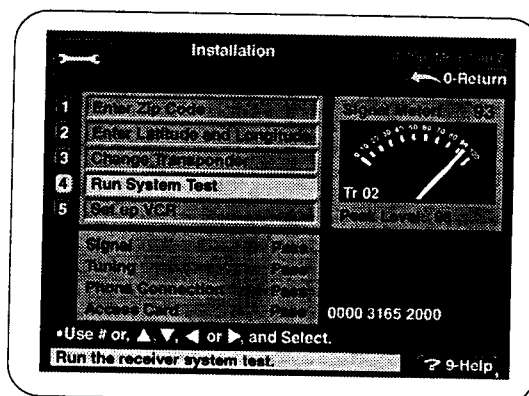

5. If there is an error during a test, **Error** displays next to the test.

 Follow the troubleshooting tip to locate and correct the problem.

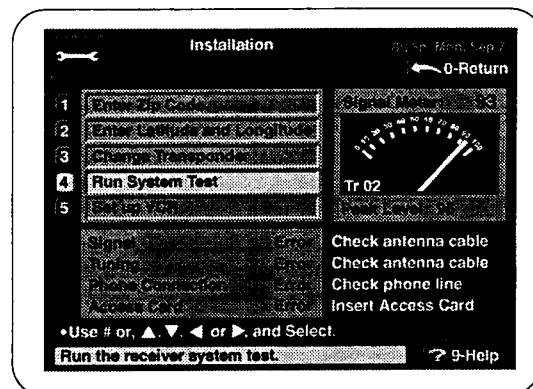

## Set up VCR

 
For Automatic Programming to work properly, your DSS system must be able to control your VCR. To set your DSS system to work with your VCR, you must:

- ☐ Install the included IR emitter
- ☐ Set the VCR code and Channel Number for your VCR

## Installing the IR Emitter

To install the IR emitter included with your UDS 200, follow these steps:

1. Plug the IR emitter into the back of your UDS 200.


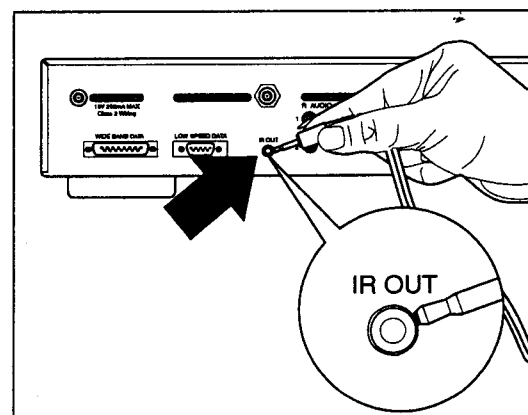


2. Locate the IR sensor on your VCR.

3. Using the double-stick tape, place the IR emitter close to your VCR's sensor. You may find it easier to place the emitter on top of your VCR

—or—

  
Place the emitter on the bottom of your VCR.

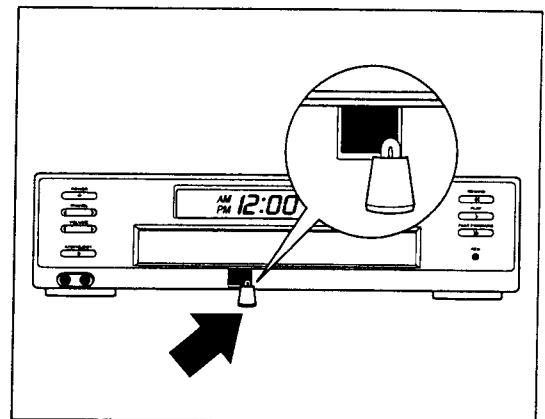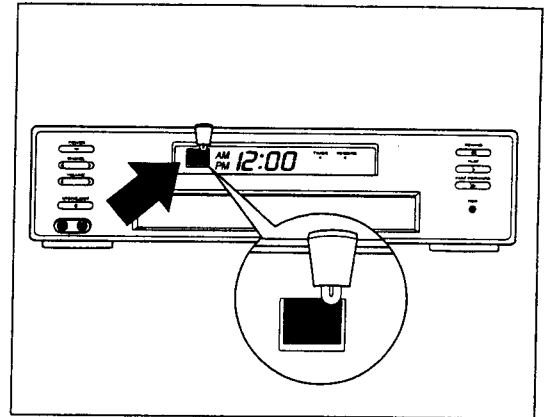


### **Setting the VCR Code/Channel Number**

To set your DSS system to properly control your VCR, follow these steps:

 
1. Press **MENU** on your remote.
2. Highlight Options and press **SELECT** or press **8**.
3. Highlight Installation and press **SELECT** or press **5**.

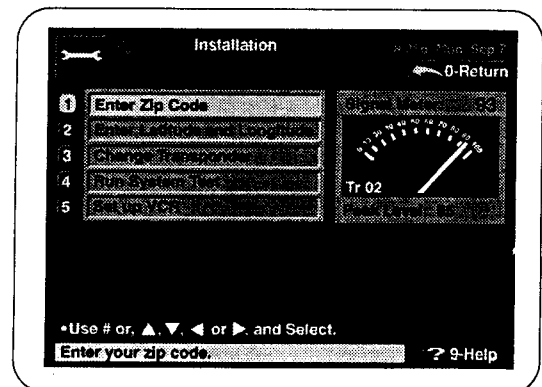

 4. Highlight **Set up VCR** and press **SELECT** or press **5**.

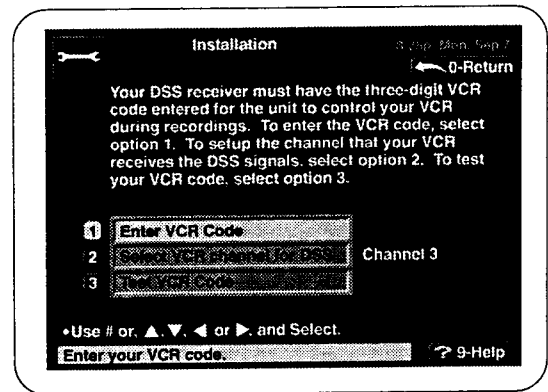


 5. Highlight **Enter VCR Code** and press **SELECT** or press **1**.

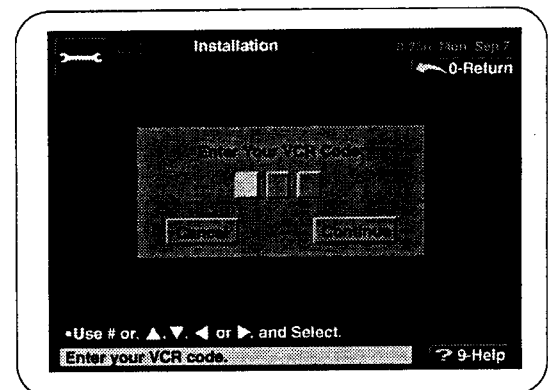

6. Enter the code for your VCR using your remote keypad or the **▼**, **▲**, **◀** or **▶** keys.

 
Highlight **Continue** and press **SELECT**.

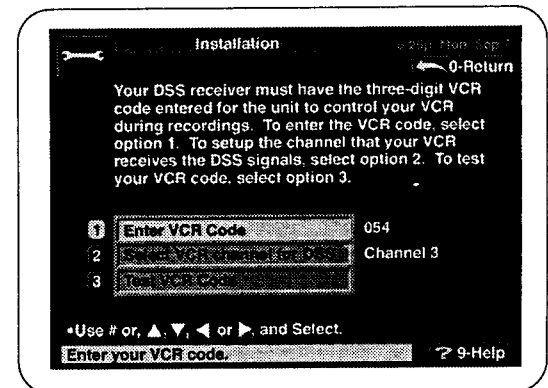

**Note** Refer to the Addendum for a Manufacturer's list of VCR codes. Some manufacturers list several codes for their VCRs, so you may have to try different codes until you find the one which correctly operates your particular VCR model.

7. Highlight **Select VCR channel for DSS** and press **(SELECT)** or press **(2)**.

 Highlight each field which applies to your VCR and press **(SELECT)**. Then Highlight **Continue** and press **(SELECT)**.

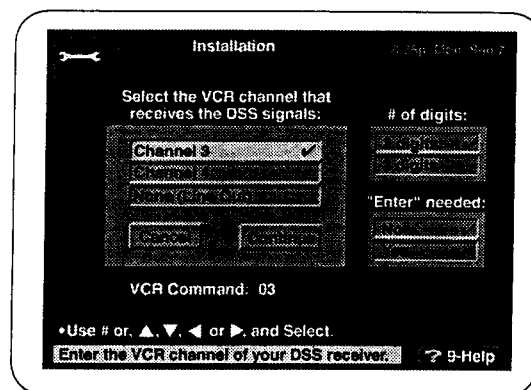

Use this screen to:

 
- ☐ Enter the channel which your VCR will receive DSS signals on.

**Note** If you choose **None (Line Out)**, no channel information is sent before a program starts.

- ☐ Set the **# of digits** for your VCR's channel format. For example, either **03** or **003**.
- ☐ Send an **Enter** command if it's required before your VCR will change channels.

8. To test the VCR code you've set for your VCR, Highlight **Test VCR Code** and press **(SELECT)** or press **(3)**.

The word **Testing...** flashes while the receiver attempts to control your VCR.

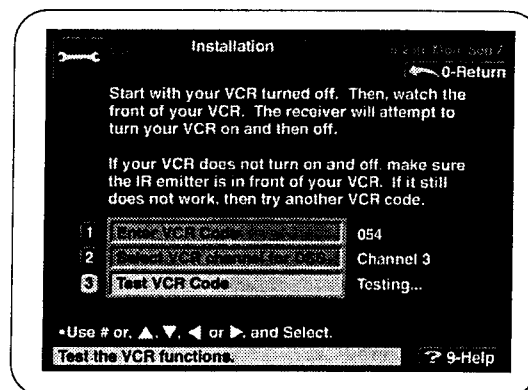

If the code you've set for your VCR is correct, you should see the following during the test:

- ☐ Your VCR will turn on.
- ☐ Your VCR will change to the channel you've set.
- ☐ Your VCR will turn off.


**Note** If these don't occur, you must set a different code for your VCR.

## Setting the Picture's Aspect Ratio

 This feature allows you to change the aspect ratio for your picture. There are two ratios, 4:3 for regular television and 16:9 for wide screen television. Currently, most video signals broadcast are in a 4:3 aspect ratio.

To change the aspect ratio, follow these steps:

1. Press **MENU** on your remote.
2. Highlight Options and press **(SELECT)** or press **(8)**.
3. Highlight Picture Size and press **(SELECT)** or press **(6)**.

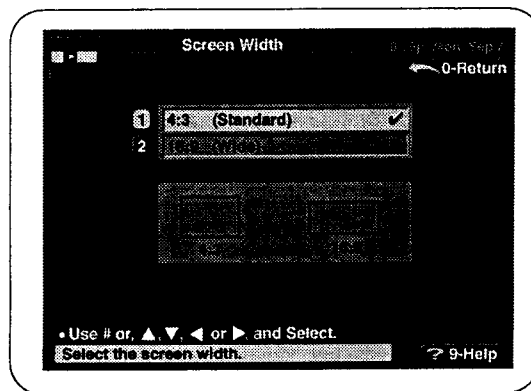

4. Highlight the Aspect Ratio you want and press **(SELECT)**.

The screen aspect ratio is changed and the Options Menu returns.

**Note** You should only use the 16:9 option if you have a wide screen television. Using this option on a standard television may crop your picture.

## Alternate Audio

 
It is possible for a channel to have different audio tracks available, each track with a different language. When you select Alternate Audio for a channel, a different audio may be selected. Use this feature to set which Alternate Audio, or language, you want played when the Alternate Audio Icon is selected.

**Note** If the default language you select is not broadcast with a program you choose, then English will be the default language.

To change the default Alternate Audio, follow these steps:

1. Press **MENU** on your remote.
2. Highlight Options and press **(SELECT)** or press **(8)**.

- Highlight Alternate Audio and press **SELECT** or press **7**.

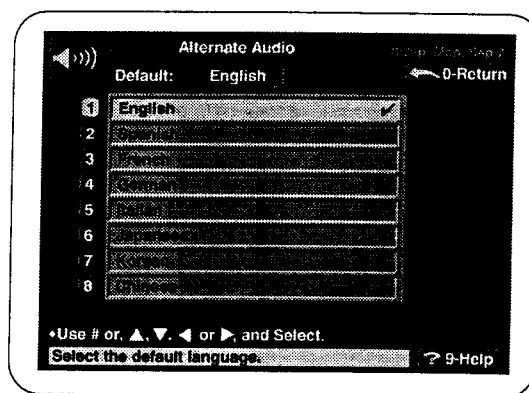


- Highlight the default language for Alternate Audio, and press **SELECT**.  
The default Alternate Audio is changed, and the Options Menu returns.

## Updating a New Access Card

 Periodically, your program provider may issue you a replacement card. This feature lets you transfer the information from your current Access Card to a new Access Card.

To transfer the information, follow these steps:

- Press **MENU** on your remote.
- Highlight Options and press **SELECT** or press **8**.
- Highlight Access Card and press **SELECT** or press **8**.

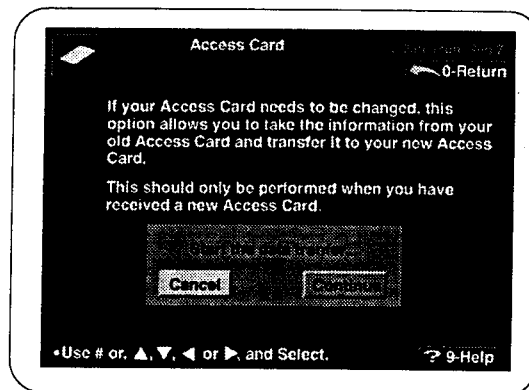


- Select **Continue** to transfer or **Cancel** to return to the Options Menu.

**Note:** Once you have transferred the information to your new access card, your old card becomes invalid.

## Help

 The Help option provides information about each Option Menu item.

1. Press **MENU** on your remote.
2. Highlight Options and press **SELECT** or press **8**.
3. Highlight Help and press **SELECT** or press **9**.

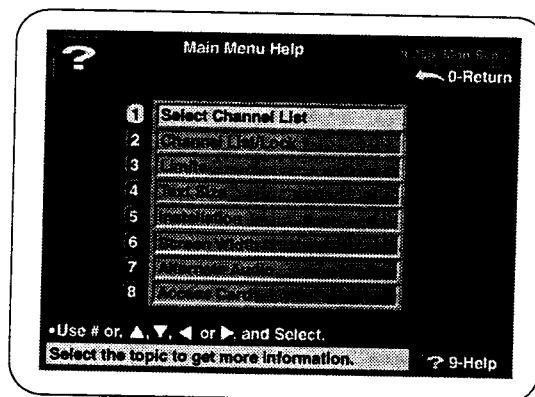

4. Select the Menu Option you want to know more about.



---

## The Program Guide

 
---

The Program Guide is an On-Screen schedule of programs. You can use the Program Guide to tune to a program that is showing, or you can use it like a viewing schedule to see what's coming up next. You won't ever have to find some magazine again; you'll just simply press **GUIDE** and see what's on. You can also get more information about a program, change the format to make finding a program easier, or close the guide so you can "channel surf" the many programs available from your program provider.

### The Grid Guide

---

Your Program Guide is presented in a grid format. When you press **GUIDE**, a screen similar to this one displays:

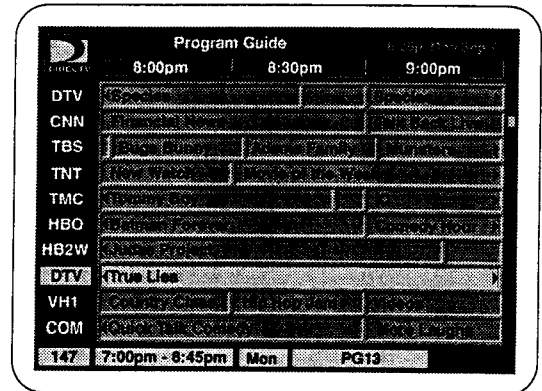


### Changing Channel Display


---

When you select a program guide, you can change the appearance of the channel number display using **LAST**. This key will change between channel abbreviations and channel numbers. To change how your channels display in a guide, follow these steps:

 1. Display a guide.

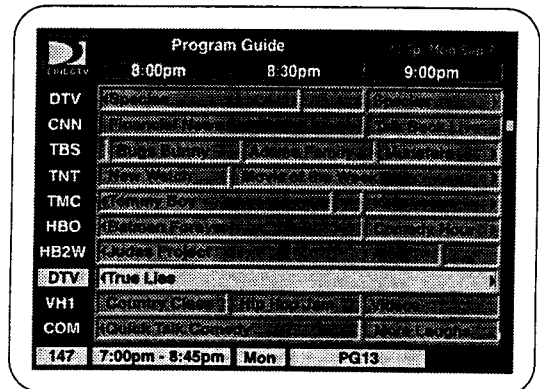

 2. Press **LAST** to display the channel numbers.

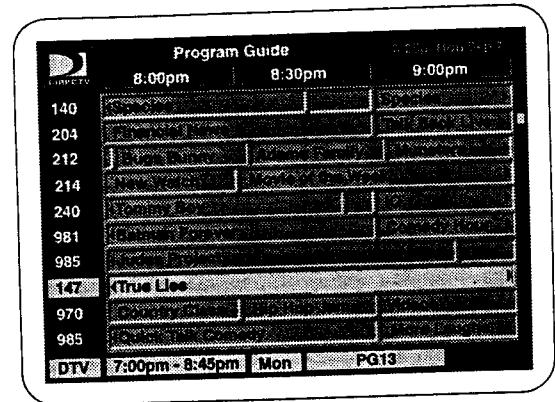

3. Press **LAST** again to change back to the channel abbreviations.

## Program Information

When you Highlight a program, you'll see the channel number, program rating, and the start and stop times at the bottom of the screen. This information changes each time you Highlight a different program. There may also be different Information icons. There are four icons:



Indicates the system is locked.



Indicates the system is temporarily unlocked.



Indicates the channel is broadcasting more than one alternate audio.



Indicates the channel includes a data signal for a computer.

## Time Intervals

There are three half hour intervals displayed at the top of the grid, and you will see a "status" indicator which provides a visual representation of the time that has passed since the first time slot started.

For example, if the current time is 8:25pm, then the "status" indicator shows 25 minutes of the 8:00pm time slot complete.

The grid contains program information for the next 90 minutes. Ten channels are listed, and programs that have started before the current time are shown with a ◀ before their name. Likewise, programs that extends past the current display have a ▶ after their name. You'll also see each channel's abbreviation or its number along the left side of the screen.

 
## Open Grid Guide Features

When the Grid Program Guide is open, you can:

- ☐ tune to a program
- ☐ get more information about a selected program
- ☐ page through the available channels or page forward to see upcoming events.

### Tuning to a Program

1. Use the arrow keys or enter the channel directly, and then Highlight the program you want.

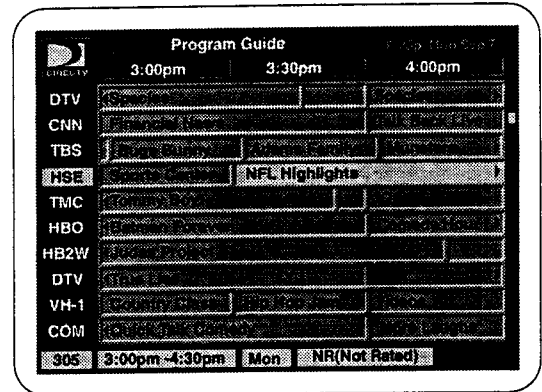


2. Press **SELECT**.

If the program is showing, your receiver changes to the channel, and removes the Program Guide from the screen.


3. If the program is an upcoming event, a Program Information screen similar to this displays.

 For information about viewing or recording upcoming events, refer to Automatic Programming on page 21.

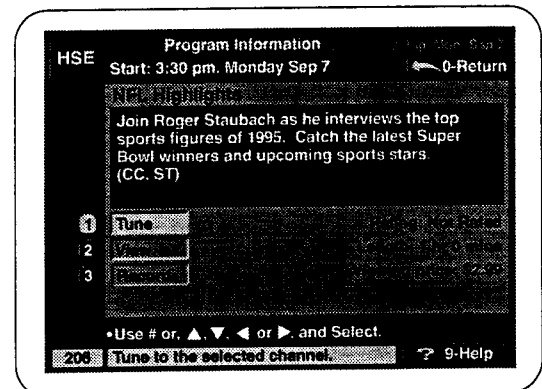

## Getting More Information

 You can get more information about a program in the Program Guide. If you Highlight a program and press **INFO**, a screen similar to this displays:

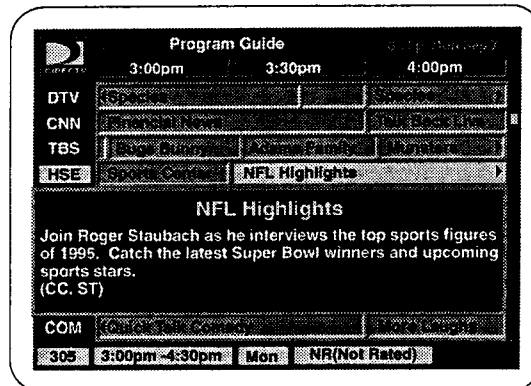


An **INFO** box typically contains this information:

- ☐ Show Title (NFL Highlights)
- ☐ Year and Show Type (1995, Commentary)
- ☐ Description (What's it about)
- ☐ Contents
- ☐ Closed Caption/Stereo (CC, ST)

To cancel the information box and return to the guide, press **INFO** again.

## Paging Through Channels

 1. Press **PAGE** on your remote to scan 9 channels at a time.

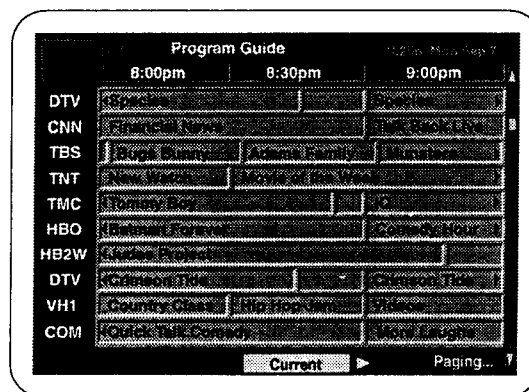

2. Use the **▲** or **▼** key to scroll through the available channels broadcast by your service provider. The window indicator along the right side of the Paging screen indicates what section of the channels are currently in the viewing window.


**Note:** You can only use the arrow keys while paging.

3. Press **PAGE** again to cancel paging.

## Paging Through Upcoming Events

 
The Program Guide broadcast by your service provider usually has several hours of programming for each available channel. You can view the upcoming events using your page feature.

1. Press **PAGE** on your remote. Notice **Current** is shown in a horizontal paging window at the bottom of the screen.

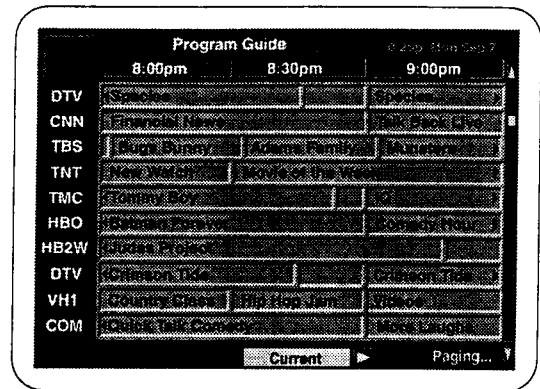

2. Use the **►** key to page forward (horizontally) through upcoming events. As you move forward, you are simply accessing upcoming time slots.

 
Sometimes there is a short pause while the new guide is acquired, and you'll see this screen.

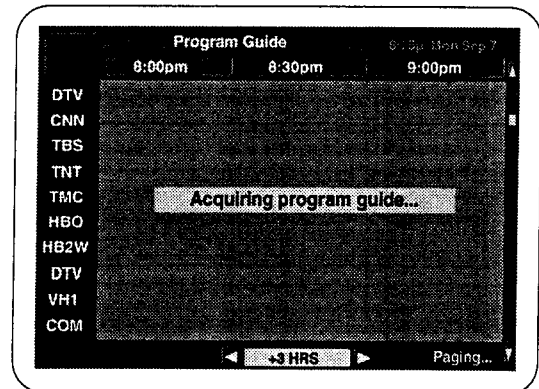

**Note:** You can only use the arrow keys while paging.

3. Once an extension guide is acquired, it looks similar to this.

 The title of the screen shows how far you have advanced. For example, Program Guide + 3.0 HRS.

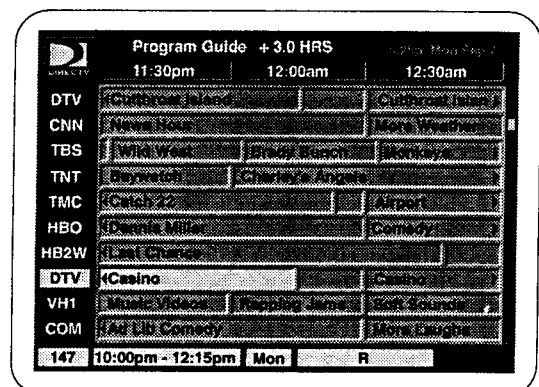

4. Press **PAGE** again to cancel paging.

## **The Closed Program Guide**

---

You can close the Program Guide to display only the channel logo, the channel abbreviation, and it's number. This is helpful because as you change channels, your screen displays what's currently on for the highlighted channel.

 
### **Selecting Open or Closed Guide**

---

Your receiver always remembers which guide was open last, so if you've closed the Program Guide, it remains closed each time you press **GUIDE**. Likewise, if the Program Guide is open, it will display in its grid format each time **GUIDE** is selected.

To change from Open to Closed, follow these steps:

1. Highlight any program in the first time slot.
2. Press the **◀** key.

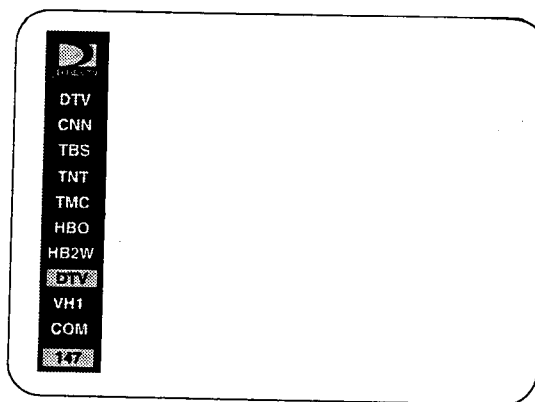

3. To reopen the Program Guide, press the **▶** key.

### **Closed Program Guide Functions**

 
---

When the Program Guide is closed, you can:

- ☐ channel surf
- ☐ get more information about the program's provider
- ☐ page through the available channels

## Channel Surfing

The "Channel Surf" feature allows you to quickly move through the channels. The Closed Program Guide displays to the left of your screen, while the current program for the highlighted channel displays in the background.

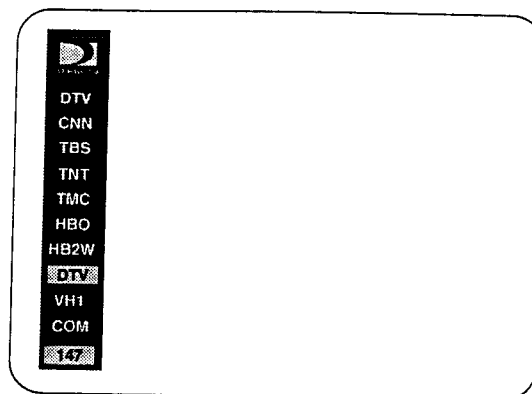


Use either the ▲ or ▼ keys to choose one of the channels listed, or enter the channel number you want on your remote keypad. As you highlight different channels, the channel number at the bottom left of the screen changes, and the channel logo at the top left matches the channel selected.

If you want to tune to a channel highlight the channel you want, and press **SELECT**.

## Getting Channel Information

 
If you press **INFO** while a channel is highlighted in the Closed Program Guide, a Program's Provider Information screen similar to this displays:

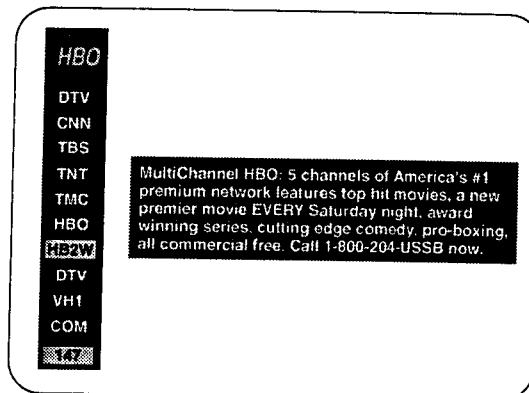

Press **INFO** again to cancel the information and return to the Normal Closed Guide.

## Paging Through Channels

 1. Press **PAGE** on your remote to scan 9 channels at a time.

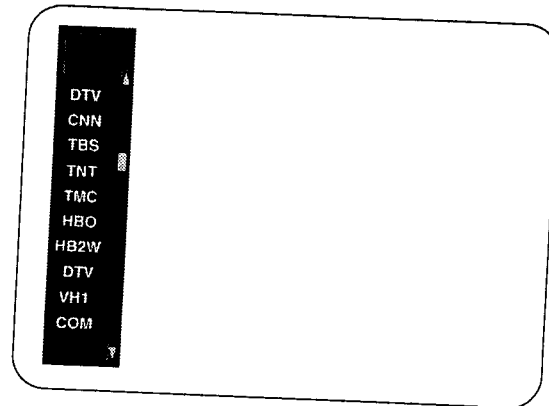


- Note:** When **PAGE** is selected in Closed Program Guide, the highlighted channel remains tuned while you're in Paging Mode.
2. Use the **▲** or **▼** key to scroll through the available channels broadcast by your service provider. The window indicator along the right side of the Paging screen indicates what section of the channels are currently in the viewing window. You can only use the arrow keys while paging.
  3. Press **PAGE** again to cancel paging.

If you press **EXIT**, all the screens are removed, and the previous channel is tuned.

## Single Channel Guide

 The Single Channel Guide is a variation of the Program Guide. It allows you to display the upcoming programs for a single channel. The Single Channel Guide can be selected from both the Open and Closed Program Guides.


1. Press **GUIDE** to display the Program Guide.

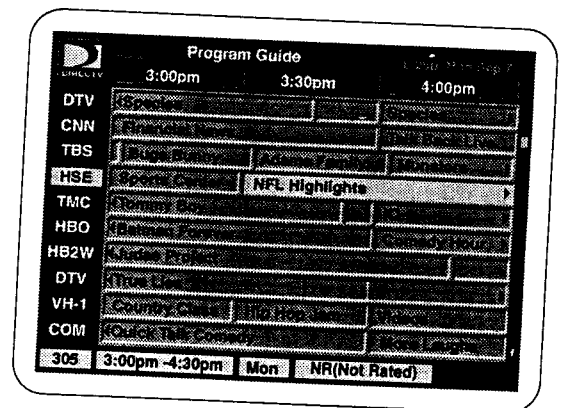

2. Highlight the channel you want using either the arrow keys or direct entry.



 3. Press **GUIDE** again.

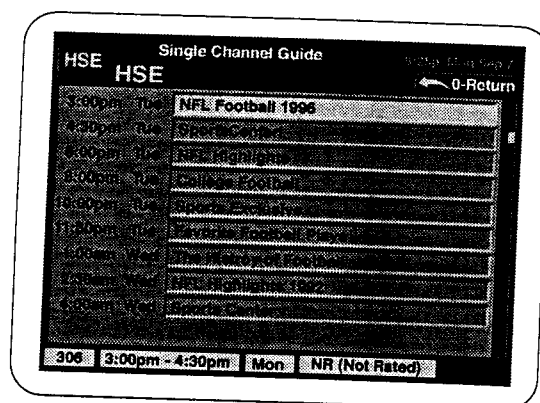


When the Single Channel Guide is displayed, you can:

- ☐ tune to a current program
- ☐ get more information about the selected program
- ☐ page through the available programs
- ☐ select another channel

### **Tuning to a Program**

 1. Use the **▲** and **▼** arrow keys to Highlight the program you want.

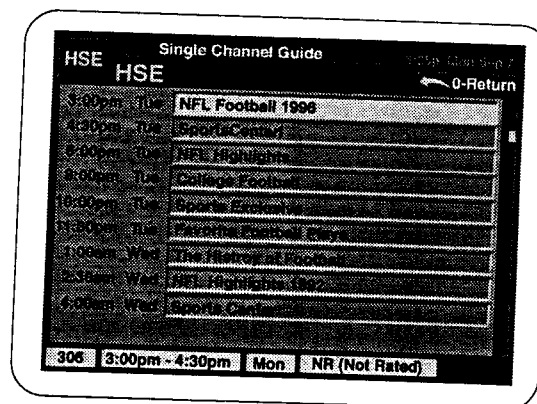


2. Press **SELECT**.

If the program is showing, your receiver changes to the channel and removes the Single Channel Guide.


3. If the program is an upcoming event, a Program Information screen similar to this displays.

 For information about viewing or recording upcoming events, refer to Automatic Programming on page 21.

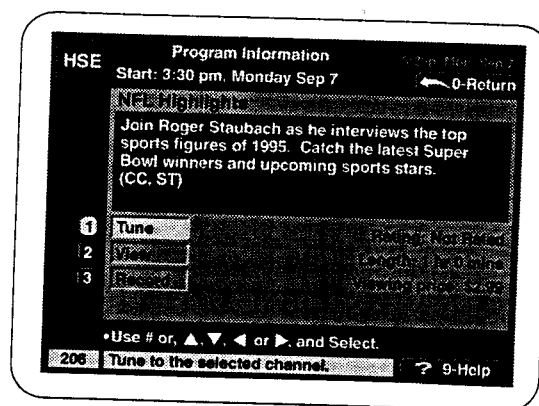

## Getting More Information

 You can get more information about a program in the Single Channel Guide. If you Highlight a program and press **INFO**, a screen similar to this displays:

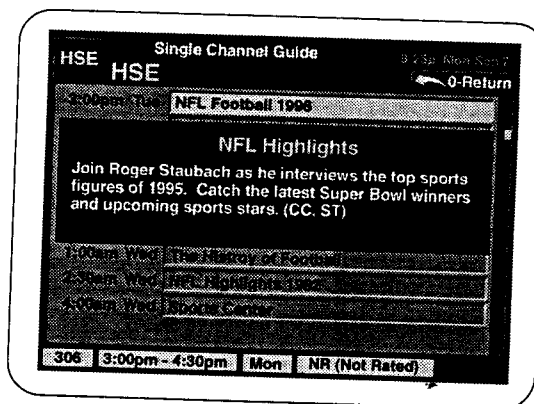


An **INFO** box typically contains this information:

- ☐ Show Title (NFL Highlights)
- ☐ Year and Show Type (1995, Commentary)
- ☐ Description (What's it about)
- ☐ Contents
- ☐ Closed Caption/Stereo (CC, ST)

To cancel the information box and return to the guide, press **INFO** again.

## Paging Through Programs

 1. Press **PAGE** on your remote to scan 9 upcoming events at a time.

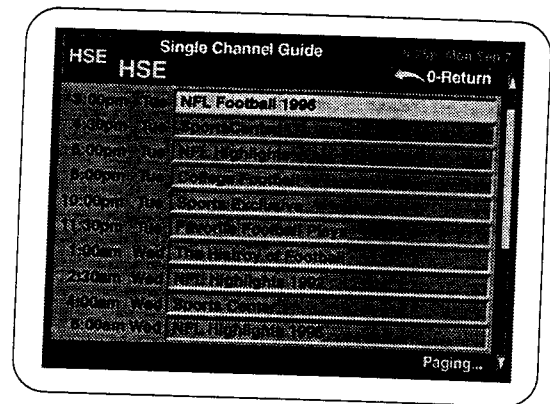

2. Use the **▲** or **▼** keys to scroll through the upcoming events listed in the Single Channel Guide. The window indicator along the right side of the Paging screen indicates how much of the list remains.

**Note:** You can only use the arrow keys while paging.

3. Press **PAGE** again to cancel paging.

## Selecting Another Channel

You can change channels while the Single Channel Guide is displayed, and the guide will automatically be updated.

If you press **◀**, the Single Channel Guide for the next lower channel displays,

—or—

If you press **▶**, the Single Channel Guide for the next higher channel displays.

For example, if the Single Channel Guide for channel 948 is displayed, and you press **◀**, then the Single Channel Guide for channel 947 displays.

You can also enter another channel on the remote keypad, and its Single Channel Guide will display.

---

## Favorites

---

By now you probably know there are many channels, but you may not want to look through all the different channels to find the programs you like best. Favorites provides the opportunity for you to store 10 of your most watched channels in an easy access guide.

Now instead a paging through all the channels in the Program Guide, you can simply select one of the six different Favorite Guides and immediately find what you like to watch.

---

### Favorite Profiles

---

There are 6 different profiles in Favorites which each store up to 10 of your favorite channels. Each profile can be given a different name, so everyone in your family can have there own "Favorites" guide. Or you can set up different categories like Sports, Movies, News, etc, and then store different channels in each category. When you recall the Sports Favorites, for example, all of your favorite sports channels will be displayed for you.


---

 
### Storing Favorites

---

To set up a profile in Favorites, you must display the Favorite Store Screen.


**Note** When you recall the Favorite Store screen the first time, there are no profiles stored, so the Favorites Store screen displays. This allows you to setup the names of your profiles.

1. Press and hold  for three seconds.

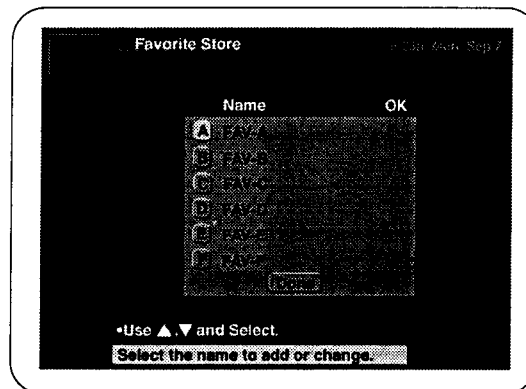

2. Use the ▲ and ▼ keys to Highlight the profile you want to create.

 
3. There are 10 character positions available for each name. Use the ▲ and ▼ keys to change the characters, and the ◀ and ▶ keys to select the position of the character. You can use the following characters:

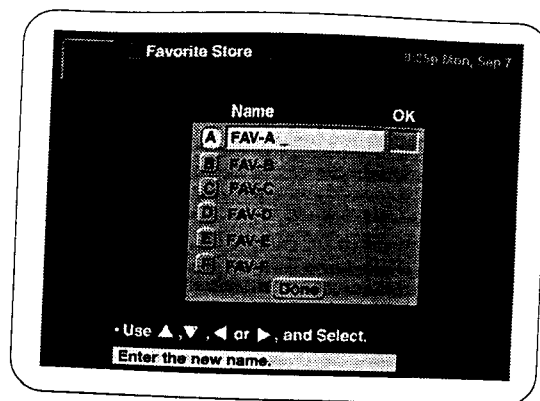


You can use these letters, numbers, or symbols in the name box:

- ☐ A-Z, a-z
- ☐ Numbers 0-9
- ☐ - , / , \* and blank

 4. After entering each character of the name, press the ▶ arrow key to Highlight the OK box.

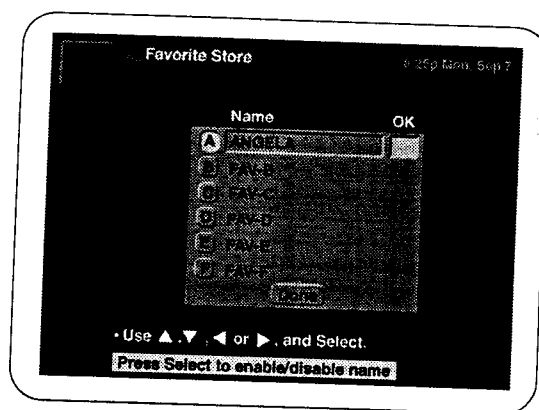

 
5. Press **SELECT** to place a check-mark in the box.

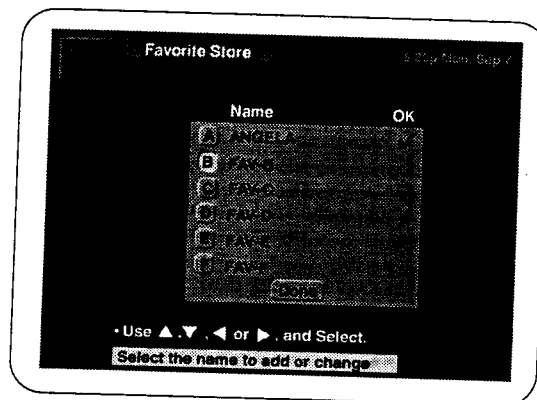


**Note:** You must check OK for the profile to be active. If a profile is not active, it will not be available for recall.

6. Highlight **DONE** and press

 
**SELECT**.

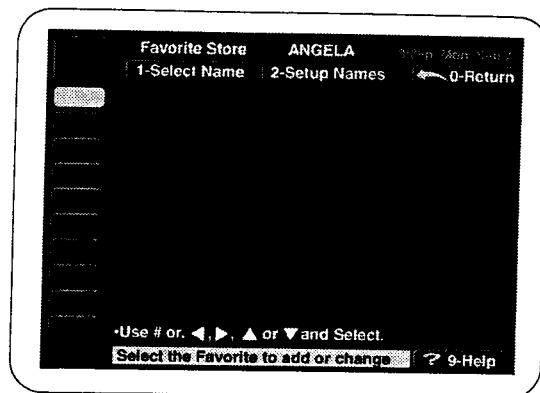

 7. Press **SELECT** to display the list of available channels.

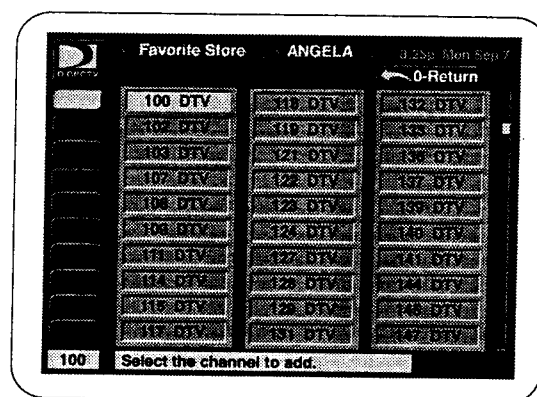


 8. Highlight the channel you want, and press **SELECT**.

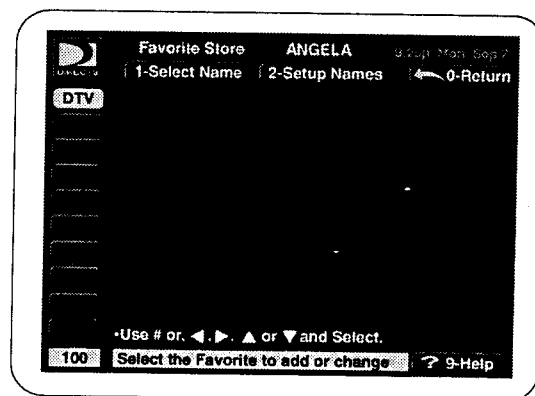


## Making Changes to a Favorite

 
1. Press and hold **FAV** for three seconds.

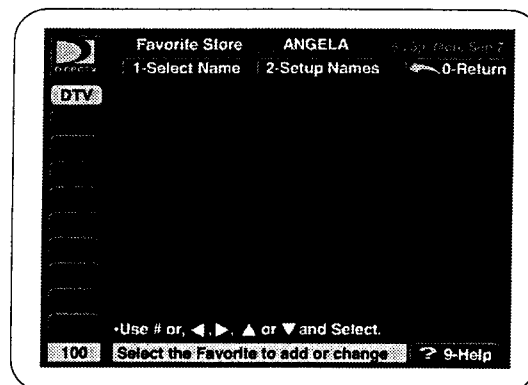

 2. When you recall the Favorite Store Screen, the last profile viewed appears at the top of the screen. To change to a different profile, Highlight 1-Select Name and press **SELECT**, or press **1**.

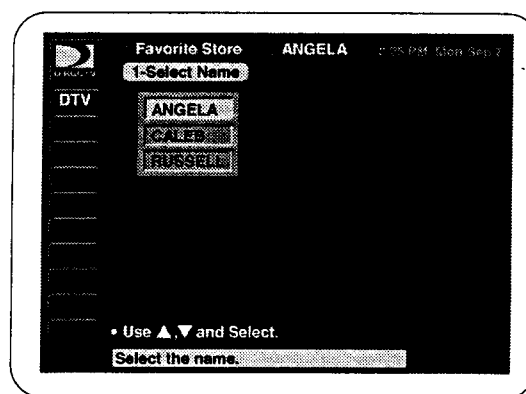

 
3. All of the active profiles display. If only one profile is active, then only one name appears. If all six profiles are active, then all six appear.
4. Highlight the profile you want, and press **SELECT**.  
The profile you select now displays at the top of the Favorite Store Screen each time you access the Favorites Store Screen.
5. Highlight the button you want to store a new favorite in or that you want to change, and press **SELECT**.

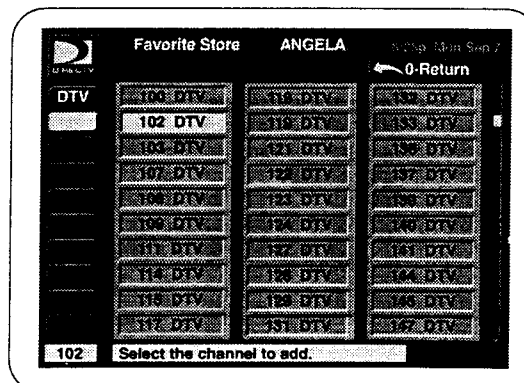

- Use the ▲, ▼, ◀ and ▶ keys to select the channel you want stored in the highlighted button. You can also enter the channel number directly.

**Note:** You can press **PAGE** to scroll through all the channels.

 - Once the channel you want is Highlighted, press **SELECT** to store the channel.

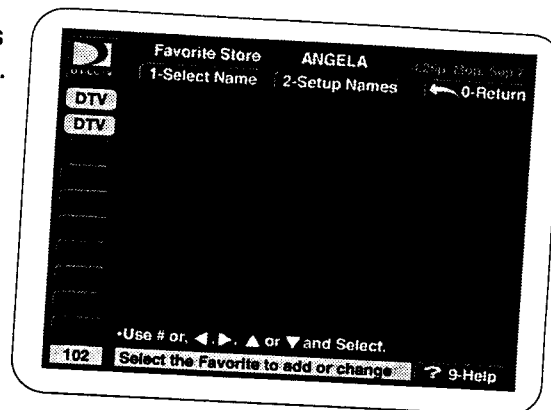


- Repeat Steps 3-5 until you have stored all 10 channels or the ones you want in this profile.
- To return to Normal Viewing, press **0** on your remote or Highlight **0-Return**, and press **SELECT**.

## Recalling Favorites

 To recall your Favorite Channels, follow these steps:

- Press **FAV** to display the Favorites Guide.

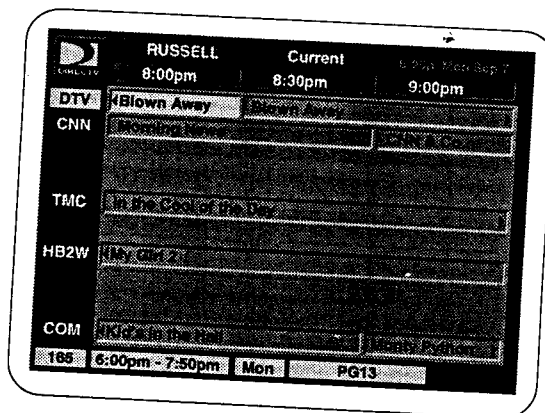

- The last profile used is always displayed.
- If there are more profiles available, then you can select a different profile while the Favorite Recall Screen is displayed.



3. Press **FAV** again to change to a different profile.

For example, assume that RUSSELL, ANGELA and CALEB are active lists, **OK** is checked, and each one has at least one channel in them. Each time **FAV** is pressed, the next Favorite List displays:

- ☐ Press **FAV** to display RUSSELL's Profile
  - ☐ Press **FAV** to display ANGELA's Profile
  - ☐ Press **FAV** to display CALEB's Profile
  - ☐ Press **FAV** to display RUSSELL's Profile
- etc...


### **Tuning to a Favorite Channel**

 1. Press **FAV** to display the Favorite Guide.
2. Choose the profile you want by pressing **FAV** until the name you want displays.
3. Highlight the program you want, and press **SELECT**.

The Favorite Guide is removed and the channel selected displays.

### **Favorite Channel Guide**

The Favorite Guide is similar to the Program Guide except it only displays the channels stored in a Favorites Profile.

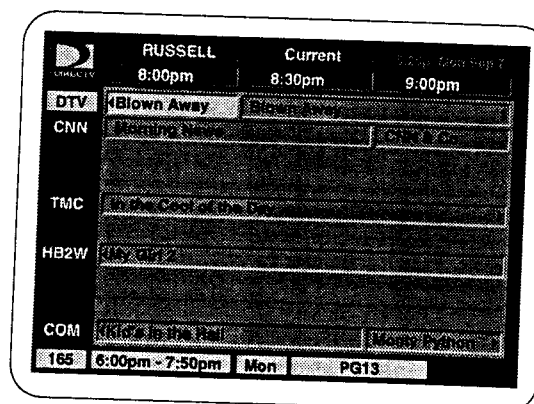

With this guide, you can:

- ☐ tune to a program
- ☐ get more information about a program
- ☐ page through upcoming events
- ☐ display a Single Channel Guide for each Favorite
- ☐ display a Closed Favorite Recall Guide.


## Tuning to Program

 1. Use the arrow keys or enter the channel number directly, and then Highlight the program you want.
2. Press **SELECT**.

If the program is showing, your receiver changes to the channel, and removes the Favorite Guide.


3. If the program is an upcoming event, a Program Information screen similar to this displays.

For information about viewing or recording upcoming events, refer to Automatic Programming on page 21.

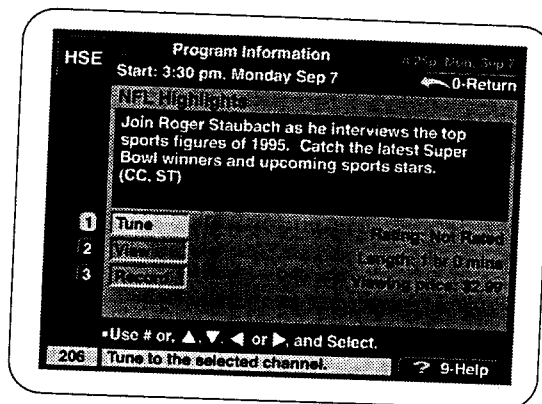

## Getting More Information

 You can get more information about a program in the Favorite Guide. If you Highlight a program and press **INFO**, a screen similar to this displays:

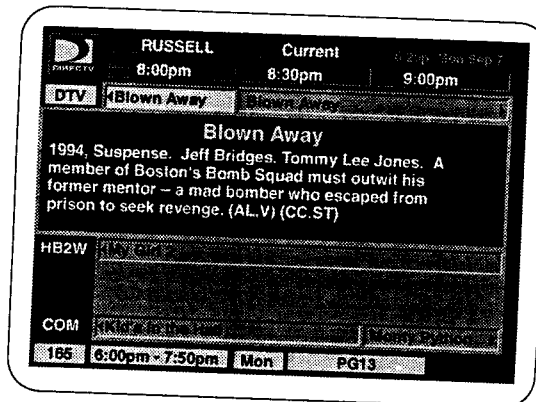

An **INFO** box typically contains this information:


- ☐ Show Title(Blown Away)
- ☐ Year and Show Type(1994, Suspense)
- ☐ Description(What's it about)
- ☐ Contents(AL, V) Adult Language, Violence
- ☐ Closed Caption/Stereo(CC, ST) Closed Caption, Stereo

To remove the information box, press **INFO** again.


## Paging Through Upcoming Events

 You can access upcoming programs for the channels listed in your profile, and see what will be on later.

1. Press **PAGE** on your remote. Notice **Current** is shown in a horizontal paging window at the bottom of the screen.

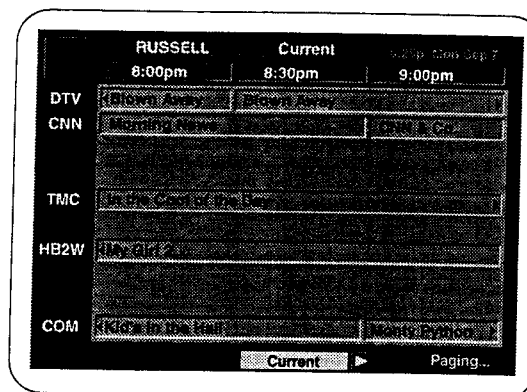

 
2. Use the **▶** or **◀** key to page forward (horizontally) through upcoming events. As you move forward, you are simply accessing upcoming time slots. Sometimes there is a short pause while the new guide is acquired.

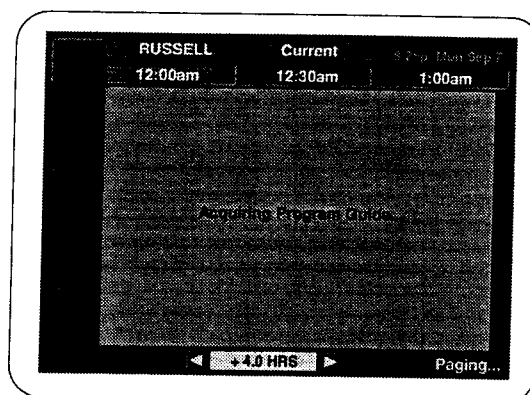

**Note:** You can only use the arrow keys while paging.

3. Once an extension guide is acquired, it looks similar to this.

 The title of the screen shows how far you have advanced. For example, Favorite Guide + 5.0 HRS.

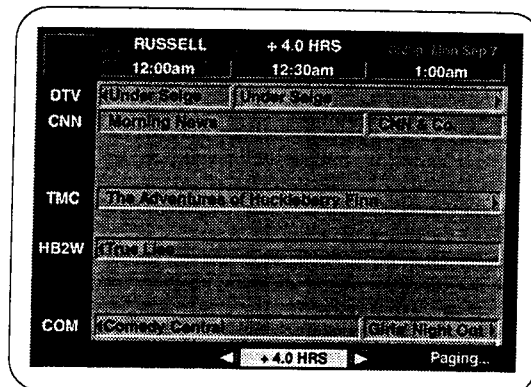

4. Press **PAGE** again to cancel paging.

## Displaying a Single Channel Guide

1. Highlight one of your Favorite Channels.
2. Press **GUIDE** to display a Single Channel Guide.

## Closed Favorite Recall Guide

 
You can close the Favorite Guide to display only the channel logo, the channel abbreviation, and it's number. This is helpful because as you change channels, your screen displays what's currently on for the highlighted channel.

## Selecting Open or Closed Guide

Your receiver always remembers which guide was open last, so if you've closed the Favorite Guide, it remains closed each time you press **FAV**. Likewise, if the Favorite Guide is open, it will display in its grid format each time **FAV** is selected.

To change from Open to Closed, follow these steps:

1. Highlight any program in the first time slot.
2. Press the **◀** key.

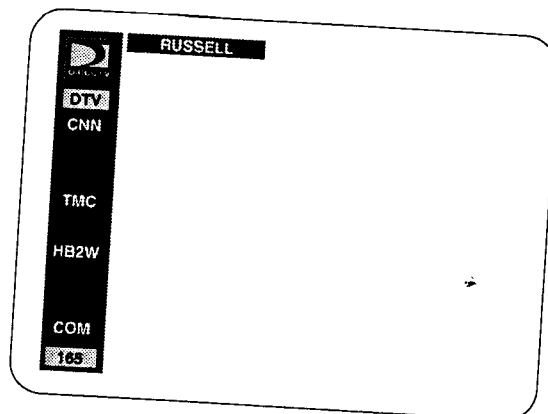

3. To reopen the Program Guide, press the **▶** key.

## Closed Favorite Guide Functions

When the Favorite Guide is closed, you can:

- ☐ channel surf
- ☐ get more information about the program's provider
- ☐ page through the available channels

For information about how these features are used, refer to "Closed Program Guide Functions" on page 60.

## Return to Normal Viewing

Press **EXIT** while the Favorite Channel Guide is displayed to remove all screens.

## Themes

 
By selecting Themes you can create guides where the programs are grouped together according to specific categories. For example, you could select all the channels which broadcast Sports. This is similar to Favorites except your guide will list all the channels related to sports instead of ten of your favorite channels.

Suppose, you are really just interested in Football and Baseball, well you can narrow the themes to more specific sub-categories. Your guide will contain all the sports channels you receive that are broadcasting either Football or Baseball. You don't even have to look at a TV magazine or Newspaper to find out what's on. All you have to do is press a few buttons, and the information you want will display right on your screen.

### Selecting a Theme

To select and display a Theme guide, follow these steps:

1. Press **THEME** on your remote to display the Themes Screen.

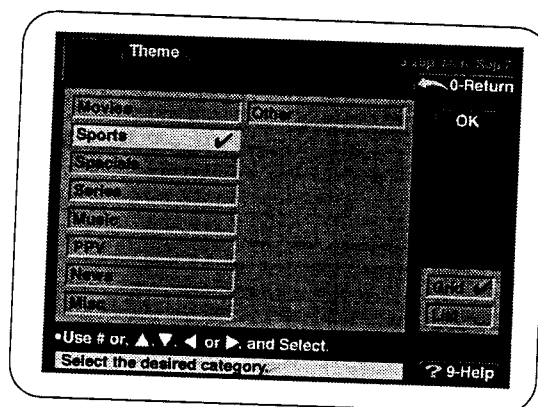


2. Use the ▲, ▼, ◀, or ▶ arrow keys to Highlight the Main Category of your Theme Guide, and press Select to put a check-mark next to what you want.
3. Highlight Grid and press **SELECT** to display the Theme Guide as a grid guide,

—or—

Highlight List and press **SELECT** to display the Theme Guide as a list guide beginning with the current programs first, followed by upcoming events.

 4. Highlight **OK** and press **Select** to display the Sub-Category Screen.

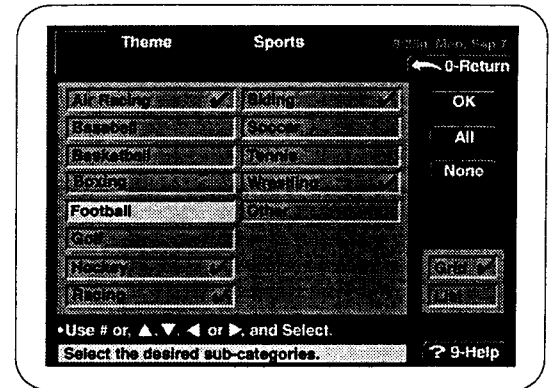


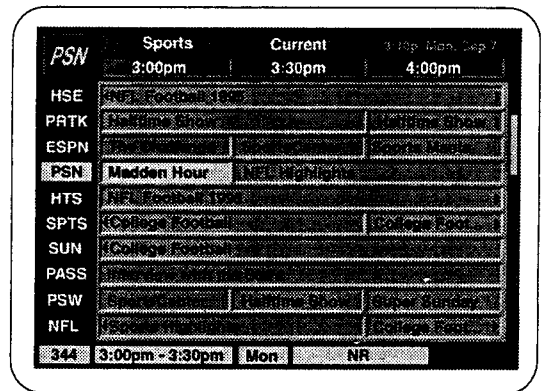 
5. Use the ▲, ▼, ◀, or ▶ arrow keys to Highlight the Sub-Categories of your Theme Guide, and press **SELECT** to put a check-mark next to those you want. To quickly check or uncheck all the categories, you can:

Highlight All and press **(SELECT)**, to put a check-mark next to all the sub-categories,

—or—

Highlight **None** and press **SELECT** to clear all the check-marks and start again.

6. Highlight **OK** and press  to store the Sub-Categories and display the guide.



7. If you want to cancel Themes and return to Normal Viewing, press **0** or move the cursor to the **0-Return** and press **SELECT**.

## The Themes Guide

The Theme Guide can be presented in either a grid format similar to a Program Guide or in a List Format similar to a Single Channel Guide. Although the formats are different, both provide the same information and options. When the Themes Guide displays, you'll be able to:

- ☐ tune to a program
- ☐ get more information about a selected program
- ☐ present a Single Channel Guide for a channel
- ☐ page through the available channels
- ☐ page forward to see upcoming events.

### The Grid Themes Guide

If you select Grid on the Category Screen, the Themes Guide displays in a grid similar to the Program Guide.

PSN	Sports 3:00pm	Current 3:30pm	4:00pm
HSE	NFL Football 1995		
PRTK	Madden Show		
ESPN	Sports Tonight		
PSN	Madden Hour	NFL Highlights	
HTS	NFL Football 1995		
SPTS	College Football		
SUN	College Football		
PASS	College Football		
PSW	College Football		
NFL	College Football		
344	3:00pm - 3:30pm	Mon	NR

### Tuning to a Program

1. Use the arrow keys or enter the channel directly, and then Highlight the program you want.

 
PSN	Sports 3:00pm	Current 3:30pm	4:00pm
HSE	NFL Football 1995		
PRTK	Madden Show		
ESPN	Sports Tonight		
PSN	Madden Hour	NFL Highlights	
HTS	NFL Football 1995		
SPTS	College Football		
SUN	College Football		
PASS	College Football		
PSW	College Football		
NFL	College Football		
344	3:00pm - 3:30pm	Mon	NR

2. Press **SELECT**.

If the program is showing, your receiver changes to the channel, and removes the Themes Guide.


3. If the program is an upcoming event, a Program Information screen similar to this displays.

For information about viewing or recording upcoming events, refer to Automatic Programming on page 21.

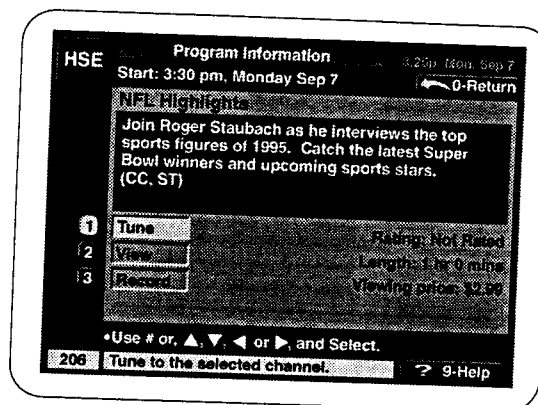

## Getting More Information

 You can get more information about a program in the Grid Themes Guide. If you Highlight a program and press **INFO**, a screen similar to this displays:

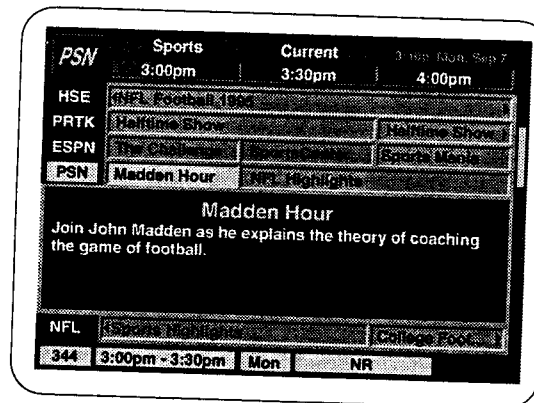

An **INFO** box typically contains this information:

- ☐ Show Title
- ☐ Year and Show Type
- ☐ Description
- ☐ Contents (What's it about)
- ☐ Closed Caption/Stereo (CC, ST)


To cancel the information box and return to the guide, press **INFO** again.



## Single Channel Guide

 The Single Channel Guide is a variation of both the Grid and List Theme Guides. It allows you to display the upcoming programs for a single channel. It begins with the current program and continues with upcoming events.

1. Highlight the channel you want from the Grid Themes Guide using either the arrow keys or by entering the numbers.

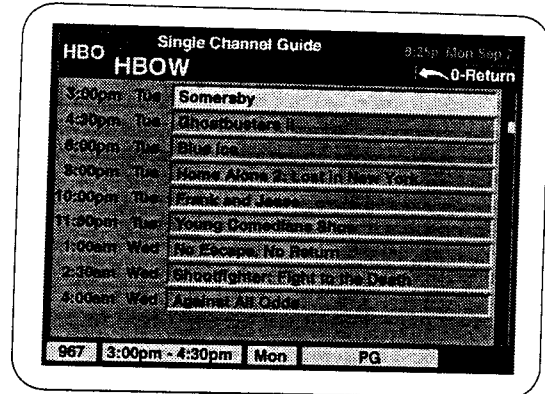

2. Press **GUIDE** to display the channel in a Single Channel Guide format.


When the Single Channel Guide is displayed, you can:

- ☐ tune to a program
- ☐ get more information about the selected program
- ☐ page through the available programs.

For more information about these features, see "Single Channel Guide" on page 62.

## Paging Through Channels

 1. Press **PAGE** on your remote to scan 9 channels at a time.

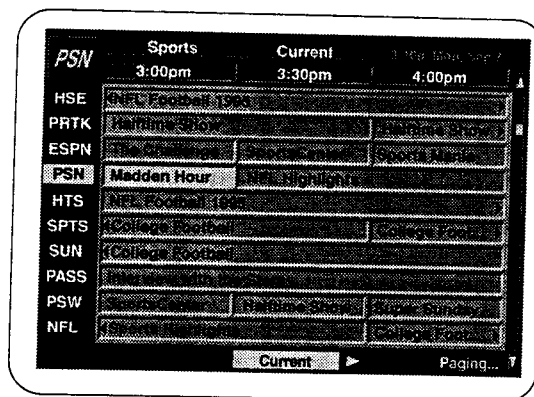


2. Use the **▲** or **▼** key to scroll through the channels presented in the Themes Guide. The window indicator along the right side of the Paging screen indicates what section of the channels are currently in the viewing window.

**Note:** You can only use the arrow keys while paging, and if there are fewer than 10 channels in the guide, the paging bar doesn't display.

3. Press **PAGE** again to cancel paging and return to the Normal Themes Guide.


## Paging Through Upcoming Events

 1. Press **PAGE** on your remote. Notice **Current** in the horizontal paging window at the bottom of the screen.

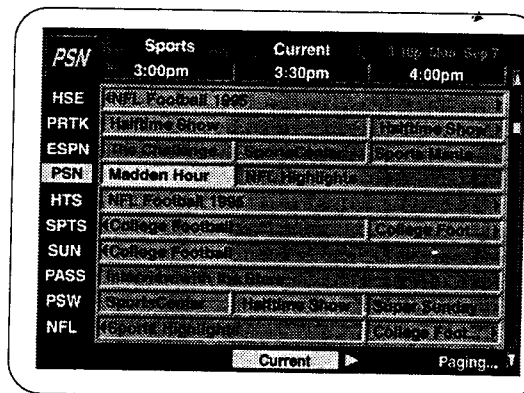

2. Use the ► arrow key to page forward (horizontally) through upcoming events. As you move forward, you are simply accessing upcoming time slots.

 
Sometimes there is a short pause while the new guide is acquired, and you'll see this screen.

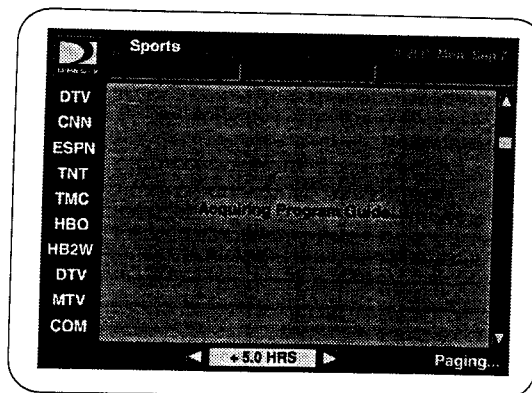

**Note:** You can only use the arrow keys while paging.

3. Once an extension guide is acquired, it looks similar to this.

 The title of the screen shows how far you have advanced. For example, Themes Movies + 5.0 HRS.

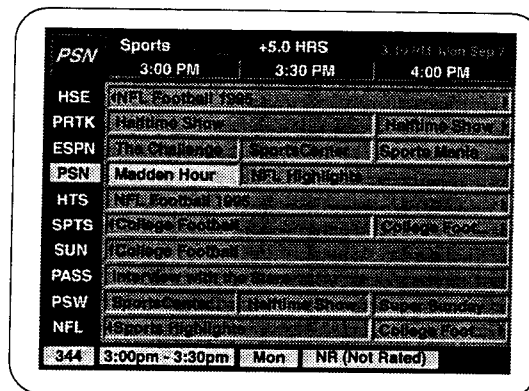

4. Press **PAGE** again to cancel paging and return to the Normal Theme Guide.

### Closed Mode

 
You can close the Themes Guide by Highlighting any program in the first time slot, and pressing the ◀ arrow key. The guide will close like the Closed Program Guide. In the closed mode, you can:

- ☐ tune to a channel
- ☐ get information about the program's provider
- ☐ page through the available channels.

For more information about these features, see "The Closed Program Guide" on page 60.


## The List Themes Guide

If you select List on the Category Screen, the Themes Guide displays in a list similar to the Single Channel Guide.

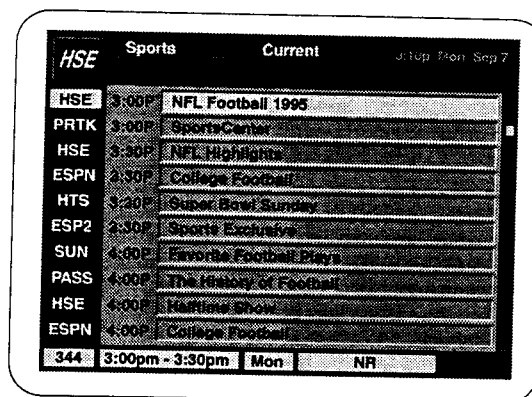

## Tuning to a Program

 1. Use the arrow keys to Highlight the program you want.

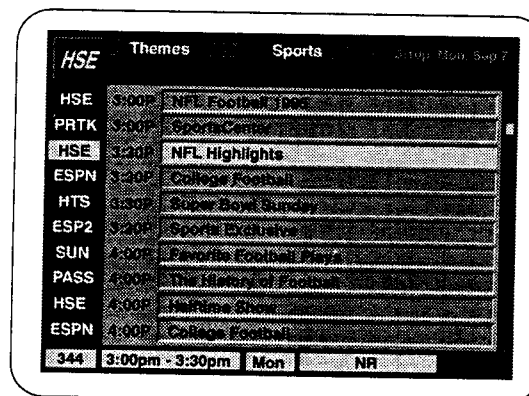


2. Press **SELECT**.

If the program is showing, your receiver changes to the channel, and removes the Themes Guide.


3. If the program is an upcoming event, a Program Information screen similar to this displays.

 For information about viewing or recording upcoming events, refer to Automatic Programming on page 21.

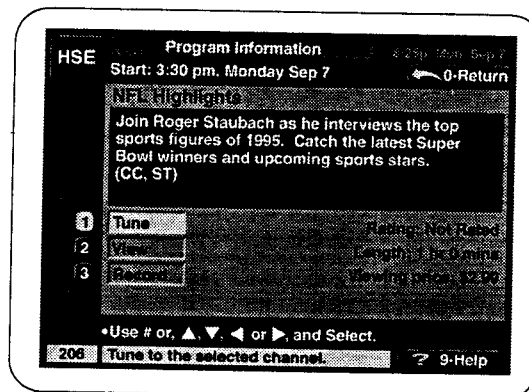

## Getting More Information

 You can get more information about a program in the List Themes Guide. If you Highlight a program and press **INFO**, a screen similar to this displays:

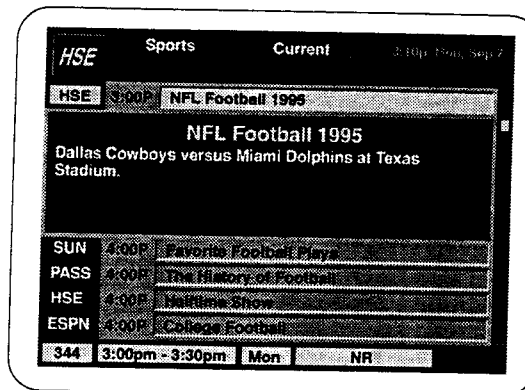

An **INFO** box typically contains this information:


- ☐ Show Title
- ☐ Year and Show Type
- ☐ Description (What's it about)
- ☐ Contents
- ☐ Closed Caption/Stereo (CC, ST)

To remove the information box and return to the guide, press **INFO** again.

## Single Channel Guide

 The Single Channel Guide is a variation of both the Grid and List Theme Guides. It allows you to display the upcoming programs for a single channel in a list which begins with the current program and continues with upcoming events.

1. Highlight the channel you want from the List Themes Guide using either the arrow keys or entering the channel number directly.

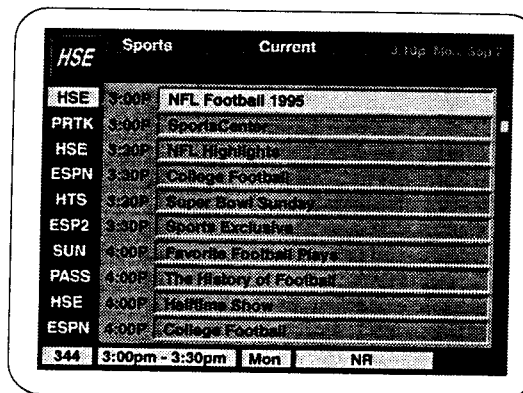

2. Press **GUIDE** to display the channel in a Single Channel Guide format.


When the Single Channel Guide is displayed, you can:

- ☐ tune to a program
- ☐ get more information about the selected program
- ☐ page through the available programs

For more information about these features, see "Single Channel Guide" on page 62.

## Paging Through Channels

 1. Press **PAGE** on your remote to scan 9 channels at a time.

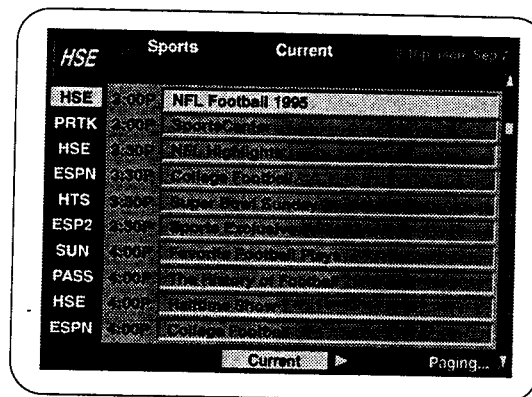

2. Use the **▲** or **▼** key to scroll through the channels presented in the Themes Guide. The window indicator along the right side of the Paging screen indicates what section of the channels are currently in the viewing window.

**Note:** You can only use the arrow keys while paging, and if there are fewer than 10 channels in the guide, the paging bar doesn't display.

3. Press **PAGE** again to cancel paging and return to the Normal Themes Guide.

---

## Pay-Per-View (PPV)

---

### What is Pay-Per-View (PPV)

 
---

With Pay-Per-View (PPV) you can purchase each program on event-by-event basis. Your service provider offers many PPV channels, so you can always find something new and exciting to watch. And since most movies are broadcast at several different times each day, you'll never have to wait long before a program is available for viewing.

### Purchase Information

---

If you tune to a PPV channel when a program is available, this message displays.

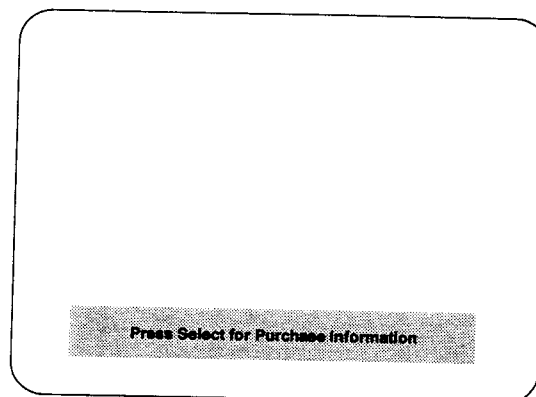

There are three ways to purchase a program:

- ☐ select a PPV channel with your remote.
- ☐ select a PPV program from one of the On-Screen Guides
- ☐ call your service provider (there may be an additional fee).


### Purchasing an Event

 ---

To purchase an event, follow these steps:


1. Use your remote to tune to the channel with the program you want to purchase and press **(SELECT)**, or Highlight and Select a PPV event from any of the different on-screen guides.

2. Once the Program Information Screen displays, and you can either purchase the program now or view other show times.

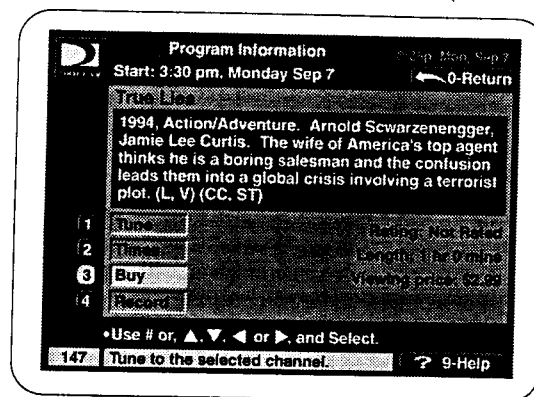

**Note** If you want to purchase the program at a later time, see "Other Times" below.

 
3. Highlight 3-Buy and press **SELECT** to purchase the program.

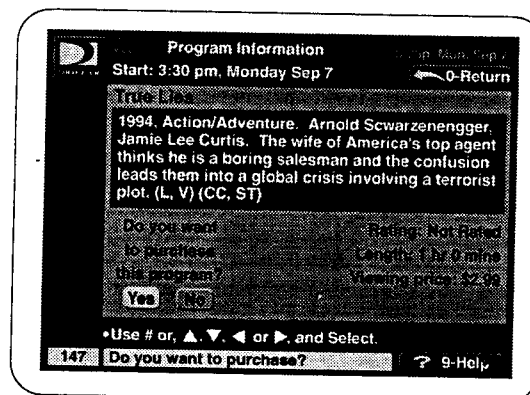

4. Highlight Yes and press **SELECT** to confirm your purchase,

—or—

 Highlight No and press **SELECT** to return to the Program Information Screen.

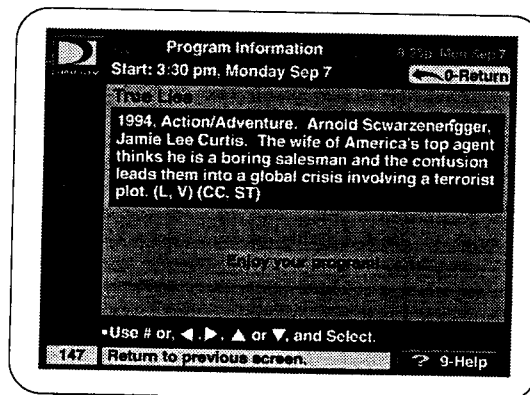



## Other Times

To purchase the PPV program at a later time, follow these steps:

1. Highlight **2-Times** and press **(SELECT)** to view other times the program is shown.

The Other Show Times Screen displays.

If the last show time has a ▼ arrow, this indicates that other times are available, and you should use the ▲ and ▼ keys to scroll through all the times available.

2. Selecting an upcoming program displays the Program Information Screen again.

 
 
 
Choose **3-Buy** to purchase the program and store the program in the Future Purchases Screen.

3. Either choice displays the Purchase Confirmation Screen.

Highlight **Yes** and press **(SELECT)** to confirm your purchase,

—or—


Highlight **No** and press **(SELECT)** to return to the Program Information Screen.

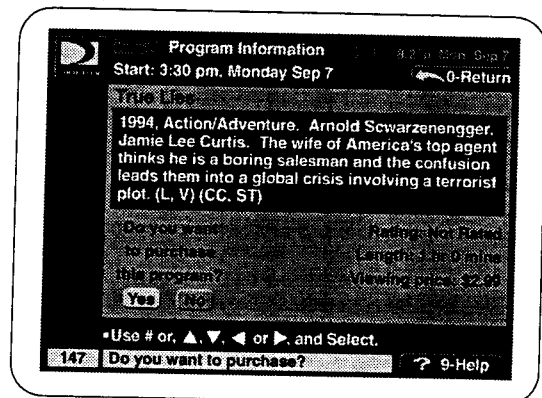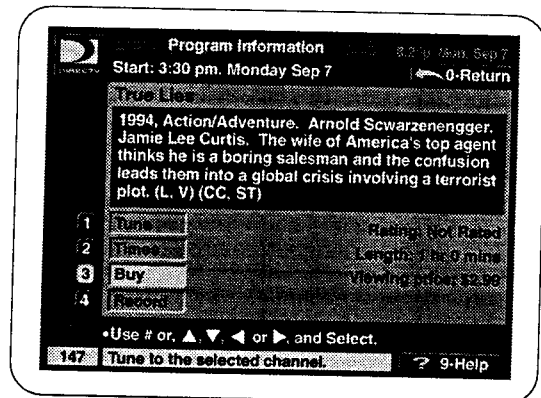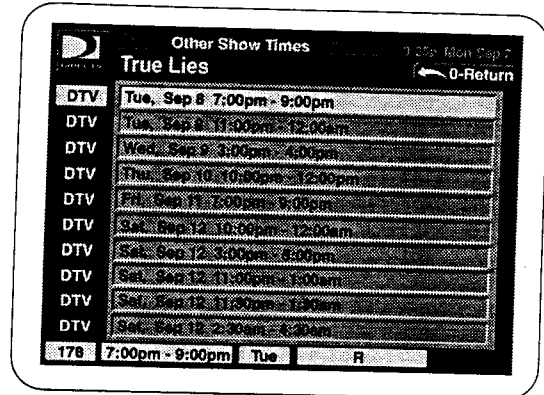

## Taping Option

Since PPV programs are typically new releases, your service provider may not allow the show to be recorded at its lower view only price. However, you'll be given the option of taping the program at a higher cost.

 1. When you select a program with a recording price, a screen similar to this displays.

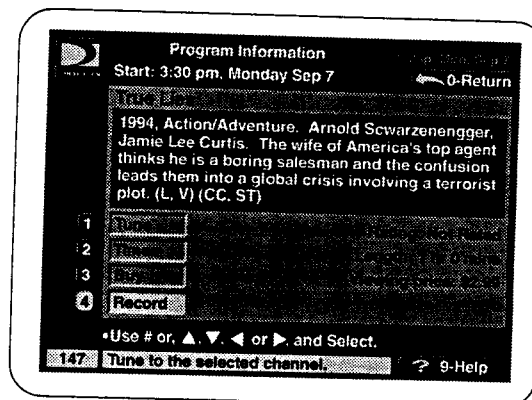

2. Select the **4-Tape** option, to purchase the program for recording. Your service provider may charge a higher price for the taping option. Use the On-Screen programming to tape the program or store the program in the Timer.

**Note:** You must also program your VCR to start recording when the program begins.

---

## Your Remote Control

---

 
Your DSS remote control for the UDS 200 has four different modes of operation. This allows your remote to access and control other equipment in your entertainment system such as your TV, VCR or cable box.

### Installing Batteries in Your Remote

---


Your remote requires two AA batteries which are included in the packaging provided with your receiver. Follow these steps to install the batteries in your remote:

1. Press on the cover and slide it down.

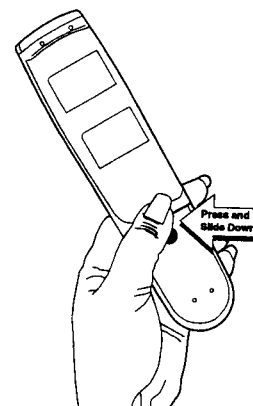

2. Remove the cover, and place the batteries in the compartment.

 **Note:** Insert the "-" and "+" ends according to the diagram.

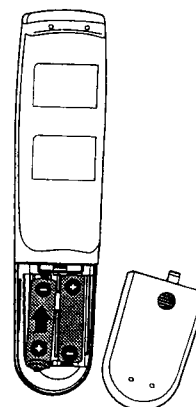

3. Replace the battery cover, and slide it into place.



## Attaching the UHF Antenna

Your remote sends both a UHF and an infra-red (IR) signal when you select its DSS mode. Unlike IR, which is often called "line-of-sight," the UHF signal is omnidirectional. This simply means the UHF signal can control your receiver without you pointing the remote directly at the receiver's front panel. The UHF signal also increases the range of your remote.

To attach the UHF antenna to your receiver, follow these steps:

1. Select either the wand or dipole antenna.



**Note** Since both antennas work the same, you should choose the antenna which best meets your installation needs.

2. Attach the antenna you've selected to the back of your receiver.
3. If you use the UHF wand antenna, make sure it's upright.

You must have 4 – 6 inches above your receiver to use the wand antenna.

—or—

  If you use the dipole antenna, attach it to the wall behind your receiver for best reception.

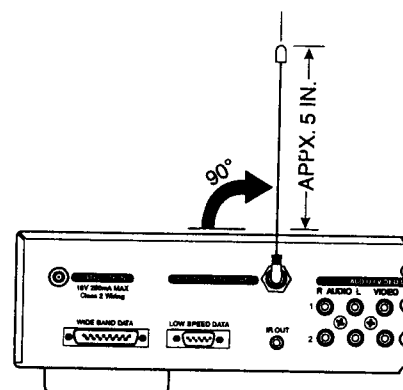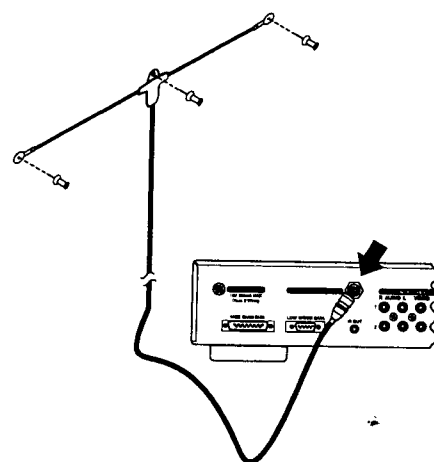

## Programming Your Remote

---

There are four different buttons on the remote which are used to select each mode, and each button has an indicator that lights when it's selected.

### Setting the TV/VCR Modes

---

To program the remote control to control your TV or VCR, follow these steps:

1. Press and hold the **PROG** key for 3 seconds. After 3 seconds, the four mode keys begin to flash.
2. After the four mode keys begin flashing, press either the **TV** or **VCR** mode key.

Once a mode key is pressed, it stops flashing and all of the other mode keys are turned off.

3. Enter the 3 digit code that matches your particular product.

**Note:** See the Appendix for a list of codes by product and manufacturer.

4. After all 3 digits are entered, the mode key flashes twice if a correct code has been entered.

For example, to program the remote control for a Mitsubishi TV:

- ☐ Press and hold the **PROG** key. After 3 seconds, all mode keys start flashing.
  - ☐ Press **TV**. The TV mode key is now selected, and all the others are turned off.
  - ☐ Press **1**, **5**, **0**. You will see the TV key flash two times.
5. There are multiple codes for a single brand of product. To see if the remote code is correct, point the remote toward your TV or VCR, and press power, channel **▲** or **▼**, etc. If your product doesn't respond to the remote commands, repeat these steps using the next code listed by your manufacturer.

**Note** Laser discs are programmed under the VCR mode.

## Setting the AUX Mode

---

Programming the **AUX** mode of the remote control is slightly different because this mode can be used to control a cable box, second TV or VCR, the Bose™ Companion System, or even an additional DSS receiver. Follow these steps to set the **AUX** mode:

1. Press and hold the **PROG** key for 3 seconds. After 3 seconds, the four mode keys begin to flash.
2. After the 4 mode keys begin flashing, press the **AUX** key.
3. If your going to use your remote to control your Bose™ system, cable box, or laser disc, then skip this step

—or—

If you are going to use AUX to control another DSS receiver, TV, or VCR, press the mode key you want.

*(The mode key you select will flash twice, but the **AUX** mode will remain on.)*

4. Now enter the 3 digit code for the device you want to program into **AUX**.

**Note:** See the Appendix for a list of codes by product and manufacturer.

5. After all 3 digits are entered, the mode key flashes twice if a correct code has been entered.

For example, to program the AUX key for a Mitsubishi TV:

- ☐ Press and hold the **PROG** key. After 3 seconds, all mode keys start flashing.
  - ☐ Press **AUX**. The AUX key is now selected, and all the others are turned off.
  - ☐ Press **TV**. The TV key flashes twice, and the AUX key remains on.
  - ☐ Press **1**, **5**, **0**. You will see the AUX key flash twice.
6. There are multiple codes for a single brand of product. To see if the remote code is correct, point the remote toward the product it should now control, and press power, channel **▲** or **▼**, etc. If the product doesn't respond to the remote commands, repeat these steps using the next code listed for your manufacturer.

## Setting the DSS Mode

While the remote is in DSS mode, all remote keys operate your DSS receiver. When there is more than one receiver in a room, there is a possibility that different remotes will interfere with each other. To prevent this, your remote can be programmed with eight different DSS remote codes.

For the remote control to operate correctly, it must match the receiver's remote setting. This means that if you change your remote control's code, you must also change the receiver's code.

## Changing the Remote's Code

To change the remote control code, follow these steps:

 
1. Press and hold the **PROG** key for 3 seconds. After 3 seconds, the four mode keys begin to flash.
2. Press the **DSS** mode key.  
(Once this key is pressed the other mode keys stop flashing and are turned off.)
3. Enter one of these eight 3-digit codes for your remote.  
(101, 102, 103, 104, 201, 202, 203, 204)
4. After the code is entered, the mode key flashes twice if a correct code has been entered.

**Note** The code on your receiver must match the code on your remote. If not, the remote will not work.

## Changing the Receiver's Code

To change the receiver's remote control code, follow these steps:

1. Press **TV/DSS** and **SELECT** on the front panel of your receiver at the same time.

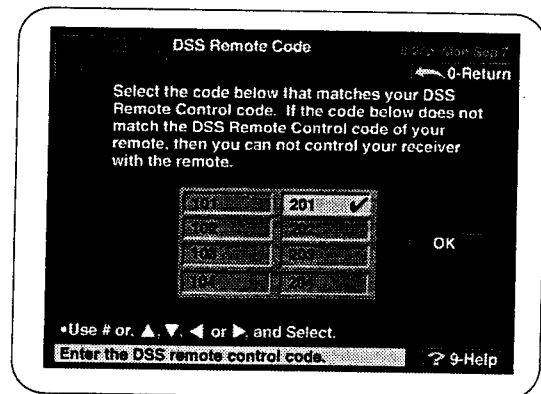

2. Highlight the DSS remote control code that matches the code for your remote, and press **SELECT**.

**Note:** For the UDS 200, the default remote code is 201.

3. Highlight **OK**, and press **SELECT**.

The new code is stored and your receiver will return to Normal Viewing.

# Addendum

## Remote Control/VCR Setup Codes

### TV Codes

A-Mark	003	Hallmark	178	Penney	002, 003, 018, 019, 021, 027,
Abex	032	Harley Davidson	043		030, 032, 039, 047, 051, 060,
Admiral	093	Harman/Kardon	078		110, 135, 149, 156, 178, 309
Adventure	046	Harvard	068, 180	Philco	019, 030, 054, 096
Aiko	092	Hitachi	032, 038, 056, 097, 145,	Philips	054
Akai	030, 098		151, 173, 279, 409, 413	Pilot	019, 030, 039
Alaron	216	Ima	180	Pioneer	038, 166
Alleron	179, 183	Infinity	054	Portland	019, 039, 092
Ambassador	177	Janeil	046	Priceclub	060
AOC	003, 019, 030, 052, 137, 185	JBL	054	Prism	051
Archer	003	JCB	000	Proscan	047
Astro Text	379	JVC	036, 053, 069, 160, 169, 182	Proton	003, 031, 052, 178, 466
Audiovox	003, 180	Kamp	216	Pulsar	017
Belcor	019	Kawasho	158, 216, 308	Pulser	019
Bell & Howell	016, 154	Kaypani	052	Quasar	051, 055, 219, 250
Bradford	180	KEC	180	Radio Shack	019, 032, 039, 165, 180, 409
Broksonic	003	Kenwood	019, 030	RCA	018, 019, 029, 038, 047,
Candle	030, 046, 056, 186	Kloss	024, 046, 078		090, 135, 174, 254, 278
Carver	054	KMC	106	Realistic	019, 030, 032, 039,
CCE	217, 329	KTV	030, 039, 180, 183, 185, 217, 280		056, 154, 165, 178, 180
Celebrity	000	Logik	016	Rhapsody	183, 185, 216
Citizen	030, 039, 046, 056, 060,	Luxman	056	Runco	017, 030, 251
	092, 186, 280	LXI	047, 054, 148, 154, 156, 178	Sampo	030, 032, 039, 052, 100, 110
Clairtone	185	Magnavox	030, 036, 054, 096,	Samsung	019, 030, 032, 039, 056,
Concerto	056		186, 187, 230, 386		060, 110, 178, 329, 427, 482
Contec	157, 158, 180, 185	Majestic	015, 016	Samsux	039
Craig	161, 180	Marantz	030, 054	Sanyo	107, 146, 154, 159, 484
Crown	039, 180	Matsui	217	Scimitsu	019
Curtis Mathes	030, 039, 060, 154, 415	Megatron	003, 145, 178	Scotch	178
CXC	180	MEI	185	Scott	019, 178, 179, 180, 236, 309
Daewoo	019, 039, 091, 092, 451	Memorex	016, 056, 106, 150, 154, 178	Sears	015, 047, 054, 056, 146, 148, 149,
Daytron	019	MGA	019, 030, 150, 155, 178		154, 156, 159, 168, 171, 178, 179, 281
Dumont	017, 019	Midland	017, 032, 039, 047, 051, 135	Sharp	039, 093, 153, 157, 165, 281, 386, 491
Dynatech	049	Minutz	021	Shogun	019
Electroband	000, 185	Mitsubishi	014, 019, 098, 150,	Signature	016
Electrohome	381, 389, 409		155, 178, 241, 358	Simpson	186, 187
Emerson	019, 038, 039, 154, 158, 177,	Motorola	055, 093	Sony	000, 011, 080, 111
	178, 179, 180, 181, 182, 183,	MTC	019, 030, 049, 056, 060, 091, 185	Soundesign	178, 179, 180, 186
	185, 236, 270, 280, 282, 463	Multitech	049, 180, 217	Spectricon	003, 137
Envision	030	NAD	156, 166, 178	Squareview	171
Fisher	154, 159	NEC	019, 030, 036, 056	SSS	019, 180
Fujitsu	179	Nikko	030, 092, 178	Starlite	180
Funai	179, 180	Noblex	430	Supre-Macy	046
Futuretech	180	NTC	092	Supreme	000
GE	021, 027, 029, 047, 051, 055,	Onwa	180	Sylvania	030, 054, 065, 096, 381
	135, 174, 178, 251, 279, 282	Optimus	154, 166	Symphonic	171
Gibraltar	017, 019, 030	Optonica	093, 165	Tandy	093
GoldStar	001, 002, 019, 030, 032,	Orion	236	Tatung	003, 049, 055, 396
	039, 056, 106, 178, 409	Panasonic	051, 054, 055, 162, 226, 250, 338	Technics	051, 250
Gradiente	392			Technovox	007
Grunpy	179, 180			Techwood	003, 051, 056



## TV Codes

Teknika . . . . .	016, 019, 039, 054, 056, 060, 092, 150, 179, 180, 186, 312	Trical . . . . .	157	Viking . . . . .	046
Tera . . . . .	031	Universal . . . . .	027	Wards . . . . .	016, 019, 020, 021, 027, 028, 029, 030, 054, 056, 080, 096, 111, 165, 174, 178, 179
TMK . . . . .	056, 177, 178	Vector Research . . . . .	030	Yamaha . . . . .	019, 030
Toshiba . . . . .	036, 060, 149, 154, 156	Victor . . . . .	053	Zenith . . . . .	016, 017
Tosonic . . . . .	185	Video Concepts . . . . .	098	Zonda . . . . .	003
Totevision . . . . .	039	Vidikron . . . . .	054, 242		
		Vidtech . . . . .	019, 036, 178		

## Cable Box Codes

ABC . . . . .	001, 003, 007, 008, 011, 013, 014, 017	Jerrold . . . . .	003, 011, 012, 014, 015, 024, 098, 276, 476	SL Marx . . . . .	040
Antronix . . . . .	022, 207	Linsay . . . . .	440	Sprucer . . . . .	021, 307
Archer . . . . .	022, 039, 153, 207	Macom . . . . .	033	Starcom . . . . .	003, 015, 098
BBT . . . . .	267	Magnavox . . . . .	027, 334	Stargate . . . . .	015, 040
Belcor . . . . .	056	Memorex . . . . .	000	Starquest . . . . .	015
Cable Star . . . . .	056	Movie Time . . . . .	063, 078, 156	StarSight . . . . .	422, 542
Cabletenna . . . . .	022	Novaplex . . . . .	618	Sylvania . . . . .	001
Cableview . . . . .	022	NSC . . . . .	063, 070, 156	Tandy . . . . .	258
Century . . . . .	153	Oak . . . . .	007, 019	Tatung . . . . .	097
Citizen . . . . .	153, 315	Panasonic . . . . .	000, 021, 107	Teknika . . . . .	146
Colour Voice . . . . .	025, 031	Panther . . . . .	637	Telecaption . . . . .	221
Comband . . . . .	232, 233	Paragon . . . . .	000	Televue . . . . .	040
Comtronics . . . . .	040, 060	Philips . . . . .	025, 027, 031, 153, 242, 290, 334	Texscan . . . . .	001
Contec . . . . .	019	Pioneer . . . . .	023, 144, 260, 533	TFC . . . . .	310
Dae Ryung . . . . .	008	Popular Mechanics . . . . .	400	Timeless . . . . .	418
Eastern . . . . .	002	Pulsar . . . . .	000	Tocom . . . . .	012, 013, 059
Electricord . . . . .	078	RCA . . . . .	021	Toshiba . . . . .	000
Focus . . . . .	400	Realistic . . . . .	207	Tusa . . . . .	015
Garrard . . . . .	153	Recoton . . . . .	400	TV86 . . . . .	063
GC Electronics . . . . .	056, 207	Regal . . . . .	020, 259, 273, 279	Unika . . . . .	022, 153, 207
GE . . . . .	232, 233	Regency . . . . .	002	United Artists . . . . .	007
Gemini . . . . .	015, 057, 070, 242	Rembrandt . . . . .	011, 070	United Cable . . . . .	003
General Instrument . . . . .	011, 276, 476	Runco . . . . .	000	Universal . . . . .	022, 039, 056, 077, 078, 153, 191, 207
Goldstar . . . . .	040, 144	Samsung . . . . .	040, 144	Videoway . . . . .	250
Hamlin . . . . .	009, 020, 034, 259, 273	Scientific Atlanta . . . . .	006, 008, 017, 277, 477	Viewstar . . . . .	027, 060, 063, 111, 211, 258, 289
Hitachi . . . . .	011	Seam . . . . .	510	Zenith . . . . .	000, 054, 525
Hytex . . . . .	007	Signal . . . . .	015, 040	Zentek . . . . .	400
Jasco . . . . .	153, 315	Signature . . . . .	011		

## Laserdisc Player Codes

Aiwa . . . . .	203	Mitsubishi . . . . .	059	RCA . . . . .	128, 351
Carver . . . . .	064, 194, 323	NAD . . . . .	059	Realistic . . . . .	203
Denon . . . . .	172	NEC . . . . .	286	Samsung . . . . .	323
Disco Vision . . . . .	023	Panasonic . . . . .	204	Sega . . . . .	023
Funai . . . . .	203	Philips . . . . .	064, 194	Sony . . . . .	193, 201, 270
Hitachi . . . . .	023	Pioneer . . . . .	023, 059	Theta Digital . . . . .	194
Magnavox . . . . .	194, 217, 241	Quasar . . . . .	204	Yamaha . . . . .	217
Marantz . . . . .	064, 194				

## Remote/Receiver VCR Codes

Advantz . . . . .	356	JVC . . . . .	008, 041, 067, 206, 207, 384	Quartz . . . . .	046, 155
Adventura . . . . .	000	KEC . . . . .	037, 278	Quasar . . . . .	035, 077, 162
Aiko . . . . .	278	Kenwood . . . . .	038, 041, 067, 384	Radio Shack . . . . .	000, 037, 325
Aiwa . . . . .	000, 406, 436, 468	KLH . . . . .	072	Radix . . . . .	037
Akai . . . . .	041, 049, 053, 061, 106, 156, 242	Kodak . . . . .	035, 037	Randex . . . . .	037
American High . . . . .	035	Lloyd . . . . .	000	RCA . . . . .	042, 060, 065, 077, 105
Asha . . . . .	240	Lloyd's . . . . .	208		106, 149, 202, 277, 453
Audiovox . . . . .	037	Logik . . . . .	072	Realistic . . . . .	000, 035, 037, 046, 047
Beaumark . . . . .	240	LXI . . . . .	037		048, 062, 066, 104, 240
Bell & Howell . . . . .	104	Magnavox . . . . .	035, 039, 081, 103, 110, 149	Ricoh . . . . .	034, 253
Broksonic . . . . .	121, 184, 211, 295, 361	Magnin . . . . .	240	Runco . . . . .	039
Calix . . . . .	037	Marantz . . . . .	035, 081, 146	Salora . . . . .	075
Canon . . . . .	035, 102, 167	Marta . . . . .	037	Samsung . . . . .	045, 051, 053, 240
Capehart . . . . .	020	Matsushita . . . . .	035	Sanky . . . . .	039, 048
Carver . . . . .	081, 146	MEI . . . . .	035	Sansui . . . . .	041, 067, 082, 271
CCE . . . . .	072, 278	Memorex . . . . .	000, 035, 037, 039, 046	Sanyo . . . . .	046, 047, 104, 240, 268, 372
Citizen . . . . .	037, 278		047, 048, 104, 240, 268, 299	Scott . . . . .	043, 045, 121, 184, 210, 211, 212
Colt . . . . .	072	MGA . . . . .	043, 061	Sears . . . . .	035, 037, 042, 046, 047
Craig . . . . .	037, 047, 072, 240, 271	MGN Technology . . . . .	240		054, 057, 066, 104, 105
Curtis Mathes . . . . .	035, 041, 060	Minolta . . . . .	042, 105	Sharp . . . . .	048, 062
Cybernex . . . . .	051, 240	Mitsubishi . . . . .	043, 061, 067, 075	Shintom . . . . .	072
Daewoo . . . . .	017, 020, 045, 087, 278		173, 214, 242, 443	Shogun . . . . .	051, 240
Daytron . . . . .	020	Motorola . . . . .	035, 048	Singer . . . . .	072
Dynatech . . . . .	000	MTC . . . . .	000, 240	Sony . . . . .	011, 022, 032, 033
Electrohome . . . . .	037	Multitech . . . . .	000, 072		034, 035, 253, 275
Electrophonic . . . . .	037	NAD . . . . .	058	STS . . . . .	042
Emerex . . . . .	032	NEC . . . . .	038, 040, 041, 050	Sunpak . . . . .	253
Emerson . . . . .	000, 002, 036, 037, 043, 061		067, 082, 104, 457	Sylvania . . . . .	000, 035, 043, 081, 103, 110
	068, 088, 121, 184, 208, 209,	Nikko . . . . .	037	Symphonic . . . . .	000, 325
	211, 212, 278, 294, 295, 361, 479	Noblex . . . . .	240	Tatung . . . . .	041
Fisher . . . . .	047, 054, 066, 104	Olympus . . . . .	035, 226	Teac . . . . .	000, 041
Fuji . . . . .	033, 035	Optimus . . . . .	037, 048, 058, 104, 162, 432	Technics . . . . .	035, 162, 246
Funai . . . . .	000, 325	Optonica . . . . .	062	Teknika . . . . .	000, 035, 037, 052
Garrard . . . . .	000, 325	Orion . . . . .	479	TMK . . . . .	036, 208, 240
GE . . . . .	035, 060, 065, 202	Panasonic . . . . .	035, 077, 102, 162, 225	Toshiba . . . . .	043, 045, 057, 060
Go Video . . . . .	232, 279		226, 227, 246, 254, 378, 454		066, 210, 212, 366
GoldStar . . . . .	018, 037, 038, 471, 480	Penney . . . . .	035, 037, 038	Totevision . . . . .	037, 240
Gradiente . . . . .	000, 408		040, 042, 054, 240	Unitech . . . . .	240
Grundig . . . . .	195	Pentax . . . . .	042, 065, 105	Vector . . . . .	045
Harley Davidson . . . . .	000	Philco . . . . .	035	Vector Research . . . . .	038, 040
Harman/Kardon . . . . .	038, 075	Philips . . . . .	035, 062, 081, 110, 403	Video Concepts . . . . .	040, 045, 061, 221
Harwood . . . . .	068, 072	Pilot . . . . .	037	Videosonic . . . . .	240
Headquarter . . . . .	046	Pioneer . . . . .	058, 067, 168	Wards . . . . .	000, 035, 042, 047, 048
HI-Q . . . . .	047	Portland . . . . .	020		060, 062, 072, 149, 212, 240
Hitachi . . . . .	041, 042, 065, 082, 105, 166	Protec . . . . .	072	XR-1000 . . . . .	000, 035, 072
	235, 292, 396	Pulsar . . . . .	039, 051	Yamaha . . . . .	038
Jensen . . . . .	041	Quarter . . . . .	046	Zenith . . . . .	033, 034, 039

---

## Favorites

---

By now you probably know there are many channels, but you may not want to look through all the different channels to find the programs you like best. Favorites provides the opportunity for you to store 10 of your most watched channels in an easy access guide.

Now instead a paging through all the channels in the Program Guide, you can simply select one of the six different Favorite Guides and immediately find what you like to watch.

---

### Favorite Profiles

---

There are 6 different profiles in Favorites which each store up to 10 of your favorite channels. Each profile can be given a different name, so everyone in your family can have there own "Favorites" guide. Or you can set up different categories like Sports, Movies, News, etc, and then store different channels in each category. When you recall the Sports Favorites, for example, all of your favorite sports channels will be displayed for you.


---

 
### Storing Favorites

---

To set up a profile in Favorites, you must display the Favorite Store Screen.

**Note** When you recall the Favorite Store screen the first time, there are no profiles stored, so the Favorites Store screen displays. This allows you to setup the names of your profiles.

1. Press and hold  for three seconds.

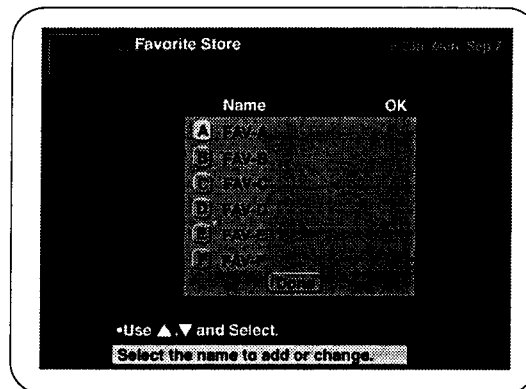


2. Use the ▲ and ▼ keys to Highlight the profile you want to create.

## Limits

 
Set spending or rating limits for a program or a channel with this option.

### Setting the Rating Limit


1. Press **MENU** on your remote.
2. Highlight Options and press **(SELECT)** or press **(8)**.
3. Highlight Limits and press **(SELECT)** or press **(3)**.
4. Enter your personal 4-digit password, if necessary.

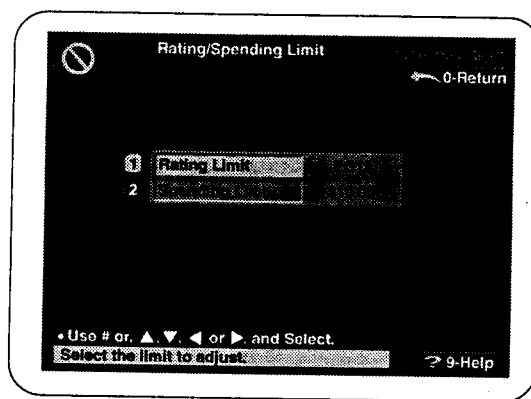


 5. Highlight Rating Limit and press **(SELECT)** or press **(1)**.

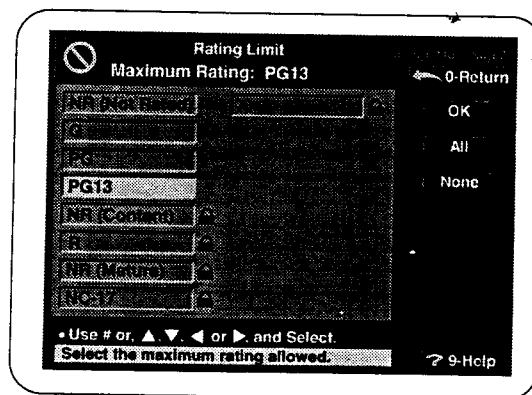

6. Use the ▲ or ▼ key to Highlight the new rating limit you want, and press **SELECT**.

 For example, to set R as the new limit, Highlight R and press **SELECT**. Each rating above R will now have a  icon next to it.

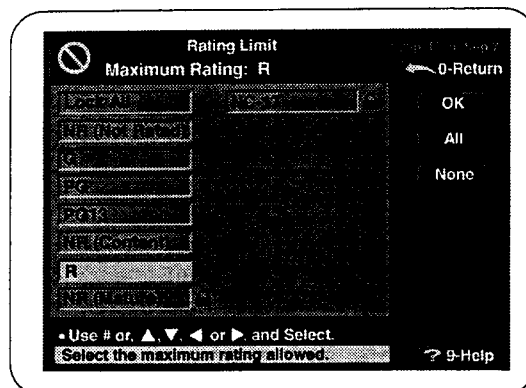

**Note** If you select All, then all your channels will be locked

—or—

If you select None, then no channels will be locked.

7. Select **OK** to store the new limit.

## Setting the Spending Limits

1. Press **MENU** on your remote.
2. Highlight Options and press **SELECT** or press **(8)**.
3. Highlight Limits and press **SELECT** or press **(3)**.
4. Enter your personal 4-digit password, if necessary.

