

UNIDEN® APPHOME™

SECURITY SYSTEM

USHC41

BASIC OWNER'S MANUAL



SAVE YOUR RECEIPT! Proof of Purchase is required for warranty.

© 2015 Uniden America Corporation
Irving, Texas

UNIDEN is a registered trademark of Uniden America Corporation.


UNIDEN® APPHOME SECURITY SYSTEM

USHC41 BASIC OWNER'S MANUAL

This Basic Owner's Manual provides simple instructions on how to set up, install, and use your system for the sensors included in this kit. For more detailed information, refer to the Detailed Owner's Manual on the Uniden website, www.uniden.com.

USHC41 OVERVIEW

Your USHC41 system comprises 1 Gateway Siren, 2 Power Switches, and 2 Door/Window sensors (1 Gateway Siren + 4 Sensors). The free Uniden AppHome-app makes setup and sensor control easy. The following graphic illustrates possible sensor installation, with Power Switches in the living room and master bedroom and Door/Window sensors on the kitchen door and nursery window.

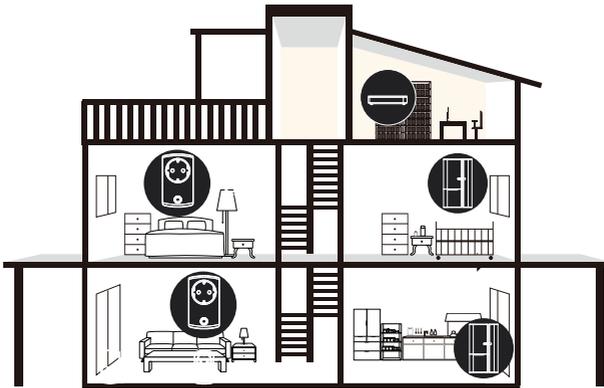

Optional sensors can be added to your USHC41 system. Visit the Uniden website at www.uniden.com or contact your retailer for information about adding cameras, motion detectors, sirens, or a remote control key fob.


WHAT'S IN THE BOX



Gateway/Siren (1)



Adapter - DC 12V, 1A (1)

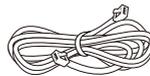


Ethernet Cable (1)



Power Switch (2)



Door/Window Sensor (2)

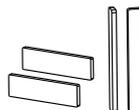

Adhesive Pads (2)

Not Shown:
Basic Owner's
Manual



If any items are missing or damaged, contact our Customer Care Line immediately at 800-658-8063. Never use damaged products!

Need help? Get answers 24/7 at our website: www.uniden.com.

SETTING UP THE SYSTEM

CAUTION! Do not remove the insulating plastic on any of the sensors before being instructed to do so. Removing the plastic starts the pairing process.

Be sure your mobile device is connected to your home WiFi router from app download through system setup and installation.

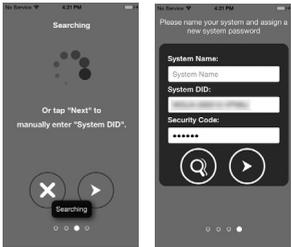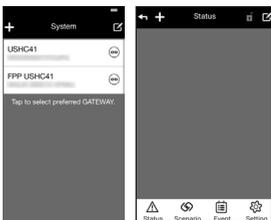STEP 1: DOWNLOAD THE APP	
Download the Uniden AppHome app from the Apple AppStore, Google Play, or the Amazon Appstore for Android.	
STEP 2: INSTALL THE GATEWAY/ CONNECT TO INTERNET	
1. Connect the gateway to the WiFi router using the Ethernet cable (provided).	
2. Connect the gateway to power using the power adapter (provided).	
3. The BLUE LED lights and the system responds with "Power On." After about a minute, the system responds with "Network Connected." The gateway is ready for setup through the app.	
STEP 3: SET UP YOUR SYSTEM	
1. Launch the app.	
<p>2. The app looks for the Gateway's DID through its connection to the home WiFi. Name the gateway. Enter the default security code (123456) and save.</p> <p><i>If the app cannot find the gateway's DID, verify that the gateway is powered on and that it is connected securely to the router. Be sure your phone is also connected via WiFi to your router. If there is no problem with the gateway itself, enter the DID manually. The DID is located on the bottom of the gateway.</i></p> <p><i>It is highly recommend that you change the default security code through the Settings screen.</i></p>	
3. Tap the gateway listing to log in. A blank Status screen displays.	

STEP 4: SET UP THE SENSORS

1. Tap **+** from the System screen to add a sensor. The app displays a list of devices to choose from. The USHC41 provides Power Switches and Door/Window Sensors. Visit www.uniden.com for other devices that can be added to the network.



Power Switch

1. Select *Power Switch* from the Select Device screen. Tap the arrow (➤) to display the first of three screens providing pairing setup instructions.



2. Follow the screen instructions for pairing the sensor. After pairing is complete, plug a light fixture into the sensor. Tap **△** to display the sensor Status screen.

If the light fixture has its own on/off switch, put it in the ON position.


3. Tap the sensor and then an ON/OFF screen displays. Tap ON and OFF to test the sensor. Tap the back arrow to return to the Status screen.




4. Repeat this procedure for each sensor.

Door/Window Sensor

1. Select *Door Sensor* or *Window Sensor* from the Select Device screen. Tap the arrow (➤) to display the first of three screens providing pairing setup instructions.

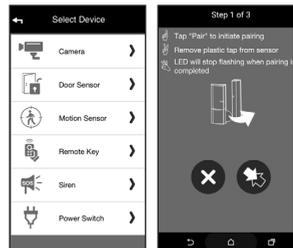

2. Follow the screen instructions for pairing the sensor. After pairing is complete, separate the two parts of the sensor. Tap **△** to display the sensor Status screen.

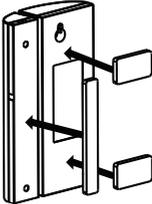
<p>3. An alert should display on the Door/Window Sensor section of the Status page.</p> <p>Alerts display in RED.</p>	 <p>The screenshot shows the 'Status' page of the Uniden AppHome app. At the top, there are icons for 'Fan' (Living Room) and 'Lamp' (Office). Below these are 'ON' and 'OFF' status indicators. Further down, there are icons for 'Front Door' and 'Back Door', each with a lock icon. At the bottom, there is a navigation bar with icons for 'Status', 'Scenario', 'Event', and 'Setting'.</p>
<p>4. Repeat this procedure for each sensor.</p>	
<h2>INSTALL DOOR/WINDOW SENSOR</h2>	
<p>1. After the Door/Window sensors are paired to the gateway through the app, apply the adhesive pads to the back of the sensor.</p>	 <p>The diagram illustrates the installation of a door/window sensor. It shows a vertical door frame with a lock. Two parts of the sensor are shown: a larger rectangular part and a smaller rectangular part. Arrows indicate that the larger part is attached to the door frame and the smaller part is attached to the door itself.</p>
<p>2. Select a location the door/window frame. Place the large part of the sensor on the frame and press to adhere. Line up the smaller piece to the larger one and press on the door or window.</p> <p>The gap between the two parts of the sensor should not exceed 0.5 inches.</p>	

USING THE APP

APP OVERVIEW

Through the Uniden AppHome app you can:

- Display sensor status
- Clear alerts
- Set up scenarios
- Arm and disarm sensors
- Display Events
- Set up email alerts and push notifications
- Configure your system

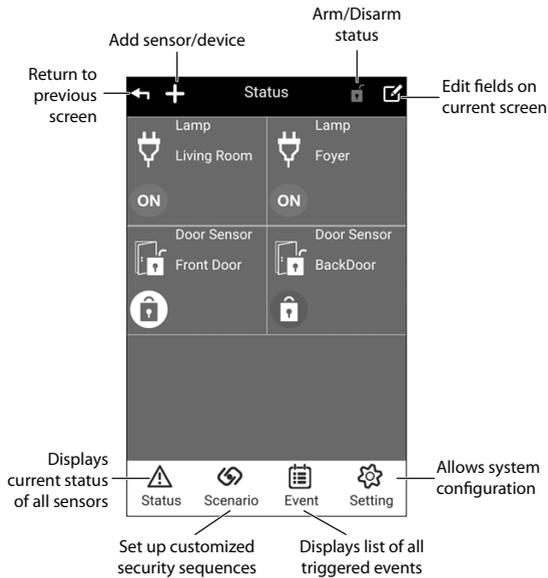

The Status screen is the primary screen in the app. In addition to displaying sensor status, it also allows you to:

- Add Sensor/Device (+). Select this icon to pair another sensor to your system.
- Arm/Disarm the system (🔒). Tap the icon to arm or disarm a sensor group set up through *Scenario/Arm* screens. The gateway beeps when you arm the system and you have 30 seconds to leave before the sensors are fully armed.
- Edit (✎). Rename or delete the sensor.
- Status (⚠). Displays sensors' current status and allows operation (turn on light, etc).
- Scenario (⌂). Sets up one-touch scenarios (Arm or Panic) or *If...Then* scenarios (pre-determined sequences where an event on one sensor will trigger other sensors).
- Event (📄). Displays a list of events resulting from sensors being triggered.
- Setting (⚙). Allows system configuration such as IP Setup, Security Setup, Notification Setup, Schedule Setup, etc. Refer to the online Detailed Owner's Manual for further information.

USING THE APP

DISPLAY SENSOR STATUS

<p>1. Open the app and tap the system name.</p>	
---	--

- The Status screen displays sensors paired to that system and a set of icons to access other functions



CLEAR ALERTS

When a sensor is triggered, an alert icon displays in red for that sensor on the Status screen. Types of alerts and their icons are:

	Sensor ON		Sensor OFF
	Triggered (Closed)		Triggered (Open)
	Low Power		

- Access the Status screen. It displays sensors paired to the system and a set of icons to access other functions
In this example, the back door sensor has been triggered. The icon displays.
- Tap on the alert icon to clear it. ***The icon displays, showing that you have acknowledged the sensor alert and the door is still open.***




SET UP SCENARIOS

Scenarios are preset sensor actions that are triggered by some kind of event. One-Touch scenarios are triggered when you tap a specific icon in the One-Touch scenario section of the Scenario screen. *If...Then* scenarios activate when a specified sensor is triggered.

Scenario Main Screen

When you tap Scenario () the Scenario main screen displays. The screen is divided into two sections plus an icon section across the bottom. The top section provides one-touch operation for turning sets of sensors on or off. One-touch operations are usually used when you are leaving your house and want to secure it. The bottom section contains "If...Then" scenarios, where you set up a sequence of events if there is a triggering action. For example, you can set up Power Switches to activate (turning on lamps) if a door sensor is triggered.

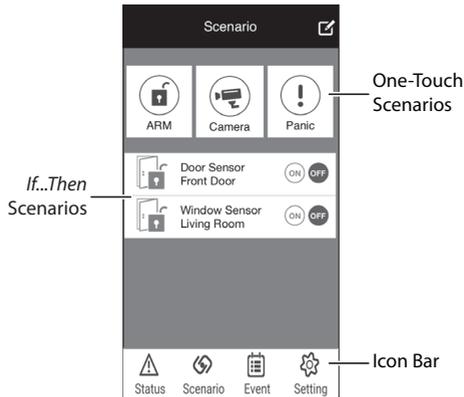

Set Up One-Touch Scenarios

You can set up one ARM one-touch scenario with the USHC41 kit. Use it to secure your home when you plan to be away.

The ARM one-touch scenario can be used with this USHC41 kit. You can add an optional camera to use the camera one-touch scenario.

<p>1. From the Scenario screen, tap  to enter Edit mode. Available one-touch scenario icons display an edit icon ().</p>	
<p>2. Tap  on the ARM icon. The Scenario Setup screen displays the sensors and devices on your system. The system defaults to status = ON (check mark) for all sensors. If you do not want to include a specific sensor in the one-touch ARM scenario, tap the check mark on the sensor to turn it off.</p>	
<p>3. When you have set up your one-touch ARM scenario, tap SAVE (). The Scenario main screen displays again.</p>	
<p>4. Repeat these steps for the Panic one-touch scenario.</p>	

Using One-Touch Scenarios

Activate a one-touch scenario through the Scenario screen or through the Status screen.

Activate through Scenario Screen

1. On the Scenario screen, tap the ARM icon () in the One-Touch scenario section.


- The gateway beeps and the app begins a 30 second countdown. You have 30 seconds to leave the house before the system fully arms. You can tap the ARM icon again within that 30 seconds to cancel the arming action.

Activate through Status Screen

- On the Status screen, tap the ARM icon () in the top right portion of the screen.
- The gateway beeps and the app begins a 30 second countdown. You have 30 seconds to leave the house before the system fully arms. You can tap the ARM icon again within that 30 seconds to cancel the arming action.

Set Up “IF...THEN” Scenarios

Just like one-touch scenarios, you must first set up the sensors that will be activated for an *If...Then* scenario. With an *If...Then* scenario, you designate a primary sensor. If it is triggered, then secondary sensors activate. For example, you can set up Power Switches to activate (turning on lamps) if a door sensor is triggered (door opened).
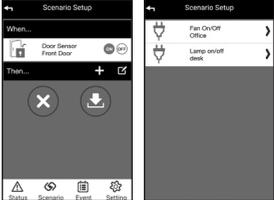
<ol style="list-style-type: none"> Tap  on the Status screen to display the Scenario main screen. A list of Door/Window sensors able to initiate an <i>If...Then</i> scenario displays. The sensor status is automatically set to OFF. <p>Door/window sensors are the only sensors included in this kit that can initiate an <i>If...Then</i> scenario.</p>	
<ol style="list-style-type: none"> Tap on a sensor; the Scenario Setup screen displays. Next, tap  to display a list of available sensors to add to the scenario. Tap the arrow on a sensor you want to include in the scenario. 	
<ol style="list-style-type: none"> The app returns to the Scenario Setup screen with that sensor showing ON. Tap  to add additional sensors. 	
<ol style="list-style-type: none"> When you have built the scenario, tap  to save. The Scenario screen displays with that scenario set to ON. 	
<ol style="list-style-type: none"> Repeat to add another <i>If...Then</i> scenario. 	

Using “IF...THEN” Scenarios

Tap  to access the Scenario screen and tap ON for an *If...Then* scenario from the list. That scenario is now active.

DISPLAY EVENTS

The Event List displays all triggered events. It shows which sensor was triggered, including the date and time.

<ol style="list-style-type: none"> 1. Tap  and access the Events screen. 2. A list of events displays. 	
---	---

CONFIGURE SETTINGS


The default password to enter the Settings menu is 123456.

Many of the System Setting options are self-explanatory and should be easy to figure out. Refer to the Detailed Owner's Manual on the Uniden website at www.uniden.com if necessary.

Some of the settings, such as Remote Style, may refer to optional devices not included in this kit. Visit the Uniden website at www.uniden.com or contact your retailer for information about purchasing additional devices.

SET UP EMAIL NOTIFICATONS

If a sensor triggers while the system is alarmed, the system sends an email alert. Set up push notification through the System Setting screen.
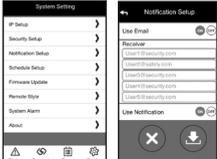
<ol style="list-style-type: none"> 1. Access the System Settings screen, then select <i>Notification Setup</i>. 	
<ol style="list-style-type: none"> 2. Fill in the fields and tap . The System Setting screen displays. You will now receive an email notification if a sensor is triggered. 	

For complete operation instructions, refer to the Detailed Owner's Manual online at www.uniden.com.

FCC/IC COMPLIANCE

This device complies with Part 15 of the FCC rules. Operation is subjected to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

The distance between user and products should be no less than 7.9 in (20cm.).

Changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

Avis de conformité à la FCC : Cet dispositif a été testé et s'avère conforme à l'article 15 des règlements de la Commission fédérale des communications (FCC). Ce dispositif est soumis aux conditions suivantes: 1) Ce dispositif ne doit pas causer d'interférences nuisibles et; 2) Il doit pouvoir supporter les parasites qu'il reçoit, incluant les parasites pouvant nuire à son fonctionnement.

Cet appareil est conforme aux normes RSS exemptes de licences d'Industrie Canada. Son fonctionnement est soumis aux deux conditions suivantes : (1) cet appareil ne doit pas causer d'interférences nuisibles et (2), il doit pouvoir accepter les interférences, incluant celles pouvant nuire à son fonctionnement normal.

La distance entre l'utilisateur et les produits ne devrait pas être moins de 20 cm (7,9 po).

Tout changement ou modification non approuvé expressément par la partie responsable pourrait annuler le droit à l'utilisateur de faire fonctionner cet équipement.

One-Year Limited Warranty

SAVE YOUR RECEIPT! Evidence of original purchase is required for warranty service.

WARRANTOR: Uniden America Corporation ("Uniden") ELEMENTS OF WARRANTY: Uniden warrants, for one year, to the original retail owner, this Uniden Product to be free from defects in materials & craftsmanship with only the limitations or exclusions set out below.

WARRANTY DURATION: This warranty to the original user shall terminate & be of no further effect 12 months after the date of original retail sale. The warranty is invalid if the Product is (A) damaged or not maintained as reasonable or necessary, (B) modified, altered, or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden, (C) improperly installed, (D) serviced or repaired by someone other than an authorized Uniden service center for a defect or malfunction covered by this warranty, (E) used in any conjunction with equipment or parts or as part of any system not manufactured by Uniden, or (F) installed or programmed by anyone other than as detailed by the owner's manual for this product.

STATEMENT OF REMEDY: In the event that the product does not conform to this warranty at any time while this warranty is in effect, warrantor will either, at its option, repair or replace the defective unit & return it to you without charge for parts, service, or any other cost (except shipping & handling) incurred by warrantor or its representatives in connection with the performance of this warranty. Warrantor, at its option, may replace the unit with a new or refurbished unit.

THE LIMITED WARRANTY SET FORTH ABOVE IS THE SOLE & ENTIRE WARRANTY PERTAINING TO THE PRODUCT & IS IN LIEU OF & EXCLUDES ALL OTHER WARRANTIES OF ANY NATURE WHATSOEVER, WHETHER EXPRESS, IMPLIED OR ARISING BY

OPERATION OF LAW, INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow this exclusion or limitation of incidental or consequential damages so the above limitation or exclusion may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights, & you may also have other rights which vary from state to state. This warranty is void outside the United States of America & Canada.

PROCEDURE FOR OBTAINING PERFORMANCE OF WARRANTY: If, after following the instructions in the owner's manual you are certain that the Product is defective, pack the Product carefully (preferably in its original packaging). Disconnect the battery from the Product & separately secure the battery in its own separate packaging within the shipping carton. The Product should include all parts & accessories originally packaged with the Product. Include evidence of original purchase & a note describing the defect that has caused you to return it. The Product should be shipped freight prepaid, by traceable means, to warrantor at:

Uniden America Corporation
c/o Saddle Creek
743 Henrietta Creek Rd., Suite 100
Roanoke, TX 76262

(800) 658-8063, 8 a.m. to 4:30 p.m., Central, Monday through Friday

