APP Instruction Manual

Attachment 1: Instructions for APP Installation

1: Step 1: turn on the radio RF320

2: Step 2: download the APP

Android System: Use your mobile browser to scan the following QR code to download the APP

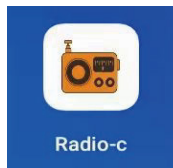iOS System: Go to "App Store" and search "Radio-CT" to download the App
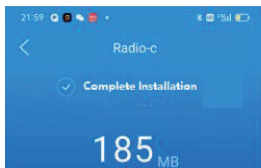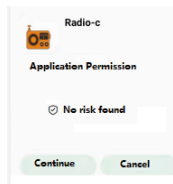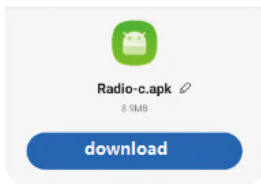

Android: QR code
Radio-C

iOS: APP store
Radio-CT

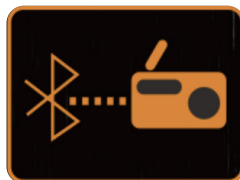2.1: Click "download"→Click "continue"→Installation finished, click "open the app"→APP icon is displayed

Radio-c.apk ✎
8.9MB

download

Radio-c

Application Permission

⊘ No risk found

Continue   Cancel

21:59
Radio-c
✓ Complete Installation
185 MB

Radio-c

2.2: Click the APP icon to enter and use→Click the Bluetooth symbol at at the bottom right on the APP→Click "permit"→Click the symbol again→ Choose "RF320-BLE "→"Successful connection"
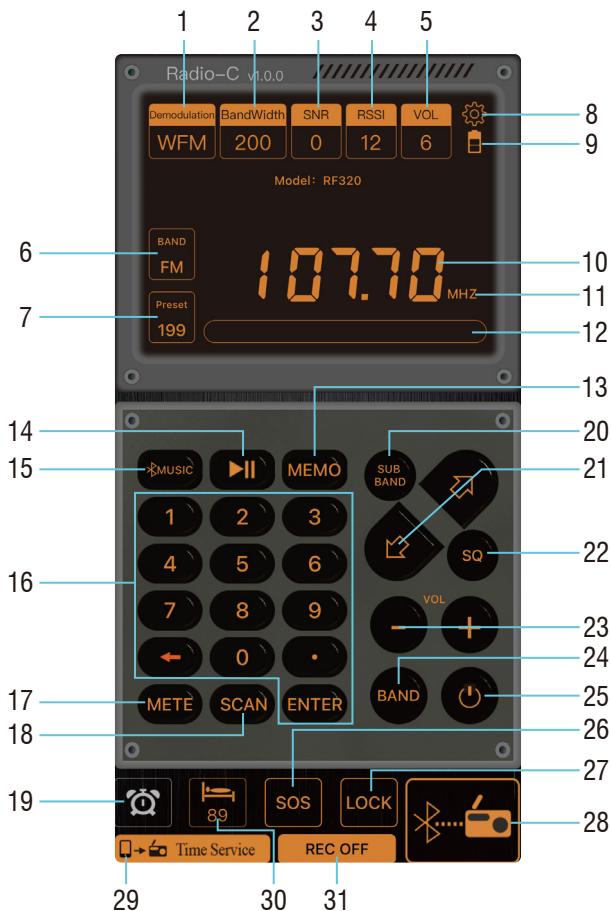
Attachment 2: Description of Symbols on APP Interface

No.	Symbols	Functions
1	Demodulation	Demodulation mode symbol
2	Bandwidth	Bandwidth
3	SNR	Signal-to-noise ratio
4	RSSI	Signal intensity
5	VOL	Volume symbol
6	Band	Click to select the FM, AM, SW, VHF
7	Preset	7-1: "Preset" display: meaning recall station: Press digital buttons to select the memory station of number and then press "Enter" to confirm 7-2: "Preset" flashing: means manual station storage: find the target frequency points, long press [MEMO], "Preset" symbol is flashing, then press the [⇦⇨] or press digital buttons to select preset channel number. Press [MEMO] key to confirm. 7-3: "Preset--" symbol: There are no stored stations
8	⚙	View the device version
9	🔋	Battery symbol
10	888888	Radio Frequency display
11	KHZ MHZ	Unit display
12	⬭	Edit the name of the frequency station: Long press this location and enter the current frequency according to the language prompt
13	MEMO	13-1: press: enter recall station mode: press[⇦⇨]button select station 13-2: long press: manual station storage: find the target frequency points ,long press [MEMO] key,"Preset" symbol is flashing, press the [⇦⇨] to select preset channel number. press [MEMO] key to confirm.
14	▷◫	Play&pause
15	♫MUSIC	Switch between TF card play mode and Bluetooth play mode Note: If you need to play music in Bluetooth mode, please open the mobile phone Bluetooth connection, select "RF320" in the search list, you can play after successful connection.

No.	Symbols	Functions
16	(1)(2)(3) (4)(5)(6) (7)(8)(9) (-)(0)(.) [ENTER]	16-1: Digital key dot frequency:press [ENTER] key,press digital buttons which your target frequency point,press [ENTER] key for confirm. 16-2: Recall station: press digital buttons you need, press [ENTER] key for confirm. 16-3: Select track selection: press digital buttons which your need, press [ENTER] key for confirm.
17	METE	In SW mode, select meter wave
18	SCAN	18-1: In reception mode, long press to search the channels stored automatically 18-2: In WB band, long press to enter alarm mode, long press again to exit
19	🕰️📻	Set/close the clock
20	SUB BAND	20-1: In SW mode, press to switch between 11 meter waves. 20-2: In FM mode, press to switch between 4 meter waves.
21	⇦⇨	+/- (adjust the frequency/choose a song/take a channel/choose an address of storing channels)
22	SQ/EQ	22-1: EQ: for play mode: E1: NORMAL E2: POP E3: ROCK E4: JAZZ E5: CLASSIC E6: COUNTRY 22-2: SQ: In the AIR band mode, press SQ to toggle the squelch switch.
23	VOL + -	Volume +/-
24	BAND	Band switching
25	⏻	25-1: Power on/Power off 25-2: Disconnect APP connection: after pressing "off" on APP interface, the radio displays time state, long press [MOD] on the button of radio) The radio displays "bLE OFF", it means APP is disconnected forcibly
26	SOS	26-1: Long press to turn on /turn off SOS alarm 26-2: Press to turn on /turn off the light
27	LOCK	Long press to lock, long press again to unlock
28	📻	Connect the mobile APP to the radio

No.	Symbols	Functions
29	☐ — 🔒 Time Service	Equipment calibration time
30	🛏	Set your Sleep Time
31	REC	Record in Radio reception mode Note: insert TF card into the radio before recording Press to enter the recording mode Press again to exit

Attachment 3: Working Modes on APP Interface

Instruction 1: In play music mode, directly click the symbol on interface to choose an EQ sound effect: NORMAL, POP, ROCKJAZZ, CLASSIC, COUNTRY

Instruction 2: In TF play mode, click TF card play order to choose:

        🔁 (Repeat all, the radio displays: rA)

        🔂 (Repeat one, the radio displays: rO)

        🔁 (Repeat the songs in current folder, the radio displays: rF)

        🔀 (Random play, the radio displays: rr)

RADDY

✉ support@iraddy.com

🌐 www.iraddy.com