

UHF FM TRANSCEIVER

TM-471A

SERVICE MANUAL

KENWOOD

© 2003-10 PRINTED IN JAPAN
B51-8664-00 (N) 179



CONTENTS

CIRCUIT DESCRIPTION	2	TERMINAL FUNCTION	27
SEMICONDUCTOR DATA	8	PC BOARD	
COMPONENTS DESCRIPTION	9	DISPLAY UNIT (X54-3450-10)	28
PARTS LIST	10	TX-RX UNIT (X57-686X-XX)	30
EXPLODED VIEW	17	SCHEMATIC DIAGRAM	34
PACKING	18	BLOCK DIAGRAM	38
RESETTING THE TRANSCEIVER	19	LEVEL DIAGRAM	40
ADJUSTMENT	20	SPECIFICATION	BACK COVER

CIRCUIT DESCRIPTION

Frequency Configuration

The receiver utilizes double conversion. The first IF is 49.95MHz and the second IF is 450kHz. The first local oscillator signal is supplied from the PLL circuit.

The PLL circuit in the transmitter generates the necessary frequencies. Figure 1 shows the frequencies.

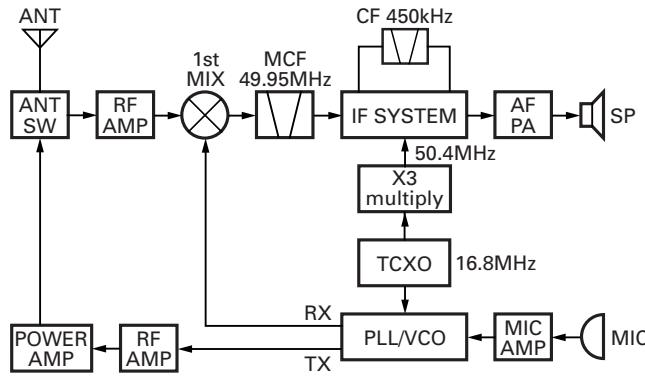


Fig. 1 Frequency configuration

Receiver System

The receiver is double conversion superheterodyne. The frequency configuration is shown in Figure 1.

Front-end RF Amplifier

An incoming signal from the antenna is applied to an RF amplifier (Q353) after passing through a transmit/receive switch circuit (D603, D604 and D605 are off) and a BPF (L359, L358 L360, L361 and varactor diodes : D353, D354, D355). After the signal is amplified (Q353), the signal is filtered by a BPF (L354, L355 and varactor diodes: D351, D352) to eliminate unwanted signals before it is passed to the first mixer.

The voltage of these diodes are controlled by tracking the CPU (IC101) center frequency of the band pass filter. (See Fig. 2.)

First Mixer

The signal from the RF amplifier is heterodyned with the first local oscillator signal from the PLL frequency synthesizer circuit at the first mixer (Q352) to create a 49.95MHz first intermediate frequency (1st IF) signal. The first IF signal is then fed through one pair of monolithic crystal filter (MCF : XF351) to further remove spurious signals.

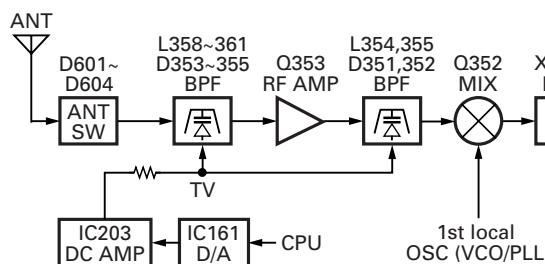


Fig. 2 Receiver system

IF Amplifier

The first IF signal is amplified by Q351, and then goes to IC301 (FM processing IC). The signal is heterodyned again with a second local oscillator signal within IC301 to create a 450kHz second IF signal. The second IF signal is then fed through a 450kHz ceramic filter (Wide : CF301, Narrow : CF302) to further eliminate unwanted signals before it is amplified and FM detected in IC301.

Item	Rating
Nominal center frequency	49.95MHz
Pass bandwidth	$\pm 5.0\text{kHz}$ or more at 3dB
35dB stop bandwidth	$\pm 20.0\text{kHz}$ or less
Ripple	1.0dB or less
Insertion loss	5.0dB or less
Guaranteed attenuation	80dB or more at $f_0 \pm 1\text{MHz}$
Spurious	40dB or more
Terminal impedance	$350\Omega / 5.5\text{pF}$


Table 1 Crystal filter (L71-0620-05) : XF351

Item	Rating
Nominal center frequency	450kHz
6dB bandwidth	$\pm 6.0\text{kHz}$ or more
50dB bandwidth	$\pm 12.5\text{kHz}$ or less
Ripple	2.0dB or less
Insertion loss	6.0dB or less
Guaranteed attenuation	35.0dB or more within $f_0 \pm 100\text{kHz}$
Terminal impedance	$2.0\text{k}\Omega$

Table 2 Ceramic filter (L72-0993-05) : CF301

Item	Rating
Nominal center frequency	450kHz
6dB bandwidth	$\pm 4.5\text{kHz}$ or more
50dB bandwidth	$\pm 10.0\text{kHz}$ or less
Ripple	2.0dB or less
Insertion loss	6.0dB or less
Guaranteed attenuation	60.0dB or more within $f_0 \pm 100\text{kHz}$
Terminal impedance	$2.0\text{k}\Omega$

Table 3 Ceramic filter (L72-0999-05) : CF302

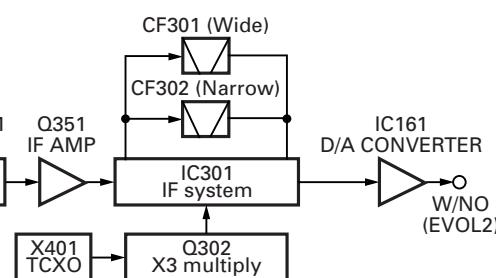

CIRCUIT DESCRIPTION

■ Wide/Narrow Switching Circuit

The Wide port (pin 65) and Narrow port (pin 64) of the CPU is used to switch between ceramic filters. When the Wide port is high, the ceramic filter SW diodes (D303, D302) cause CF301 to turn on to receive a Wide signal.

When the Narrow port is high, the ceramic filter SW diodes (D303, D302) cause CF302 to turn on to receive a Narrow signal. (See Fig. 3.)

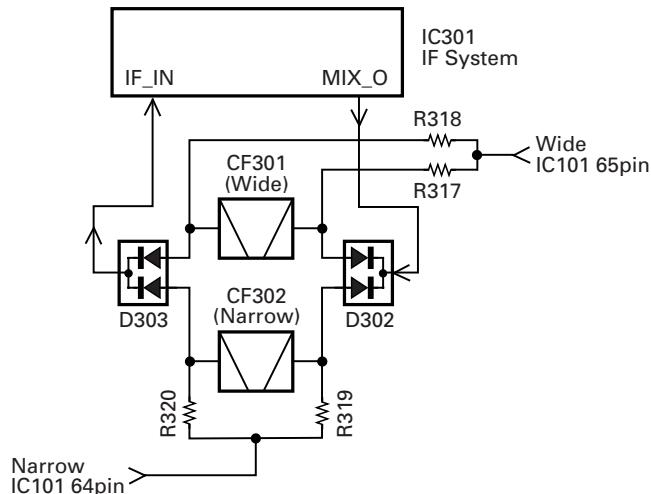


Fig. 3 Wide/Narrow switching circuit

■ AF Signal System

The detection signal from IF IC (IC301) goes to D/A converter (IC161) to adjust the gain and is output to AF filter (IC251) for characterizing the signal. The AF signal output from IC251 and the DTMF signal, BEEP signal are summed and the resulting signal goes to the D/A converter (IC161). The AFO output level is adjusted by the D/A converter. The signal output from the D/A converter is input to the audio power amplifier (IC252). The AF signal from IC252 switches between the internal speaker and speaker jack (J1) output. (See Fig. 4.)

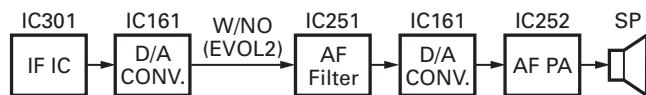


Fig. 4 AF signal system

■ Squelch Circuit

The detection output from the FM IF IC (IC301) passes through a noise amplifier (Q301) to detect noise. A voltage is applied to the CPU (IC101). The CPU controls squelch according to the voltage (SQIN) level. The signal from the RSSI pin of IC301 is used for S-meter. The electric field strength of the receive signal can be known before the SQIN voltage is input to the CPU, and the scan stop speed is improved.

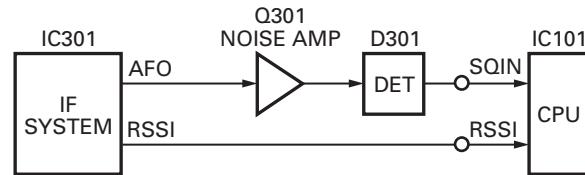


Fig. 5 Squelch circuit

PLL Frequency Synthesizer

The PLL circuit generates the first local oscillator signal for reception and the RF signal for transmission.

■ PLL

The frequency step of the PLL circuit is 5 or 6.25kHz. A 16.8MHz reference oscillator signal is divided at IC401 by a fixed counter to produce the 5 or 6.25kHz reference frequency. The voltage controlled oscillator (VCO) output signal is buffer amplified by Q410, then divided in IC401 by a dual-module programmable counter. The divided signal is compared in phase with the 5 or 6.25kHz reference signal in the phase comparator in IC401. The output signal from the phase comparator is filtered through a low-pass filter and passed to the VCO to control the oscillator frequency. (See Fig. 6.)

■ VCO

The operating frequency is generated by Q406 in transmit mode and Q405 in receive mode. The oscillator frequency is controlled by applying the VCO control voltage, obtained from the phase comparator, to the varactor diodes (D405 and D406 in transmit mode and D403 and D404 in receive mode). The TX/RX pin is set high in receive mode causing Q408 and Q407 to turn Q406 off, and turn Q405 on. The TX/RX pin is set low in transmit mode. The outputs from Q405 and Q406 are amplified by Q410 and sent to the RF amplifiers. (See Fig. 6.)

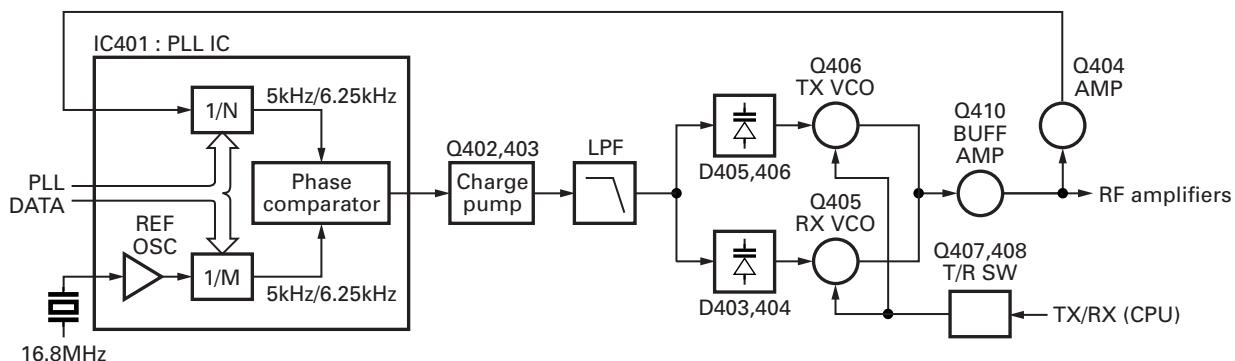



Fig. 6 PLL circuit

CIRCUIT DESCRIPTION

■ Unlock Circuit

During reception, the 8RC signal goes high, the 8TC signal goes low, and Q34 turns on. Q33 turns on and a voltage is applied to 8R. During transmission, the 8RC signal goes low, the 8TC signal goes high and Q36 turns on. Q35 turns on and a voltage is applied to 8T.

The CPU monitors the PLL (IC401) LD signal directly. When the PLL is unlocked during transmission, the PLL LD signal goes low. The CPU detects this signal and makes the 8TC signal low. When the 8TC signal goes low, no voltage is applied to 8T, and no signal is transmitted. (See Fig. 7.)

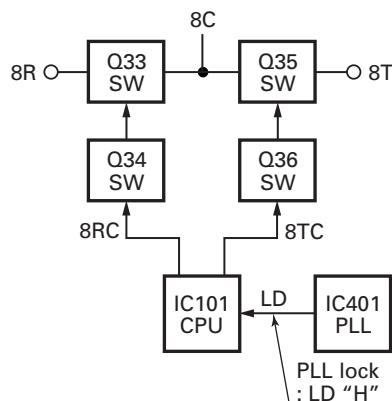**Fig. 7** Unlock circuit**Transmitter System****■ Outline**

The transmitter circuit produces and amplifies the desired frequency directly. It FM-modulates the carrier signal by means of a varicap diode.



■ Power Amplifier Circuit

The transmit output signal from the VCO passes through the transmission/reception selection diode (D409) and amplified by Q500, Q501, Q502 and Q503. The amplified signal goes to the final amplifier (Q504) through a low-pass filter. The low-pass filter removes unwanted high-frequency harmonic components, and the resulting signal is transmitted through the antenna terminal. (See Fig. 8.)

■ APC Circuit

The automatic transmission power control (APC) circuit detects part of a final amplifier (Q504) output with a diode (D606, D607) and applies a voltage to IC501. IC501 compares the APC control voltage (PC) generated by the D/A converter (IC161) and DC amplifier (IC203) with the detection output voltage. IC501 generates the voltage to control Q502, Q503 and Q504 and stabilizes transmission output.

The APC circuit is configured to protect over current of Q502, Q503 and Q504 due to fluctuations of the load at the antenna end and to stabilize transmission output at voltage and temperature variations. (See Fig. 9.)

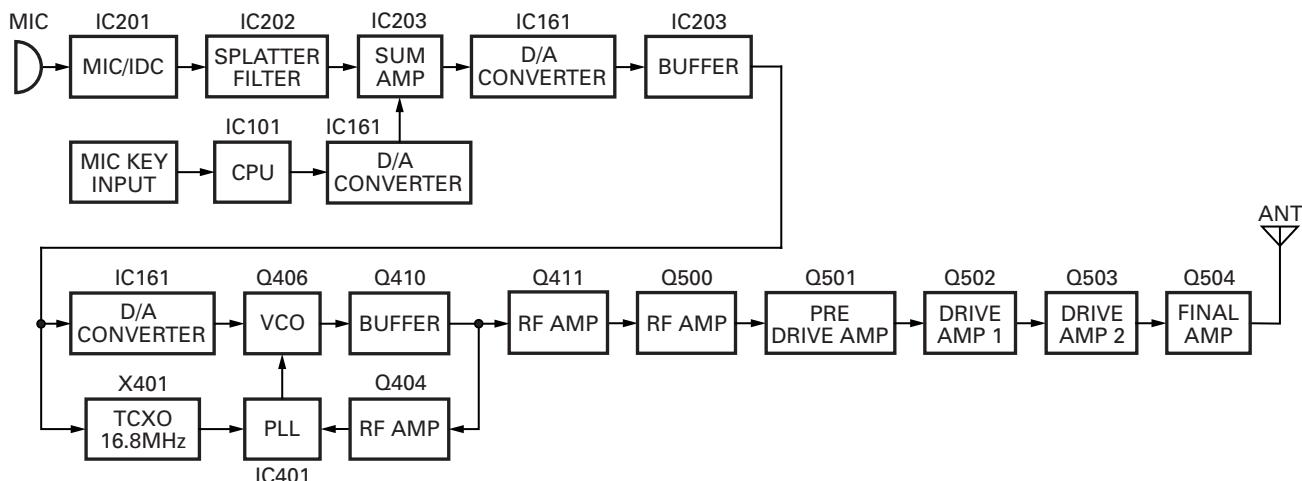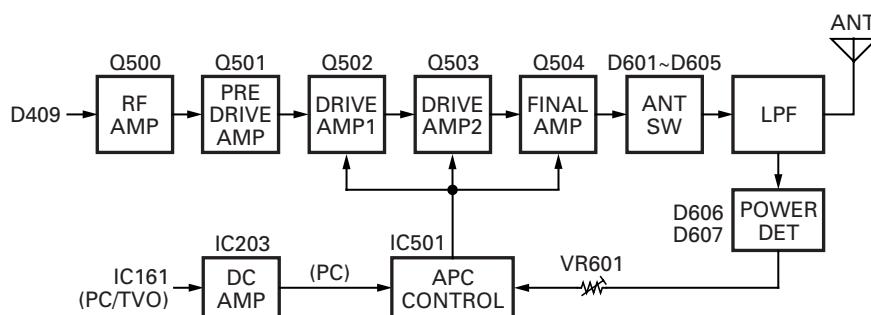**Fig. 8** Transmitter system**Fig. 9** APC circuit

CIRCUIT DESCRIPTION

Control Circuit

The CPU carries out the following tasks (See Fig. 10.):

- 1) Controls the WIDE, NARROW, TX/RX outputs.
- 2) Adjusts the AF signal level of the AF filter (IC251) and turns the filter select compounder on or off.
- 3) Controls the display unit.
- 4) Controls the PLL (IC401).
- 5) Controls the D/A converter (IC161) and adjusts the volume, modulation and transmission power.

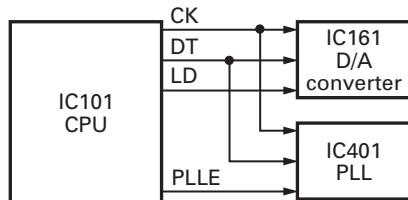


Fig. 10 Control circuit

Memory Circuit

The transceiver has an 64k-bit EEPROM (IC66). The EEPROM contains adjustment data. The CPU (IC101) controls the EEPROM through three serial data lines. (See Fig. 11.)

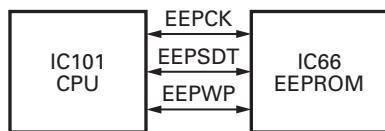


Fig. 11 Memory circuit

Display Circuit

The CPU (IC101) controls the display LCD and LEDs. When power is on, the LCD driver will use the BL line to control the LCD illumination and key backlight LEDs.

The brightness function is controlled by the switch Q12. The LCD driver (IC3) and CPU (IC101) communicate through the CE, CL, DI, DO lines. (See Fig. 12.)

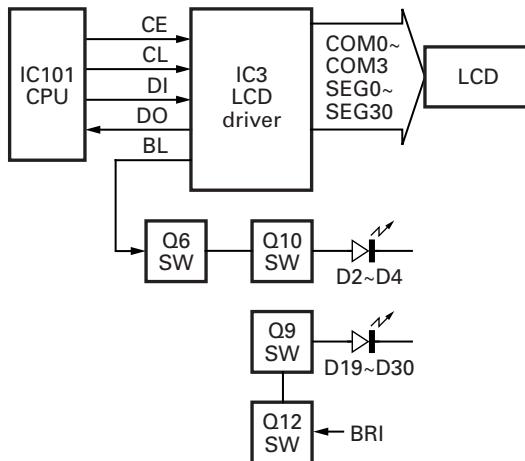


Fig. 12 Display circuit

■ Key Matrix Circuit

The TM-471 front panel has function keys. Each of them is connected to a cross point of a matrix of the KI1 to KI3 and KS1 to KS2 ports of the LCD driver.

The LCD driver monitors the status of the KI1 to KI3 and KS1 to KS2 ports. If the state of one of the ports changes, the LCD driver assumes that the key at the matrix point corresponding to that port has been pressed.

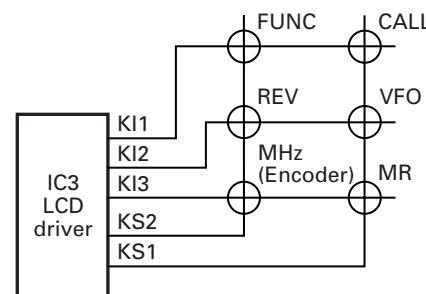


Fig. 13 Key matrix circuit

■ Encode

The DCS and CTCSS signals are output from QT/DQT of the CPU (IC101) and summed with the external pin DI line by the summing amplifier (IC203) and the resulting signal goes to the D/A converter (IC161). The DTMF signal is output from DTMF pin of the CPU and summed with a MIC signal by the summing amplifier (IC203), and the resulting signal goes to the D/A converter (IC161).

The D/A converter (IC161) adjusts the MOD level and the balance between the MOD and CTCSS/DCS levels. Part of a CTCSS/DCS signal is summed with MOD and the resulting signal goes to the VCOMOD pin of the VCO. This signal is applied to a varicap diode in the VCO for direct FM modulation.

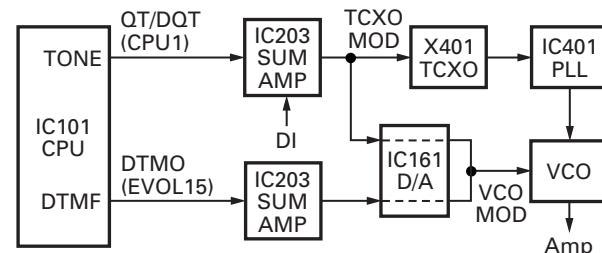


Fig. 14 Encoder

CIRCUIT DESCRIPTION

■ Decode**• CTCSS/DCS**

The signal (W/NO (EVOL2)) goes to DTMF IN (pin 95) of CPU (IC101). The CTCSS/DCS signal will pass through the low-pass filters in the CPU (IC101) and be decoded within the CPU (IC101). The DTMF signal will be decoded within the CPU (IC101).

**Fig. 15 Decode****■ D/A Converter**

The D/A converter (IC161) is used to adjust MO modulation, AF volume, TV voltage, FC reference voltage, and PC POWER CONTROL voltage level.

Adjustment values are sent from the CPU as serial data. The D/A converter has a resolution of 256 and the following relationship is valid:

$$\text{D/A output} = (\text{Vin} - \text{VDARef}) / 256 \times n + \text{VDARef}$$

Vin: Analog input

VDARef: D/A reference voltage

n: Serial data value from the microprocessor (CPU)


Power Supply Circuit

When the power switch on the display unit is pressed, the power port on the display unit which is connected port 17 (POWER), goes low, then port 82 (SBC) goes high, Q32 turns on, SB SW (Q31) turns on and power (SB) is supplied to the radio.

When the DC power supplied to the radio, the voltage regulator IC (IC33) supply into the CPU VDD and reset voltage detect IC (IC34). IC34 will generate signal (RESET) in to the reset terminal on the CPU (IC101) to carry out a power ON reset. If DC power is less than about 9.5V, the radio is unable to power on.

When the DC power voltage deceases from normal voltage, the INT voltage detector IC (IC35) will set to high on CPU port 18 (INT) if B line will became less than about 9.5V. Then CPU send to EEPROM (IC66) the backup data and go into STOP mode.

This circuit has an overvoltage protection circuit. If a DC voltage of 18V or higher is applied to the base of Q61, this voltage turns Q61 on and will set to high on CPU port 18 (INT). Then CPU send to EEPROM (IC66) the backup data and go into stop mode. (See Fig. 16.)

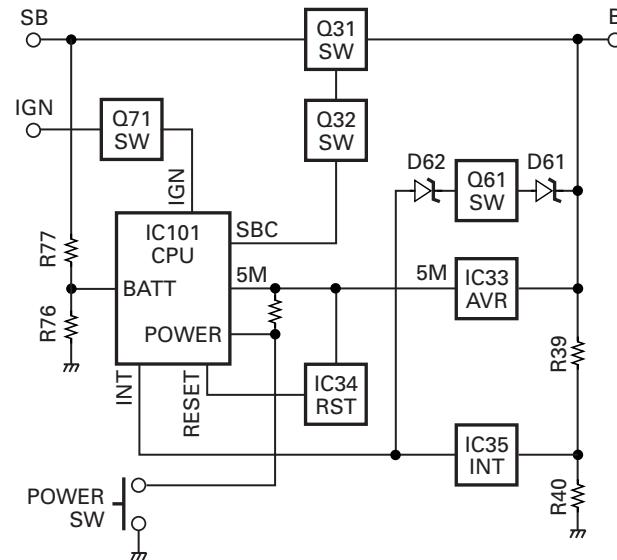**Fig. 16 Power supply circuit****Data Terminal and Peripheral Circuits**

CN2 (data terminal) is the data communications terminal on the TX/RX PCB. It handles transmission control, data input/output, and squelch signals.

There are two data communications modes : 9600bps mode and 1200bps mode. Unlike with 1200bps AFSK, with this type of high-speed modulation, frequency modulation is carried out after the digital base band signals (rectangular wave) are passed through a band limiting filter. For 9600bps GMSK for example, compared to 4800Hz signals (nearly sine wave signals passed through a filter), these signals have a hissing sound like digital modulation when listened to by ear. Different types of modulation, such as GMSK is distinguished by the type of band limiting filter.

Pin No.	Pin Name	Specification		
1	PKD	bps switching	1200bps	9600bps
		Modulation input	400mVp-p	4Vp-p
		Frequency shift	3±0.5kHz	2.2±0.5kHz
4	PR9	Output level 500mVp-p/10kΩ	Always output during reception	
5	PR1	Output level 500mVp-p/10kΩ	Not output when squelch off	

Table 4 Data terminal input/output level

CIRCUIT DESCRIPTION

■ Transmission Signals

Transmission modulation signals enter from PKD of the data terminal (CN2). The path to the modulation depends on whether communications are 1200bps or 9600bps mode.

For 1200bps mode, the transmission modulation signals from single analog switch (IC204) pass through MIC amplifier (IC201,202) and summing amplifier (IC203), and go to VCO (X401) through D/A converter (IC161).

For 9600bps mode, the transmission modulation signals from single analog switch (IC205) pass through summing amplifier (IC303), go to TCXO (X401) and VCO through D/A converter (IC161). (See Fig. 17.)

■ Reception Signals


PR9 is the 9600bps data communications reception output. It outputs the FM detection circuit output through an AF filter (IC251). These signals are always output whether the squelch is open or closed.

PR1 is the 1200bps data communications reception output. It outputs the FM detection circuit output through an AF filter (IC251). Output is controlled with the mute switch (Q252) according to whether squelch is open or closed. (See Fig. 17.)

■ Squelch Signal Output Circuit

The squelch circuits is input to the TNC to prevents conflicts from occurring between simultaneous receive mode and transmit mode traffic during packet communications (only during 1200bps). The signal is output from pin 29 of IC101 to the data terminal. The logic is as shown in the table below.

SQC terminal output CN2	L : SQ CLOSE H : SQ BUSY
----------------------------	-----------------------------

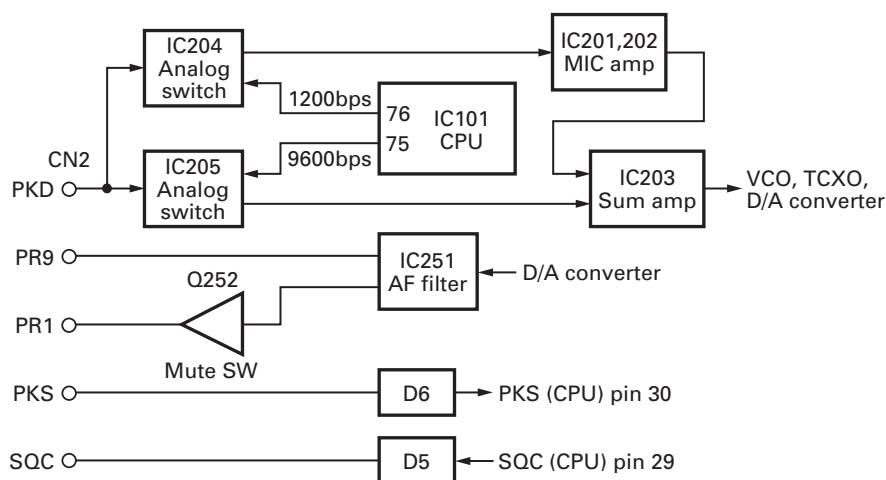

Fog. 17 Data terminal and peripheral circuits

SEMICONDUCTOR DATA

Microprocessor : 30622MAA-B85GP (TX-RX Unit IC101)**■ Terminal Function**

Pin No.	Name	I/O	Function
1	TONE	O	CTCSS/DCS/Clone output
2	DTMF	O	DTMF/BEEP/1750Hz output
3	PLLE	O	PLL IC chip select
4,5	NC	I	
6	GND	-	GND
7	CNVSS	-	
8	EVLLD	O	
9	BSHIFT	O	Beat shift
10	RESET	-	Reset
11	XOUT	-	X'tal (8MHz)
12	VSS	-	GND
13	XIN	-	X'tal (8MHz)
14	VCC	-	+5V
15	NMI	-	(Input only)
16	NC	I	
17	POWER	I	Power key input
18	INT	I	μ com stop
19	NC	I	
20	TX/RX	O	TX/RX
21	UL	I	PLL unlock detect
22,23	NC	I	
24	EEPSDT	I/O	EEPROM data
25	EEPCK	O	EEPROM clock
26	EEPWP	O	EEPROM write protect
27,28	NC	I	(Nch open drain)
29	SQC	O	Squelch signal output for TNC (TxD for flash)
30	PKS	I	PTT input for TNC (RxD for flash)
31	CLKFLS	I	(GND)
32	BSYFLS	O	(Vcc)
33	TXD	O	To PC
34	RXD	I	From PC
35	PTT	I	PTT input
36~38	NC	I	
39	EMPFLS	I/O	(GND)
40~43	NC	I	
44	CEFLS	I/O	(Vcc)
45~49	NC	I	
50	AFM	O	AF mute
51	SPM	O	Speaker mute
52	AMPSW	O	AF AMP switch

Pin No.	Name	I/O	Function
53	DT	O	Common data
54	CK	O	Common clock
55	NC	I	
56	DST1	I	Destination 1
57~59	DST2~DST4	I	Destination 2~4
60	VCC	-	+5V
61	NC	I	
62	VSS	-	GND
63	ADJ	I	For adjustment mode
64	NARROW	O	Wide/Narrow 2
65	WIDE	O	Wide/Narow
66,67	NC	I	
68	LCDCL	O	Clock for LCD
69	LCDCE	O	Chip enable for LCD
70	LCDDO	O	Output data to LCD
71	LCDDI	I	Input data from LCD
72	NC	I	
73	ENCB	I	Encoder input B
74	ENCA	I	Encoder input A
75	TNC9600	O	TNC speed H : 9600, L : 1200
76	TNC1200	O	TNC speed L : 9600, H : 1200
77	MICMT	O	MIC mute
78	NC	I	NC
79	8RC	O	8R control
80	8TC	O	8T control
81	NC	I	
82	SBC	O	Battery switch
83~85	NC	I	
86	CM	I/O	MIC key check
87		I	For AMR DTMF keypad MIC
88		I	For AMR DTMF keypad MIC
89	VOL	I	Volume encoder
90	TEMP2	I	Temperature 2
91	TEMP1	I	Temperature 1
92	RSSI	I	RSSI input
93	SQIN	I	Squelch input
94	AVSS	-	GND
95	DTMF IN	I	CTCSS/DCS/Clone/1050Hz input
96	VREF	-	+5V
97	AVCC	-	+5V
98~100	NC	I	

COMPONENTS DESCRIPTION

Display Unit (X54-3450-10)

Ref. No.	Parts name	Description
IC3	IC	LCD controller
Q6	Transistor	DC switch
Q9	Transistor	LCD backlit switch
Q10	Transistor	Key backlit switch
Q12	Transistor	Brightness function switch
D2~4	LED	Key backlit
D19~30	LED	LCD backlit
D31	Diode	Reverse connection protection

TX-RX Unit (X57-6863-XX)

Ref. No.	Parts name	Description
IC31	IC	Voltage regulator (8C)
IC32	IC	Voltage regulator (5C)
IC33	IC	Voltage regulator (5M)
IC34	IC	Voltage detector (reset)
IC35	IC	Voltage detector (int)
IC66	IC	EEPROM
IC101	IC	CPU
IC161	IC	Digital potentiometer
IC201	IC	MIC amplifier / IDC
IC202	IC	MIC amplifier / Splatter filter
IC203	IC	Buffer amplifier / SUM amplifier / DC amplifier / 1/2 Vcc
IC204,205	IC	Single analog switch
IC251	IC	Audio filter
IC252	IC	Audio amplifier
IC301	IC	FM demodulation
IC401	IC	PLL synthesizer
IC501	IC	APC controller
Q31,32	Transistor	DC switch (SB) / Active when power is on
Q33,34	Transistor	DC switch (8R) / Active while RX
Q35,36	Transistor	DC switch (8T) / Active while TX
Q61	Transistor	Over voltage detection / Active when PS voltage is more than 18V
Q86,87	Transistor	Beat shift / Active while beat shift is on
Q201	Transistor	AGC / MIC mute
Q251	Transistor	Buffer amplifier / RX audio
Q252,253	FET	AF mute / Active while AFM is H
Q254	Digital transistor	AF mute / Active while SPM is H
Q255	Transistor	AF mute / Active while AMPSW is H
Q301	Transistor	SQL amplifier / Noise amplifier
Q302	Transistor	Buffer amplifier / 16.8MHz 3rd over tone

Ref. No.	Parts name	Description
Q351	Transistor	IF amplifier
Q352	FET	Mixer
Q353	FET	RF amplifier / LNA
Q354	FET	PC/TV switch
Q402,403	Transistor	Charge pump
Q404	Transistor	RF amplifier / PLL F in
Q405	FET	RX VCO
Q406	FET	TX VCO
Q407	FET	T/R SW
Q408	Transistor	T/R SW
Q410	Transistor	Buffer amplifier / Output of VCO
Q411	Transistor	RF amplifier / Output of VCO
Q440	Transistor	Lipple filter
Q500	Transistor	RF switch (TX/RX)
Q501	Transistor	RF amplifier / Predrive amplifier
Q502	Transistor	RF amplifier / Drive amplifier 1
Q503	FET	RF amplifier / Drive amplifier 2
Q504	FET	RF amplifier / Final amplifier
D1	Diode	Surge absorption / CM
D2	Diode	Surge absorption / MIC key
D3	Diode	Surge absorption / RXD
D4	Diode	Surge absorption / PTT
D5	Diode	Surge absorption / SQC
D6	Diode	Surge absorption / PKS
D31	Diode	Reverse connection protection
D32	Poly switch	Current protection
D61,62	Diode	Over voltage detection
D201	Diode	OR gate / MIC mute, AGC
D202	Diode	AGC
D251	Diode	Limiter
D301	Diode	Detection
D302,303	Diode	IF switch (Wide/Narrow)
D351~355	Varicap	RF BPF tuning
D401	Diode	Ripple filter
D402	Diode	Voltage dropped
D403,404	Varicap	RX VCO
D405,406	Varicap	TX VCO
D407	Varicap	Modulation
D408	Diode	Lipple filter
D409	Diode	RF switch (TX/RX)
D502	Diode	Temperature compensation
D503	Diode	Voltage protectionV
D601~605	Diode	ANT switch
D606,607	Diode	APC voltage detectV
D608	Diode	Temperature compensation

TM-471A

PARTS LIST

* New Parts. Δ indicates safety critical components.
 Parts without **Parts No.** are not supplied.
 Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.
 Teile ohne **Parts No.** werden nicht geliefert.

TM-471A, DISPLAY UNIT (X54-3450-10)

TX-RX UNIT (X57-686X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Desti-nation
TM-471A					
1	1B	*	A01-2193-01	CABINET	
2	3B		A10-4048-21	CHASSIS	
3	3A	*	A62-1102-03	PANEL ASSY	
5	1D	*	B62-1745-10	INSTRUCTION MANUAL	
6	3B	*	B72-2176-04	MODEL NAME PLATE	C
6	3B	*	B72-2177-04	MODEL NAME PLATE	C2
8	3B		E04-0167-05	RF COAXIAL PECEPTACLE (M)	
10	3C		E30-2111-15	DC CORD ACCESSORY	
13	3B	*	E30-7512-05	DC CORD (RADIO)	
14	3A		E37-1082-05	SPEAKER WIRE	
15	2A	*	E37-1097-05	FLAT CABLE	
18	2B		F10-2449-01	SHIELDING COVER	
19	2B,3C		F51-0017-05	FUSE (6*30) (15A)	
23	2B		G02-0894-04	EARTH SPRING (FINAL FET)	
24	2A	*	G10-1324-04	FIBROUS SHEET (DISPLAY UNIT)	
25	3B		G11-4127-14	RUBBER SHEET (CHASSIS)	
26	2B		G11-4240-04	RUBBER SHEET (DRIVE FET)	
27	3B		G13-1468-04	CUSHION (CHASSIS)	
28	3A		G53-1525-03	PACKING (PANEL)	
29	2B		G53-1542-03	PACKING (PHONE JACK)	
30	1B		G53-1544-01	PACKING (SHIELDING COVER)	
31	1A		G53-1548-02	GASKET	
33	2C,1D		H12-3112-05	PACKING FIXTURE	
34	3D		H13-1190-02	CARTON BOARD	
36	1D		H25-2341-04	PROTECTION BAG	
37	2D	*	H52-2030-02	ITEM CARTON CASE	
39	3C		J19-1584-05	MIC HOLDER ACCESSORY	
40	3D		J29-0662-03	BRACKET ACCESSORY	
42	3A	*	K29-9291-01	KEY TOP	
43	3A	*	K29-9292-03	KNOB (VOLUME)	
44	3A	*	K29-9293-03	KNOB (CNCODER)	
A	2B		N67-2608-46	PAN HEAD SEMS SCREW W	
B	2A		N80-2010-45	PAN HEAD TAPITIE SCREW	
C	2B,3B		N87-2606-46	BRAZIER HEAD TAPITIE SCREW	
D	1B,2B		N87-2614-46	BRAZIER HEAD TAPITIE SCREW	
46	3D		N99-0395-05	SCREW SET ACCESSORY	
48	3A		T07-0739-05	SPEAKER	
50	2C	*	T91-0641-05	MICROPHONE ACCESSORY	

DISPLAY UNIT (X54-3450-10)

101	2A	*	B11-1809-03	ILLUMINATION GUIDE (LCD)	
102	2A	*	B38-0885-05	LCD	
D2-4			B30-2205-05	LED (YG)	
D19-30			B30-2205-05	LED (YG)	
C4			CC73GCH1H101J	CHIP C 100PF J	
C15,16			CC73GCH1H01J	CHIP C 100PF J	
C19			CK73GB1H681K	CHIP C 680PF K	
C22			CK73GB1H102K	CHIP C 1000PF K	
C24			CK73GB1C104K	CHIP C 0.10UF K	

L : Scandinavia
 Y : PX (Far East, Hawaii)
 Y : AAFES (Europe)

K : USA
 T : England
 X : Australia

P : Canada
 E : Europe
 M : Other Areas

Ref. No.	Address	New parts	Parts No.	Description		Desti-nation
C25			CK73GB1H102K	CHIP C	1000PF	K
C27			CK73GB1H102K	CHIP C	1000PF	K
C30			CK73GB1C104K	CHIP C	0.10UF	K
C31-33			CK73GB1H102K	CHIP C	1000PF	K
C34,35			CK73GB1H472K	CHIP C	4700PF	K
C36			CK73GB0J105K	CHIP C	1.0UF	K
C38			CK73GB1H471K	CHIP C	470PF	K
C39,40			CK73GB1C104K	CHIP C	0.10UF	K
103	2A	*	E29-1201-04	INTER CONNECTOR (LCD)		
CN1			E40-6005-05	FLAT CABLE CONNECTOR		
J1			E08-0877-05	MODULAR JACK		
104	2A	*	J21-8463-03	HARDWARE FIXTURE (LCD)		
L1			L92-0138-05	FERRITE CHIP		
CP1			R90-0724-05	MULTI-COMP	1K X4	
R8			RK73GB1J102J	CHIP R	1.0K J	1/16W
R10			RK73GB1J122J	CHIP R	1.2K J	1/16W
R21-23			RK73GB1J103J	CHIP R	10K J	1/16W
R25			RK73GB1J563J	CHIP R	56K J	1/16W
R26			RK73GB1J392J	CHIP R	3.9K J	1/16W
R41			RK73FB2A560J	CHIP R	56 J	1/10W
R42			RK73GB1J272J	CHIP R	2.7K J	1/16W
R43			RK73GB1J821J	CHIP R	820 J	1/16W
R44			RK73GB1J183J	CHIP R	18K J	1/16W
R45			RK73GB1J333J	CHIP R	33K J	1/16W
R46			RK73GB1J101J	CHIP R	100 J	1/16W
R47,48			RK73GB1J473J	CHIP R	47K J	1/16W
R49,50			RK73FB2A560J	CHIP R	56 J	1/10W
R51-53			R92-1252-05	CHIP R	0 OHM J	1/16W
R55			R92-1252-05	CHIP R	0 OHM J	1/16W
R54			RK73FB2A560J	CHIP R	56 J	1/10W
VR1		*	R31-0646-05	VARIABLE RESISTOR		
D31		*	1SS355	DIODE		
IC3		*	LC75854W	MOS IC		
IC3		*	PT6554LQ	MOS IC		
Q6			KRC102S	DIGITAL TRANSISTOR		
Q9			2SB1132(Q,R)	TRANSISTOR		
Q10			KRA225S	DIGITAL TRANSISTOR		
Q12			UMG3N	TRANSISTOR		
S1		*	W02-3665-05	ENCODER		

TX-RX UNIT (X57-686X-XX) 3-00 : C 3-01 : C2

C10			CK73GB1H102K	CHIP C	1000PF	K
C13-20			CK73GB1H471K	CHIP C	470PF	K
C28			CK73GB1H221K	CHIP C	220PF	K
C29			CK73GB1H471K	CHIP C	470PF	K
C30			CK73GB1H102K	CHIP C	1000PF	K
C32			CK73GB1H102K	CHIP C	1000PF	K
C33			CK73GB1H471K	CHIP C	470PF	K
C34		*	CE04EQ1E331M	ELECTRO	330UF	25WV
C35-38			CK73GB1H471K	CHIP C	470PF	K
C39,40			CK73GB1C104K	CHIP C	0.10UF	K

PARTS LIST

TX-RX UNIT (X57-686X-XX)

Ref. No.	Address	New parts	Parts No.	Description			Desti-nation	Ref. No.	Address	New parts	Parts No.	Description			Desti-nation
C41			C92-0795-05	CHIP-TAN	22UF	10WV		C256			CK73GB1E183K	CHIP C	0.018UF	K	
C42			CK73GB1H103K	CHIP C	0.010UF	K		C257			CK73GB1C393K	CHIP C	0.039UF	K	
C43-45			C92-0795-05	CHIP-TAN	22UF	10WV		C258-261			CK73GB1H103J	CHIP C	0.010UF	J	
C48-50			CK73GB1H103K	CHIP C	0.010UF	K		C262			CK73GB1H471K	CHIP C	470PF	K	
C51			C92-0589-05	CHIP-TAN	47UF	6.3WV		C263,264			CK73GB1C333K	CHIP C	0.033UF	K	
C52,53			CK73GB1H471K	CHIP C	470PF	K		C265			CK73GB1C104K	CHIP C	0.10UF	K	
C54,55			CK73GB1C104K	CHIP C	0.10UF	K		C266			CK73GB1A105K	CHIP C	1.0UF	K	
C56			CK73GB1H471K	CHIP C	470PF	K		C267			CK73GB1A474K	CHIP C	0.47UF	K	
C61			CK73GB1H471K	CHIP C	470PF	K		C268			CK73GB1A105K	CHIP C	1.0UF	K	
C66			CK73GB1H471K	CHIP C	470PF	K		C270			C92-0507-05	CHIP-TAN	4.7UF	6.3WV	
C82			CK73GB1H471K	CHIP C	470PF	K		C271			CK73GB1H122K	CHIP C	1200PF	K	
C83			CK73GB1C104K	CHIP C	0.10UF	K		C272			CK73GB1H102K	CHIP C	1000PF	K	
C87			CC73GCH1H030C	CHIP C	3.0PF	C		C273			CK73GB1A105K	CHIP C	1.0UF	K	
C88,89			CC73GCH1H040C	CHIP C	4.0PF	C		C274			CK73FB1C224K	CHIP C	0.22UF	K	
C90			CC73GCH1H030C	CHIP C	3.0PF	C		C275			CK73GB1A105K	CHIP C	1.0UF	K	
C97,98			CK73GB1H471K	CHIP C	470PF	K		C276,277			CK73GB1H471K	CHIP C	470PF	K	
C101			CK73GB1H471K	CHIP C	470PF	K		C278			CK73GB1C104K	CHIP C	0.10UF	K	
C102			CK73GB1C104K	CHIP C	0.10UF	K		C279			C92-0516-05	CHIP-TAN	4.7UF	16WV	
C104			CK73GB1C104K	CHIP C	0.10UF	K		C280			C92-0040-05	CHIP-ELE	47UF	16WV	
C128			CK73GB1H102K	CHIP C	1000PF	K		C281			CK73GB1H471K	CHIP C	470PF	K	
C151			CK73GB1H182K	CHIP C	1800PF	K		C282	*	CE04EQ1E331M	ELECTRO	330UF	25WV		
C152			CK73GB1H392K	CHIP C	3900PF	K		C283		CK73GB1H102K	CHIP C	1000PF	K		
C161			CK73GB1H102K	CHIP C	1000PF	K		C301		C92-0507-05	CHIP-TAN	4.7UF	6.3WV		
C162			C92-0507-05	CHIP-TAN	4.7UF	6.3WV		C302		CK73GB1H102K	CHIP C	1000PF	K		
C163			CK73GB1H471K	CHIP C	470PF	K		C303		CK73GB1H472K	CHIP C	4700PF	K		
C164			C92-0560-05	CHIP-TAN	10UF	6.3WV		C304,305		CC73GCH1H221J	CHIP C	220PF	J		
C165			CK73GB1A105K	CHIP C	1.0UF	K		C306		CK73GB1H102K	CHIP C	1000PF	K		
C201			CK73GB1C104K	CHIP C	0.10UF	K		C307		CK73GB1E223K	CHIP C	0.022UF	K		
C202			CK73GB1H471K	CHIP C	470PF	K		C308		CK73GB1H102K	CHIP C	1000PF	K		
C203			CK73GB1C273K	CHIP C	0.027UF	K		C309		CK73GB1E223K	CHIP C	0.022UF	K		
C204			C92-0514-05	CHIP-TAN	2.2UF	10WV		C310		CK73FB1C334K	CHIP C	0.33UF	K		
C205			CK73GB1C104K	CHIP C	0.10UF	K		C311,312		CK73GB1C104K	CHIP C	0.10UF	K		
C206			CK73GB1H102K	CHIP C	1000PF	K		C313		C92-0662-05	CHIP-TAN	15UF	6.3WV		
C207			CK73GB1C223K	CHIP C	0.022UF	K		C314		CK73GB1H103K	CHIP C	0.010UF	K		
C208			CK73GB1H103K	CHIP C	0.010UF	K		C315-318		CK73GB1C104K	CHIP C	0.10UF	K		
C209			CC73GCH1H680J	CHIP C	68PF	J		C319		CK73GB1H102K	CHIP C	1000PF	K		
C210			CK73GB1C104K	CHIP C	0.10UF	K		C321		CC73GCH1H680J	CHIP C	68PF	J		
C211			CK73GB1H821K	CHIP C	820PF	K		C322		CC73GCH1H560J	CHIP C	56PF	J		
C212			CK73GB1H122K	CHIP C	1200PF	K		C323		CC73GCH1H271J	CHIP C	270PF	J		
C213			CK73GB1H332K	CHIP C	3300PF	K		C324		CK73GB1H103K	CHIP C	0.010UF	K		
C214			CC73GCH1H151J	CHIP C	150PF	J		C326		CK73GB1H103K	CHIP C	0.010UF	K		
C215			CK73GB1C104K	CHIP C	0.10UF	K		C350		CK73GB1H471K	CHIP C	470PF	K		C2
C216			CC73GCH1H390J	CHIP C	39PF	J		C351		CC73GCH1H330J	CHIP C	33PF	J		
C217,218			C92-0560-05	CHIP-TAN	10UF	6.3WV		C353		CK73GB1H103K	CHIP C	0.010UF	K		
C220			C92-0507-05	CHIP-TAN	4.7UF	6.3WV		C354		CC73GCH1H060B	CHIP C	6.0PF	B		
C222			CK73GB1C104K	CHIP C	0.10UF	K		C355		CC73GCH1H180J	CHIP C	18PF	J		
C225			C92-0004-05	CHIP-TAN	1.0UF	16WV		C356		CC73GCH1H020B	CHIP C	2.0PF	B		
C226			CK73GB1H472K	CHIP C	4700PF	K		C357		CK73GB1H103K	CHIP C	0.010UF	K		
C227			CK73GB1E103K	CHIP C	0.010UF	K		C358		CK73GB1H471K	CHIP C	470PF	K		
C228			C92-0560-05	CHIP-TAN	10UF	6.3WV		C359		CC73GCH1H120J	CHIP C	12PF	J		
C230			CK73GB1C104K	CHIP C	0.10UF	K		C360		CC73GCH1H080B	CHIP C	8.0PF	B		
C231,232			CK73GB1H471K	CHIP C	470PF	K		C361,362		CK73GB1H471K	CHIP C	470PF	K		
C233			C92-0507-05	CHIP-TAN	4.7UF	6.3WV		C363		CK73GB1H103K	CHIP C	0.010UF	K		
C235			CK73GB1A105K	CHIP C	1.0UF	K		C364		CK73GB1H471K	CHIP C	470PF	K		
C249			C92-0507-05	CHIP-TAN	4.7UF	6.3WV		C366		CK73GB1C104K	CHIP C	0.10UF	K		
C250			CK73GB1C104K	CHIP C	0.10UF	K		C367		CK73GB1H471K	CHIP C	470PF	K		
C251			C92-0714-05	CHIP-TAN	4.7UF	6.3WV		C368		CC73GCH1H070B	CHIP C	7.0PF	B		C2
C252			CC73GCH1H390J	CHIP C	39PF	J		C368		CC73GCH1H100C	CHIP C	10PF	C		
C253,254			CK73GB1A224K	CHIP C	0.22UF	K		C369		CC73GCH1HR75B	CHIP C	0.75PF	B		
C255			CK73GB1H822K	CHIP C	8200PF	K		C370		CK73GB1H471K	CHIP C	470PF	K		

PARTS LIST

TX-RX UNIT (X57-686X-XX)

Ref. No.	Address	New parts	Parts No.	Description			Desti-nation	Ref. No.	Address	New parts	Parts No.	Description			Desti-nation
C371			CC73GCH1HR75B	CHIP C	0.75PF	B	C2	C438			CC73GCH1H010B	CHIP C	1.0PF	B	C2
C371			CC73GCH1H0R5B	CHIP C	0.5PF	B	C	C438,439			CC73GCH1H020B	CHIP C	2.0PF	B	C
C372			CC73GCH1H150J	CHIP C	15PF	J	C	C439			CC73GCH1H030B	CHIP C	3.0PF	B	C2
C372			CC73GCH1H200J	CHIP C	20PF	J	C2	C440			CC73GCH1H030B	CHIP C	3.0PF	B	C
C373			CC73GCH1H080B	CHIP C	8.0PF	B	C	C440			CC73GCH1H040B	CHIP C	4.0PF	B	C2
C373			CC73GCH1H100C	CHIP C	10PF	C	C2	C441			CC73GCH1H0R3B	CHIP C	0.3PF	B	
C374			CC73GCH1H070B	CHIP C	7.0PF	B		C442			C92-0560-05	CHIP-TAN	10UF	6.3WV	
C375-380			CK73GB1H471K	CHIP C	470PF	K		C444			CK73GB1H471K	CHIP C	470PF	K	
C381			CC73GCH1H050B	CHIP C	5.0PF	B	C2	C448,449			CK73GB1H471K	CHIP C	470PF	K	
C381			CC73GCH1H070B	CHIP C	7.0PF	B	C	C450			C92-0795-05	CHIP-TAN	22UF	10WV	
C382			CK73GB1H471K	CHIP C	470PF	K		C451,452			CK73GB1H471K	CHIP C	470PF	K	
C383			CC73GCH1H0R5B	CHIP C	0.5PF	B		C454			CC73GCH1H040B	CHIP C	4.0PF	B	C
C384			CC73GCH1H070B	CHIP C	7.0PF	B	C	C454			CC73GCH1H060B	CHIP C	6.0PF	B	C2
C384			CC73GCH1H080B	CHIP C	8.0PF	B	C2	C455			CC73GCH1H020B	CHIP C	2.0PF	B	
C385			CK73GB1H471K	CHIP C	470PF	K		C456			CC73GCH1H030B	CHIP C	3.0PF	B	C2
C386			CC73GCH1HR75B	CHIP C	0.75PF	B		C456			CC73GCH1H040B	CHIP C	4.0PF	B	C
C387			CC73GCH1H010B	CHIP C	1.0PF	B	C2	C461			CK73GB1H471K	CHIP C	470PF	K	
C388			CC73GCH1H060B	CHIP C	6.0PF	B		C463,464			CK73GB1H471K	CHIP C	470PF	K	
C389			CK73GB1H103K	CHIP C	0.010UF	K		C466			CC73GCH1H050B	CHIP C	5.0PF	B	
C390			CC73GCH1H080B	CHIP C	8.0PF	B	C	C467			CK73GB1H471K	CHIP C	470PF	K	
C390			CC73GCH1H100C	CHIP C	10PF	C	C2	C472			CC73GCH1H030B	CHIP C	3.0PF	B	C
C391			CK73GB1H471K	CHIP C	470PF	K		C472			CC73GCH1H2R5B	CHIP C	2.5PF	B	C2
C392			CC73GCH1H030B	CHIP C	3.0PF	B	C	C473			CK73GB1H102K	CHIP C	1000PF	K	
C392			CC73GCH1H060B	CHIP C	6.0PF	B	C2	C475,476			CK73GB1H102K	CHIP C	1000PF	K	
C393			CC73GCH1HR75B	CHIP C	0.75PF	B	C2	C501			CK73GB1H471K	CHIP C	470PF	K	
C393			CC73GCH1H2R5B	CHIP C	2.5PF	B	C	C502			CC73GCH1H030B	CHIP C	3.0PF	B	C2
C400			CK73GB1C104K	CHIP C	0.10UF	K		C502			CC73GCH1H050B	CHIP C	5.0PF	B	C
C401-403			CC73GCH1H101J	CHIP C	100PF	J		C504,505			CK73GB1H471K	CHIP C	470PF	K	
C404			C92-0662-05	CHIP-TAN	15UF	6.3WV		C507			CK73GB1H471K	CHIP C	470PF	K	
C406			CK73GB1H102K	CHIP C	1000PF	K		C509			CC73GCH1H040B	CHIP C	4.0PF	B	
C408			CC73GCH1H220J	CHIP C	22PF	J		C510-515			CK73GB1H471K	CHIP C	470PF	K	
C409			CK73GB1C104K	CHIP C	0.10UF	K		C516			CC73GCH1H030B	CHIP C	3.0PF	B	
C410			C92-0560-05	CHIP-TAN	10UF	6.3WV		C517			CK73GB1H471K	CHIP C	470PF	K	
C411			CK73GB1C104K	CHIP C	0.10UF	K		C518			C92-0040-05	CHIP-ELE	47UF	16WV	
C412			C92-0560-05	CHIP-TAN	10UF	6.3WV		C520,521			CK73GB1H471K	CHIP C	470PF	K	
C413			CK73GB1H103K	CHIP C	0.010UF	K		C522			CK73GB1C104K	CHIP C	0.10UF	K	
C414			CK73GB1C104K	CHIP C	0.10UF	K		C523			CC73FCH1H270J	CHIP C	27PF	J	
C416,417			CK73GB1H471K	CHIP C	470PF	K		C523			CC73FCH1H470J	CHIP C	47PF	J	C2
C418			CK73GB1H102K	CHIP C	1000PF	K		C524			CC73FCH1H080D	CHIP C	8.0PF	D	C2
C421,422			CK73GB1H471K	CHIP C	470PF	K		C524			CC73FCH1H100D	CHIP C	10PF	D	C
C423			C92-0555-05	CHIP-TAN	0.047UF	35WV		C526			CC73FCH1H090D	CHIP C	9.0PF	D	
C424			C92-0543-05	CHIP-TAN	3.3UF	10WV		C527			CC73FCH1H120J	CHIP C	12PF	J	
C425			C92-0001-05	CHIP C	0.1UF	35WV		C527			CC73FCH1H150J	CHIP C	15PF	J	
C426			CC73GCH1H080B	CHIP C	8.0PF	B	C	C528			CC73FCH1H470J	CHIP C	47PF	J	
C426			CC73GCH1H180J	CHIP C	18PF	J	C2	C532			CK73GB1H471K	CHIP C	470PF	K	
C427			CC73GCH1H070B	CHIP C	7.0PF	B	C	C534			CK73FB1H471K	CHIP C	470PF	K	
C427			CC73GCH1H120G	CHIP C	12PF	G	C2	C535			CK73GB1H221K	CHIP C	220PF	K	
C428			CK73GB1H471K	CHIP C	470PF	K		C536			CK73GB1H471K	CHIP C	470PF	K	
C429			CC73GCH1H1R5B	CHIP C	1.5PF	B	C2	C537			C92-0719-05	CHIP-TAN	47UF	25WV	
C429,430			CC73GCH1H020B	CHIP C	2.0PF	B	C	C538			CK73FB1C474K	CHIP C	0.47UF	K	
C430			CC73GCH1H060B	CHIP C	6.0PF	B	C2	C539			CK73FB1H471K	CHIP C	470PF	K	
C431			CC73GCH1H030B	CHIP C	3.0PF	B	C	C540			C93-0558-05	CHIP C	8.0PF	D	C
C431			CC73GCH1H050B	CHIP C	5.0PF	B	C2	C540			C93-0568-05	CHIP C	47PF	J	C2
C432			CC73GCH1H0R5B	CHIP C	0.5PF	B		C541			C93-0563-05	CHIP C	18PF	J	C
C433			CK73GB1H471K	CHIP C	470PF	K		C541			C93-0566-05	CHIP C	33PF	J	C2
C434			CC73GCH1H050B	CHIP C	5.0PF	B	C	C543			C93-0599-05	CHIP C	470PF	K	
C434			CC73GCH1H090B	CHIP C	9.0PF	B	C2	C545			C93-0560-05	CHIP C	10PF	D	C2
C435			CC73GCH1H060B	CHIP C	6.0PF	B		C548,549			C93-0566-05	CHIP C	33PF	J	C2
C436			CC73GCH1H0R5B	CHIP C	0.5PF	B		C548,549			C93-0567-05	CHIP C	39PF	J	C
C437			CK73GB1H471K	CHIP C	470PF	K		C550,551			CM73F2H300J	CHIP C	30PF	J	

PARTS LIST

TX-RX UNIT (X57-686X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Desti-nation	Ref. No.	Address	New parts	Parts No.	Description	Desti-nation
C555			CK73FB1C474K	CHIP C 0.47UF K		L360			L34-4603-05	AIR-CORE COIL	C2
C556			C93-0599-05	CHIP C 470PF K		L360,361			L34-4604-05	AIR-CORE COIL	C
C559			CK73GB1H103K	CHIP C 0.010UF K		L361			L34-4604-05	AIR-CORE COIL	C2
C560			CK73GB1H471K	CHIP C 470PF K		L401			L92-0443-05	FERRITE CHIP	
C564			CM73F2H150J	CHIP C 15PF J	C2	L403			L41-1005-08	SMALL FIXED INDUCTOR	
C564			CM73F2H200J	CHIP C 20PF J	C	L404			L92-0442-05	FERRITE CHIP	
C567			CM73F2H100D	CHIP C 10PF D	C	L405			L92-0443-05	FERRITE CHIP	
C570			C93-0599-05	CHIP C 470PF K		L406,407			L40-2785-92	SMALL FIXED INDUCTOR (270NH)	C
C571			CK73GB1H471K	CHIP C 470PF K		L406,407			L40-4791-86	SMALL FIXED INDUCTOR (4.7UH)	C2
C572,573			CK73GB1H103K	CHIP C 0.010UF K		L408			L40-2778-67	SMALL FIXED INDUCTOR (27NH)	C2
C574			CK73GB1H102K	CHIP C 1000PF K		L408			L40-5678-67	SMALL FIXED INDUCTOR (56NH)	C
C575			CK73GB1H471K	CHIP C 470PF K		L409-412			L40-2785-92	SMALL FIXED INDUCTOR (270NH)	C
C576			CK73GB1H221K	CHIP C 220PF K		L409,410			L40-4791-86	SMALL FIXED INDUCTOR (4.7UH)	C2
C579			CM73F2H090D	CHIP C 9.0PF D	C2	L411,412			L40-2702-86	SMALL FIXED INDUCTOR (27UH)	C2
C580			C93-0554-05	CHIP C 4.0PF C	C2	L413			L40-2778-67	SMALL FIXED INDUCTOR (27NH)	C2
C601			CC73GCH1H050B	CHIP C 5.0PF B	C	L413			L40-4778-67	SMALL FIXED INDUCTOR (47NH/8)	C
C602			C93-0560-05	CHIP C 10PF D	C	L414			L40-1885-92	SMALL FIXED INDUCTOR (180NH)	C
C602			C93-0599-05	CHIP C 470PF K	C2	L414,415			L40-2702-86	SMALL FIXED INDUCTOR (27UH)	C2
C603			CC73GCH1H0R5B	CHIP C 0.5PF B		L415			L40-2785-92	SMALL FIXED INDUCTOR (270NH)	C
C604			CC73GCH1H010B	CHIP C 1.0PF B	C2	L416,417			L92-0443-05	FERRITE CHIP	
C604			CC73GCH1H020B	CHIP C 2.0PF B	C	L418			L41-2775-06	SMALL FIXED INDUCTOR	
C605			C93-0554-05	CHIP C 4.0PF C	C2	L420			L41-2775-06	SMALL FIXED INDUCTOR	
C605			C93-0556-05	CHIP C 6.0PF D	C	L470			L40-2275-92	SMALL FIXED INDUCTOR (22NH)	C2
C607			CC73GCH1H0R5B	CHIP C 0.5PF B		L470			L40-2775-92	SMALL FIXED INDUCTOR (27NH)	C
C608			CC73GCH1H020B	CHIP C 2.0PF B	C	L501			L41-1575-06	SMALL FIXED INDUCTOR	
C608			CC73GCH1H030B	CHIP C 3.0PF B	C2	L502			L41-2275-08	SMALL FIXED INDUCTOR	
C610			C93-0556-05	CHIP C 6.0PF D	C2	L503			L41-3363-08	SMALL FIXED INDUCTOR	
C610			C93-0560-05	CHIP C 10PF D	C	L504			L41-1075-08	SMALL FIXED INDUCTOR	
C611			C93-0553-05	CHIP C 3.0PF C	C	L505			L34-4603-05	AIR-CORE COIL	
C611			C93-0554-05	CHIP C 4.0PF C	C2	L506			L34-4607-05	AIR-CORE COIL	
C613,614			CK73GB1H471K	CHIP C 470PF K		L507			L34-4602-05	AIR-CORE COIL	C2
C620			C93-0550-05	CHIP C 1.0PF C	C2	L507			L34-4603-05	AIR-CORE COIL	C
TC401			C05-0245-05	CERAMIC TRIMMER CAP (10PF)	C	L508			L34-4694-05	AIR-CORE COIL	
TC401,402			C05-0245-05	CERAMIC TRIMMER CAP (10PF)	C2	L509			L34-4667-05	AIR-CORE COIL	
TC402			C05-0399-05	CERAMIC TRIMMER CAP (6PF)	C	L601			L34-4669-05	AIR-CORE COIL	
-			E11-0425-05	3.5D PHONE JACK (3P)		L602,603			L34-4694-05	AIR-CORE COIL	
-			E37-1127-05	PROCESSED LEAD WIRE		L604			L34-4667-05	AIR-CORE COIL	
CN1			E40-6268-05	FLAT CABLE CONNECTOR		X86	*		L78-1409-05	RESONATOR (8.00MHZ)	
CN2			E40-5705-05	PIN ASSY		X401	*		L77-1944-05	TCXO (16.8MHZ)	
CN5			E40-3246-05	PIN ASSY		XF351	*		L71-0620-05	MCF (49.95MHZ)	
F1			F53-0246-05	FUSE(4.0A/32V)		R1			R92-1252-05	CHIP R 0 OHM J 1/16W	
F501			F53-0108-05	FUSE(1.8A/50V)		R2,3			RK73GB1J101J	CHIP R 100 J 1/16W	
CF301			L72-0993-05	CERAMIC FILTER		R4-8			RK73GB1J102J	CHIP R 1.0K J 1/16W	
CF302			L72-0999-05	CERAMIC FILTER		R31			RK73GB1J472J	CHIP R 4.7K J 1/16W	
L101			L92-0443-05	FERRITE CHIP		R32			R92-1215-05	CHIP R 470 J 1/2W	
L201			L92-0443-05	FERRITE CHIP		R33			RK73GB1J473J	CHIP R 47K J 1/16W	
L301			L34-4554-05	COIL		R34			RK73GB1J472J	CHIP R 4.7K J 1/16W	
L302			L41-3385-08	SMALL FIXED INDUCTOR		R35			RK73GB1J473J	CHIP R 47K J 1/16W	
L303,304			L40-3381-86	SMALL FIXED INDUCTOR (0.33UH)		R36			RK73GB1J152J	CHIP R 1.5K J 1/16W	
L351,352			L40-4785-85	SMALL FIXED INDUCTOR (0.47UH)		R37			RK73GB1J103J	CHIP R 10K J 1/16W	
L354,355			L34-4604-05	AIR-CORE COIL	C2	R38			RK73GB1J334J	CHIP R 330K J 1/16W	
L354,355			L34-4605-05	AIR-CORE COIL	C	R39			RK73GB1J474J	CHIP R 470K J 1/16W	
L356			L40-1875-92	SMALL FIXED INDUCTOR (18NH)	C2	R40			RK73GB1J394J	CHIP R 390K J 1/16W	
L356			L40-2275-92	SMALL FIXED INDUCTOR (22NH)	C	R41			RK73GB1J334J	CHIP R 330K J 1/16W	
L357			L40-3375-92	SMALL FIXED INDUCTOR (33NH)	C2	R61			RK73GB1J471J	CHIP R 470 J 1/16W	
L357			L40-3975-92	SMALL FIXED INDUCTOR (39NH)	C	R62,63			R92-1252-05	CHIP R 0 OHM J 1/16W	
L358			L34-4605-05	AIR-CORE COIL	C2	R70			RK73GB1J473J	CHIP R 47K J 1/16W	
L358,359			L34-4605-05	AIR-CORE COIL	C	R81			RK73GB1J473J	CHIP R 47K J 1/16W	
L359			L34-4604-05	AIR-CORE COIL	C2	R82			R92-1252-05	CHIP R 0 OHM J 1/16W	
L359						R86			R92-1252-05	CHIP R 0 OHM J 1/16W	

PARTS LIST

TX-RX UNIT (X57-686X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Desti-nation	Ref. No.	Address	New parts	Parts No.	Description	Desti-nation
R87			RK73GB1J102J	CHIP R 1.0K J 1/16W		R255,256			RK73GB1J562J	CHIP R 5.6K J 1/16W	
R91,92			RK73GB1J102J	CHIP R 1.0K J 1/16W		R257			RK73GB1J105J	CHIP R 1.0M J 1/16W	
R93			RK73GB1J682J	CHIP R 6.8K J 1/16W	C	R258			RK73GB1J272J	CHIP R 2.7K J 1/16W	
R93,94			RK73GB1J822J	CHIP R 8.2K J 1/16W	C2	R259			RK73GB1J123J	CHIP R 12K J 1/16W	
R94			RK73GB1J822J	CHIP R 8.2K J 1/16W	C	R260			RK73GB1J224J	CHIP R 220K J 1/16W	
R101,102			RK73GB1J473J	CHIP R 47K J 1/16W		R261			RK73GB1J124J	CHIP R 120K J 1/16W	
R103-106			RK73GB1J102J	CHIP R 1.0K J 1/16W		R262			RK73GB1J183J	CHIP R 18K J 1/16W	
R109			RK73GB1J152J	CHIP R 1.5K J 1/16W		R263			RK73GH1J913D	CHIP R 91K D 1/16W	
R110			RK73GB1J473J	CHIP R 47K J 1/16W		R264			RK73GH1J124D	CHIP R 120K D 1/16W	
R111			RK73GB1J102J	CHIP R 1.0K J 1/16W		R265			RK73GH1J562D	CHIP R 5.6K D 1/16W	
R114			RK73GB1J473J	CHIP R 47K J 1/16W		R266			RK73GB1J562J	CHIP R 5.6K J 1/16W	
R118			R92-1252-05	CHIP R 0 OHM J 1/16W	C	R268			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R119			R92-0670-05	CHIP R 0 OHM		R269			RK73GB1J393J	CHIP R 39K J 1/16W	
R123			R92-1252-05	CHIP R 0 OHM J 1/16W		R271			RK73GB1J332J	CHIP R 3.3K J 1/16W	
R124-127			RK73GB1J473J	CHIP R 47K J 1/16W		R272			RK73GB1J392J	CHIP R 3.9K J 1/16W	
R151			RK73GB1J103J	CHIP R 10K J 1/16W		R273			RK73GB1J123J	CHIP R 12K J 1/16W	
R152			RK73GB1J472J	CHIP R 4.7K J 1/16W		R274,275			RK73GB1J153J	CHIP R 15K J 1/16W	
R161			RK73GB1J122J	CHIP R 1.2K J 1/16W		R276			RK73GB1J473J	CHIP R 47K J 1/16W	
R162			RK73GB1J152J	CHIP R 1.5K J 1/16W		R277			RK73GB1J683J	CHIP R 68K J 1/16W	
R164-166			RK73GB1J102J	CHIP R 1.0K J 1/16W		R278			RK73GB1J123J	CHIP R 12K J 1/16W	
R200			RK73GB1J681J	CHIP R 680 J 1/16W		R279			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R203			RK73GB1J104J	CHIP R 100K J 1/16W		R280			RK73GB1J391J	CHIP R 390 J 1/16W	
R204			RK73GB1J183J	CHIP R 18K J 1/16W		R281			R92-0670-05	CHIP R 0 OHM	
R205			RK73GB1J821J	CHIP R 820 J 1/16W		R301,302			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R206			RK73GB1J101J	CHIP R 100 J 1/16W		R303			RK73GB1J223J	CHIP R 22K J 1/16W	
R207			RK73GB1J754J	CHIP R 750K J 1/16W		R304			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R208			RK73GB1J152J	CHIP R 1.5K J 1/16W		R305			RK73GB1J182J	CHIP R 1.8K J 1/16W	
R209			RK73GB1J244J	CHIP R 240K J 1/16W		R306			RK73GB1J274J	CHIP R 270K J 1/16W	
R210			RK73GB1J183J	CHIP R 18K J 1/16W		R308			RK73GB1J334J	CHIP R 330K J 1/16W	
R211,212			RK73GB1J823J	CHIP R 82K J 1/16W		R309			RK73GB1J332J	CHIP R 3.3K J 1/16W	
R213			RK73GB1J334J	CHIP R 330K J 1/16W		R310			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R214,215			RK73GB1J683J	CHIP R 68K J 1/16W		R311			RK73GB1J333J	CHIP R 33K J 1/16W	
R216			RK73GB1J274J	CHIP R 270K J 1/16W		R312			RK73GB1J473J	CHIP R 47K J 1/16W	
R217			RK73GB1J224J	CHIP R 220K J 1/16W		R313			RK73GB1J104J	CHIP R 100K J 1/16W	
R218			RK73GB1J823J	CHIP R 82K J 1/16W		R314			RK73GB1J222J	CHIP R 2.2K J 1/16W	
R219			RK73GB1J393J	CHIP R 39K J 1/16W		R315			RK73GB1J183J	CHIP R 18K J 1/16W	
R220,221			RK73GH1J153D	CHIP R 15K D 1/16W		R316			RK73GB1J223J	CHIP R 22K J 1/16W	
R222			RK73GB1J103J	CHIP R 10K J 1/16W		R317-320			RK73GB1J103J	CHIP R 10K J 1/16W	
R224			RK73GB1J561J	CHIP R 560 J 1/16W		R321			RK73GB1J223J	CHIP R 22K J 1/16W	
R225			RK73GB1J154J	CHIP R 150K J 1/16W		R322			RK73GB1J101J	CHIP R 100 J 1/16W	
R226			RK73GB1J104J	CHIP R 100K J 1/16W		R323			RK73GB1J124J	CHIP R 120K J 1/16W	
R227			RK73GB1J223J	CHIP R 22K J 1/16W		R324			R92-1252-05	CHIP R 0 OHM J 1/16W	
R228			RK73GB1J103J	CHIP R 10K J 1/16W		R325			RK73GB1J333J	CHIP R 33K J 1/16W	
R229			RK73GB1J684J	CHIP R 680K J 1/16W		R349			RK73GB1J473J	CHIP R 47K J 1/16W	
R230			RK73GB1J224J	CHIP R 220K J 1/16W		R350			RK73GB1J273J	CHIP R 27K J 1/16W	C2
R231			RK73GB1J124J	CHIP R 120K J 1/16W		R351			RK73GB1J471J	CHIP R 470 J 1/16W	
R232			RK73GB1J912J	CHIP R 9.1K J 1/16W		R352			RK73GB1J101J	CHIP R 100 J 1/16W	
R233			RK73GB1J682J	CHIP R 6.8K J 1/16W		R353			RK73GB1J104J	CHIP R 100K J 1/16W	
R234			R92-1252-05	CHIP R 0 OHM J 1/16W		R354			RK73GB1J561J	CHIP R 560 J 1/16W	
R235			RK73GB1J103J	CHIP R 10K J 1/16W		R355			RK73GB1J681J	CHIP R 680 J 1/16W	
R236			R92-1252-05	CHIP R 0 OHM J 1/16W		R356			RK73GB1J390J	CHIP R 39 J 1/16W	C2
R246			RK73GB1J154J	CHIP R 150K J 1/16W		R358			RK73GB1J470J	CHIP R 47 J 1/16W	C
R247			RK73GB1J124J	CHIP R 120K J 1/16W		R359			RK73GB1J823J	CHIP R 82K J 1/16W	
R248			RK73GB1J562J	CHIP R 5.6K J 1/16W		R360			RK73GB1J474J	CHIP R 470K J 1/16W	
R249			RK73GB1J153J	CHIP R 15K J 1/16W		R361			RK73GB1J270J	CHIP R 27 J 1/16W	
R250			RK73GB1J123J	CHIP R 12K J 1/16W		R362			RK73GB1J474J	CHIP R 470K J 1/16W	
R251			RK73GB1J473J	CHIP R 47K J 1/16W		R363			RK73GB1J224J	CHIP R 220K J 1/16W	
R252			RK73GB1J474J	CHIP R 470K J 1/16W		R364			R92-1252-05	CHIP R 0 OHM J 1/16W	
R253			R92-1252-05	CHIP R 0 OHM J 1/16W		R365,366			RK73GB1J104J	CHIP R 100K J 1/16W	
R254			RK73GB1J272J	CHIP R 2.7K J 1/16W		R367			RK73GB1J101J	CHIP R 100 J 1/16W	

PARTS LIST

TX-RX UNIT (X57-686X-XX)


Ref. No.	Address	New parts	Parts No.	Description	Desti-nation	Ref. No.	Address	New parts	Parts No.	Description	Desti-nation
R369			RK73GB1J151J	CHIP R 150 J 1/16W		R514			RK73FB2A470J	CHIP R 47 J 1/10W	C2
R370			RK73GB1J473J	CHIP R 47K J 1/16W		R514			RK73FB2A560J	CHIP R 56 J 1/10W	C
R371			RK73GB1J393J	CHIP R 39K J 1/16W		R515			RK73GB1J100J	CHIP R 10 J 1/16W	C2
R372			RK73GB1J683J	CHIP R 68K J 1/16W		R515			RK73GB1J330J	CHIP R 33 J 1/16W	C
R373			RK73GB1J153J	CHIP R 15K J 1/16W	C2	R516			RK73GB1J332J	CHIP R 3.3K J 1/16W	
R373			RK73GB1J183J	CHIP R 18K J 1/16W	C	R517			RK73GB1J100J	CHIP R 10 J 1/16W	
R374			RK73GB1J104J	CHIP R 100K J 1/16W		R518			RK73GB1J153J	CHIP R 15K J 1/16W	
R375			R92-1252-05	CHIP R 0 OHM J 1/16W		R519			RK73FB2A220J	CHIP R 22 J 1/10W	
R376			RK73GB1J104J	CHIP R 100K J 1/16W		R520			RK73GB1J333J	CHIP R 33K J 1/16W	
R377			R92-1252-05	CHIP R 0 OHM J 1/16W		R521			RK73GB1J101J	CHIP R 100 J 1/16W	
R378			RK73GB1J104J	CHIP R 100K J 1/16W		R522			R92-1217-05	CHIP R 0 OHM	
R380			RK73GB1J104J	CHIP R 100K J 1/16W		R524			RK73FB2A821J	CHIP R 820 J 1/10W	C2
R381			R92-1252-05	CHIP R 0 OHM J 1/16W		R525			RK73EB2B5R6J	CHIP R 5.6 J 1/8W	C2
R401-403			RK73GB1J102J	CHIP R 1.0K J 1/16W		R525			R92-0679-05	CHIP R 0 OHM	C
R404			RK73GB1J103J	CHIP R 10K J 1/16W		R526			RK73FB2A821J	CHIP R 820 J 1/10W	C2
R406			RK73GB1J103J	CHIP R 10K J 1/16W		R527			RK73GB1J474J	CHIP R 470K J 1/16W	
R407			RK73GB1J152J	CHIP R 1.5K J 1/16W		R528,529			RK73GB1J471J	CHIP R 470 J 1/16W	
R408			RK73GB1J100J	CHIP R 10 J 1/16W		R530			RK73GB1J821J	CHIP R 820 J 1/16W	
R409			RK73GB1J104J	CHIP R 100K J 1/16W		R531			RK73GB1J473J	CHIP R 47K J 1/16W	
R410,411			RK73GB1J103J	CHIP R 10K J 1/16W		R532,533			R92-1252-05	CHIP R 0 OHM J 1/16W	
R412			RK73GB1J123J	CHIP R 12K J 1/16W		R534			RK73GB1J473J	CHIP R 47K J 1/16W	
R413			RK73GB1J103J	CHIP R 10K J 1/16W		R535			RK73GB1J563J	CHIP R 56K J 1/16W	
R414,415			R92-1252-05	CHIP R 0 OHM J 1/16W		R536			RK73EB2B100J	CHIP R 10 J 1/8W	
R416			RK73GB1J471J	CHIP R 470 J 1/16W		R537			RK73GB1J823J	CHIP R 82K J 1/16W	
R417			RK73GB1J224J	CHIP R 220K J 1/16W		R538			RK73GB1J473J	CHIP R 47K J 1/16W	C
R418,419			RK73GB1J102J	CHIP R 1.0K J 1/16W		R538			RK73GB1J563J	CHIP R 56K J 1/16W	
R420			RK73GB1J222J	CHIP R 2.2K J 1/16W		R539			R92-1213-05	CHIP R 100 J 1/2W	
R421			RK73GB1J152J	CHIP R 1.5K J 1/16W		R601,602			RK73GB1J223J	CHIP R 22K J 1/16W	
R422			RK73GB1J103J	CHIP R 10K J 1/16W		R605			RK73GB1J153J	CHIP R 15K J 1/16W	
R423			RK73GB1J221J	CHIP R 220 J 1/16W	C2	R606			RK73GB1J221J	CHIP R 220 J 1/16W	
R423			RK73GB1J331J	CHIP R 330 J 1/16W	C	R607			RK73GB1J331J	CHIP R 330 J 1/16W	
R424			RK73GB1J151J	CHIP R 150 J 1/16W	C2	R800			R92-1061-05	JUMPER	
R424			RK73GB1J271J	CHIP R 270 J 1/16W	C	R822			R92-1215-05	CHIP R 470 J 1/2W	
R425,426			RK73GB1J473J	CHIP R 47K J 1/16W		VR601			R12-6427-05	TRIMMING POT. (47K/12)	
R427			RK73GB1J104J	CHIP R 100K J 1/16W		D1-6			DA221	DIODE	
R428			RK73GB1J473J	CHIP R 47K J 1/16W		D31			ZSH5MA27	SURGE ABSORBER	
R429,430			RK73GB1J221J	CHIP R 220 J 1/16W		D32			1812L110PR	VARISTOR	
R431			RK73GB1J104J	CHIP R 100K J 1/16W		D61			02DZ18(X,Y)	ZENER DIODE	
R432			RK73GB1J102J	CHIP R 1.0K J 1/16W		D62			MA2S077	DIODE	
R433			RK73GB1J472J	CHIP R 4.7K J 1/16W		D201			DAN222	DIODE	
R434			R92-1252-05	CHIP R 0 OHM J 1/16W		D202			1SS372	DIODE	
R435			RK73GB1J101J	CHIP R 100 J 1/16W		D251			MA742	DIODE	
R436			RK73GB1J124J	CHIP R 120K J 1/16W	C	D301			MA742	DIODE	
R436			RK73GB1J823J	CHIP R 82K J 1/16W	C2	D302,303			DAN222	DIODE	
R439			RK73GB1J124J	CHIP R 120K J 1/16W	C	D351-355			HVC350B	VARIABLE CAPACITANCE DIODE	C2
R439			RK73GB1J823J	CHIP R 82K J 1/16W	C2	D351,352			HVC350B	VARIABLE CAPACITANCE DIODE	C
R440			RK73GB1J101J	CHIP R 100 J 1/16W		D353			HVC355B	VARIABLE CAPACITANCE DIODE	C
R441			RK73GB1J102J	CHIP R 1.0K J 1/16W		D354,355			HVC350B	VARIABLE CAPACITANCE DIODE	C
R442			RK73GB1J101J	CHIP R 100 J 1/16W		D401			MA2S111	DIODE	
R443			RK73GB1J222J	CHIP R 2.2K J 1/16W		D402			HZU5ALL	DIODE	
R444			RK73GB1J102J	CHIP R 1.0K J 1/16W		D403-406			MA2S304	VARIABLE CAPACITANCE DIODE	
R445			R92-1252-05	CHIP R 0 OHM J 1/16W		D407			1SV278	VARIABLE CAPACITANCE DIODE	
R501			RK73GB1J102J	CHIP R 1.0K J 1/16W		D408			MA2S111	DIODE	
R502			RK73GB1J472J	CHIP R 4.7K J 1/16W		D409			DAN235E	DIODE	
R506			RK73GB1J103J	CHIP R 10K J 1/16W		D502			DA221	DIODE	
R507			RK73GB1J470J	CHIP R 47 J 1/16W		D503			02DZ5.1(Y)	ZENER DIODE	
R509			RK73GB1J100J	CHIP R 10 J 1/16W		D601,602			MA4PH633	DIODE	
R511			RK73GB1J471J	CHIP R 470 J 1/16W		D603,604			XB15A709	DIODE	C2
R512			RK73GB1J332J	CHIP R 3.3K J 1/16W		D604,605			XB15A709	DIODE	C
R513			RK73GB1J682J	CHIP R 6.8K J 1/16W							

PARTS LIST


TX-RX UNIT (X57-686X-XX)

Ref. No.	Address	New parts	Parts No.	Description	Desti-nation	Ref. No.	Address	New parts	Parts No.	Description	Desti-nation
D606,607			MA742	DIODE							
D608			1SS355	DIODE							
IC31			KIA7808AF	ANALOG IC							
IC32,33			NJM78L05UA	BI-POLAR IC							
IC34		*	BD4732G	MOS IC							
IC35			BD4740G	MOS IC							
IC66			AT24C64A10SI18	ROM IC							
IC66		*	CAT24WC64JI	ROM IC							
IC101		*	30622MAA-B85GP	MPU							
IC161			M62363FP	MOS IC							
IC201			NJM2100V	MOS IC							
IC202		*	BA10358FV	MOS IC							
IC203		*	BA10324AFV	MOS IC							
IC204,205			BU4S66	MOS IC							
IC251		*	BA10324AFV	MOS IC							
IC252	2B		LA4600	BI-POLAR IC							
IC301			TK14489V	BI-POLAR IC							
IC401			MB15A02	MOS IC							
IC501			TA75W01FU	MOS IC							
Q31			2SA1641(S,T)	TRANSISTOR							
Q32			KRC102S	DIGITAL TRANSISTOR							
Q33			2SA1745(6,7)	TRANSISTOR							
Q34			KRC102S	DIGITAL TRANSISTOR							
Q35			KTA1664(Y)	TRANSISTOR							
Q36			KRC102S	DIGITAL TRANSISTOR							
Q61			KRC404RTK	DIGITAL TRANSISTOR							
Q86,87			2SK1830	FET							
Q201			2SC4919	TRANSISTOR							
Q251			2SC2412K	TRANSISTOR							
Q252,253			2SK3019	FET							
Q254			DTC363EU	DIGITAL TRANSISTOR							
Q255			KRC102S	DIGITAL TRANSISTOR							
Q301,302			2SC2412K	TRANSISTOR							
Q351			2SC5108(Y)	TRANSISTOR							
Q352,353			3SK255	FET							
Q354			2SK1830	FET	C2						
Q402			2SA1832(GR)	TRANSISTOR							
Q403			2SC4738(GR)	TRANSISTOR							
Q404			2SC4649(N,P)	TRANSISTOR							
Q405,406			2SK508NV(K52)	FET							
Q407			2SJ347	FET							
Q408			KRX102U	TRANSISTOR							
Q410,411			2SC5108(Y)	TRANSISTOR							
Q440			2SC2412K	TRANSISTOR							
Q500			2SC5110(O)	TRANSISTOR							
Q501			2SC3356(R24)	TRANSISTOR							
Q502			2SK2596	FET							
Q503			PD55008TR	DRIVE FET							
Q504			RD60HUF1-01	FINAL FET							
TH97,98	2B	*	NCP18WF104J03	THERMISTOR							
TH301		*	NCP18WF104J03	THERMISTOR	C2						
TH351			NCP18XW332J03	THERMISTOR							
TH352		*	NCP18XQ102J03	THERMISTOR							
TH401			NCP18XH103K03	THERMISTOR							

EXPLODED VIEW

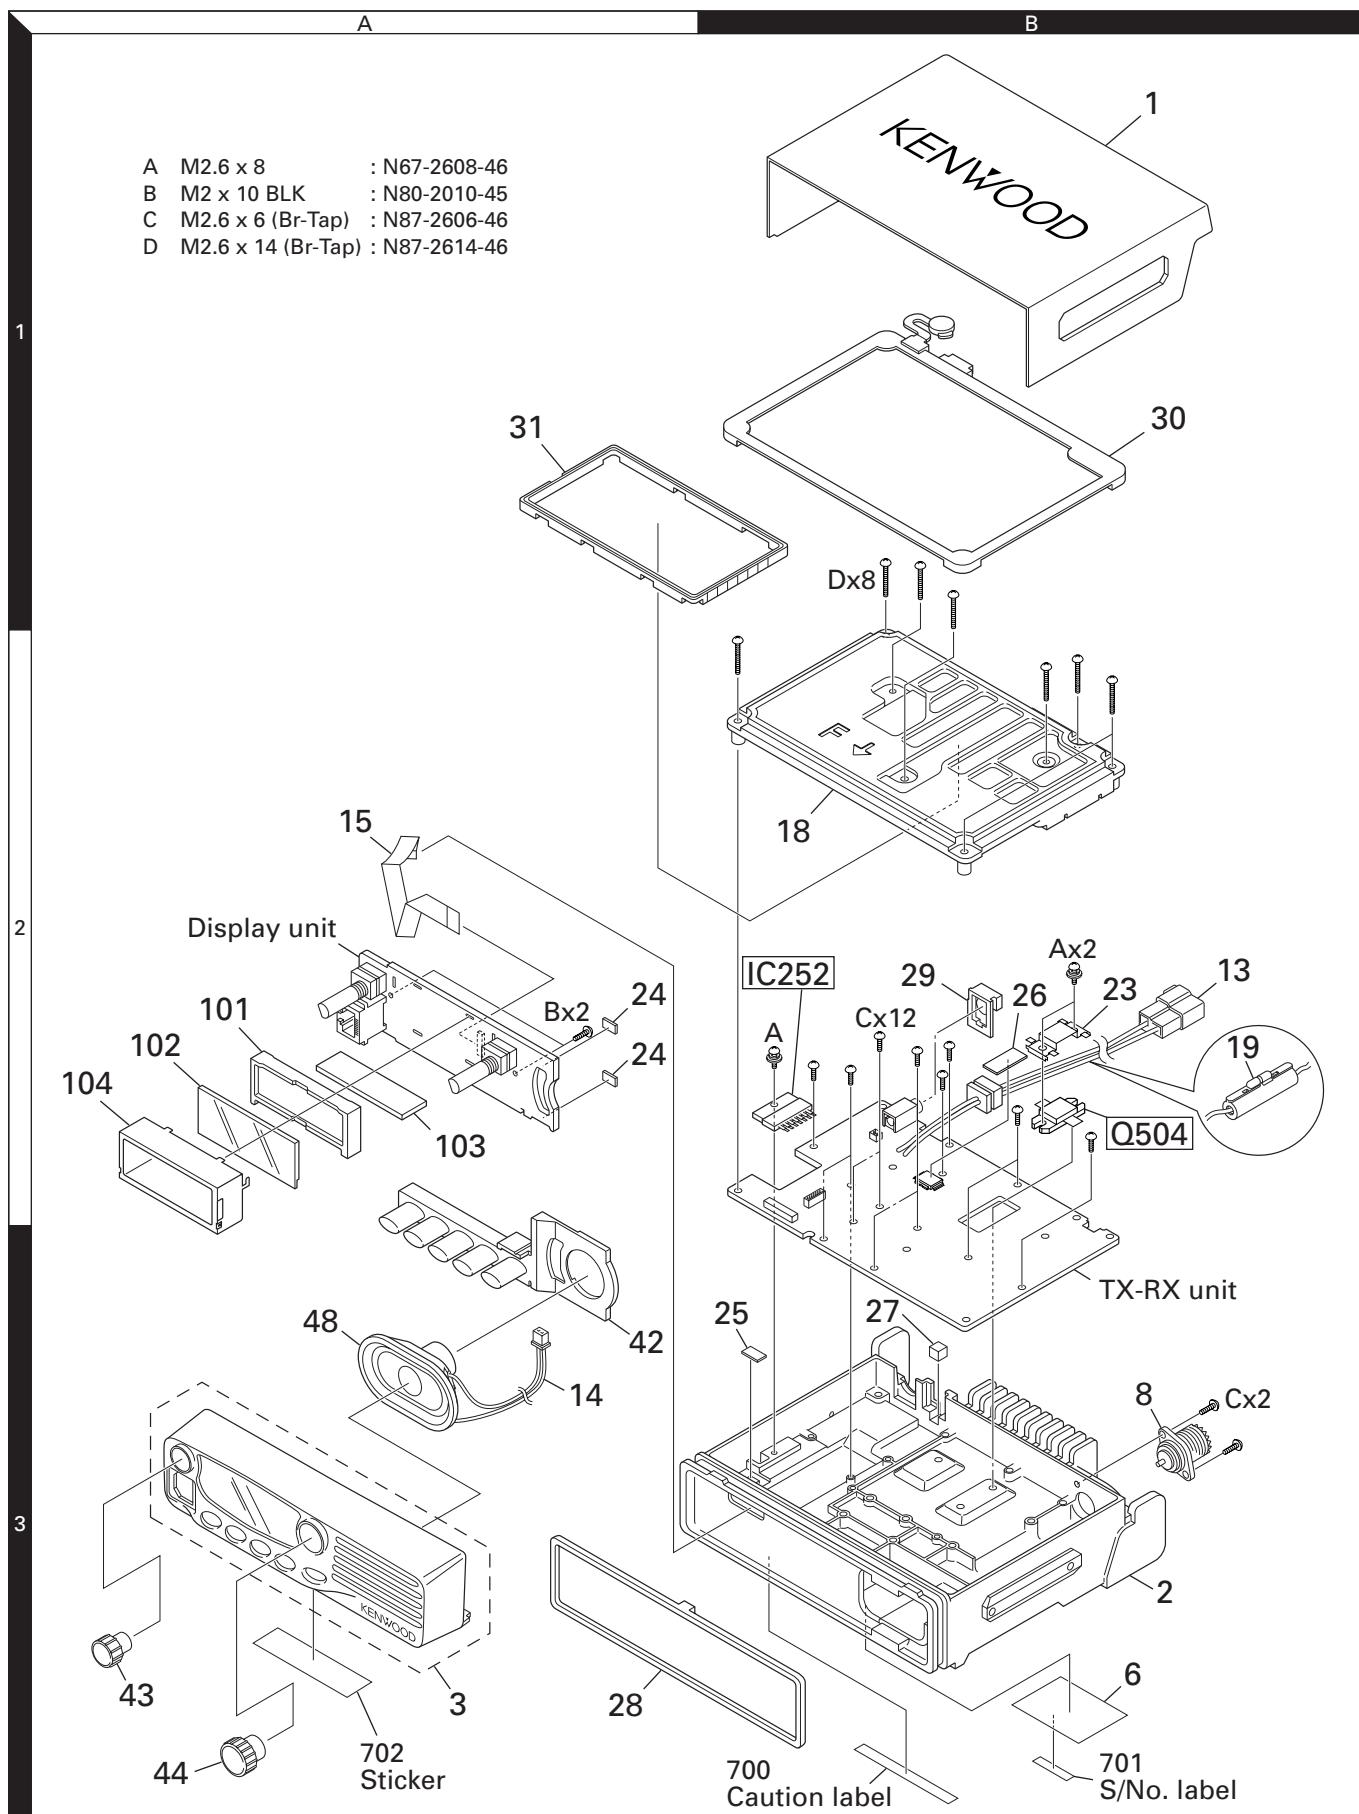

PACKING

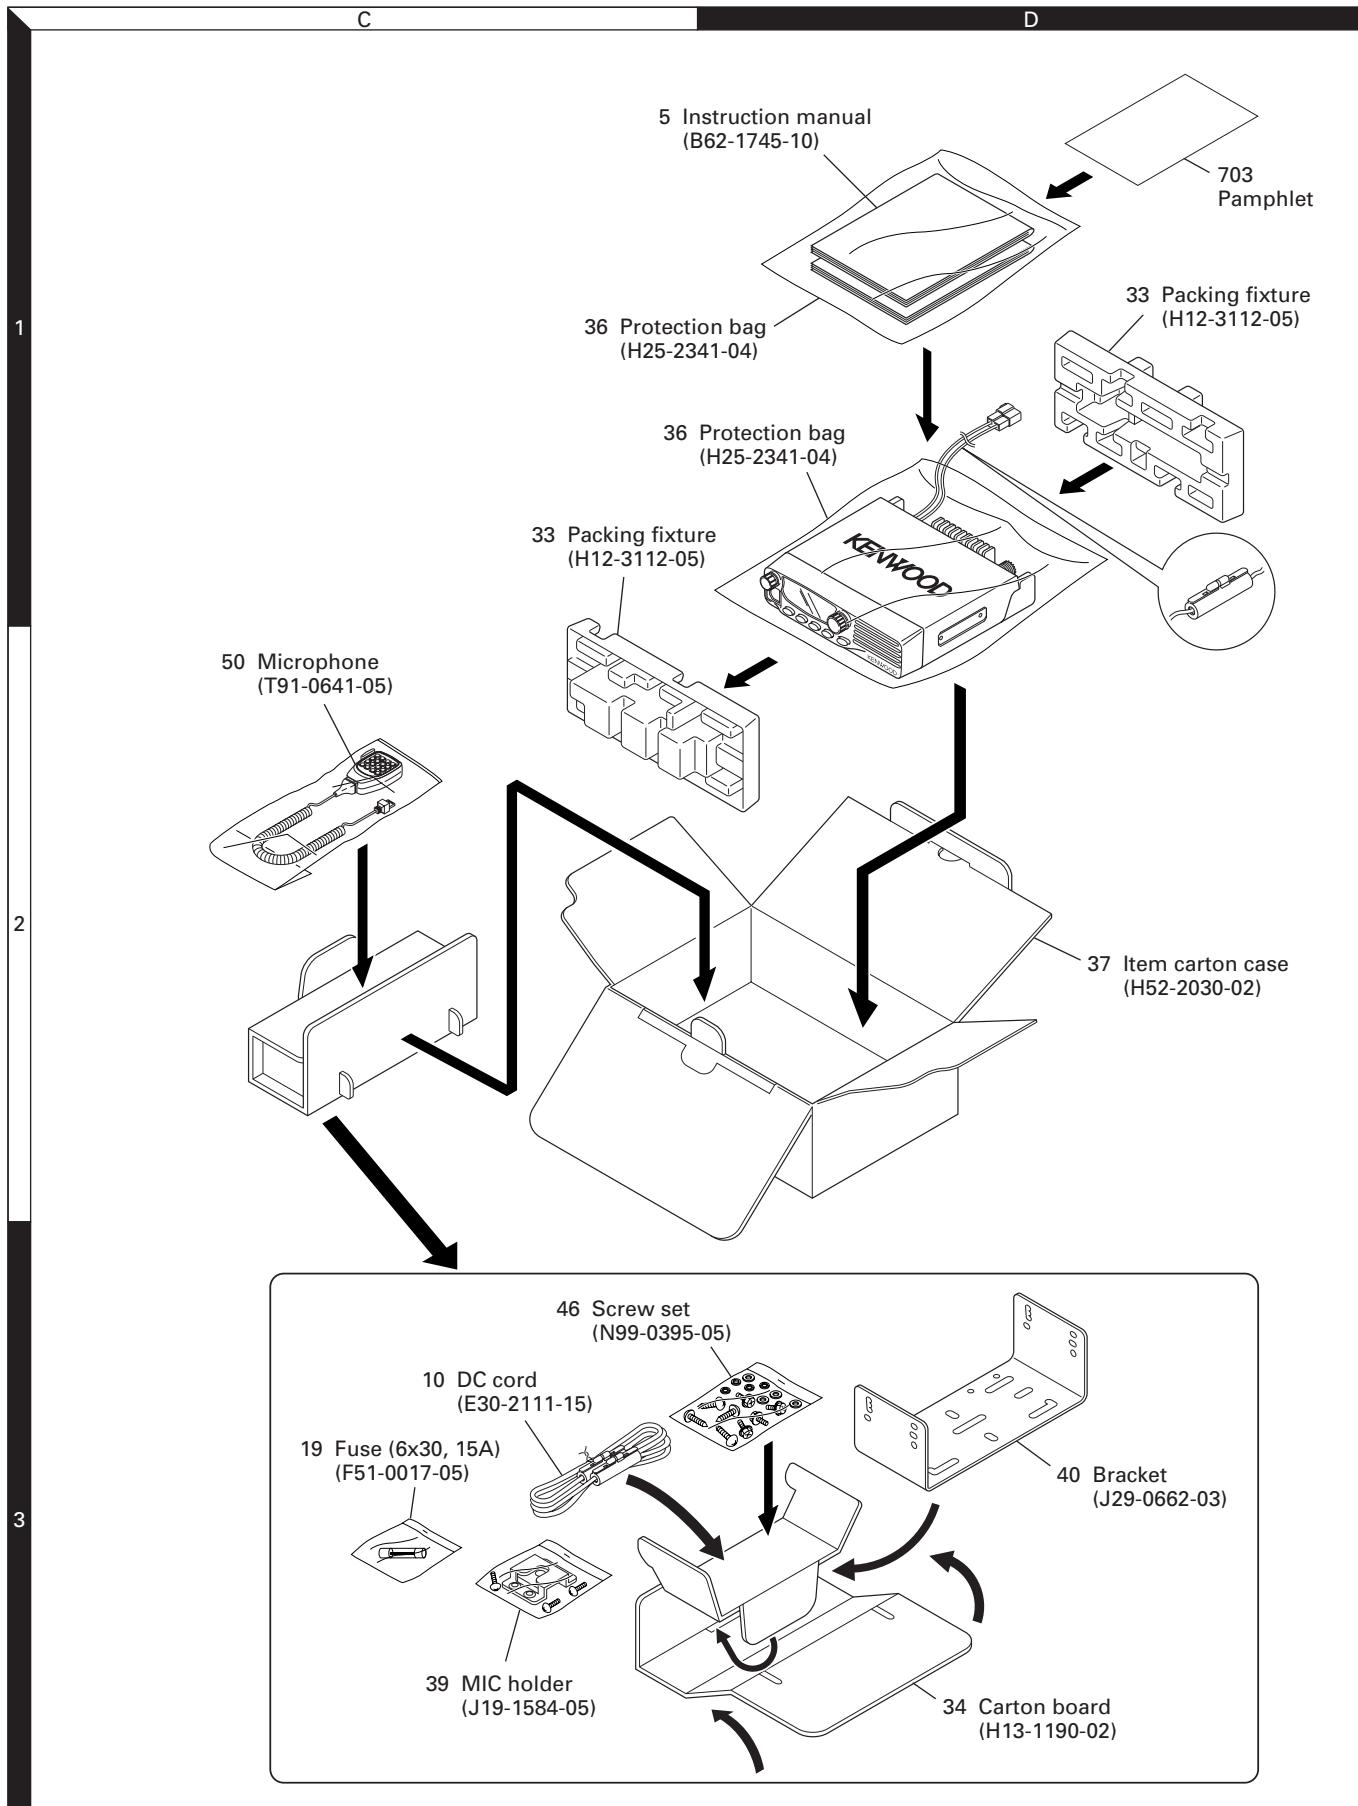

RESETTING THE TRANSCEIVER

Resetting the Transceiver

If your transceiver seems to be malfunctioning, resetting the microprocessor may solve the problem. The following 2 reset modes are available. When performing the reset, you may lose memory data and stored information. Back up or write down important data before performing the reset.

Initial Settings

The factory defaults for the operating frequencies are as follows.

Transceiver : 410.000MHz (C), 450.000MHz (C2)

The Memory Channels have no data stored. The Call Channel and frequency step size default values.

Note : When in Channel Display Mode or while Key Lock is activated, you cannot perform VFO reset or Full reset.

Full Reset

This resets all transceiver parameters to the factory default values. There are two methods available for resetting the transceiver.

• Full Reset Method 1:

1. With the transceiver power OFF, press [F]+[φ] (Power).
- All indicators light momentarily, followed by the full reset confirmation message.

#FLRS T.P

2. Press [F].
- "SURE ?" appears.
- Press any key other than [F] to cancel.
3. Press [F] again to reset the transceiver.
- "WAIT" appears momentarily.

• Full Reset Method 2:

1. Press [F], [MENU] and turn the Tuning control to select Menu No. 99 (RESET).
2. Press [MENU] and turn the Tuning control to select "FULL".
3. Press [MENU].
- "SURE ?" appears.

#SURE .P 99

- Press any key other than [MENU] to cancel.
4. Press [MENU] to reset the transceiver.
- "WAIT" appears momentarily.

■ VFO Reset

This resets the transceiver parameters excluding the DTMF Memory, the Memory channel contents, and the Call channel contents. There are two methods available for resetting the transceiver.

Note : Menu No. 7 (P.VFO) and Menu No. 10 (OFFSET) return to the factory default values.

• VFO Reset Method 1:

1. With the transceiver power OFF, press [VFO]+[φ] (Power).
- The VFO reset confirmation message appears.

#VFRST.P

2. Press [VFO].
- "SURE ?" appears.
- Press any key other than [VFO] to cancel.
3. Press [VFO] again to reset the transceiver.
- "WAIT" appears momentarily.

• VFO Reset Method 2:

1. Press [F], [MENU] and turn the Tuning control to select Menu No. 99 (RESET).
2. Press [MENU] and turn the Tuning control to select "VFO".
3. Press [MENU].
- "SURE ?" appears.

#SURE .P 99

- Press any key other than [MENU] to cancel.
4. Press [MENU] to reset the transceiver.

ADJUSTMENT

Adjustment Mode

In Adjustment Mode, the transceiver can be adjusted using its panel keys.

■ Items that can be adjusted in Adjustment Mode *1

- | | |
|----------------------------|--------------------------|
| 1. Frequency Tune | 7. DCS Fine Deviation *3 |
| 2. Transmit High Power *2 | 8. DTMF Fine Deviation |
| 3. Transmit Low Power *2 | 9. Band Pass Tuning *4 |
| 4. DCS Balance *3 | 10. Squelch Tight *5 |
| 5. Max Deviation *3 | 11. Squelch Open *5 |
| 6. CTCSS Fine Deviation *3 | 12. S-Meter S1 Level |
| | 13. S-Meter Full Level |

Note :

- *1 : The PLL lock voltage and Max Power Alignment for transmission cannot be adjusted in Adjustment Mode.
- *2 : Adjusted in 5 points in the transmission operating frequency range.
- *3 : Adjusted in 3 points for the Wide Band Width in the transmission operating frequency range.
Adjusted in 1 point for the Narrow Band Width
- *4 : Adjusted in 3 points in the reception operating frequency range.
- *5 : Adjusted in 3 points for the Wide Band Width in the reception operating frequency range.
Adjusted in 1 point for the Narrow Band Width

■ How to Enter Adjustment Mode

To perform adjustments with transceiver panel keys, the transceiver must be set to "Adjustment Mode".

While shorting the following figure terminals on the PCB with tweezers, etc., turn the power switch ON to enter Adjustment Mode. (See Fig. 1.)

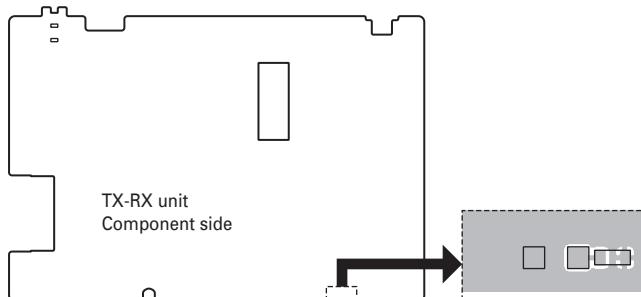


Fig. 1

■ LCD Display When Adjustment Mode is Enabled

Example of Frequency Tune. See "Table 1" for an LCD display list.

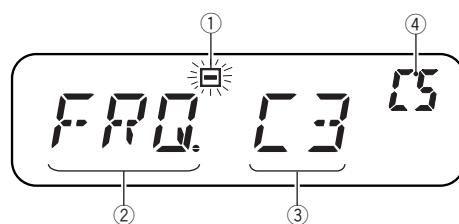


Fig. 2

- ① Blinks in Adjustment Mode.
- ② Adjustment item display
- ③ Adjustment value display. Can be adjusted while it is "blinking".
Displayed as a hexadecimal number from 00 to FF.
- ④ Adjustment value stored in memory.
When an adjustment value is determined, it is equal to the value in "3".

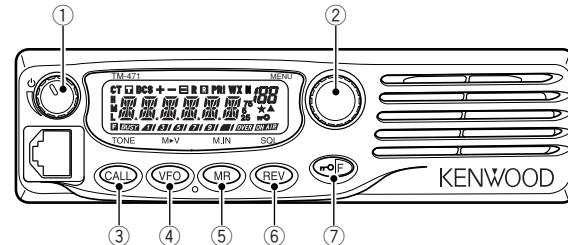
■ Panel Key Operation Method in Adjustment Mode

Fig. 3

- ① Power switch/Volume control
- ② When the knob is pressed once, the adjustment value display blinks. (Select an adjustment item with "4" or "5" key before performing the operation. It cannot be performed while transmitting.)
When the knob is rotated while the adjustment display is blinking, the adjustment value changes. (Adjust transmission items while transmitting.)
When the knob is pressed again, the adjustment value stops blinking and lights, and the adjustment value is saved in the memory of the transceiver. (For transmission item adjustment, enter receive mode before performing the operation.)
- ③ Changing between adjustment value display and frequency display
The display changes as follows : Adjustment value display → Transmit frequency display → Receive frequency display → Adjustment value display.
The frequency for adjustment can be confirmed.
- ④ Moves the adjustment item backward. (If it is operated when a frequency is displayed, the adjustment item display returns.)
- ⑤ Moves the adjustment item forward. (If it is operated when a frequency is displayed, the adjustment item display returns.)
- ⑥ If it is pressed before determining the adjustment value, the adjustment value of the Adjustment item returns to its original value.
- ⑦ Not used in Adjustment Mode.

Note :

If Max Power for transmission is low, check the DC cable.
If the DC cable connector has poor contact due to rust or stain, voltage may drop occur frequently and correct transmission power may not be supplied.

In this case, polish the DC cable connector. If the problem still persists, replace the DC cable with a new one.

ADJUSTMENT

Adjustment Item	Adjustment Frequency Point	On the Display	Note	TX (MHz)	RX (MHz)	TX (MHz)	RX (MHz)	Signalling
				C	C2			
Frequency Tune	Center	FREQ.		415.10	415.05	460.10	460.05	
TX High Power	Low	HPL .	"H" icon appear	400.10	400.05	440.10	440.05	
	Low'	HPL L		407.60	407.55	450.10	450.05	
	Center	HPL C		415.10	415.05	460.10	460.05	
	High'	HPL H		422.60	422.55	470.10	470.05	
	High	HPL .		429.90	429.95	479.90	479.95	
TX Low Power	Low	LPL .	"L" icon appear	400.10	400.05	440.10	440.05	
	Low'	LPL L		407.60	407.55	450.10	450.05	
	Center	LPL C		415.10	415.05	460.10	460.05	
	High'	LPL H		422.60	422.55	470.10	470.05	
	High	LPL .		429.90	429.95	479.90	479.95	
DCS Balance	Low	BAL L.	"DCS" icon appear	400.10	400.05	440.10	440.05	DCS : 023N
	Center	BAL C.		415.10	415.05	460.10	460.05	
	High	BAL H.		429.90	429.95	479.90	479.95	
DCS Balance (Narrow)	Center	BAL C.	"DCS" and "N" icons appear	415.10	415.05	460.10	460.05	
Max Deviation	Low	MAX L.		400.10	400.05	440.10	440.05	
	Center	MAX C.		415.10	415.05	460.10	460.05	
	High	MAX H.		429.90	429.95	479.90	479.95	
Max Deviation (Narrow)	Center	MAX C.	"N" icon appear	415.10	415.05	460.10	460.05	
CTCSS Fine Deviation	Low	IVL .	"CT" icon appear	400.10	400.05	440.10	440.05	CTCSS : 88.5Hz
	Center	IVC .		415.10	415.05	460.10	460.05	
	High	IWH .		429.90	429.95	479.90	479.95	
CTCSS Fine Deviation (Narrow)	Center	IVC .	"CT" and "N" icon appear	415.10	415.05	460.10	460.05	
DCS Fine Deviation	Low	IVL .	"DCS" icon appear	400.10	400.05	440.10	440.05	DCS : 023N
	Center	IVC .		415.10	415.05	460.10	460.05	
	High	IWH .		429.90	429.95	479.90	479.95	
DCS Fine Deviation (Narrow)	Center	IVC .	"DCS" and "N" icons appear	415.10	415.05	460.10	460.05	
DTMF Fine Deviation	Center	IT .		415.10	415.05	460.10	460.05	DTMF : 9
DTMF Fine Deviation (Narrow)	Center	IT .	"N" icon appear	415.10	415.05	460.10	460.05	
Band Pass Tuning	Low	BPL .	"BUSY" icon appear	400.10	400.05	440.10	440.05	
	Center	BPC .		415.10	415.05	460.10	460.05	
	High	BPH .		429.90	429.95	479.90	479.95	
Squelch Tight	Low	SOTL .		400.10	400.05	440.10	440.05	
	Center	SOTC .		415.10	415.05	460.10	460.05	
	High	SOTH .		429.90	429.95	479.90	479.95	
Squelch Tight (Narrow)	Center	SOTC .	"N" icon appear	415.10	415.05	460.10	460.05	
Squelch Open	Low	SOOL .		400.10	400.05	440.10	440.05	
	Center	SOOC .		415.10	415.05	460.10	460.05	
	High	SOOH .		429.90	429.95	479.90	479.95	
Squelch Open (Narrow)	Center	SOOC .	"N" icon appear	415.10	415.05	460.10	460.05	
S-Meter S1 Level	Center	S 1		415.10	415.05	460.10	460.05	
S-Meter Full Level	Center	S 7		415.10	415.05	460.10	460.05	


Table 1 Adjustment items, display and test frequency list

ADJUSTMENT


Test Equipment Required for Alignment

Test Equipment	Major Specifications	
1. Standard Signal Generator (SSG)	Frequency Range Modulation Output	400 to 520MHz Frequency modulation and external modulation -127dBm/0.1μV to greater than -7dBm/100mV
2. Power Meter	Input Impedance Operation Frequency Measurement Capability	50Ω 400 to 520MHz or more Vicinity of 100W
3. Deviation Meter	Frequency Range	400 to 520MHz
4. Digital Volt Meter (DVM)	Measuring Range Accuracy	1 to 20V DC High input impedance for minimum circuit loading
5. Oscilloscope		DC through 30MHz
6. High Sensitivity Frequency Counter	Frequency Range Frequency Stability	10Hz to 1000MHz 0.2ppm or less
7. Ammeter		20A
8. AF Volt Meter (AF VTVM)	Frequency Range Voltage Range	50Hz to 10kHz 1mV to 3V
9. Audio Generator (AG)	Frequency Range Output	20Hz to 20kHz or more 0 to 1V
10. Distortion Meter	Capability Input Level	3% or less at 1kHz 50mV to 10Vrms
11. 8Ω Dummy Load		Approx. 8Ω, 10W or more
12. Regulated Power Supply		13.8V, approx. 20A (adjustable from 9 to 17V) Useful if ammeter equipped
13. Spectrum Analyzer	Center frequency	50KHz to 1000MHz
14. Tracking Generator	Output Voltage	100mV or more

Test cable for microphone input (E30-3360-08)

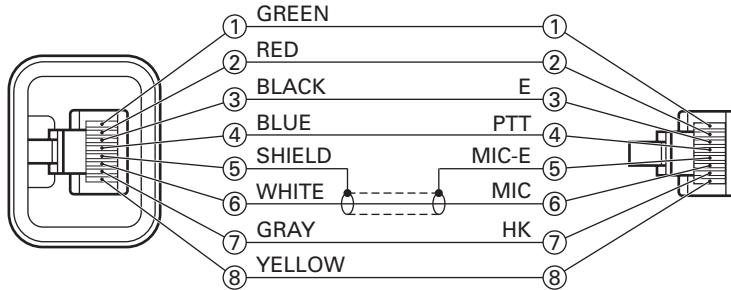


MIC connector (Front view)

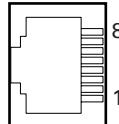

- 1 : BLC
- 2 : PSB
- 3 : E
- 4 : PTT
- 5 : ME
- 6 : MIC
- 7 : HOOK
- 8 : CM

Tuning cable (E30-3383-05)


Adapter cable (E30-3383-05) is required for injecting an audio if adjustment mode is used.

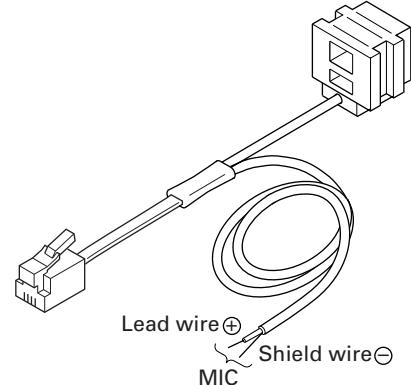

ADJUSTMENT

Adjustment Location

■ Adjustment Points

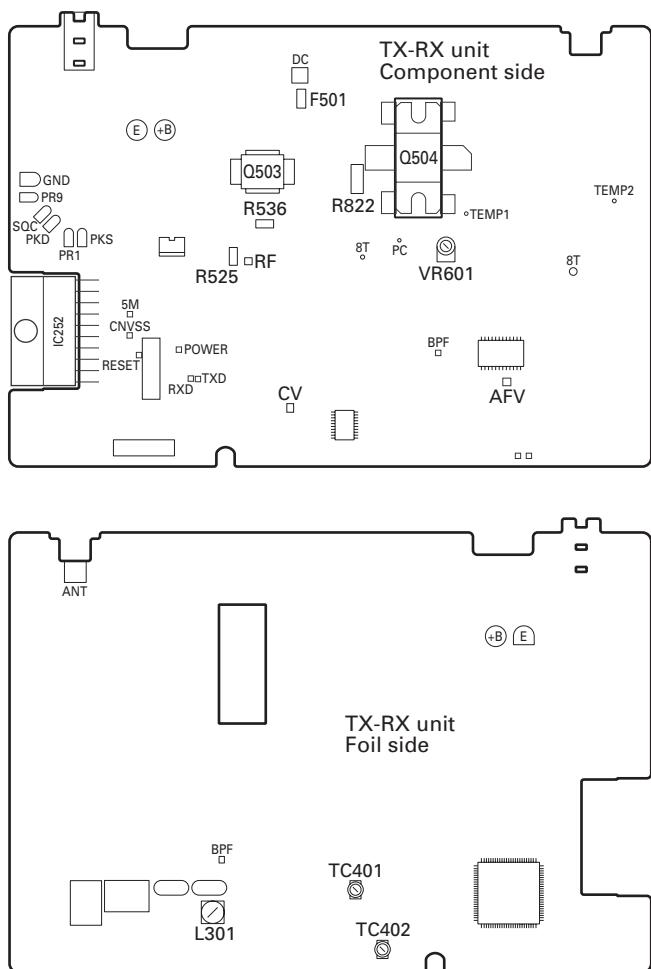


■ Notes

• EEPROM

The tuning data (Deviation, Squelch, etc.) for the EEPROM, is stored in memory. When parts are changed, re-adjust the transceiver.


• AF PA IC (IC252)

How to mounting the IC252.

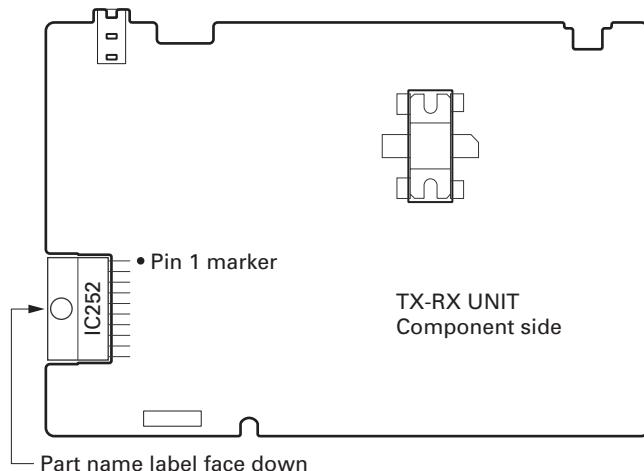


• Speaker Cable

The speaker cable should be formed before mounting the shield cover as below.

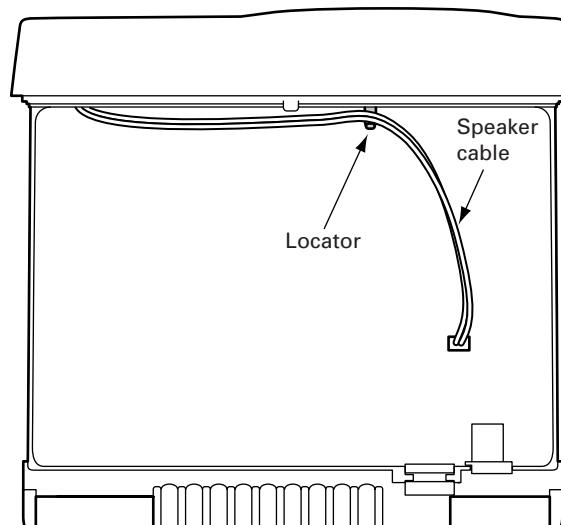

• Fuse

To mount the fuse, the cable terminal direction must be as follow.

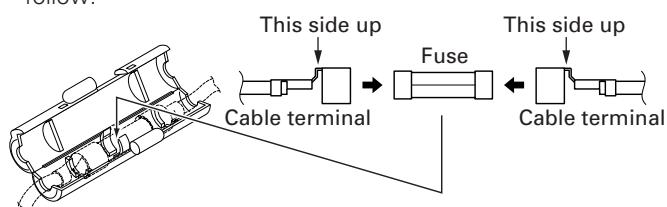

ADJUSTMENT

PCB Section


Item	Condition	Measurement		Adjustment		Specifications/ Remarks
		Test equipment	Terminal	Parts	Method	
1. Setting	1) Power supply voltage DC Power supply terminal : 13.8V					
2. VCO lock voltage*	1) CH : TX high	Digital voltmeter	CV	TC402	5.5V	±0.2V
	2) CH : RX high			TC401	5.5V	±0.2V
	3) CH : TX low				Check	0.5V or more
	4) CH : RX low					
3. IF coil	1) CH : RX center (Wide) 2) SSG output : -53dBm (501μV) Mod : 1kHz Dev : 3kHz	SSG Digital voltmeter	AFV	L301	3.25~3.35V (DC)	

*** Adjustment of TX VCO lock voltage**

1. Remove R525, F501, R536 and R822 (all on component side).
 2. Remove PCB from chassis.
 3. Transmit and check voltage at [CV] point.
- Warning :** Do not transmit if step "1." is not complete.
4. Adjust of voltage can be done by tuning TC402.

Transmitter Section

Item	Condition	Measurement		Adjustment		Specifications/ Remarks
		Test equipment	Terminal	Parts	Method	
1. Frequency	1) CH : TX center 2) Transmit	Frequency counter	ANT	Encoder knob	Adjust to center frequency	Within ±20Hz
2. Maximum power alignment	1) CH : TX high 2) Adjustment HEX value : FF 3) Transmit	Power meter		VR601	43W	±1W
	1) CH : TX low CH : TX low' CH : TX center CH : TX high' CH : TX high 2) Transmit			Encoder knob	40W	±1.0W
	1) CH : TX low CH : TX low' CH : TX center CH : TX high' CH : TX high 2) Transmit				25W	±1.0W
5. DCS balance	1) CH : TX low (Wide) CH : TC center (Wide/Narrow) CH : TX high (Wide) 2) Transmit	Modulation analyzer or Linear detector (LPF : 3kHz) Oscilloscope			Adjust the waveform as below	

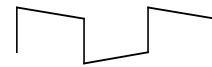

ADJUSTMENT

Item	Condition	Measurement		Adjustment		Specifications/ Remarks
		Test equipment	Terminal	Parts	Method	
6. MAX deviation	1) CH : TX low (Wide) CH : TX center (Wide/Narrow) CH : TX high (Wide) 2) AG : 1kHz/50mV 3) Transmit	Modulation analyzer or Linear detector (LPF : 15kHz) Oscilloscope AG AF V.M	ANT MIC	Encoder knob	±4.0kHz (Wide) ±2.0kHz (Narrow) According to the large +, -	±100Hz (Wide) ±50Hz (Narrow)
7. MIC sensitivity	1) CH : TX center (Narrow) 2) AG : 1kHz/5.4mV 3) Transmit				Check	±1.2~1.9kHz (Narrow)
8. CTCSS fine deviation	1) CH : TX low (Wide) CH : TX center (Wide/Narrow) CH : TX high (Wide) 2) Transmit	Modulation analyzer or Linear detector (LPF : 3kHz) Oscilloscope		Encoder knob	±0.75kHz (Wide) ±0.35kHz (Narrow)	±50Hz
9. DCS fine deviation	1) CH : TX low (Wide) CH : TX center (Wide/Narrow) CH : TX high (Wide) 2) Transmit				±0.75kHz (Wide) ±0.35kHz (Narrow)	±50Hz (Wide) ±40Hz (Narrow)
10. DTMF fine deviation	1) CH : TX center (Wide/Narrow) 2) Transmit				±3.0kHz (Wide) ±1.5kHz (Narrow)	±200Hz (Wide) ±100Hz (Narrow)

If normal power is not obtained, please follow the step below

Open the shielding cover (upper), and screw 3 locations around ANT pin.

1. Switch off the transceiver.
Impedance of Final FET (Q504) and Drive FET (Q503) can be measured easily using DVM Ω mode.
Normal condition – Gate : 20kΩ~50kΩ, Drain : 1MΩ~2MΩ
The above impedance values are rough estimations.
2. Switch on the transceiver. Check the voltage at F501 output point.
The voltage is around 13.8V in receiving condition. The voltage will be 12.6V~ in transmitting condition. If found 0V at this point then F501 is broken.
3. Remove R525.

4. Connect 50Ω load at the ANT location.
Transmit and check current drain at High power mode.
If the current drain is less than 1A, then Final FET is broken.
If the current drain is less than 5.0A, short the Drive FET gate to ground, and check the current drain.
If the current drain is not 0.1A less than the original value, then the Drive FET is broken.
5. Check input power level at Drive FET gate location.
Connect the wire to [RF] location.
Transmit and check for power to be within the range of 0.7W~1W.
If power found is less than 0.5W, check the circuit before the Drive FET.

Receiver Section

Item	Condition	Measurement		Adjustment		Specifications/ Remarks
		Test equipment	Terminal	Parts	Method	
1. Band pass tuning	1) CH : RX low (Wide) CH : RX center (Wide/Narrow) CH : RX high (Wide) 2) SSG output : -119dBm (0.25μV) (Wide) : -117dBm (0.32μV) (Narrow) Mod : 1kHz Dev : ±3.0kHz (Wide) Dev : ±1.5kHz (Narrow)	SSG Oscilloscope AF V.M Distortion meter	ANT EXT. SP	Encoder knob	Adjust to maximum SINAD.	SINAD : 12dB or higher

ADJUSTMENT

Item	Condition	Measurement		Adjustment		Specifications/ Remarks
		Test equipment	Terminal	Parts	Method	
2. Squelch tight	1) CH : RX low (Wide) CH : RX center (Wide/Narrow) CH : RX high (Wide) 2) SSG output : -114dBm (0.45μV) (Wide/Narrow) Mod : 1kHz Dev : ±3.0kHz (Wide) Dev : ±1.5kHz (Narrow)	SSG Oscilloscope AF V.M Distortion meter	ANT EXT. SP	Encoder knob	Adjust to open the squelch	
3. Squelch open	1) CH : RX low (Wide) CH : RX center (Wide/Narrow) CH : RX high (Wide) 2) SSG output : -124dBm (0.14μV) (Wide/Narrow) Mod : 1kHz Dev : ±3.0kHz (Wide) Dev : ±1.5kHz (Narrow)					
4. RSSI writing	1) CH : RX center (Wide) 2) SSG output : -53dBm (501μV) Mod : 1kHz Dev : ±3.0kHz			Push encoder knob	RSSI value writing is performed by the "Squelch open" item (center wide). SSG output level is changed and adjusted after SQ adjustment. This adjustment should not turn the encoder.	
5. S-meter S1	1) CH : RX center (wide) 2) SSG output : -118dBm (0.28μV) Mod : 1kHz Dev : ±3.0kHz					
6. S-meter full scale	1) CH : RX center (Wide) 2) SSG output : -96dBm (3.54μV) Mod : 1kHz Dev : ±3.0kHz					

TERMINAL FUNCTION**TX-RX UNIT (X57-686X-XX)**

CN No.	Pin No.	Name	Function
CN1	1	ENC A	Encoder A
	2	CM	Microphone Key Check
	3	ENC B	Encoder B
	4	MIC KEY	Microphone Key
	5	DI	Data Out from LCD
	6	CE	Chip Enable for LCD
	7	CL	Clock for LCD
	8	DO	Data transfer to LCD
	9	5C	5V DC power supply
	10	8C	8V DC supply
	11	VOL	Volume
	12	POWER	Power Key
	13	RXD	RXD
	14	BRI	Brightness Control
	15	PTT	PTT
	16	GND	Ground
	17	GND	Ground
	18	MIC	Microphone
CN2	1	GND	Ground
	2	SQC	Squelch Signal
	3	PKS	Transmission Control
	4	PR1	1200bps Receive Data
	5	PR9	9600bps Receive Data
	6	GND	Ground
	7	PKD	Transmission Modulation


CN No.	Pin No.	Name	Function
CN5	1	INT SP	Internal speaker
	2	GND	Ground

DISPLAY UNIT (X54-3450-10)


CN No.	Pin No.	Name	Function
CN1	1	ENC A	Encoder A
	2	CM	Microphone Key Check
	3	ENC B	Encoder B
	4	MIC KEY	Microphone Key
	5	DI	Data Out from LCD
	6	CE	Chip Enable for LCD
	7	CL	Clock for LCD
	8	DO	Data transfer to LCD
	9	5C	5V DC power supply
	10	8C	8V DC supply
	11	VOL	Volume
	12	POWER	Power Key
	13	RXD	RXD
	14	BRI	Brightness Control
	15	PTT	PTT
	16	GND	Ground
	17	ME	ME
	18	MIC	Microphone

TM-471A PC BOARD


DISPLAY UNIT (X54-3450-10) Component side view (J72-0905-09)

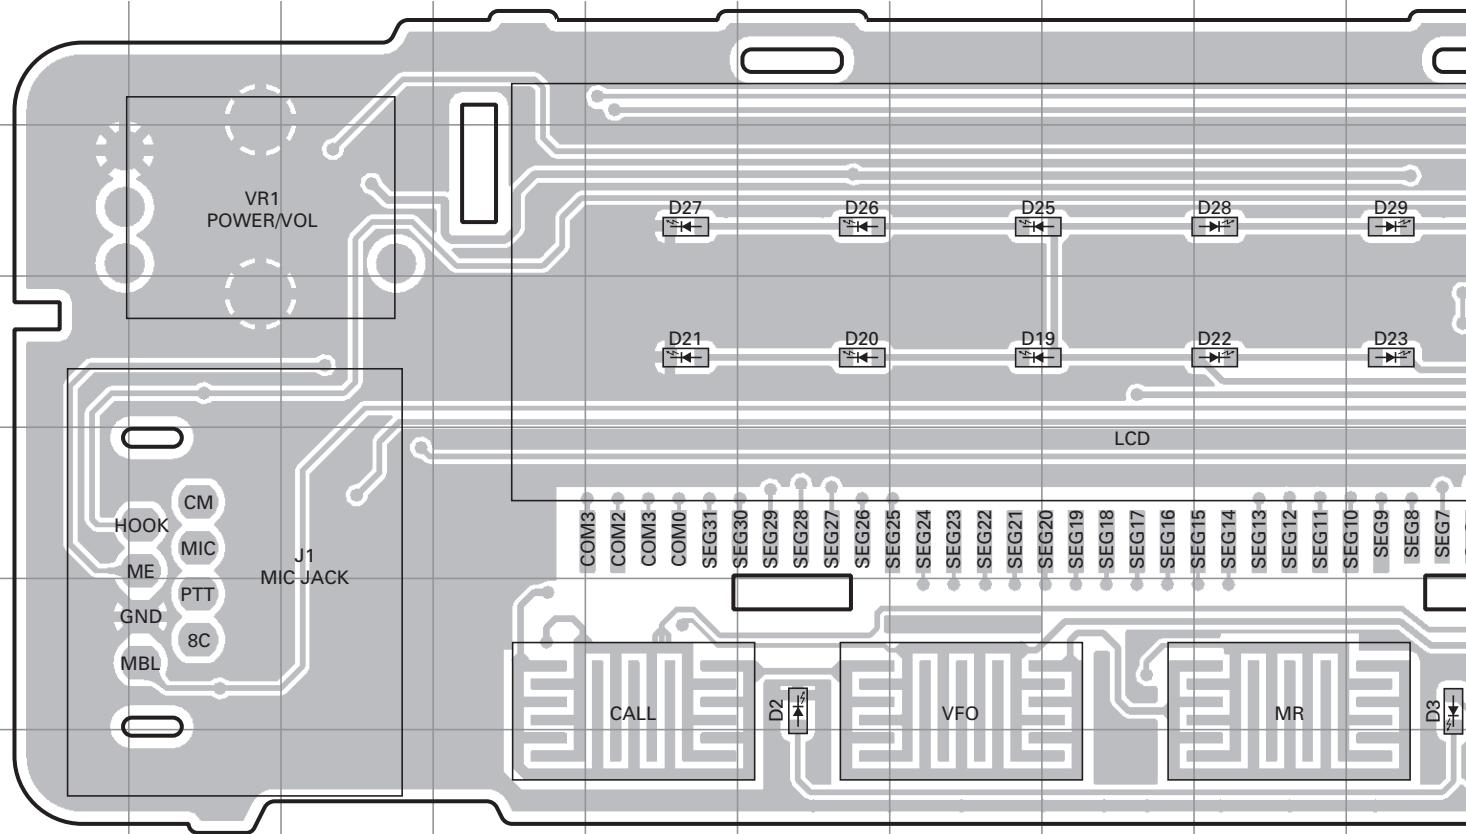

DISPLAY UNIT (X54-3450-10) Foil side view (J72-0905-09)

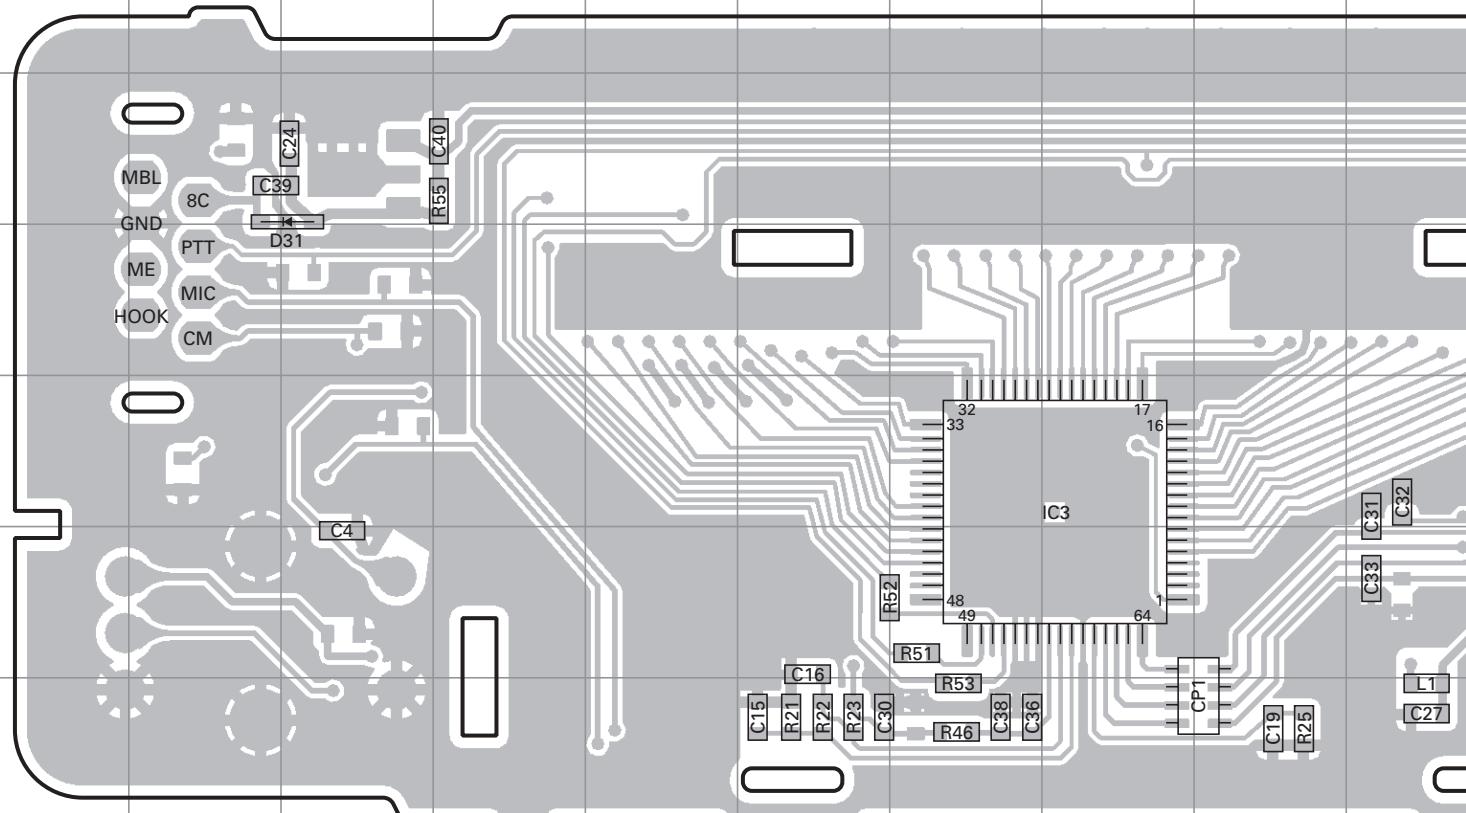


DISPLAY UNIT (X54-3450-10) Component side view (J72-0905-09)

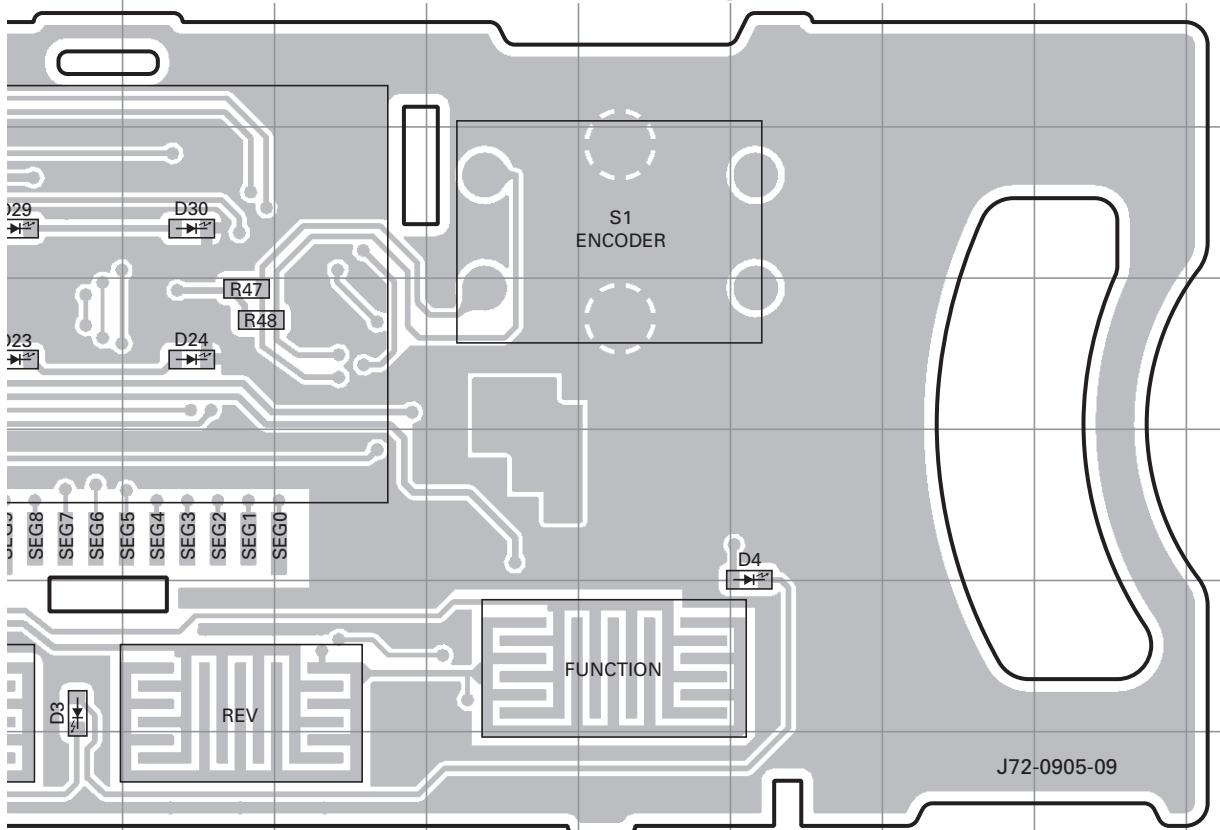

Ref. No.	Address
D2	6F
D3	6J
D4	5O
D19	4G
D20	4P
D21	4E
D22	4I
D23	4J
D24	4K
D25	3G
D26	3F
D27	3E
D28	3I
D29	3J
D30	3K

Component side
Layer 1
Layer 2
Foil side

DISPLAY UNIT (X54-3450-10) Foil side view (J72-0905-09)

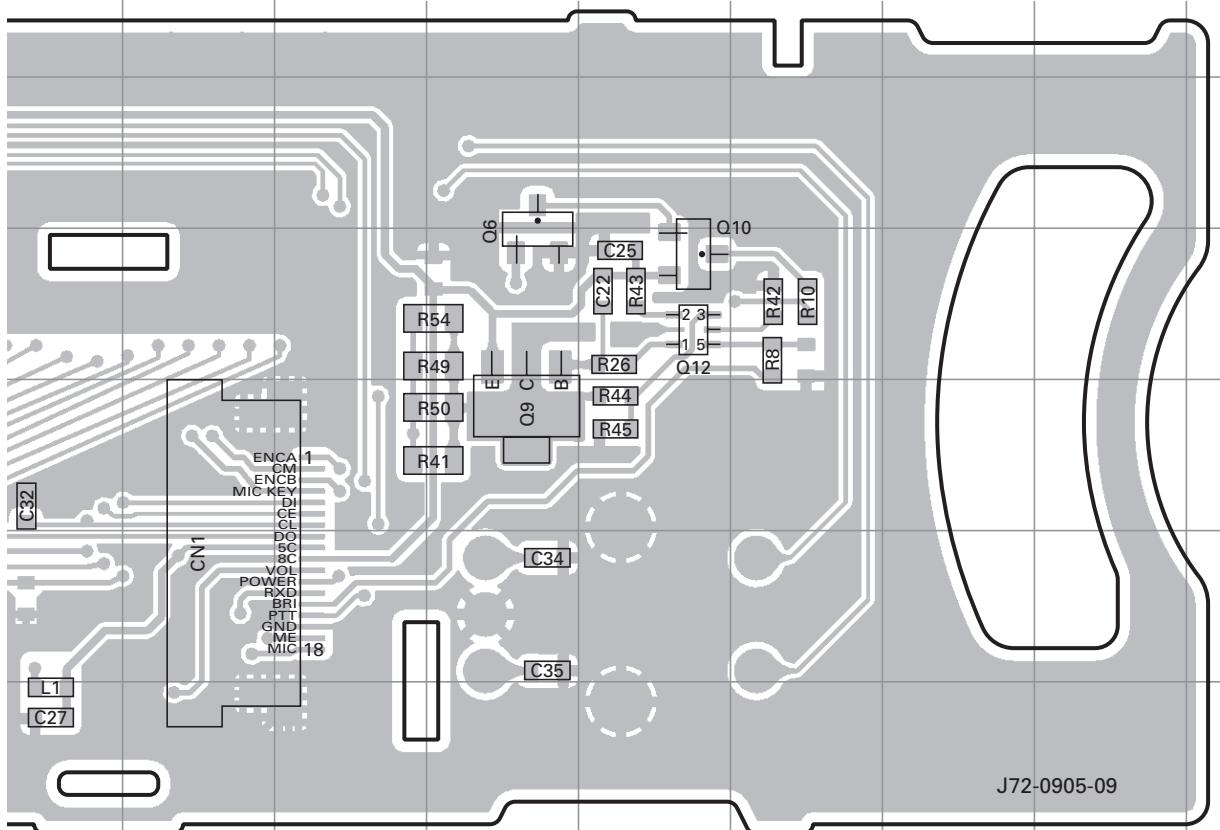


Ref. No.	Address
IC3	11H
Q6	10M
Q9	11M
Q10	10N
Q12	10N
D31	9C

Component side
Layer 1
Layer 2
Foil side

TM-471A PC BOARD

PC BOARD TM-471A


DISPLAY UNIT (X54-3450-10) Component side view (J72-0905-09)

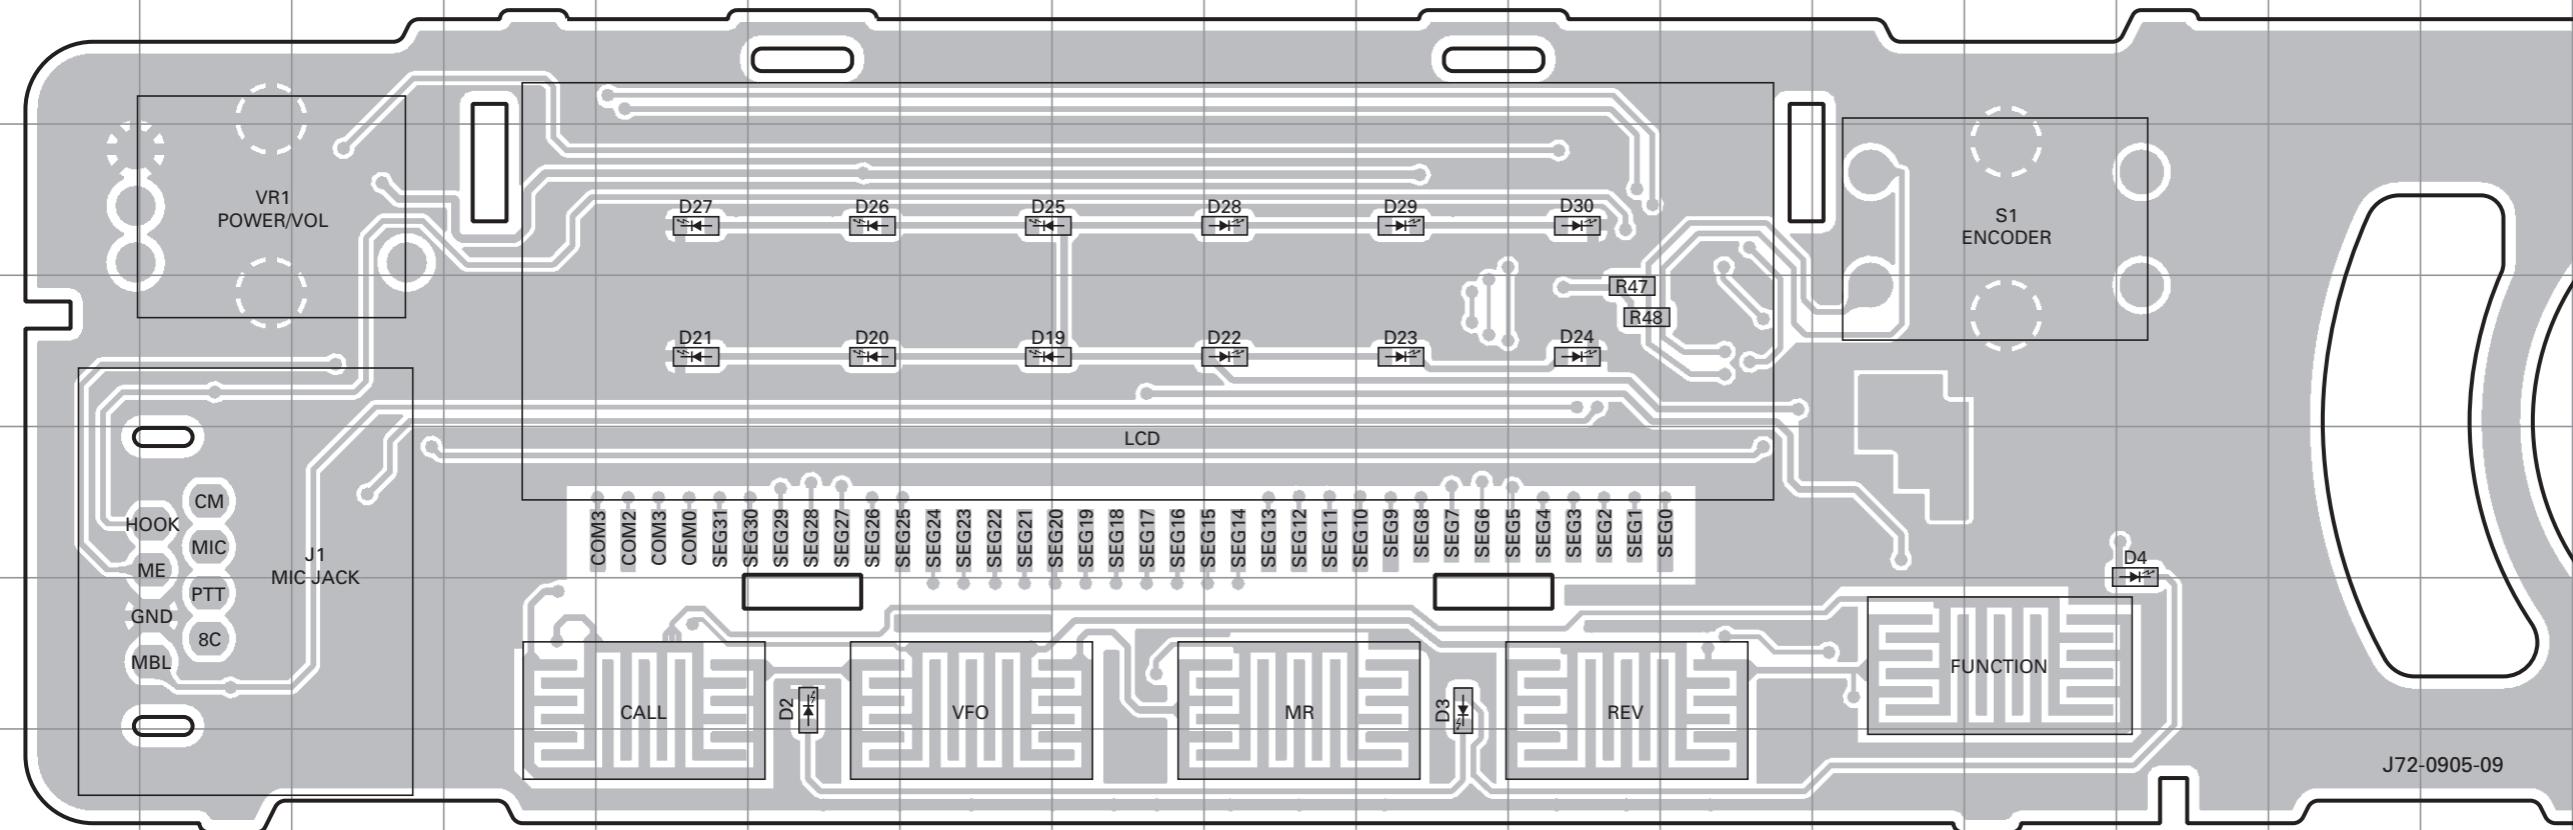

DISPLAY UNIT (X54-3450-10) Component side view (J72-0905-09)

Ref. No.	Address
D2	6F
D3	6J
D4	5O
D19	4G
D20	4P
D21	4E
D22	4I
D23	4J
D24	4K
D25	3G
D26	3F
D27	3E
D28	3I
D29	3J
D30	3K

DISPLAY UNIT (X54-3450-10) Foil side view (J72-0905-09)

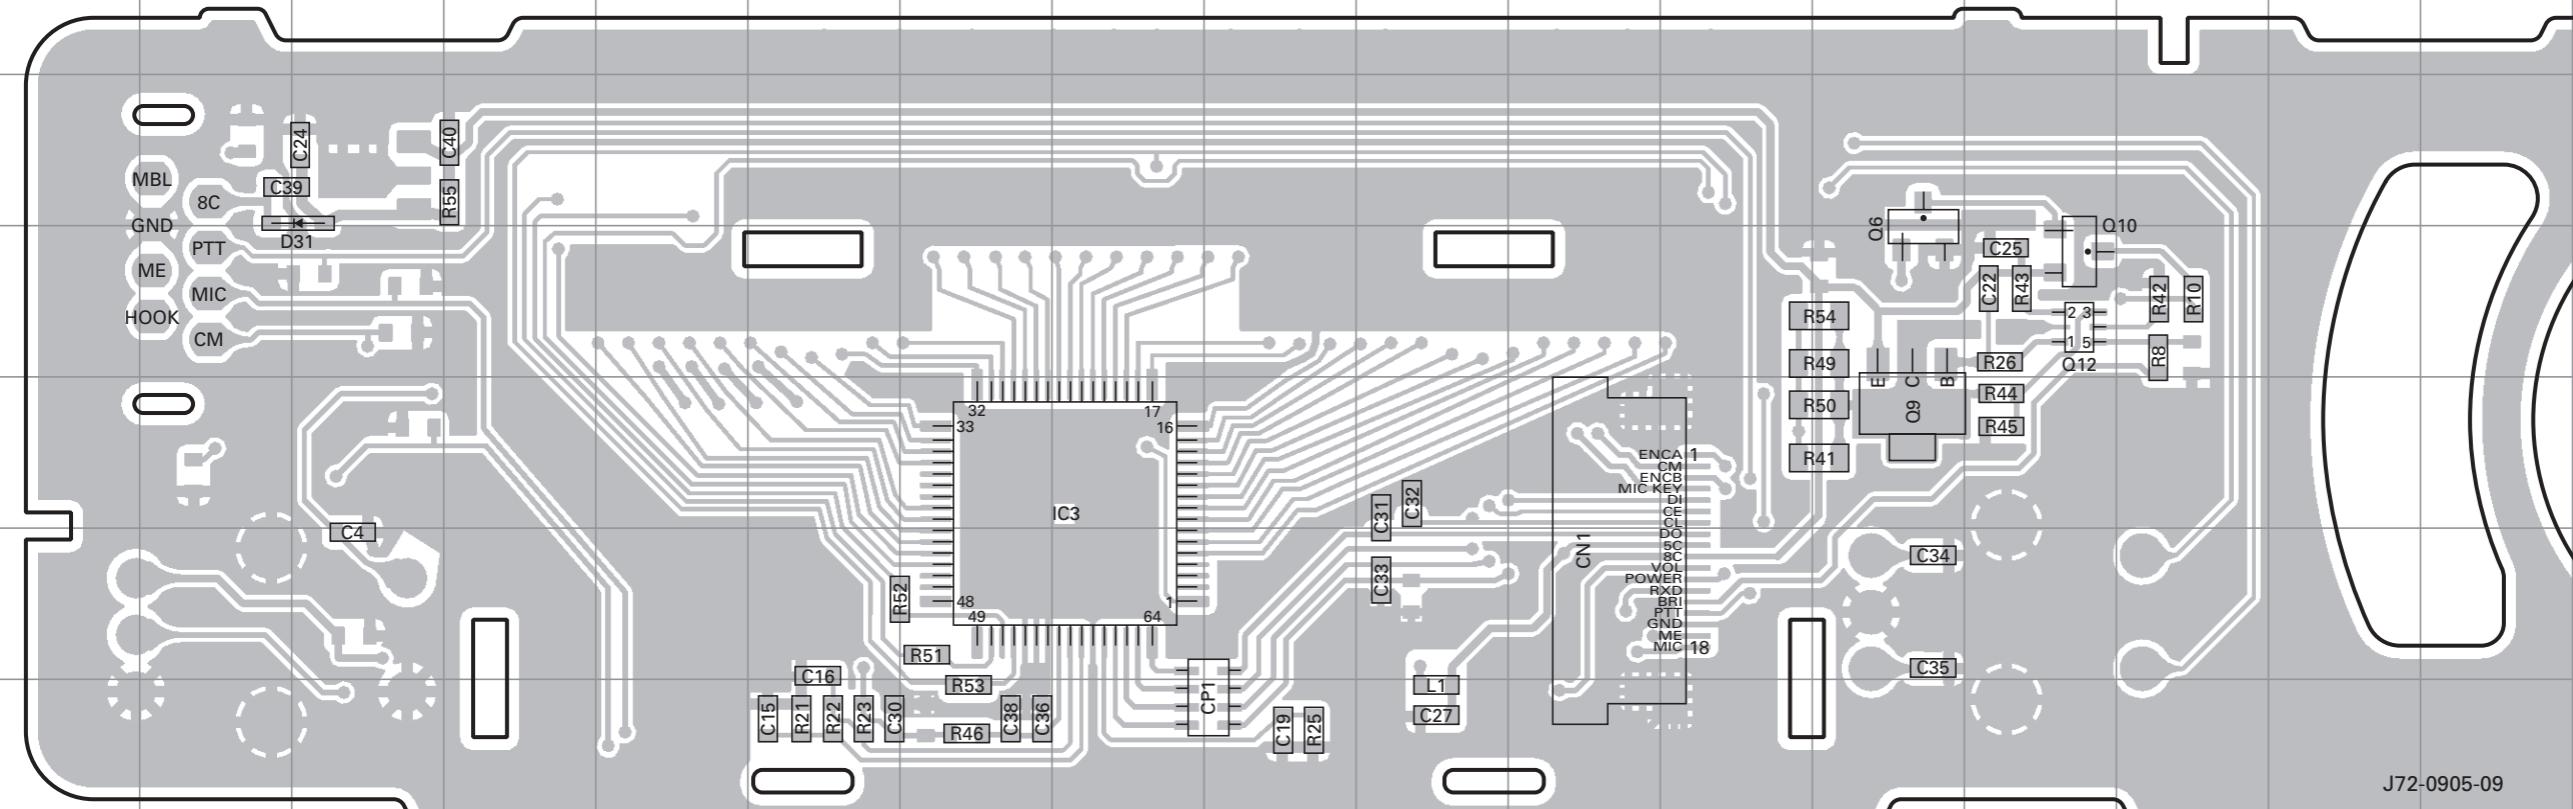


DISPLAY UNIT (X54-3450-10) Foil side view (J72-0905-09)

Ref. No.	Address
IC3	11H
Q6	10M
Q9	11M
Q10	10N
Q12	10N
D31	9C

TM-471A PC BOARD


TX-RX UNIT (X57-686X-XX) 3-00 : C 3-01 : C2
Component side view (J72-0907-09)

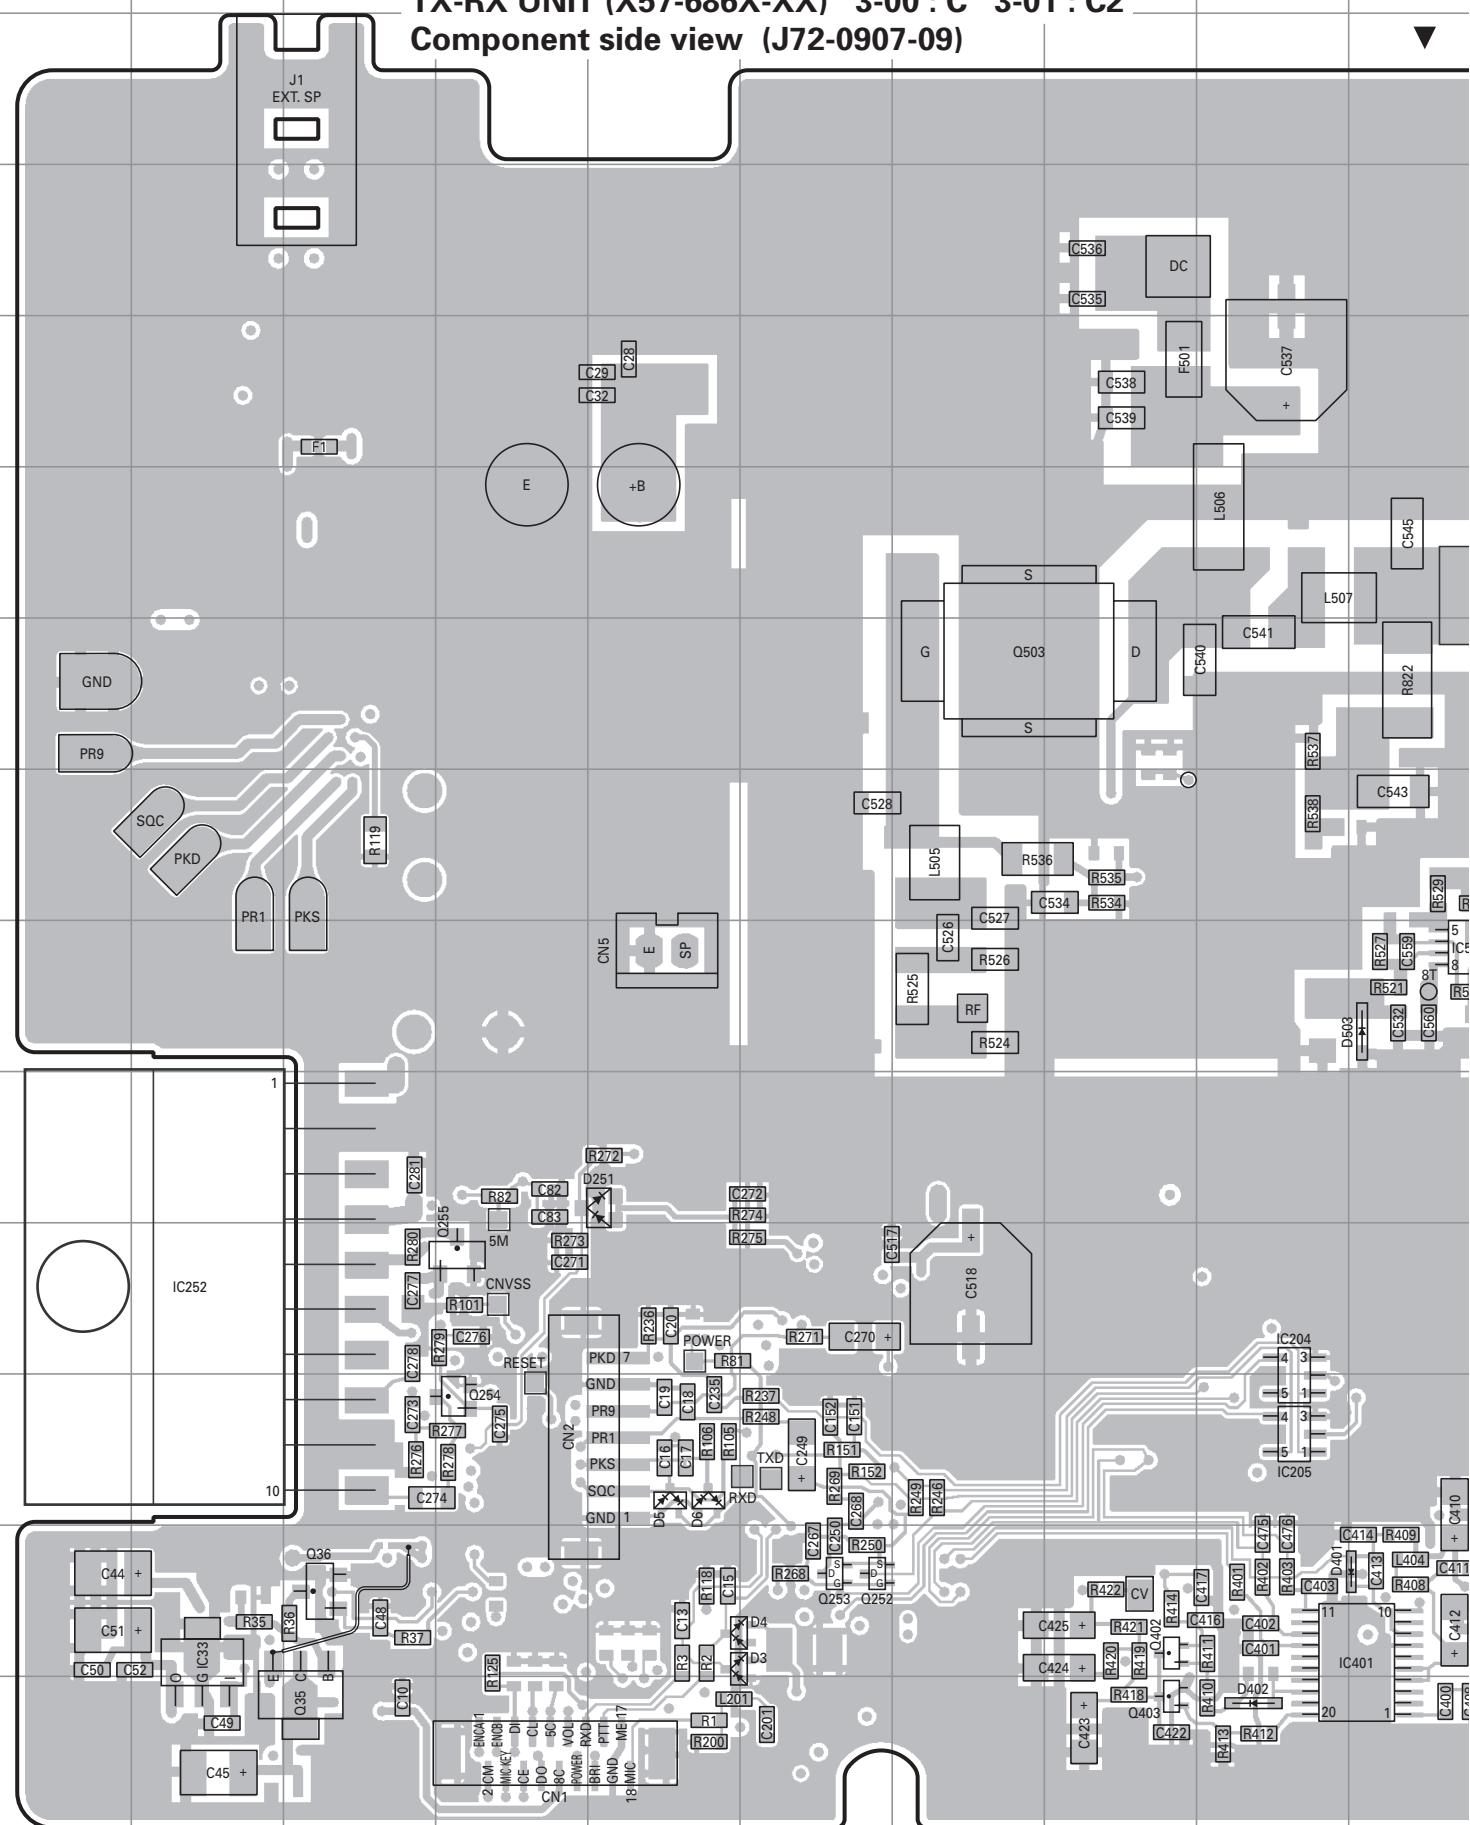

J K L M N O P Q R S

PC BOARD TM-471A

TX-RX UNIT (X57-686X-XX) 3-00 : C 3-01 : C2
Component side view (J72-0907-09)

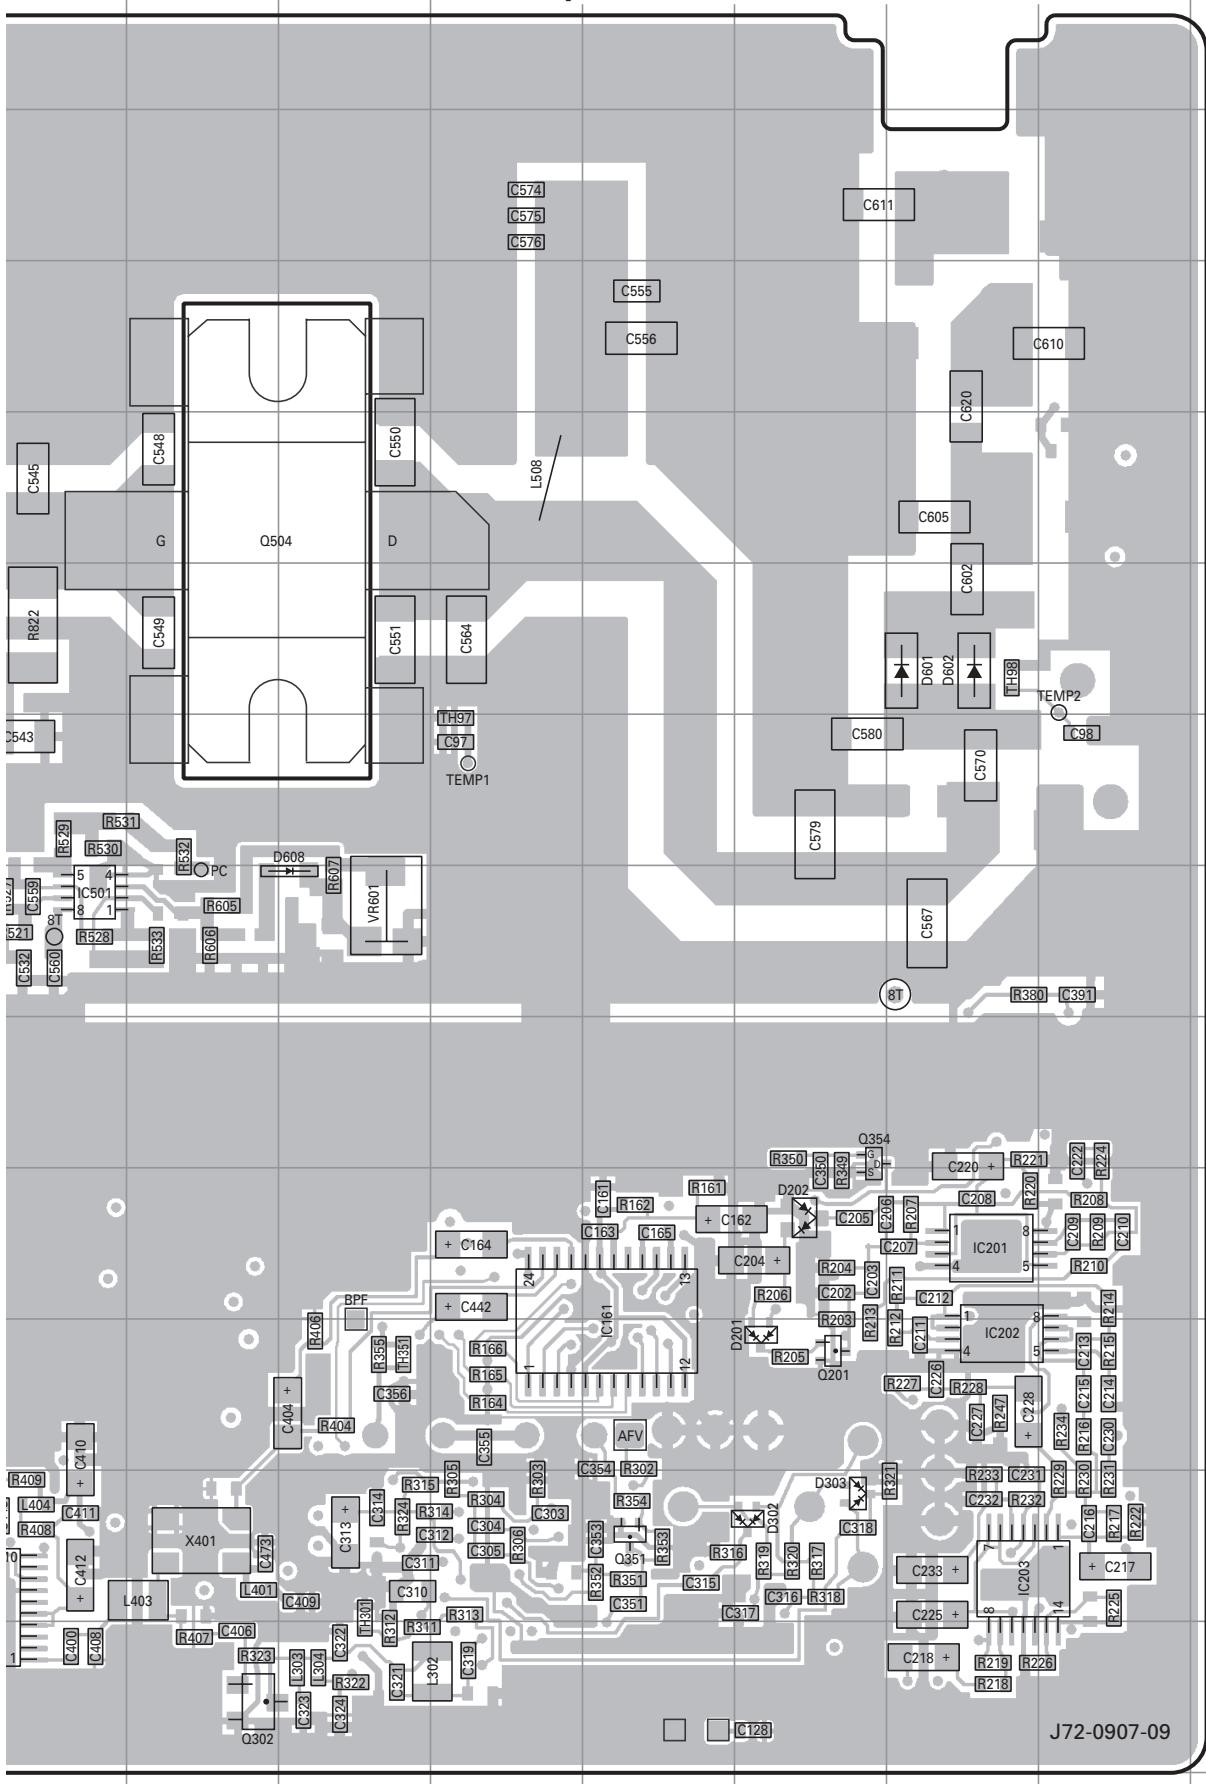

Ref. No.	Address
IC33	12B
IC161	11N
IC201	10P
IC202	11P
IC203	12P
IC204	10I
IC205	11I
IC252	10B
IC401	12J
IC501	8J
Q35	13C
Q36	12C
Q201	11O
Q252	12F
Q253	12F
Q254	11D
Q255	10D
Q302	13K
Q351	12N
Q354	9O
Q402	12H
Q403	13H
Q503	6G
Q504	5K
D3	12E
D4	12E
D5	11E
D6	11E
D201	11O
D202	10O
D251	9E
D302	12O
D303	12O
D401	12J
D402	13I
D503	8J
D601	6P
D602	6P
D608	8L

Component side

Layer 1
Layer 2
Layer 3
Layer 4

Foil side


J72-0907-09

TM-471A PC BOARD

PC BOARD TM-471A

TX-RX UNIT (X57-686X-XX) 3-00 : C 3-01 : C2
Component side view (J72-0907-09)

TX-RX UNIT (X57-686X-XX) 3-00 : C 3-01 : C2
Component side view (J72-0907-09)

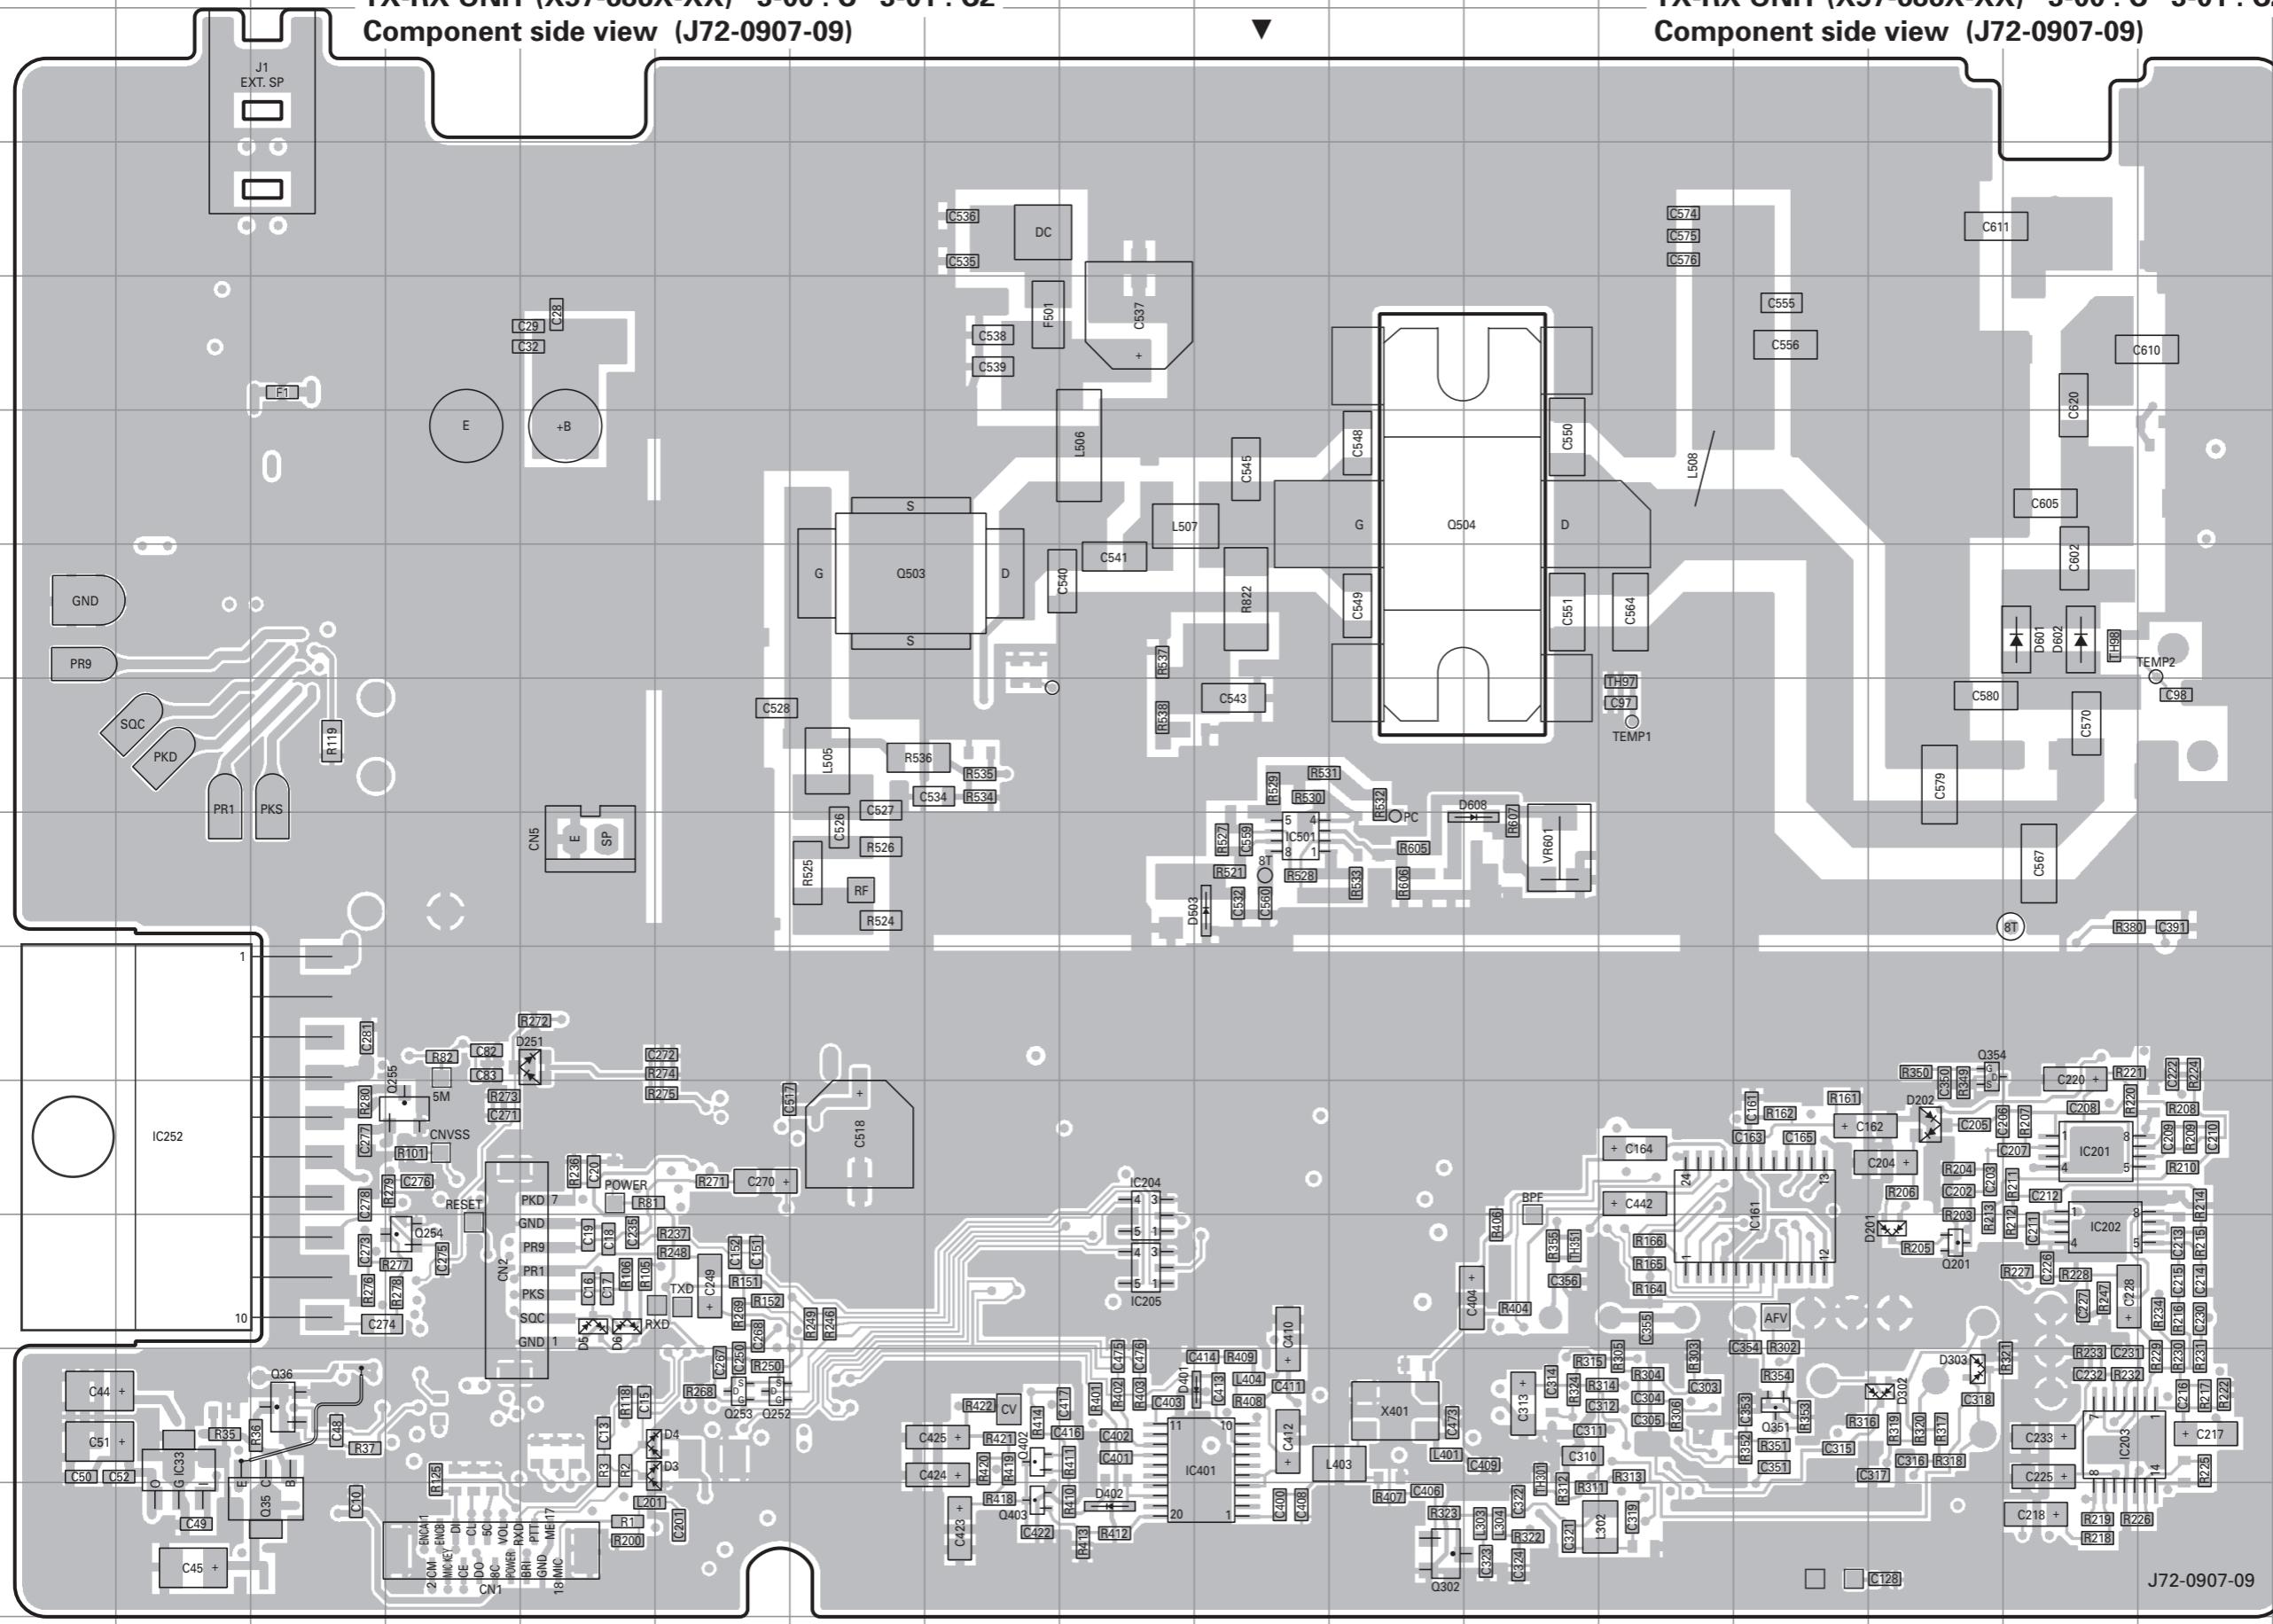


Ref. No.	Address
IC33	12B
IC161	11N
IC201	10P
IC202	11P
IC203	12P
IC204	10I
IC205	11I
IC252	10B
IC401	12J
IC501	8J
Q35	13C
Q36	12C
Q201	11O
Q252	12F
Q253	12F
Q254	11D
Q255	10D
Q302	13K
Q351	12N
Q354	9O
Q402	12H
Q403	13H
Q503	6G
Q504	5K
D3	12E
D4	12E
D5	11E
D6	11E
D201	11O
D202	10O
D251	9E
D302	12O
D303	12O
D401	12J
D402	13I
D503	8J
D601	6P
D602	6P
D608	8L

Component side
Layer 1
Layer 2
Layer 3
Layer 4
Foil side


TM-471A PC BOARD

TX-RX UNIT (X57-686X-XX) 3-00 : C 3-01 : C2

Foil side view (J72-0907-09)

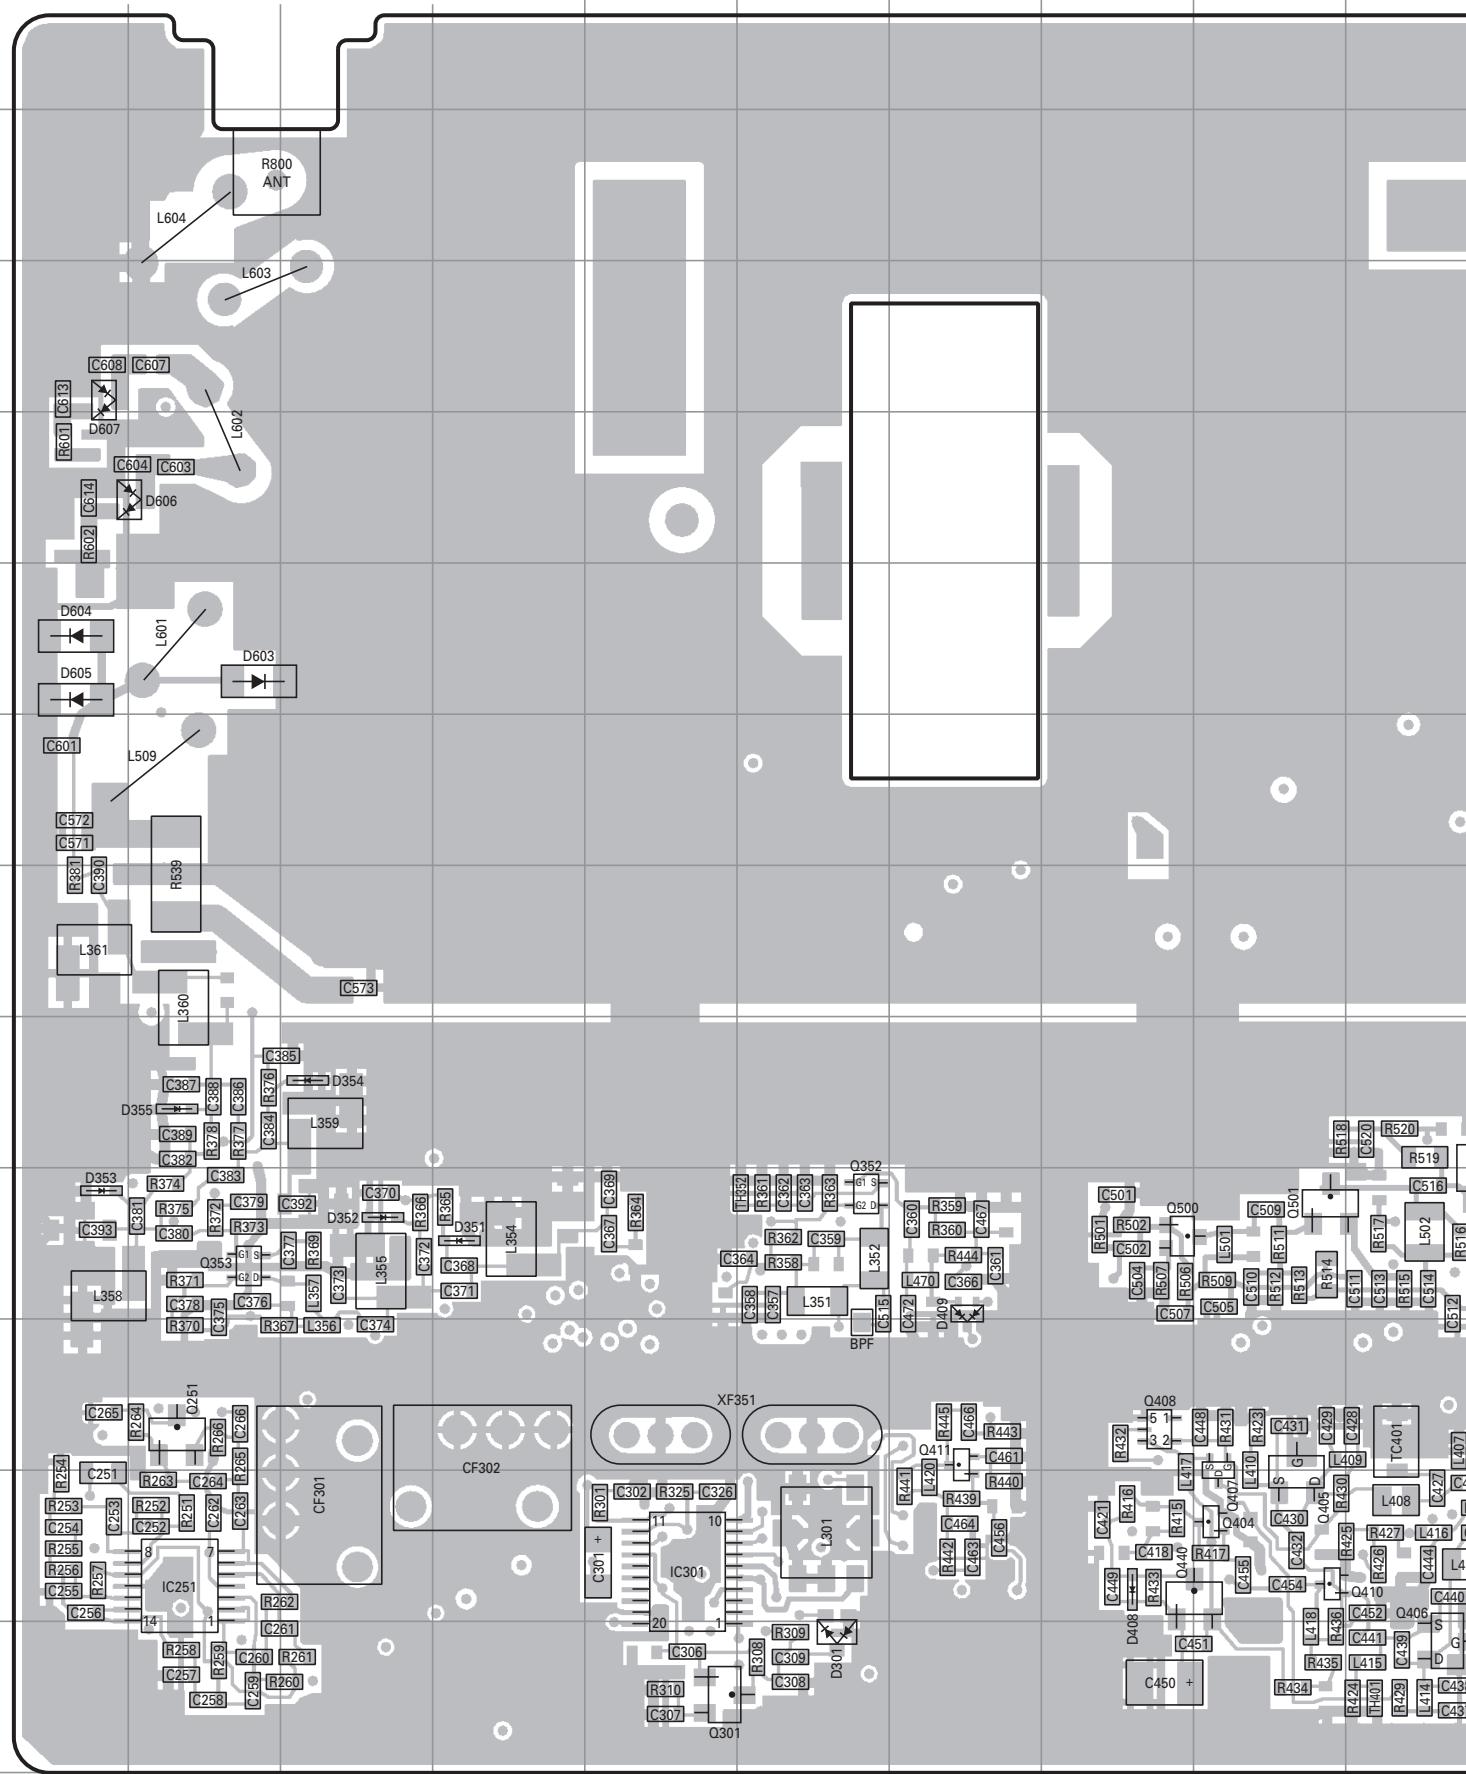

TX-RX UNIT (X57-686X-XX) 3-00 : C 3-01 : C2
Foil side view (J72-0907-09)

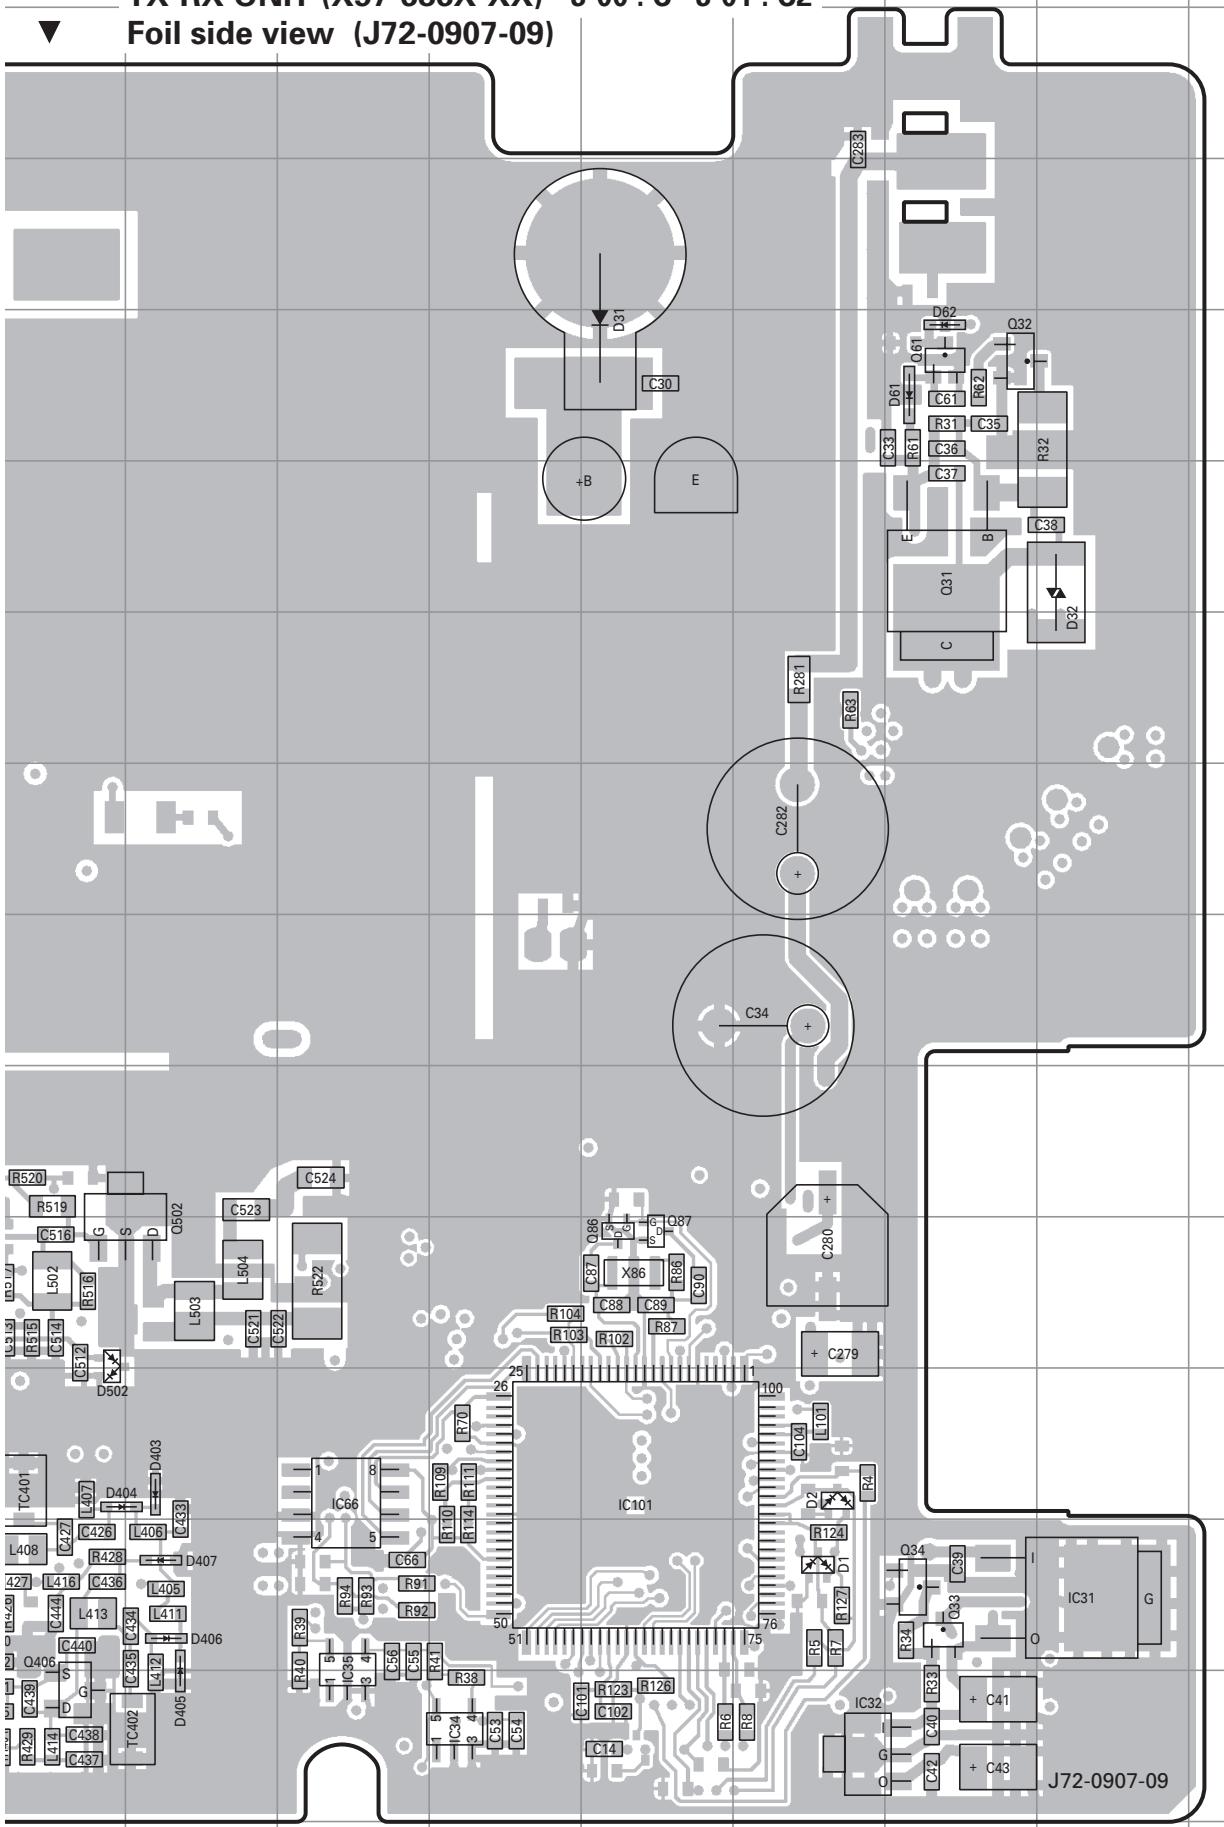

Ref. No.	Address
IC31	12Q
IC32	13O
IC34	13M
IC35	13L
IC66	11L
IC101	11N
IC251	12B
IC301	12E
Q31	5P
Q32	4P
Q33	12P
Q34	12P
Q61	4P
Q86	10N
Q87	10N
Q251	11B
Q301	13E
Q352	10F
Q353	10B
O404	12I
Q405	12I
Q406	13J
Q407	12I
Q408	11H
Q410	12I
Q411	11G
Q440	12H
Q500	10H
Q501	10I
Q502	10K
D1	12O
D2	11O
D31	4N
D32	5Q
D61	4P
D62	4P
D301	13F
D351	10D
D352	10C
D353	10A
D354	9C
D355	9B
D403	11K
D404	11J
D405	13K
D406	12K
D407	12K
D408	12H
D409	10G
D502	11J
D603	6B
D604	6A
D605	6A
D606	5B
D607	4A

Component side


Layer 1	
Layer 2	
Layer 3	
Layer 4	

Foil side

TM-471A PC BOARD

TX-RX UNIT (X57-686X-XX) 3-00 : C 3-01 : C2


Foil side view (J72-0907-09)

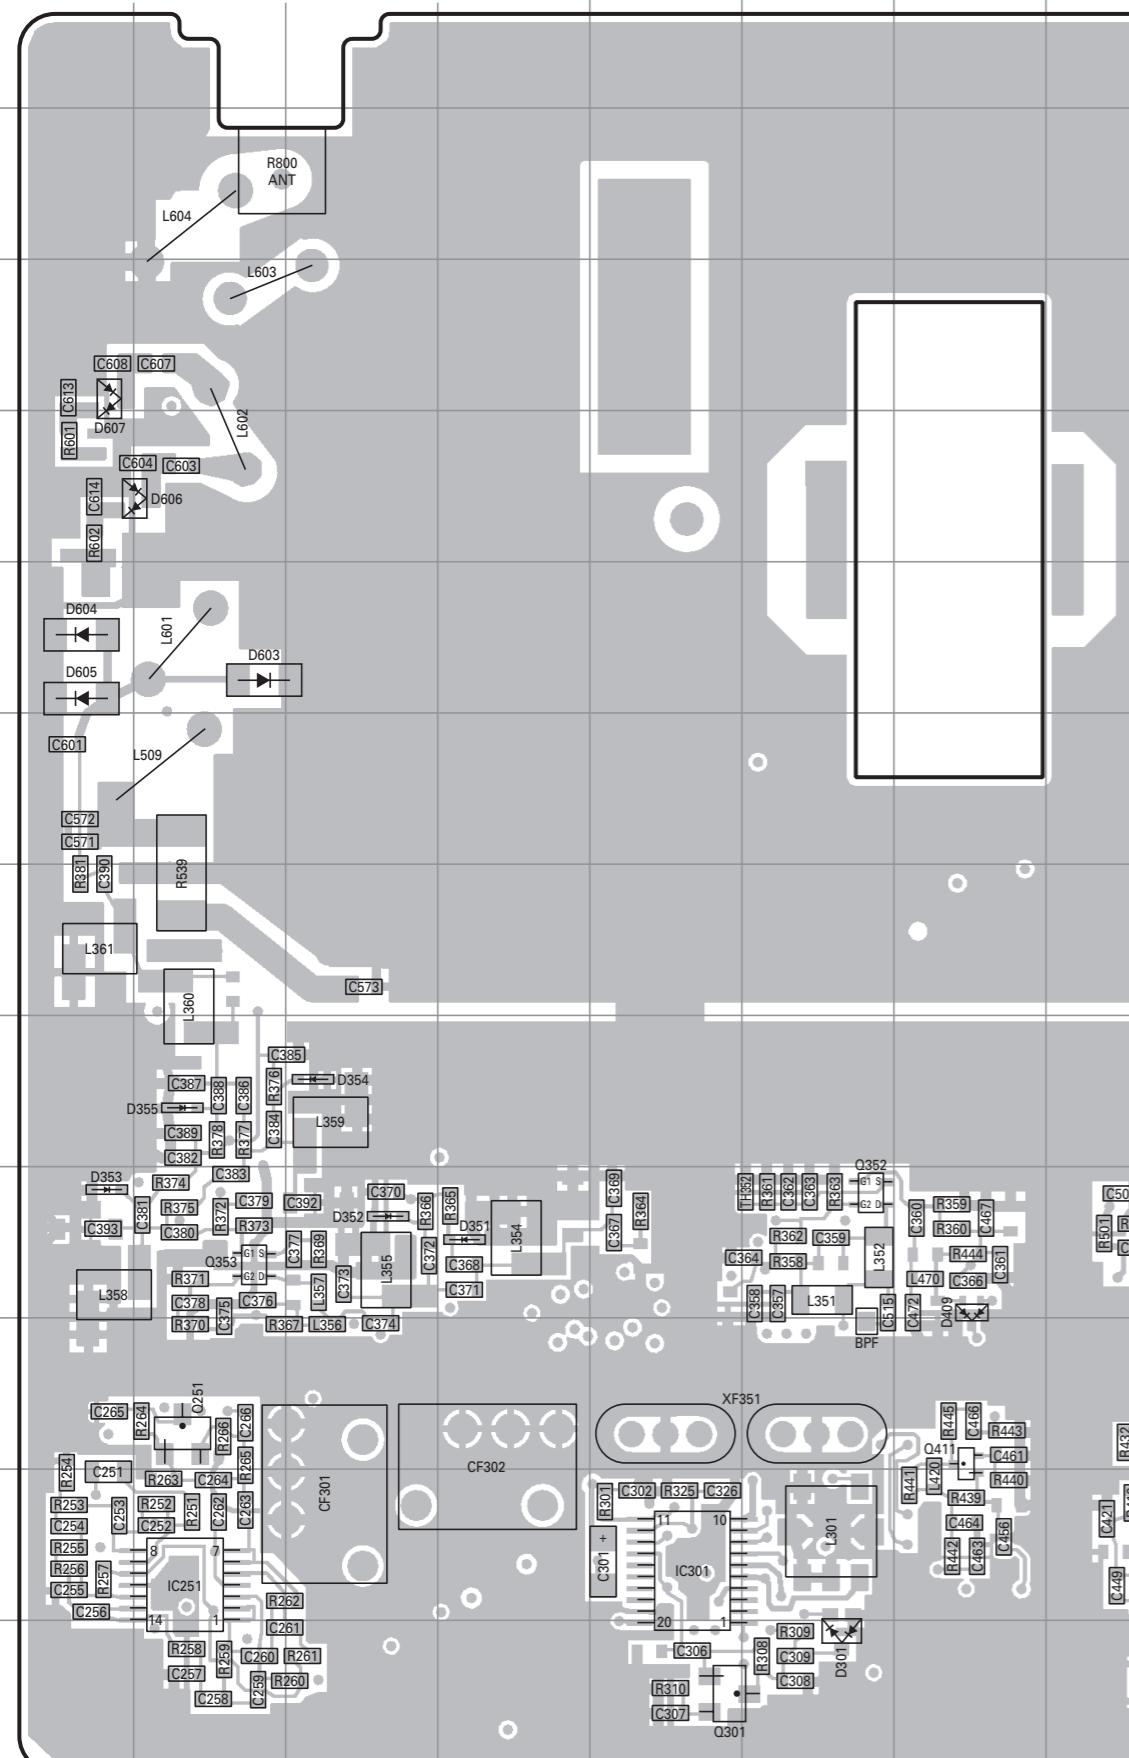

PC BOARD TM-471A


TX-RX UNIT (X57-686X-XX) 3-00 : C 3-01 : C2

Foil side view (J72-0907-09)

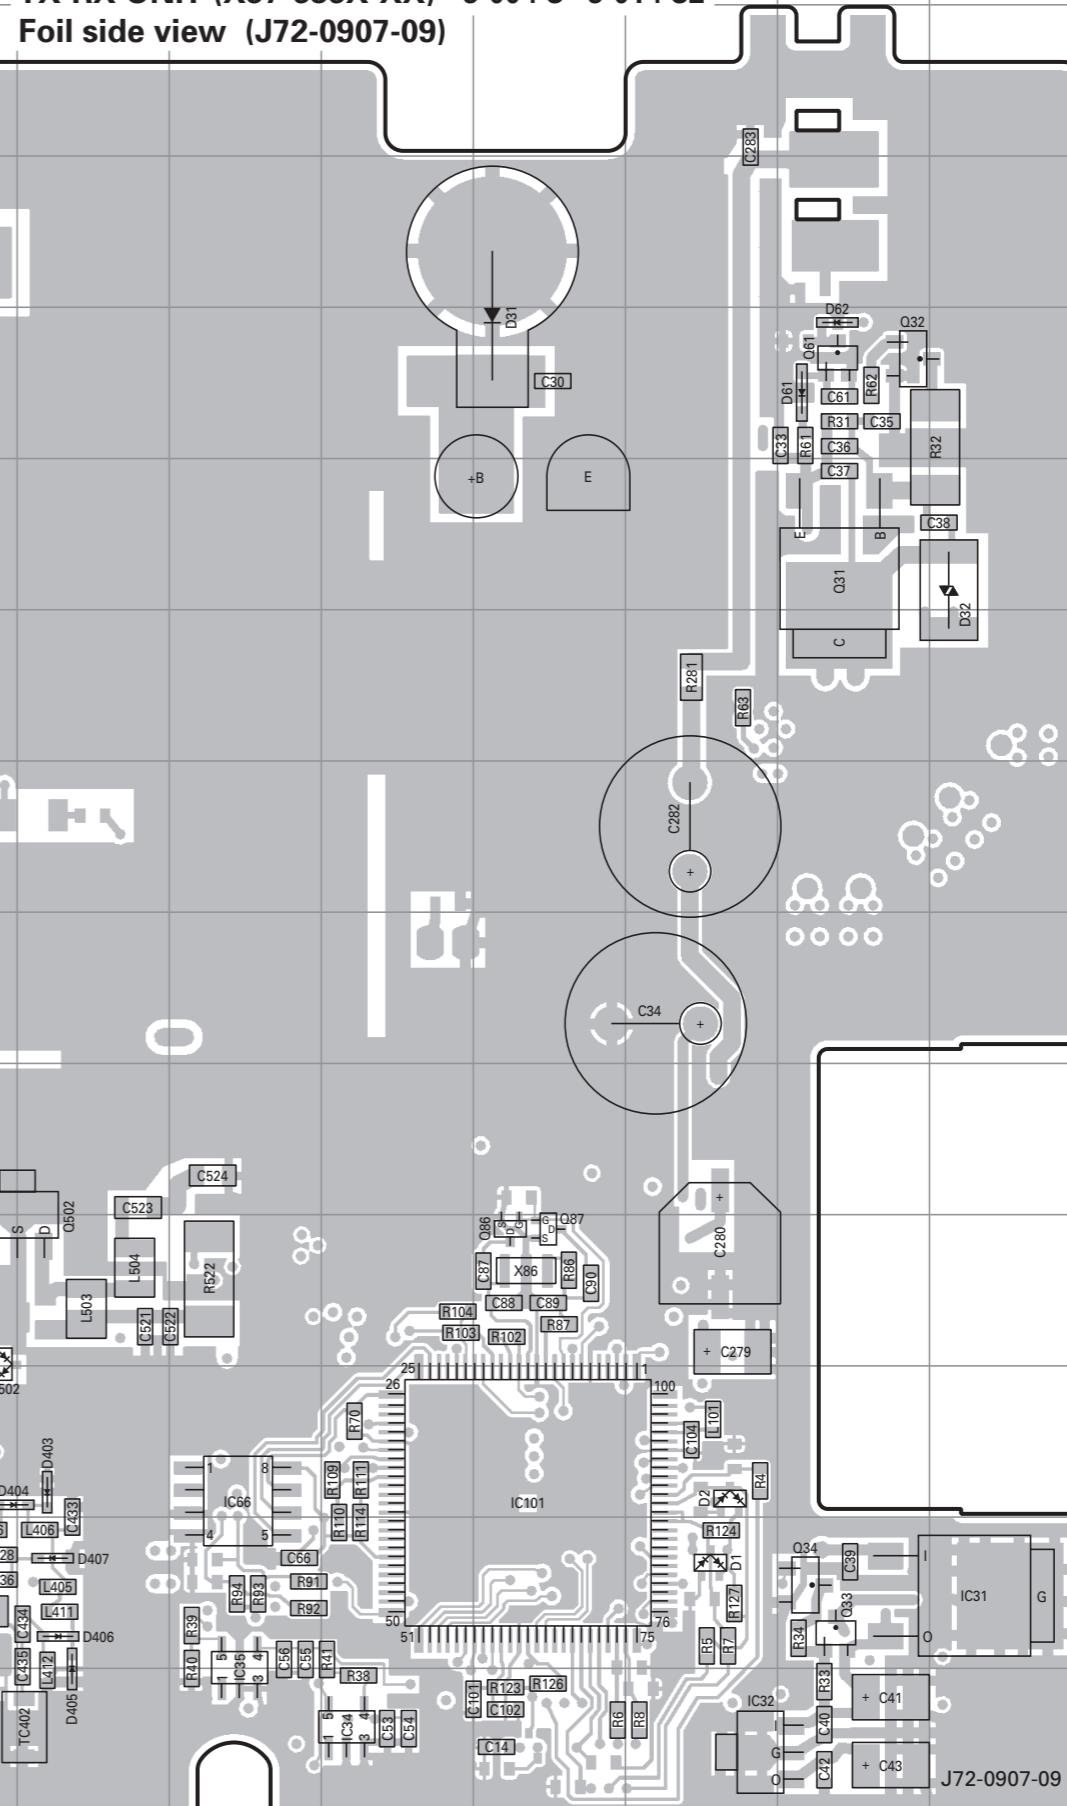


TM-471A SCHEMATIC DIAGRAM

TX-RX UNIT (X57-6863-XX)

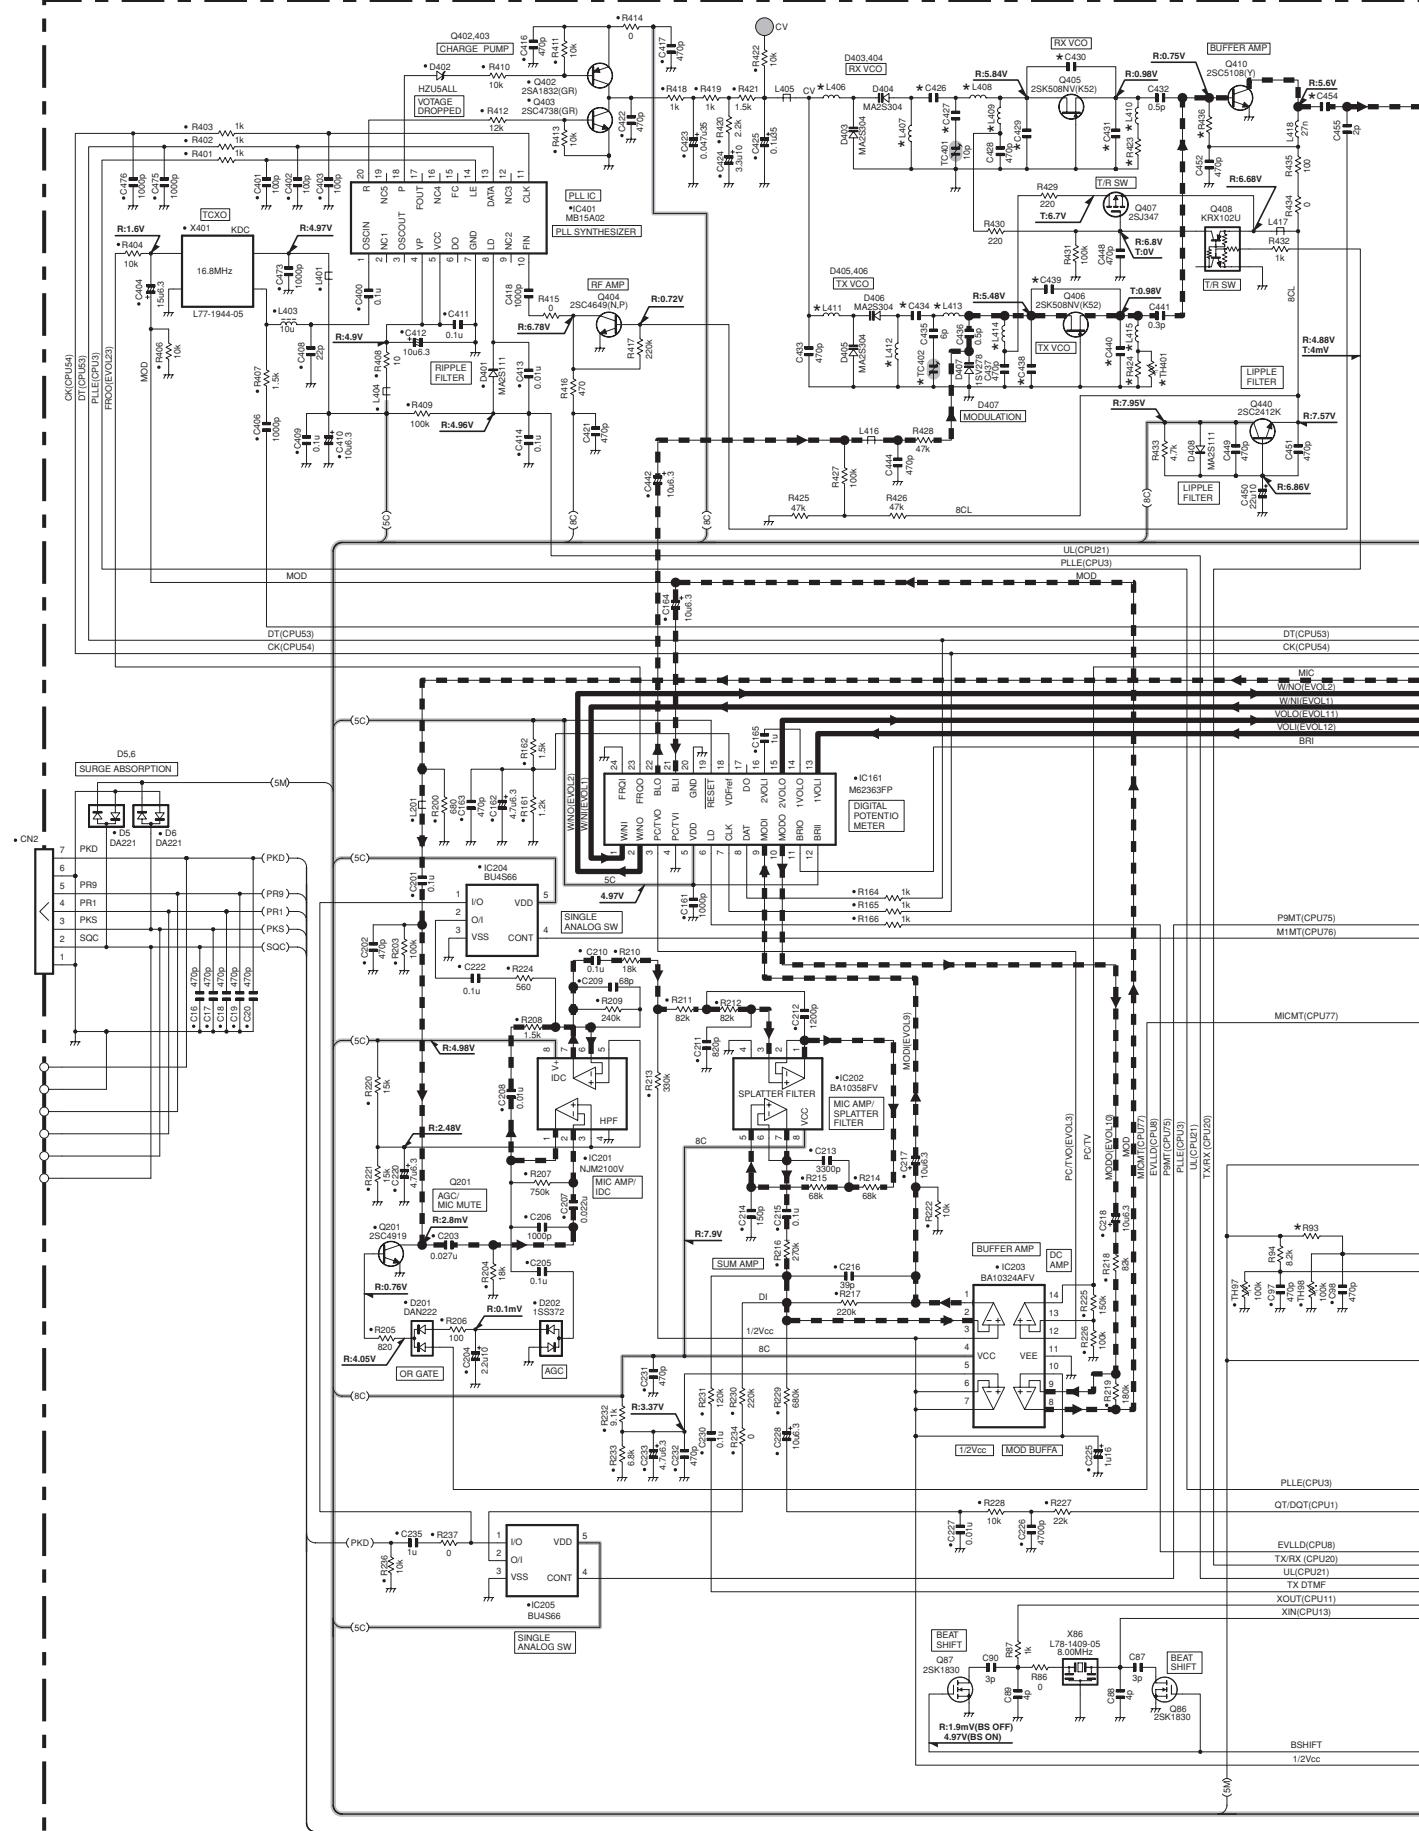


SCHEMATIC DIAGRAM TM-471A

TX-RX UNIT (X57-6863-XX)

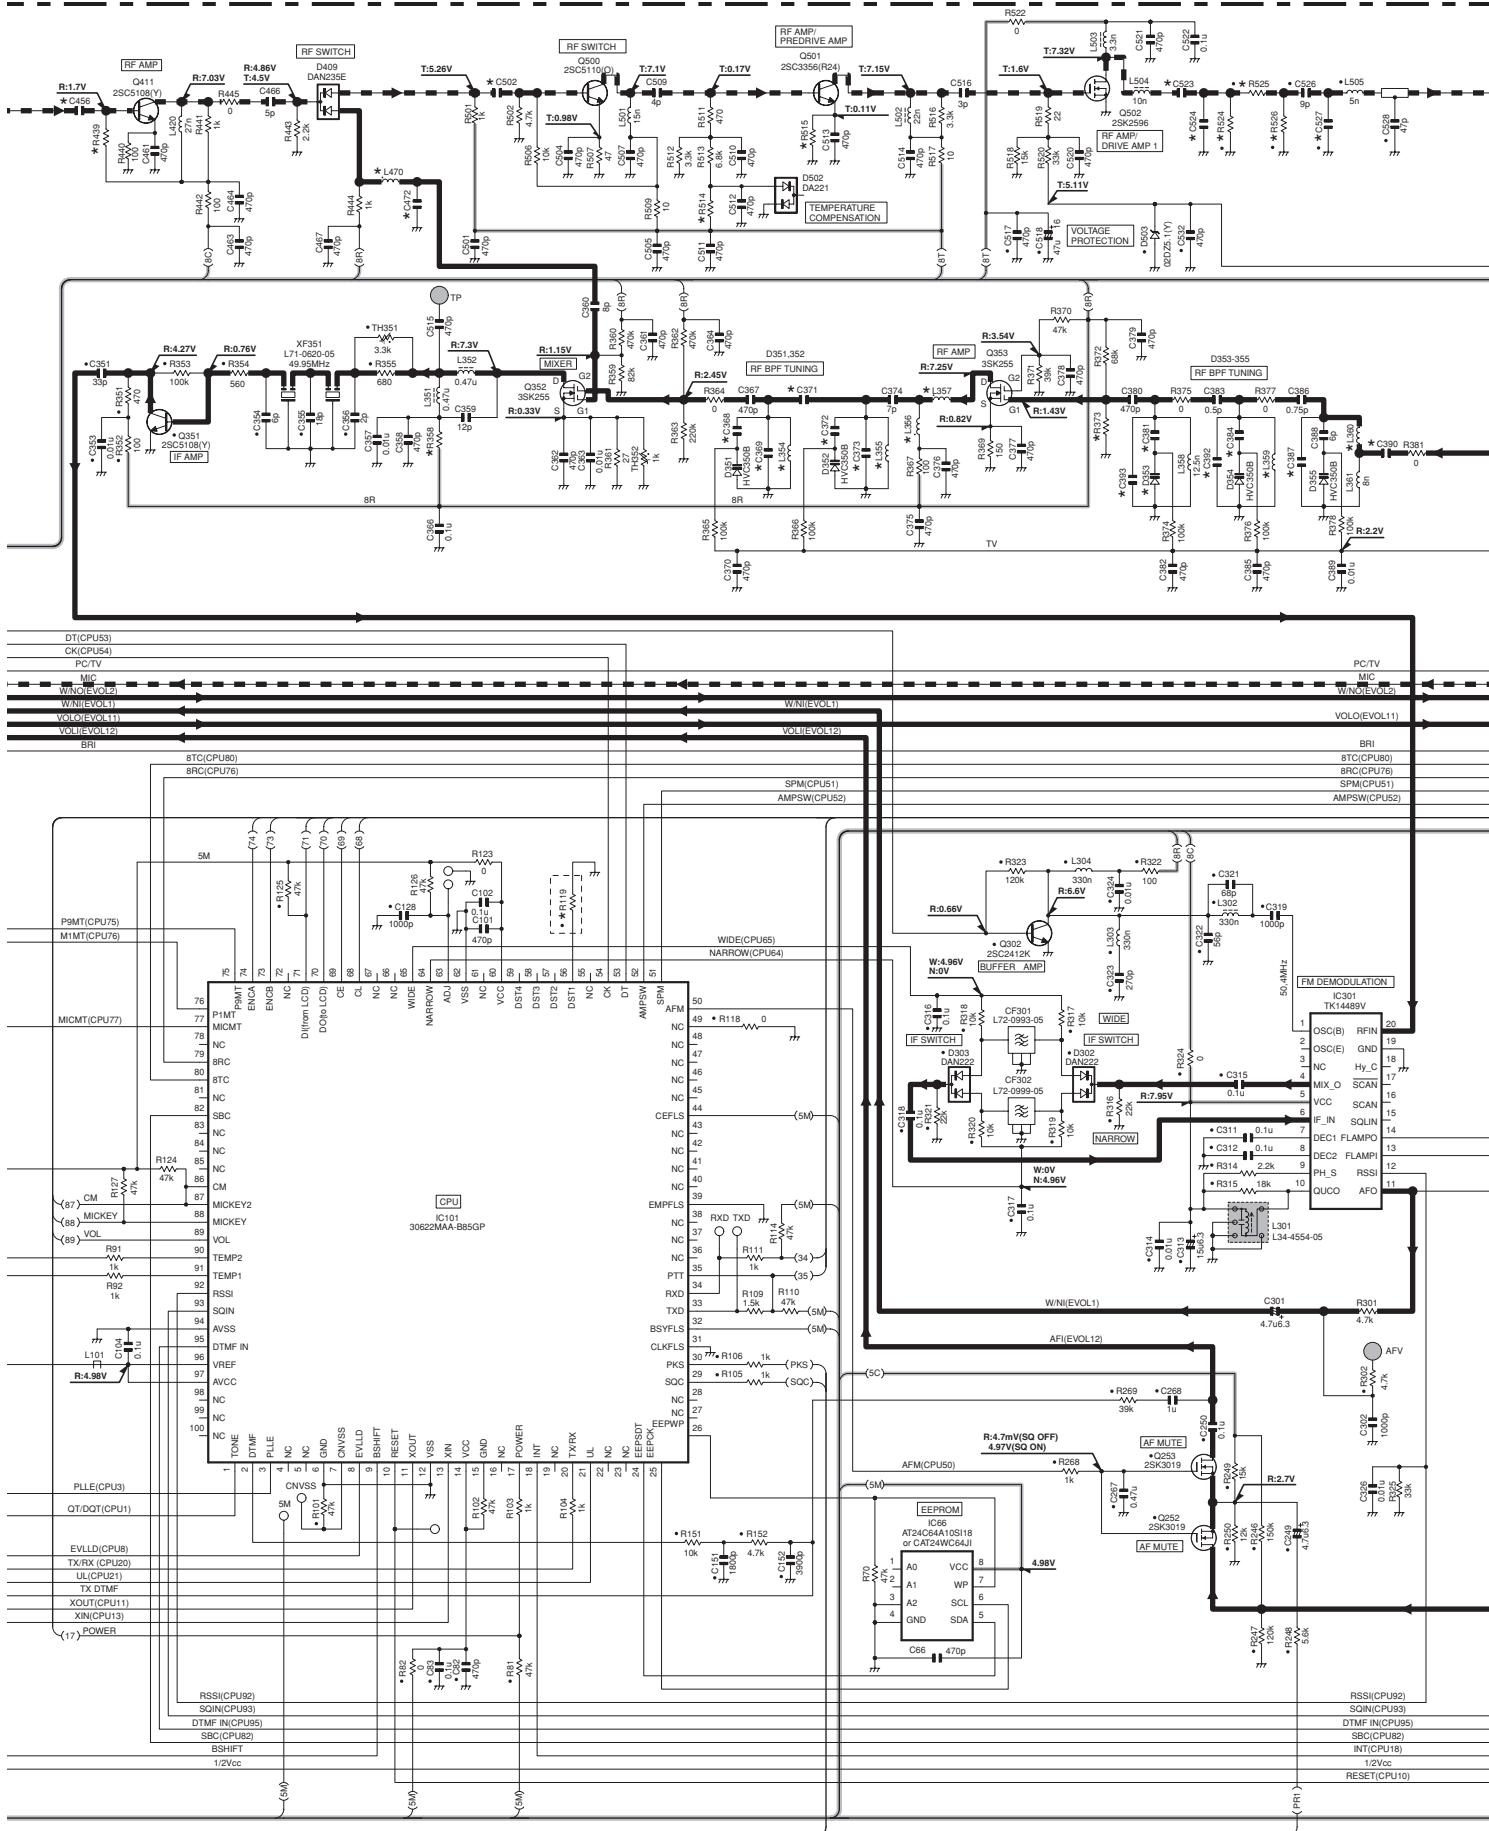

TM-471A SCHEMATIC DIAGRAM



TX-RX UNIT (X57-6863-XX)

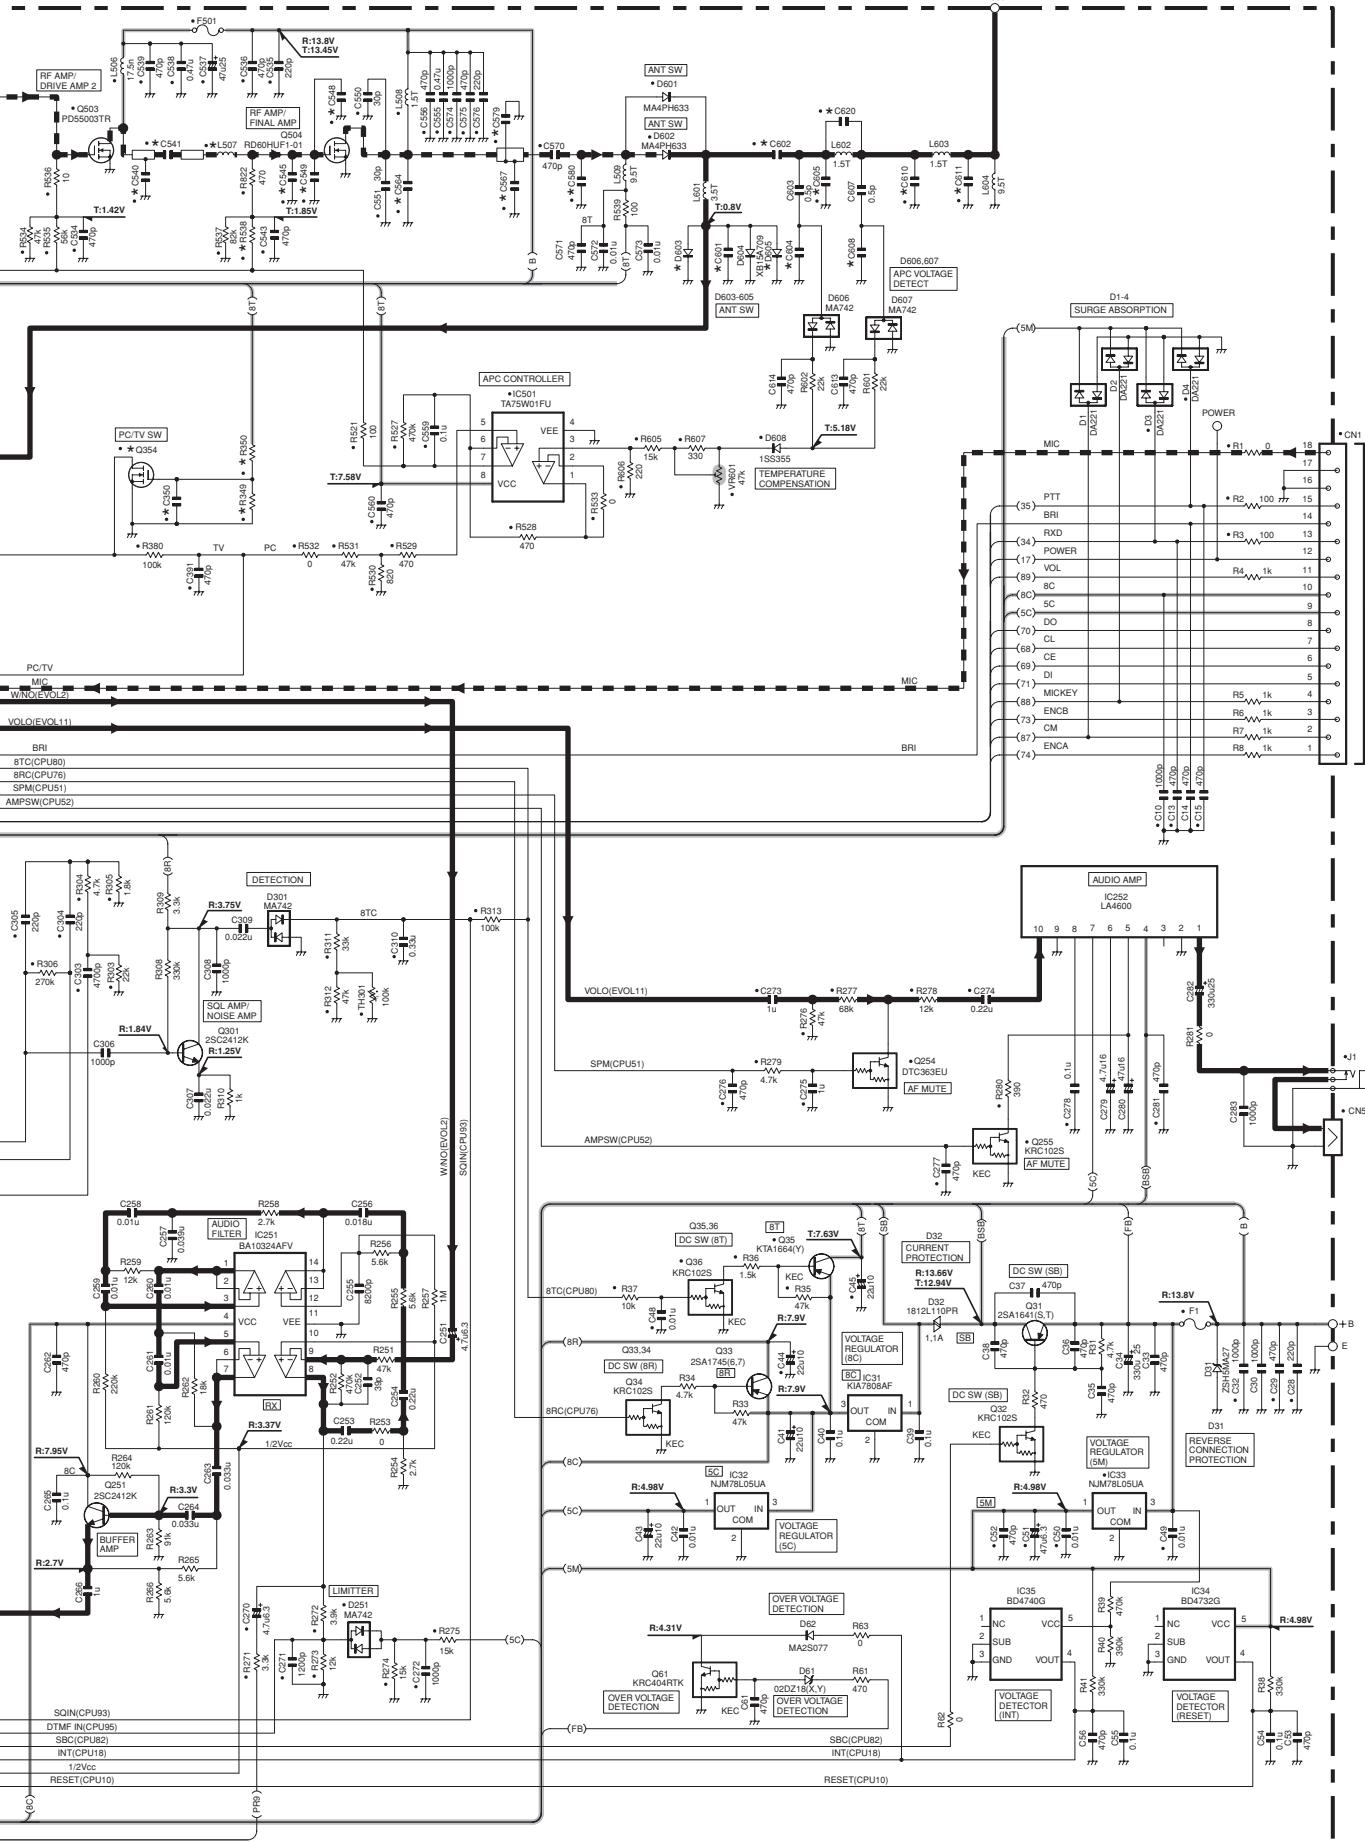

SCHEMATIC DIAGRAM TM-471A

DISPLAY UNIT (X54-3450-10)

LCD (B88-0885-05)

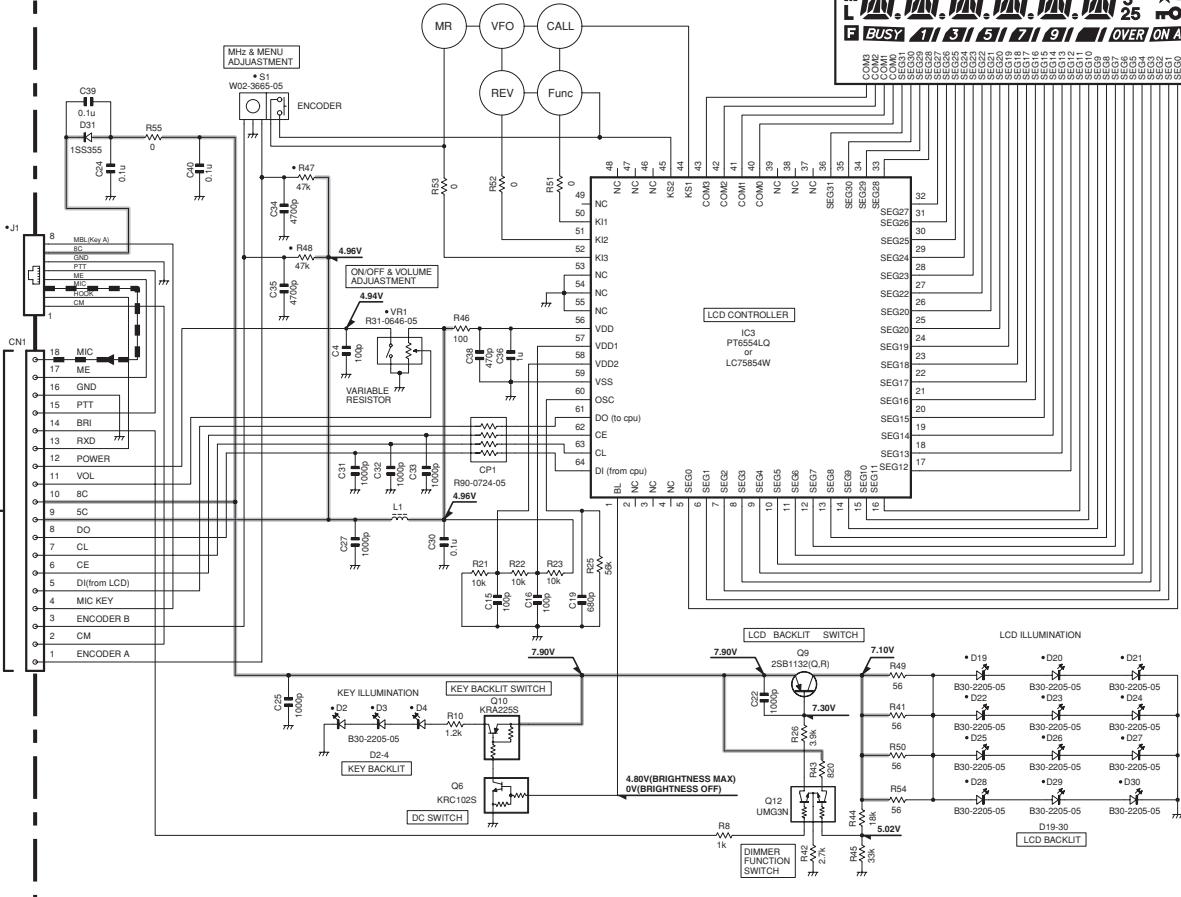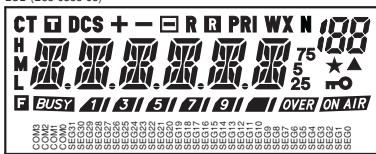



X57-6863-XX		C350	C368	C369	C371	C372	C373	C381	C384	C387	C390	C392	C393	C426	C427	C429	C430	C431	C434	C438	C439	C440	C454
-00	C	400-430MHz	NO	7p	NO	0.5p	15p	8p	7p	7p	NO	8p	3p	2.5p	8p	7p	2p	2p	3p	5p	2p	3p	4p
-01	C2	440-480MHz	470p	10p	0.75p	0.75p	20p	10p	5p	8p	1p	10p	6p	0.75p	18p	12p	1.5p	6p	5p	9p	1p	3p	4p

X57-6863-XX		C456	C472	C502	C523	C524	C527	C540	C541	C545	C548	C549	C564	C567	C579	C580	C601	C602	C604	C605	C608	C610	C611	
-00	C	400-430MHz	4p	3p	5p	27p	10p	15p	8p	18p	NO	39p	39p	20p	10p	NO	NO	5p	10p	2p	6p	2p	10p	3p
-01	C2	440-480MHz	3p	2.5p	3p	47p	8p	12p	47p	33p	10p	33p	33p	15p	NO	9p	4p	NO	470p	1p	4p	3p	6p	4p

X57-6863-XX		C620	L354	L355	L356	L357	L359	L360	L406	L407	L408	L409	L410	L411	L412	L413	L414	L415	L470	L507	R93	R119	R349
-00	C	400-430MHz	NO	12.5n	12.5n	22n	39n	12.5n	8n	270n	270n	56n	270n	270n	270n	47n	180n	270n	5n	6.8k	0	NO	NO
-01	C2	440-480MHz	1p	8n	8n	18n	33n	8n	5n	4.7u	4.7u	4.7u	4.7u	27n	27u	27u	27u	27u	22n	2.5n	8.2k	NO	47k

X57-6863-XX		R350	R358	R373	R423	R424	R436	R439	R514	R515	R524	R525	R526	R538	D353	D603	D605	Q354	TC402	TH401	
-00	C	400-430MHz	NO	47	18k	330	270	120k	120k	56	33	NO	0	NO	47k	HVC355B	NO	XB15A709	NO	6p	NO
-01	C2	440-480MHz	27k	39	15k	220	150	82k	82k	47	10	820	5.6	820	56k	HVC350B	XB15A709	NO	2SK1830	10p	10k

Note : The components marked with a dot (•) are parts of layer 1.

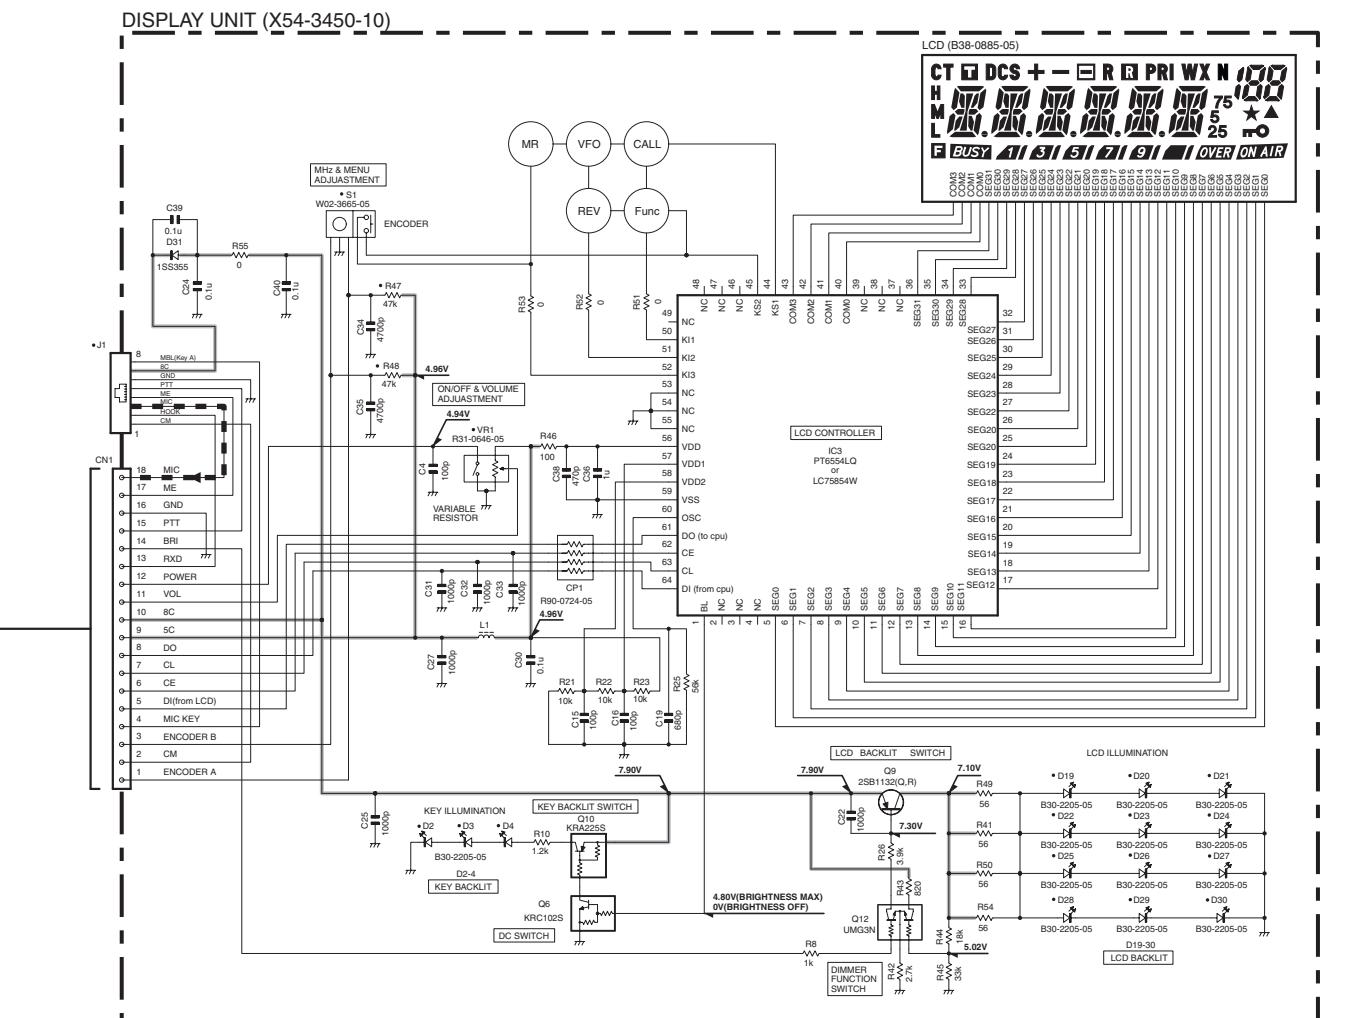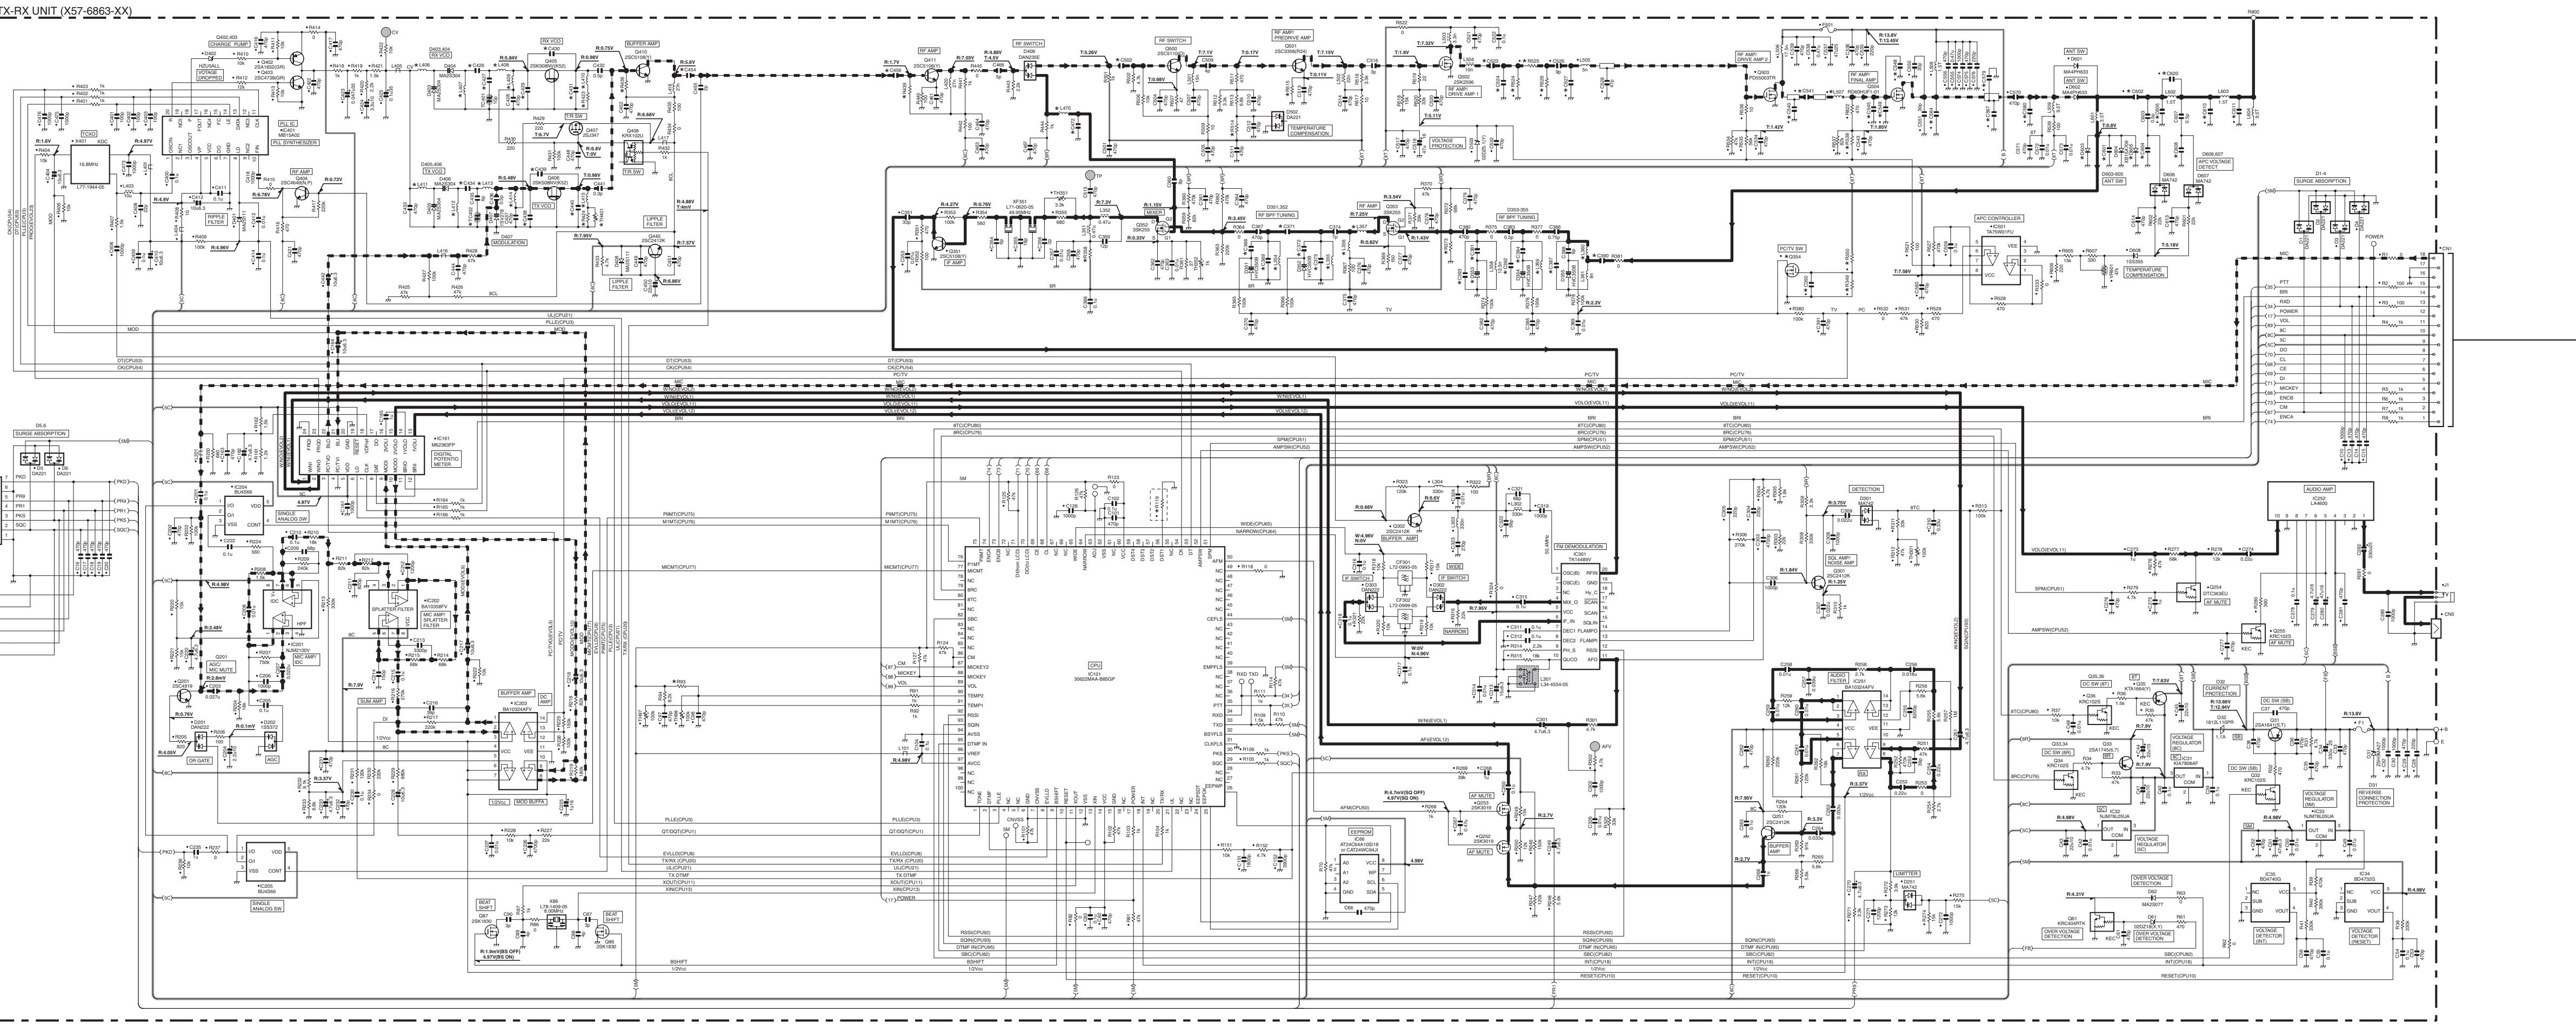


X57-6863-XX			C350	C368	C369	C371	C372	C373	C381	C384	C387	C390	C392	C393	C426	C427	C429	C430	C431	C434	C438	C439	C440	C454
-00	C	400-430MHz	NO	7p	NO	0.5p	15p	8p	7p	7p	NO	8p	3p	2.5p	8p	7p	2p	2p	3p	5p	2p	2p	3p	4p
-01	C2	440-480MHz	470p	10p	0.75p	0.75p	20p	10p	5p	8p	1p	10p	6p	0.75p	18p	12p	1.5p	6p	5p	9p	1p	3p	4p	6p

X57-6863-XX			C456	C472	C502	C523	C524	C527	C540	C541	C545	C548	C549	C564	C567	C579	C580	C601	C602	C604	C605	C608	C610	C611
-00	C	400-430MHz	4p	3p	5p	27p	10p	15p	8p	18p	NO	39p	39p	20p	10p	NO	NO	5p	10p	2p	6p	2p	10p	3p
-01	C2	440-480MHz	3p	2.5p	3p	47p	8p	12p	47p	33p	10p	33p	33p	15p	NO	9p	4p	NO	470p	1p	4p	3p	6p	4p


X57-6863-XX			C620	L354	L355	L356	L357	L359	L360	L406	L407	L408	L409	L410	L411	L412	L413	L414	L415	L470	L507	R93	R119	R349
-00	C	400-430MHz	NO	12.5n	12.5n	22n	39n	12.5n	8n	270n	270n	56n	270n	270n	270n	270n	47n	180n	270n	27n	5n	6.8k	0	NO
-01	C2	440-480MHz	1p	8n	8n	18n	33n	8n	5n	4.7u	4.7u	27n	4.7u	4.7u	27u	27u	27n	27u	22n	2.5n	8.2k	NO	47k	

X57-6863-XX			R350	R358	R373	R423	R424	R436	R439	R514	R515	R524	R525	R526	R538	D353	D603	D605	Q354	TC402	TH401		
-00	C	400-430MHz	NO	47	18k	330	270	120n	120k	56	33	NO	0	NO	47k	HVC355B	NO	XB15A709	NO	6p	NO		

BLOCK DIAGRAM

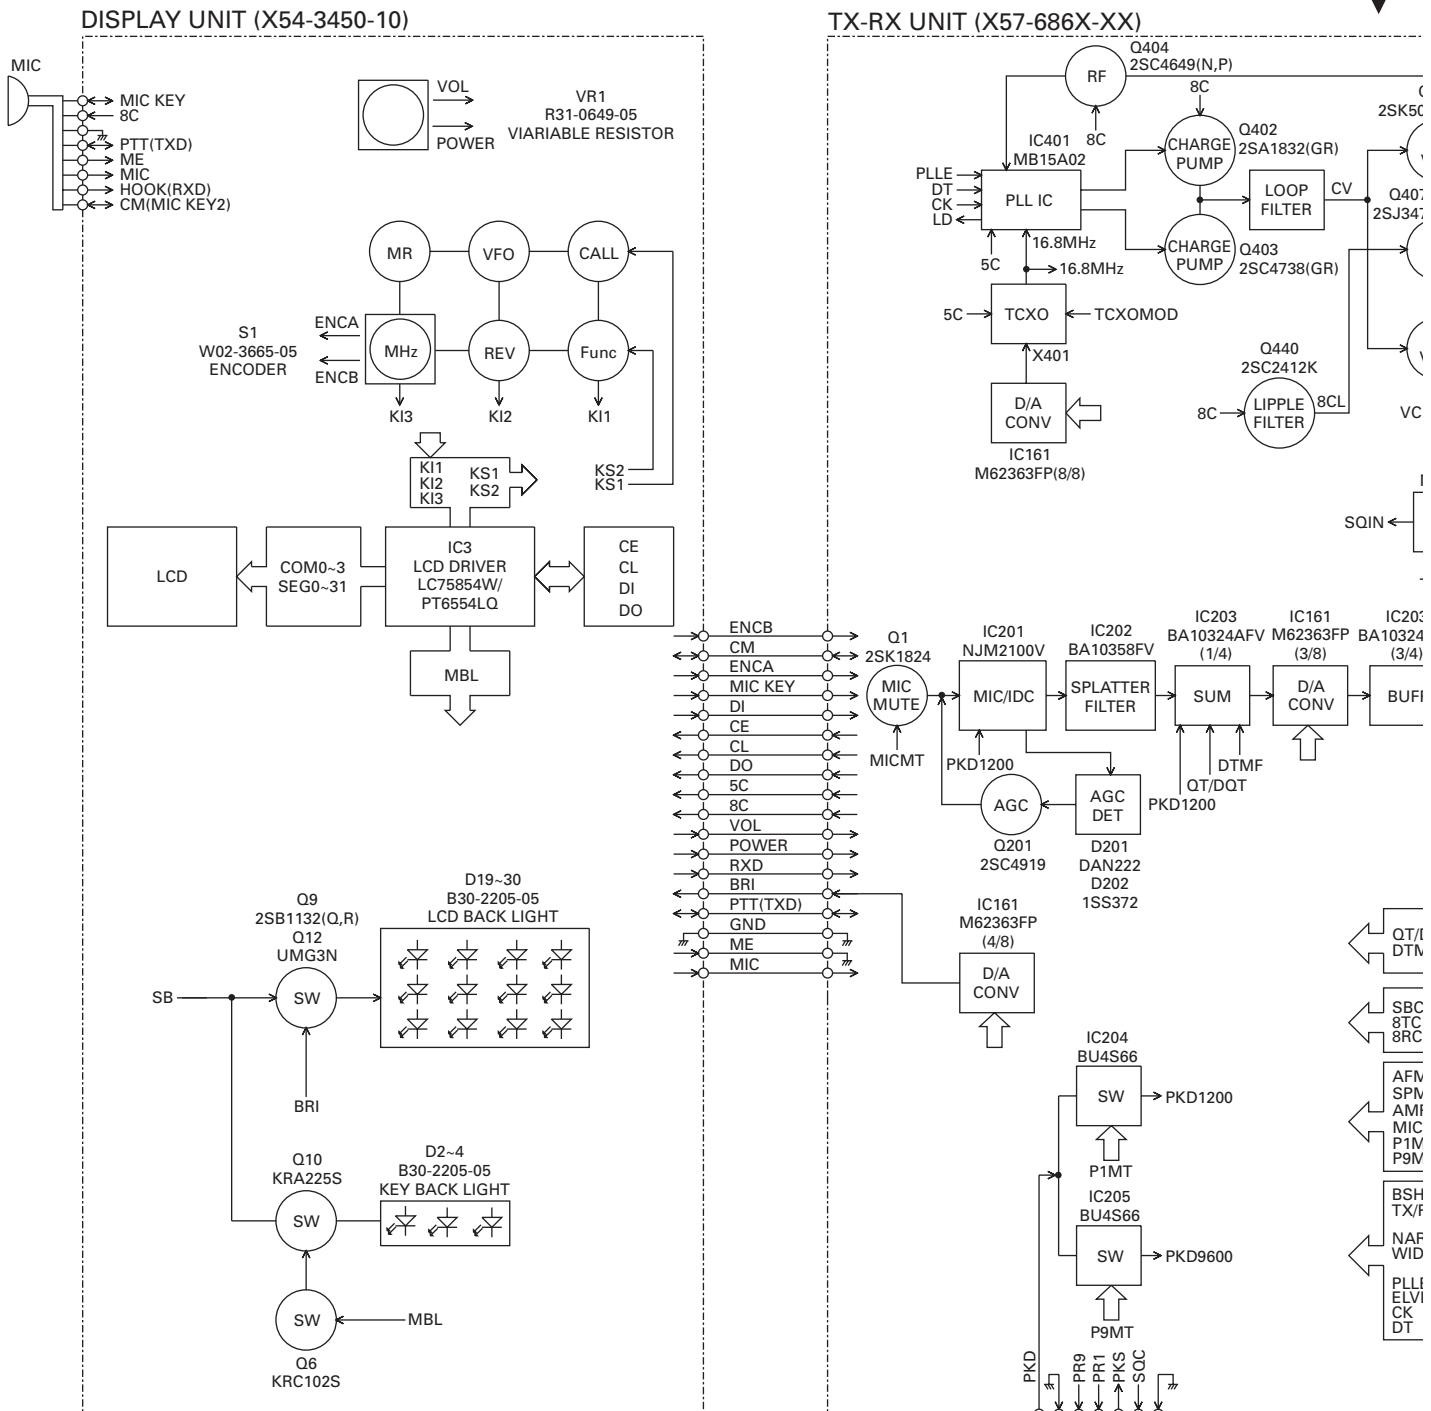


BLOCK DIAGRAM

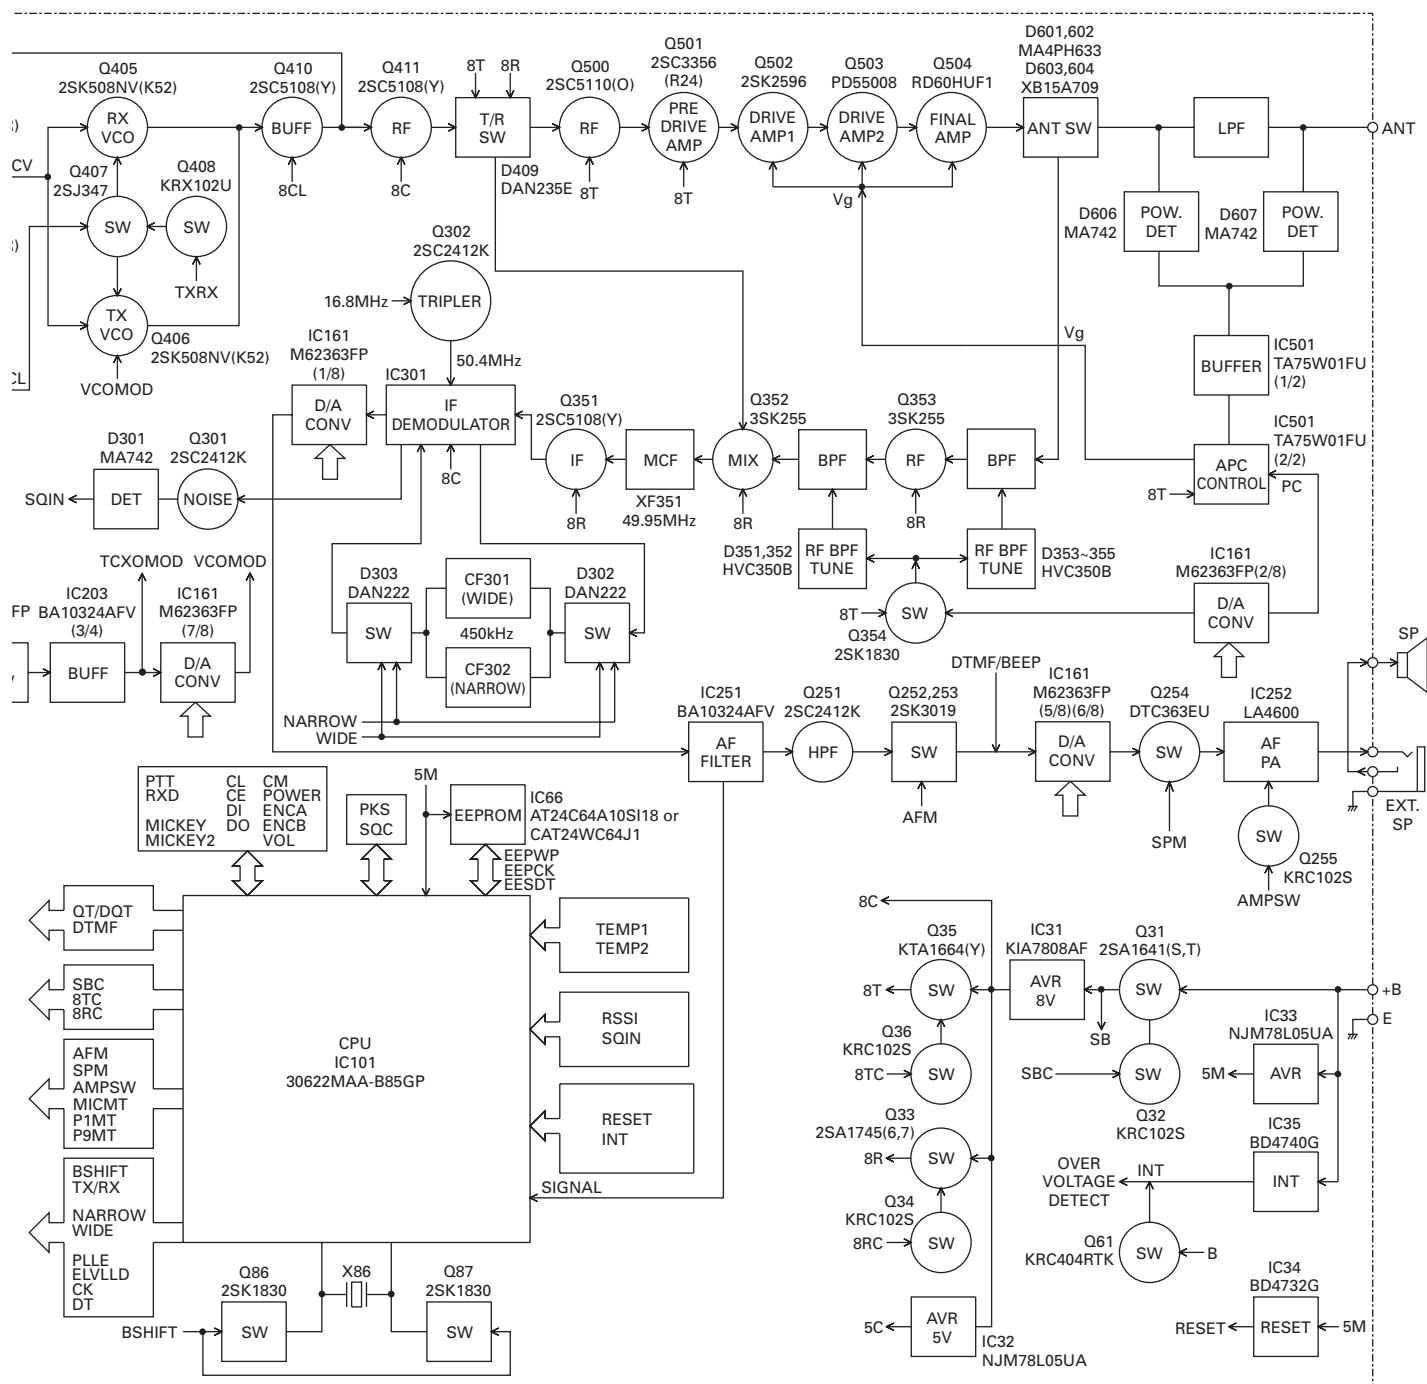


LEVEL DIAGRAM

Receiver Section

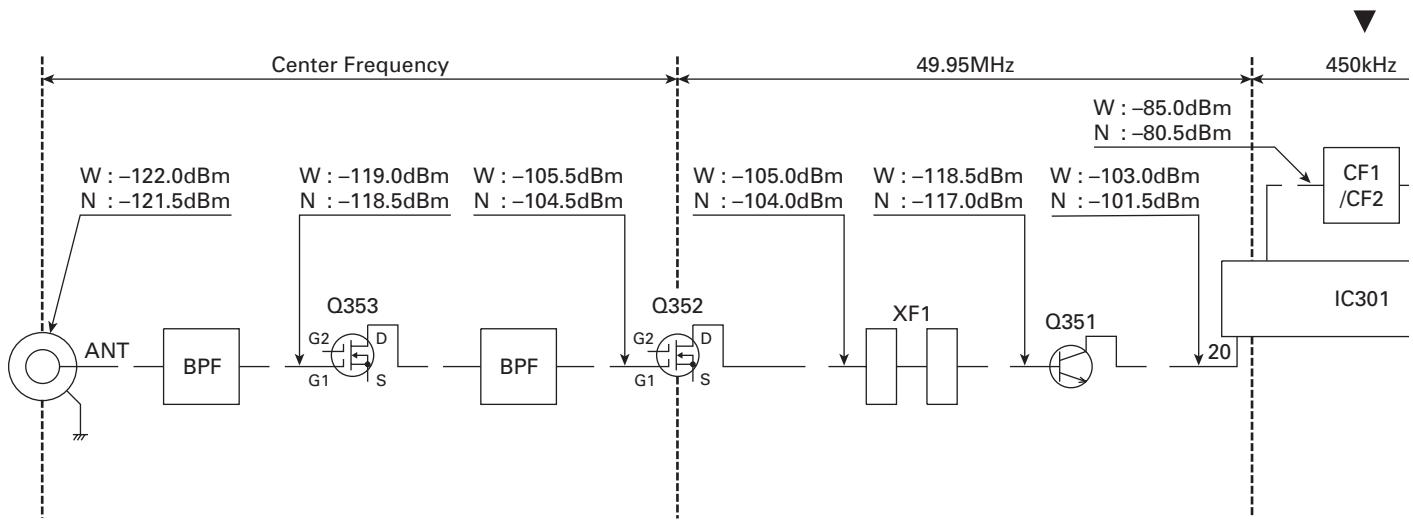



To make measurements in the RF section, connect the RF level meter. In the RF section, use a $0.01\mu\text{F}$ coupling capacitor. (The display shows the SSG input value required to obtain 12dB SIN,

Transmitter Section

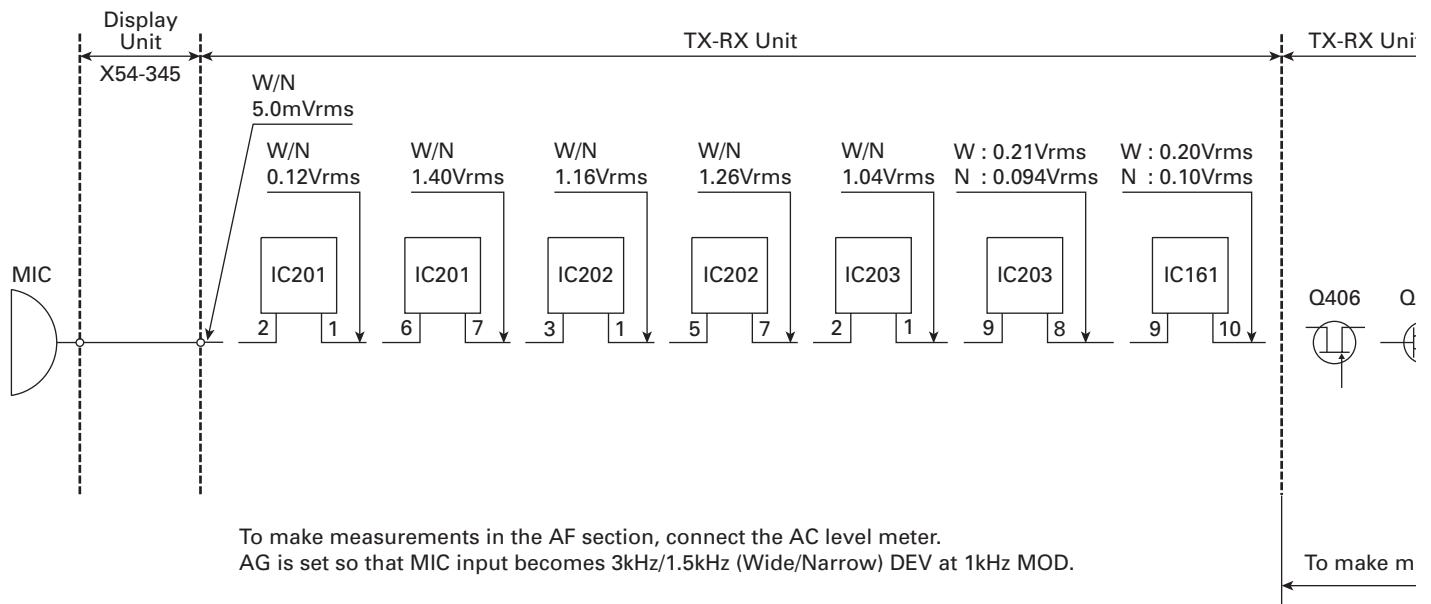

To make measurements in the AF section, connect the AC level meter. AG is set so that MIC input becomes 3kHz/1.5kHz (Wide/Narrow) DEV at 1kHz MOD.

LEVEL DIAGRAM

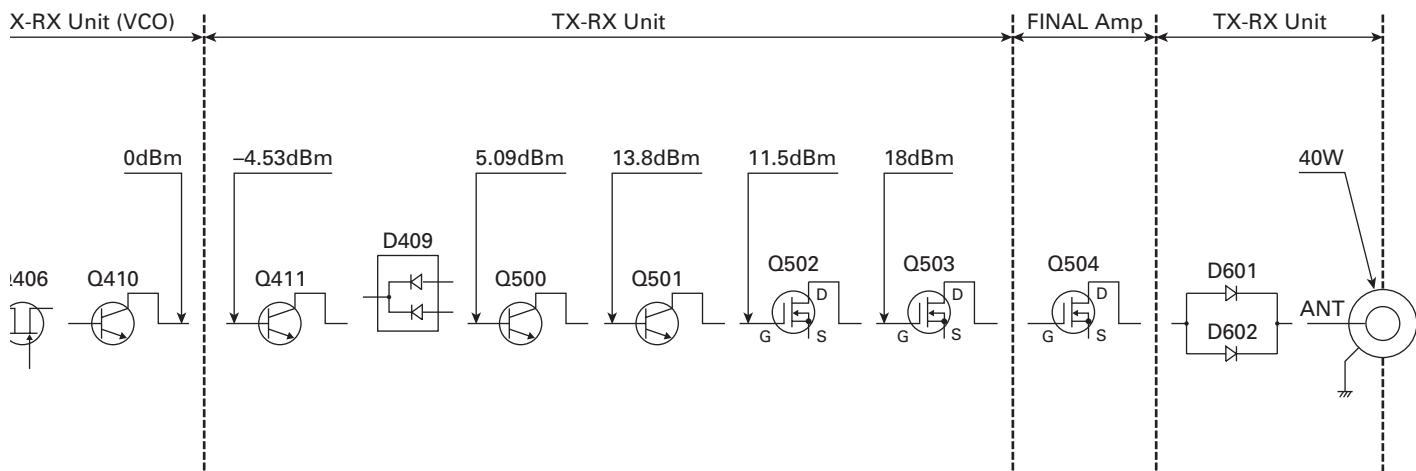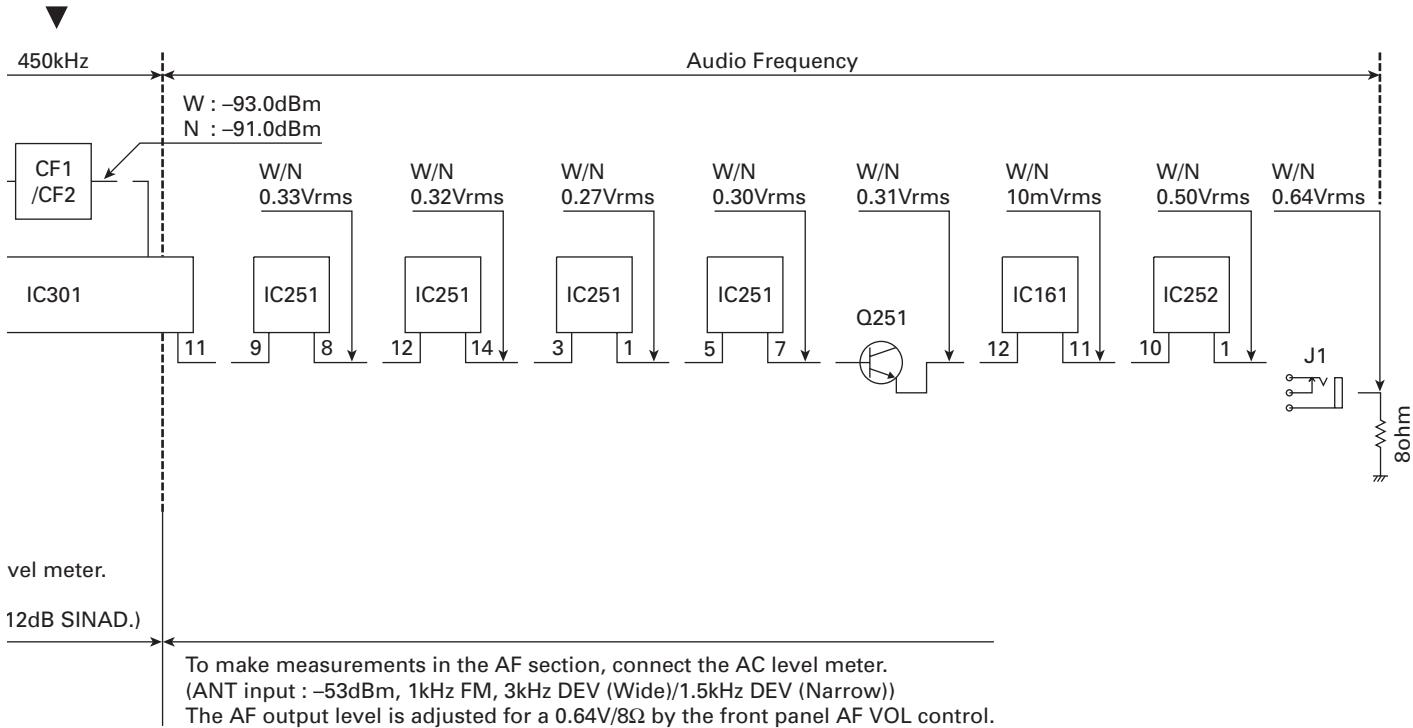

TM-471A

SPECIFICATIONS

GENERAL

Frequency Range		
TX	C : 400~430MHz	C2 : 440~480MHz
RX	C : 400~430MHz	C2 : 440~480MHz
Mode	F3E (FM)	
Antenna Impedance	50Ω	
Usable Temperature Range	-20°C~+60°C (-4°F~+140°F)	
Power Supply	13.8V DC±15% (11.7~15.8V)	
Grounding Method	Negative ground	
Current		
Transmit (max.)	13A or less	
Receive (at 2W output)	1.0A or less	
Frequency Stability (-20°C~+60°C)	Within ±2.5ppm	
Dimensions (W x H x D projections not included)	160 x 43 x 137 mm / 6-5/16 x 1-11/16 x 5-13/32 inch	
Weight	Approx. 1.2kg / 2.6lb	

RECEIVER

Circuitry	Double conversion superheterodyne	
Intermediate Frequency (1st / 2nd)	49.95MHz / 450kHz	
Sensitivity (12dB SINAD)	Wide : 0.20µV or less	Narrow : 0.25µV or less
Selectivity		
-6dB	Wide : 12kHz or more	Narrow : 10kHz or more
-60dB	Wide : 30kHz or less	Narrow : 24kHz or less
Squelch Sensitivity	0.1µV or less	
Audio Output (8Ω, 5% distortion)	2W or higher (5% distortion)	
Audio Output Impedance	8Ω	

TRANSMITTER

Power Output	
High	40W
Low	Approx. 25W
Modulation	Reactance modulation
Spurious Emissions	-60dB or less
Maximum Frequency Deviation	Wide : ±5kHz Narrow : ±2.5kHz
Audio Distortion (at 60% modulation)	3% or less
Microphone Impedance	600Ω

KENWOOD CORPORATION

2967-3, Ishikawa-machi, Hachioji-shi, Tokyo, 192-8525 Japan

KENWOOD U.S.A. CORPORATION

P.O. BOX 22745, 2201 East Dominguez Street, Long Beach, CA 90801-5745, U.S.A.

KENWOOD ELECTRONICS CANADA INC.

6070 Kestrel Road, Mississauga, Ontario, Canada L5T 1S8

KENWOOD ELECTRONICS DEUTSCHLAND GMBH

Rembrücke Str. 15, 63150 Heusenstamm, Germany

KENWOOD ELECTRONICS BELGIUM N.V.

Leuvensesteenweg 248 J, 1800 Vilvoorde, Belgium

KENWOOD ELECTRONICS FRANCE S.A.

13, Boulevard Ney, 75018 Paris, France

KENWOOD ELECTRONICS U.K. LIMITED

KENWOOD House, Dwight Road, Watford, Herts., WD18 9EB United Kingdom

KENWOOD ELECTRONICS EUROPE B.V.

Amsterdamseweg 37, 1422 AC Uithoorn, The Netherlands

KENWOOD ELECTRONICS ITALIA S.p.A.

Via G. Sirtori, 7/9 20129 Milano, Italy

KENWOOD IBERICA S.A.

Bolivia, 239-08020 Barcelona, Spain

KENWOOD ELECTRONICS AUSTRALIA PTY. LTD.

(A.C.N. 001 499 074)

16 Giffnock Avenue, Centrecourt Estate, North Ryde, N.S.W. 2113 Australia

KENWOOD ELECTRONICS (HONG KONG) LTD.

Unit 3712-3724, Level 37, Tower one Metroplaza, 223 Hing Fong Road, Kwai Fong, N.T., Hong Kong

KENWOOD ELECTRONICS TECHNOLOGIES(S) PTE LTD.

Sales Marketing Division

1 Ang Mo Kio Street 63, Singapore 569110

