

Uniden®

TRU8888

SERIES

OWNER'S

MANUAL

OWNER'S MANUAL

Contents

WELCOME	2	CALLER ID	46
FEATURES	2	Caller ID and CIDCW (Caller ID on Call Waiting)	46
TERMINOLOGY	3	THE INTEGRATED ANSWERING DEVICE	52
CONTROLS & FUNCTIONS	4	The Integrated Telephone Answering Device	52
DISPLAY AND ICONS	6	Turning the Answering System On/Off	57
SOFT KEY FUNCTION	7	Setting Your Outgoing Message (Greeting)	57
GETTING STARTED	8	New Message LED	58
Setting up the Phone	8	Using Your Answering System	58
Expanding Your Phone	12	Remote Operation	62
Installing the Beltclip	15	MULTI-HANDBSET FEATURES	66
Headset Installation	15	Multi-Handset Features	66
Main Menu Options	16	Using DirectLink Mode	66
Setting Menu Options	17	Intercom	68
BASICS	28	Room/Baby Monitor	71
Using Your Phone	28	ADDITIONAL INFORMATION	72
Call Waiting	31	Note on Power Sources	72
Placing a Call on Hold	31	General Information	74
Redialing a Call	32	TROUBLESHOOTING	75
Adjusting the Earpiece and Speaker Volume	32	Troubleshooting	75
Muting the Ringer	33	Liquid Damage	78
Mute Microphone	34	PRECAUTIONS & WARRANTY	79
Tone Dialing Switch-over	34	I.C. NOTICE	81
Traveling Out of Range	35	MEMORY LIST	82
Privacy Mode	35	INDEX	85
Conferencing	36	REMOTE OPERATION CARD	86
Find Handset	37	MAIN MENU FLOW CHART	88
PHONEBOOK	38		
Setting up the Phonebook	38		
Viewing the Phonebook	42		
Making Calls Using the Phonebook	43		
Speed Dialing	43		
Editing or Erasing a Phonebook Entry	44		
Copying Phonebook Entries	45		

Welcome

Congratulations on your purchase of the Uniden Digital Expandable Cordless Telephone System! This is a "Corded/Cordless" Telephone unit. The corded handset (on base) can make/receive calls during power failure. When the base unit is connected to AC power and a telephone line, it can support up to ten cordless handsets. You can now place a fully-featured cordless handset anywhere in your home or office where AC power is available to connect the handset chargers. Extra handsets also allow you to establish a 4-way conference call among two handsets, the base speakerphone, and an outside line.

Note: Illustrations in this manual are used for explanation purposes.

Some illustrations in this manual may differ from the actual unit.

As an Energy Star® Partner, Uniden has determined that this product or product models meets the Energy Star® guidelines for energy efficiency.

Energy Star® is a U.S. registered mark.



Features

- 5.8GHz Digital Expandable
- Corded/Cordless Telephone System
- Make and Receive Calls During a Power Failure
- Integrated Answering Device
- Dual Keypad and LCD Screen at Base
- Ten Multi-Handset Expandability
- Hands-Free Duplex Speakerphone in the Handset and Base
- Caller ID/Call Waiting Deluxe (Subscribe through Local Telephone Company)
- 100 Programmable Memory Locations in the Base and Each Cordless Handset
- Trilingual Display Options and Voice Prompts (English, French and Spanish)
- Intercom/Call Transfer Between Handsets or Handset and Base
- 20 Distinctive Ring Options (Ten Ringer Tones and Ten Melody Ringers)
- Mute and Hold Features
- Do Not Disturb (DND) Feature
- DirectLink™ Mode
- Room/Baby Monitoring
- Battery Level Indicator
- Clock Display
- Animation Displays

This series features **AutoTalk™** and **AutoStandby™**. AutoTalk allows you to answer a call by just removing the handset from the cradle so you don't have to waste time pushing buttons. AutoStandby allows you to hang up by simply returning the handset to the cradle.

To protect you against mis-billed calls that might result from your phone being activated by other equipment, this series has **Random Code™** digital security, which automatically selects one of more than 10,000,000 digital security codes for the handset and base.

Digital Spread Spectrum Technology uses a wider frequency band than standard digital transmissions. The result is a more secure conversation with the clarity of digital sound, extended range, and minimal interference from other cordless phones.

IntegriSound™ Built in sound quality which provides life-like conversations.

With **DirectLink™** mode, you can use two or more handsets as radio transceivers (walkie-talkies).

Be sure to visit our web site: www.uniden.com


Uniden® is a registered trademark of Uniden America Corporation.

AutoTalk, AutoStandby, DirectLink, IntegriSound and Random Code are trademarks of Uniden America.

Terminology


- **Standby Mode** - The handset maybe sitting or off the cradle, but is NOT in use. **talk/flash** or **speaker** has not been pressed. The corded base handset is on the base and **speaker** on the base has not been pressed. No dial tone is present.
- **Talk Mode** - The handset is off the cradle and **talk/flash** or **speaker** has been pressed, or pick up the corded base handset and **speaker** on the base is pressed and enabling a dial tone.


Controls & Functions

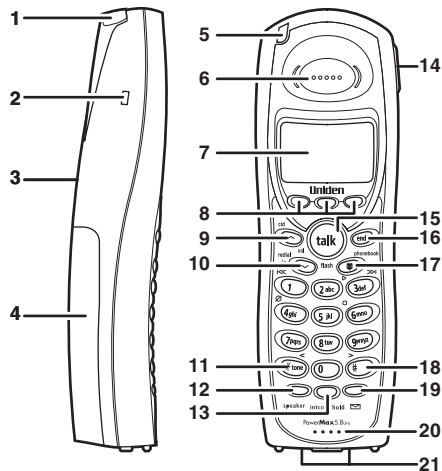

1. Handset Antenna
2. Beltclip Hole
3. Speakerphone Speaker and Ringer
4. Handset Battery Compartment
5. New Message LED
6. Handset Earpiece
7. LCD Display
8. *soft* Keys (P. 7)
9. *cid/vol* ^ (volume up) (P. 48, 32 & 17)
10. *redial/p/vol* v (volume down) (P. 32, 29 & 17)
11. **/tone/* < (P. 34 & 39)
12. *speaker* (P. 29)
13. *intcom/hold* (P. 68 & 31)
14. Headset Jack Cover
15. *talk/flash* (P. 28 & 31)
16. *end* (P. 30)
17. *phonebook* (P. 38)
18. *#/* > (P. 39)
19. [Envelope icon] (P. 62)
20. Handset Microphone
21. Handset Charging Contacts

**Retrieve TAD message
with Handset Remote keys**

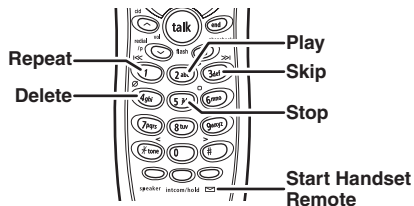

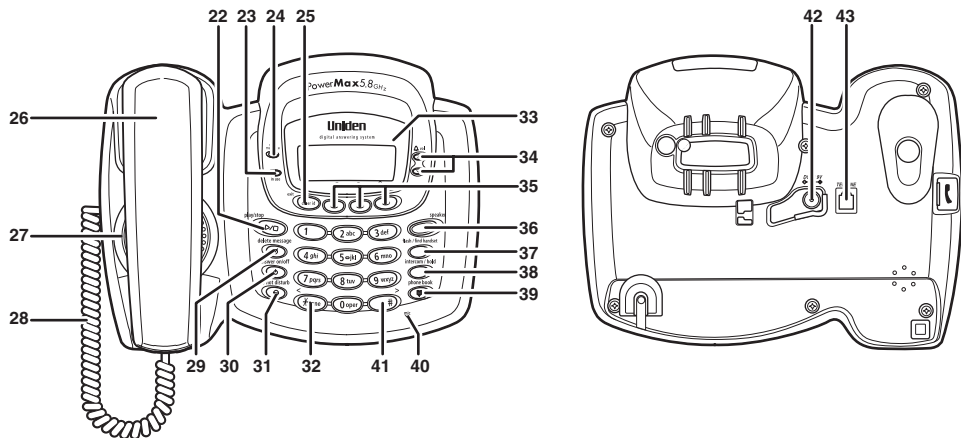

22. **▷/□ play/stop** (P. 58)

23. In use LED

24. New Message LED

25. **caller id/exit** (P. 48)

26. Corded Base Handset

27. Base Speaker

28. Curl Cord

29. **∅ delete message** (P. 60)

30. **Ⓢ answer on/off** (P. 57)

31. **do not disturb** /DND LED (P. 33)

32. ***/tone/<** (P. 34 and 39)

33. LCD Display

34. **△/vol ▲/▼** (volume up/down)
(P. 32 and 17)

35. **soft** Keys (P. 7)

36. **speaker**/speaker LED (P. 29)

37. **flash/find handset** (P. 31 and 37)

38. **intercom/hold** (P. 68 and 31)

39. **📖 phonebook** (P. 38)

40. mic (microphone)

41. **#/>** (P. 39)

42. **DC IN 9V** Jack

43. **TEL LINE** Jack

Display and Icons

Example of the standby mode display

• Handset



- Ringer off icon (when the ringer is off)/ day of the week and time / battery icon
- Handset ID and Banner
- Number of new Caller ID calls received (If there are no new Caller ID messages, the Handset ID appears here.)

• Base

* Status of your Answering machine

** Number of message



Day of the week and time

Number of new Caller ID calls received

* appears if you have a new message.

appears if you turn your answering system off.

** appears when the message storage is full.

appears if you set your answering system to announce only.

ICON	Appears During	DESCRIPTION
	Standby/Talk	Battery icons indicate the handset battery status. This icon changes depending on the battery status (empty, low, medium and full)(handset only).
	Standby	The Ringer off icon indicates that ringer is turned off.
	Talk	The Mute icon appears when you mute the handset or base.
	Talk	The Speaker icon appears when the handset speaker phone is used (handset only).
	Talk	The Privacy icon appears when the Privacy Mode is turned on.
	Talk	The Recording icon appears while recording a conversation.

Soft Key Function


"Soft" keys are keys that change function during the operation of the phone. There are three soft keys on the base and three on each handset. Soft keys allow you to:

- Access the main menu
- Redial one of the last three numbers dialed

The function of each soft key is determined by the icon that appears directly above it. For example, when the base is in standby mode, pressing soft key 1 will redial the last number. When the base is in talk mode, pressing soft key 1 will mute the microphone.

Complete information on the features controlled by the soft keys can be found under each feature.


In standby mode Handset

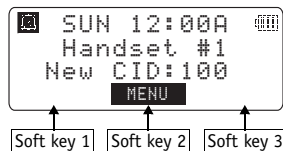


In talk mode Handset



Base

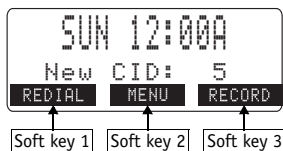

Base (base speaker phone)




(Corded base handset)



Setting up the Phone

A. Choose the best location

When choosing a location for your new phone, here are some important guidelines you should consider:

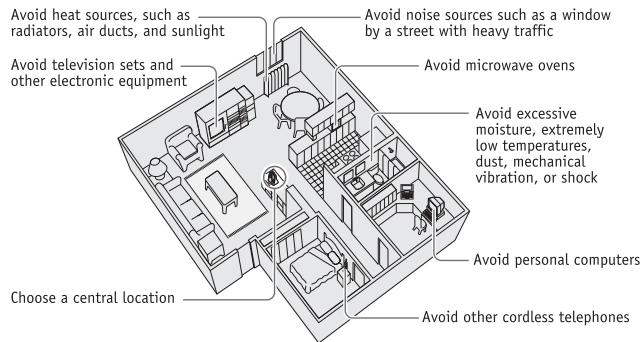


- The location should be close to both a phone jack and a continuous power outlet (one which is not connected to a switch).
- The base and handset should be kept away from sources of electrical noise such as motors, microwave ovens, and fluorescent lighting.
- For better reception, place the base as high as possible.
- The base should be placed in an open area for optimum range and reception.
- If your home has specially wired alarm equipment connected to phone line, be sure that installing the system does not disable your alarm equipment. If you have questions about what will disable alarm equipment, contact your telephone company or a qualified installer.



For maximum range:

- Keep the antenna free of obstruction.
- When the handset is not in use place it in an upright position.
- Do not hold the handset where you would block the signal.

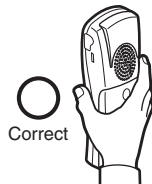

- Metal and reinforced concrete may affect cordless telephone performance.

note

- Use only the supplied [AD-800] AC adapter. Do not use any other AC adapter.
- Do not place the power cord where it creates a trip hazard or where it could become chafed and create a fire or electrical hazard.

B. Connect the base unit


- 1) Connect to the handset cord to the left side of the phone and the corded base handset.
- 2) Connect AC adapter to the **DC IN 9V** jack and to a standard 120V AC wall outlet.
Connect the AC adapter to a continuous power supply (i.e., an outlet that is not controlled by a switch).

Place the base unit close to the AC outlet so that you can unplug the AC adapter easily.

- 3) Connect the telephone line cord to the **TEL LINE** jack.
- 4) Set the base on a desk or tabletop. Place the corded base handset on the base.


tip

If your telephone outlet isn't modular, contact your telephone company for assistance.

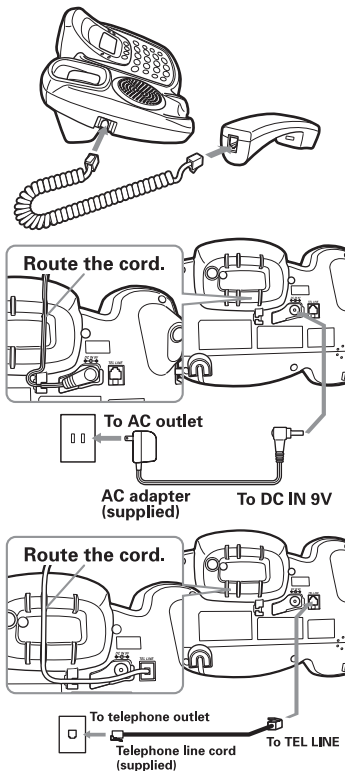

C. Install the rechargeable battery pack into the handset

- 1) Press down on the handset battery case cover (use the finger indentation for a better grip) and slide the cover downward to remove.
- 2) Plug the battery pack connector (red & black wires) into the jack inside the battery compartment. (The connector notches fit into the grooves of the jack only one way.) Match the wire colors to the polarity label in the battery compartment, connect the battery and listen for a click to insure connection.
- 3) Make sure you have a good connection by slightly pulling on the battery wires. If the connection is secure, the battery jack will remain in place.
- 4) Place the battery case cover back on the handset and slide it upwards until it clicks into place.

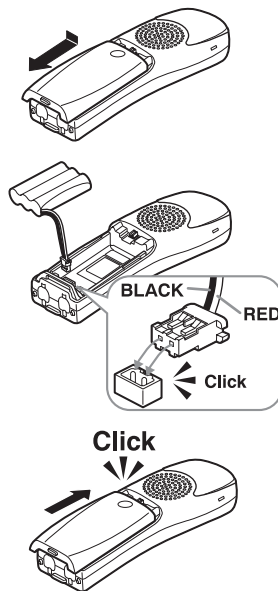

note

- Use only the Uniden (BT-446) rechargeable battery pack supplied with your cordless telephone.
- The battery may be purchased by calling Uniden's Parts Department (see back cover page).

D. Connect the charger


The handset is powered by a rechargeable battery pack. The battery recharges automatically when the handset is placed in the charger.

- 1) Connect the AC adapter to the DC IN 9V jack and to a standard 120V AC wall outlet.

- 2) Set the charger on a desk or tabletop, and place the handset in the charger with the keypad facing forward.

- 3) Make sure that the **charge** LED illuminates.
If the LED does not illuminate, check to see that the AC adapter is plugged in and the handset makes good contact with the base charging contacts.

- 4) Charge the handset battery pack for at least 15-20 hours before using your new cordless handset for the first time.

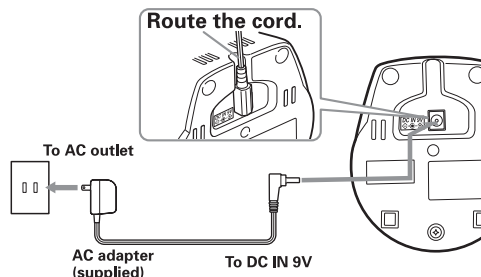

Expanding Your Phone


Ten Handset Expandability

Your phone supports up to ten handsets, including any handsets supplied with your phone. You can now place a fully-featured cordless handset anywhere AC power is available to connect the handset charger.

Handsets can be used in DirectLink Mode or on an intercom call without interfering with incoming calls. It is possible to have a 4-way conference among the base, two handsets, and one outside line.

All the handsets ring when a call is received.

10 Handsets

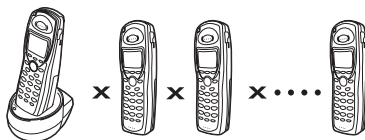

Backwards/Forwards Compatibility

Your phone is compatible with other Uniden 5.8GHz Digital Expandable Handsets. Compatible models include the **TCX860**, **TCX400**, **TCX440**, and **ELX500**. (Please check www.uniden.com for an updated list of expansion handsets compatible with this series.)



note

- If you have any trouble with your phone, visit our web site at www.uniden.com or call our Customer Hotline at 1- 800-297-1023 (Mon -Fri 7 am to 7pm, Sat/ Sun 9 am to 5pm, CST). (The Customer Service Hotline is closed on holidays.)
- If you change a global setting in one handset, you change that particular setting for all registered handsets. All other settings (not included under Global Setup) must be set separately through each handset.



- An extra handset can be registered when the main base is in standby mode.
- If a handset has ever been registered to a different base, you must de-register the handset before you can register it to the new base (see page 14).

Register the Handset

If you purchase an expansion handset, you need to register the handset before use. Only one handset can be registered at a time.

Handsets supplied with the phone are registered to the base by the factory. When charged, pre-registered handsets display a handset ID number. Handsets that have not been registered display Models vary! Charge handset on the base for registration or refer to Owner's Manual. When you register an extra handset to the base, the handset ID will be assigned.

The ELX500, TCX400, TCX440, and TCX805 all use the same registration steps. Follow the steps below to register your expansion handset.

- 1) Before registering the extra handset, the battery pack **MUST** be charged for 15-20 hours.
- 2) With the main base in standby mode, press the **MENU** soft key on the base.
- 3) Press Δ /**vol**/ \wedge or Δ /**vol**/ \vee on the base to select H5 Registration, and then press the **OK** soft key.
- 4) On the handset, press and hold **#** for two seconds. To cancel registration, press the **CANCEL** soft key on the base.
- 5) While the handset is registering, Handset Registering will appear in the Handset LCD. When Registration Complete is displayed, the handset has been registered to the base. If Registration Failed appears, please try these steps again.

De-register the Handset

You can deregister the handset's ID from the main base unit or the base ID from the handset. You will usually only deregister the handset if you are going to use it with a different base, if you are having a problem with your phone or if you need to change the digital security code.

The digital security code is an identification code used to connect the handset and the base unit. Normally, setting the code is not necessary. In the rare situation that you suspect another cordless telephone is using the same security code, you can change the code by de-registering and re-registering all handsets.

- 1) Press the **MENU** soft key. Select the Deregister HS in the menu and press the **OK** soft key. Deregister HS? appears.
- 2) Press **volume up/down** to select Yes and then the **OK** soft key.



- When de-registration is complete you will hear a confirmation tone, and Deregistration Complete appears.
- 3) After de-registering the handset, you must re-register the handset before you can use it.

Installing the Beltclip

To attach the beltclip

Insert the beltclip into the holes on each side of the handset.
Press down until it clicks.


To remove the beltclip

Pull either side of the beltclip to release the tabs from the holes.



Headset Installation

Your phone may be used with an optional headset. To use this feature, insert the headset plug into the headset jack. Your phone is ready for hands-free conversations. (Headset may be purchased by calling the Uniden Parts Department or visiting the web site. See back page.)



Main Menu Options

Your phone has eight main menu options: **DirectLink Mode, Room/Baby Monitor, Handset Setup, Base Setup, Answ. Setup, Global Setup, Deregister HS** and **HS Registration**. You can change **Room/Baby Monitor, Answ. Setup, and Global Setup** settings from the base or from any handset. **DirectLink Mode, Handset Setup, and Deregister HS** are only available from a handset. **Base Setup** and **HS Registration** are only available from the base.

Handset and Base Setup Default Settings

The default settings set from the factory match the features that most people use. You may not need to change them. However, there are a number of options you must set and entries you must make in memory to take full advantage of all the phone features. The table below lists the default settings.

Function	Handset	Base	Function	Handset	Base
Ringer Volume	High		Day & Time	SUN 12:00 AM	
Ringer Tone	Flicker	-	CIDCW	CW on/CWDX off	
Distinctive Ring	On	-	Area Code	None	
Auto Talk	Off	-	Dial Mode	Tone	
Anykey Answer	Off	-	Security Code	80	
Banner	" "	-	Ring Time	Toll Saver	
Language	English		Record Time	one minute	
Contrast (LCD Contrast)	level 5		Message Alert	Off	
Key Touch Tone	On	-	Language (TAD)	English	
Animation Screen	On	-	Call Screen	On	
Room Monitor (allow monitoring)	On	-			



- For Global Setup, Answ. Setup, and Deregister HS menu options, when setting options from the handset, make sure the line is not in use and the handsets are within range of the base.
- Main menu flow chart is provided on page 88.

Setting Menu Options

Using the interface

Below are some tips for using the software interface on your phone.

- Press the **MENU** soft key to access the main menu.
- Use **volume up/down** to scroll through options.
- Press the **OK** soft key to make a selection.
- Press the **BACK** soft key to return to the previous screen.
- Press **end** on the handset or **caller id/exit** on the base to exit the menu.
- If you do not press a key within 30 seconds, the phone will time out and exit the menu mode. When setting Day and Time, the time-out period is extended to two minutes.

•Handset



•Base



Handset Setup / Base Setup


The following submenu options must be set separately for each handset and the base.

Selecting a Ringer Volume

Ringer volume lets you choose from one of three ringer volumes.

From the handset

- 1) Press the **MENU** soft key. Select the Handset Setup menu, and then the Ringer Volume submenu.
- 2) Press **cid/vol/∧** or **redial/p/vol/∨** to select High, Low, or Off.
- 3) Press the **OK** soft key. You will hear a confirmation tone.



From the base

In standby mode, press **∧/vol/∧** or **∧/vol/∨** to select one of three ringer volumes (Off, Low, or High).



If you set the ringer to off, no ringer or melody will sounds.

Selecting a Ringer Tone (Handset only)

Ringer tone lets you choose from ten ringer tones or ten melodies:

- Ringers (Flicker, Clatter, Soft Alert, Wake Up, Light Bug, Beep Boop, Tone Board, Chip Chop, Party Clap, Reminder)
 - Melodies (Beethoven's Symphony #9 [Beethoven9], For Elise [Elise], We Wish You A Merry Christmas [Merry- Xmas], Home Sweet Home [Hm Swt Hm], Lorri Song #6 [Lorri Song], When the Irish Eyes Are Smiling [Irish Eyes], Aura Lee, Let Me Call You Sweet Heart [Sweetheart], Star Spangled Banner [Star Spngl], Old MacDonald [Old MacDld])
- You must set a separate ringer tone on the base and each handset.

- 1) Press the **MENU** soft key. Select the Handset Setup menu, and then the Ringer Tones submenu.
- 2) Press **cid/vol/^** or **redial/p/vol/v** to move the pointer. You will hear the ringer or melody as you scroll through the options.
- 3) Press the **OK** soft key. You will hear a confirmation tone.



Distinctive Ringer Setup (Handset only)

Distinctive Ringer allows you to assign a designated ring tone to a stored phonebook number. When a call is received and the Caller ID information matches the information in one of the phonebook memory locations, the phone uses the distinctive ring assigned to that particular caller. You can assign distinctive rings to multiple phonebook memory locations. Switching the setting to Distinctive Off disables distinctive ringing: all incoming calls will have a normal ring tone. Switching to Distinctive On activates all programmed distinctive ring memory locations.

- 1) Press the **MENU** soft key. Select the Handset Setup menu, and then the Distinctive Ring submenu.
- 2) Press **cid/vol/∧** or **redial/p/vol/∨** to select On or Off.
- 3) Press the **OK** soft key. You will hear a confirmation tone.



Setting AutoTalk (Handset Only)

AutoTalk allows you to answer the phone simply by removing the handset from the cradle. You do not have to press any buttons to answer the call.

- 1) Press the **MENU** soft key. Select the Handset Setup menu, and then the AutoTalk submenu.
- 2) Press **cid/vol/∧** or **redial/p/vol/∨** to select On or Off.
- 3) Press the **OK** soft key. You will hear a confirmation tone.



Setting Anykey Answer (Handset only)

Anykey Answer allows you to answer the phone by pressing any number key, ***/tone/<**, or **#/>** on the handset.

- 1) Press the **MENU** soft key. Select the Handset Setup menu, and then the Anykey Answer submenu.
- 2) Press **cid/vol/^** or **redial/p/vol/v** to select **On** or **Off**.
- 3) Press the **OK** soft key. You will hear a confirmation tone.



Setting the True Banner (Handset only)

True Banner lets you customize the name your handset displays. The name will be displayed on the LCD screen during Standby Mode, Intercom, Intercom Hold, Room Monitor and Copy Phonebook operation. The banner name will be displayed on the receiving handset as well.


- 1) Press the **MENU** soft key. Select the Handset Setup menu, and then the Banner submenu.
- 2) Use the number keypad (**0-9**), ***/tone/<**, **#/>**, or the **DELETE** soft key to enter or edit the name.
- 3) Press the **OK** soft key. You will hear a confirmation tone.



Selecting a Language

You can change the language the menu display will use. Choose from English, French, or Spanish.

- 1) Press the **MENU** soft key. Select the Handset Setup menu or the Base Setup menu, and then the Language submenu.
- 2) Press **volume up/down** to choose "English," "Français" (French), or "Español" (Spanish).
- 3) Press the **OK** soft key. You will hear a confirmation tone.



Adjusting the LCD Contrast

Contrast adjusts the handset LCD brightness. Choose one of the ten levels for optimum viewing.

- 1) Press the **MENU** soft key. Select the Handset Setup menu or the Base Setup menu, and then the Contrast submenu.
- 2) Press **volume up/down** to adjust the contrast of the LCD (ten levels.)
- 3) Press the **OK** soft key. You will hear a confirmation tone.



Setting the Key Touch Tone (Handset only)

Key Touch Tone is the tone your keypad makes when keys are pressed. You can turn this tone on or off.


- 1) Press the **MENU** soft key. Select the Handset Setup menu, and then the Key Touch Tone submenu.
- 2) Press **cid/vol/Λ** or **redial/p/vol/√** to select On or Off.
- 3) Press the **OK** soft key. You will hear a confirmation tone.



Setting the Animation Screen (Handset Only)

The Animation Screen displays animation on the handset LCD. The animations will be displayed on the LCD screen during a call, ringer volume setting, paging operation, when you hang up and so on.


- 1) Press the **MENU** soft key. Select the Handset Setup menu, and then the Animation Screen submenu.
- 2) Press **cid/vol/Λ** or **redial/p/vol/√** to select On or Off.
- 3) Press the **OK** soft key. You will hear a confirmation tone.



The handsets have a variety of animation displays. Below are examples of the animation screens and what they mean:

note

Turning on the phone



Hanging up the phone



Confirmation (Done!)




Making a Call



Find / Paging Handset




Deleting (Deleted!)



If no key is pressed for two minutes, the phone will exit the menu mode.

Also, the animation display changes depending on the ringer volume setting.




Out of Range



Unavailable



Low Battery



Global Setup

If you change one of the global settings, you change that setting for all registered handsets and the base. Only one handset or the base can change global settings at a time.

Setting Day and Time

Day & Time sets the day and time of your display.

- 1) Press the **MENU** soft key. Select the Global Setup menu, and then the Day & Time submenu option (image is for the handset).
- 2) Press **volume up/down** to select the day of the week, and then the → soft key.
- 3) Press **volume up/down** to set hour, and then press the → soft key.
- 4) Press **volume up/down** to set minute, and then press the → soft key.
- 5) Press **volume up/down** to choose AM or PM, and then press the **SAVE** soft key. You will hear a confirmation tone.



Setting CIDCW (Caller ID on Call Waiting)

Caller ID on Call Waiting (CIDCW) displays the name and number of an incoming call while you are on the line. Call Waiting Deluxe (CWDX) allows you to handle call waiting calls in seven different ways.

- 1) Press the **MENU** soft key. Select the Global Setup menu, and then the CIDCW submenu.
- 2) Press **volume up/down** to select CW On/CWDX On, CW On/CWDX Off, or CW Off/CWDX Off, and then press the **OK** soft key. You will hear a confirmation tone.



Setting the Area Code

If you enter a 3-digit area code number in the "Area Code" option, your local area code does not appear in the Caller ID message. For calls received from outside your local area code, you will see a full 10-digit number.

- 1) Press the **MENU** soft key. Select the Global Setup menu, and then the Area Code submenu.
- 2) Press the number keypad (**0-9**) to enter a 3-digit area code.
- 3) Press the **OK** soft key. You will hear a confirmation tone.



note


If the area code has already been stored in memory, the stored area code will be displayed. To change it, use the **DELETE** soft key and number keys to enter the new area code.

Setting the Dial Mode

Dial Mode sets the dial mode to tone or pulse. Most phone systems use tone dialing; the default setting is tone dialing. Set the dialing mode to match the dialing system used by your local phone service.

- If you are not sure of your dialing system make a trial call. If the call connects, leave the setting as is; otherwise set the unit to pulse dialing.
- If your phone system requires pulse dialing and you need to send DTMF tones in certain situations during a call, you may switch over to tone dialing (refer to "Tone Dialing Switch-over" on page 34).

- 1) Press the **MENU** soft key. Select the Global Setup menu, and then the Dial Mode submenu.
- 2) Press **volume up/down** to select Tone or Pulse (the initial setting is Tone).
- 3) Press the **OK** soft key. You will hear a confirmation tone.



Using Your Phone

Power Failure Operation

Because the TRU8888 is a corded/cordless combination phone, it can still perform several of its functions during a power failure. The following features will function even during a power failure.

- Making and receiving calls with the corded base handset
 - Adjusting the volume on the main base
 - Call waiting/flash feature on the main base
 - DirectLink mode
- All other features are disabled during a power failure.

Making and Receiving Calls

Making a call

From the handset

- 1) Remove the handset from the cradle.
- 2) Press ***talk/flash***.
- 3) Listen for the dial tone.
- 4) Dial the number.

OR




If the line is in use by another handset(s) or the base "Line In Use" appears in the base's display, and "In Use" appears in the display of all registered handsets that are not in use.



- To set "AutoTalk", see page 20 or to set "Anykey Answer" see page 21.
- The handset microphone is located at the bottom of the handset. Position yourself as near to the handset as possible and speak clearly.
- The base microphone is located under the base. Position yourself as near to the base as possible.

- 1) Remove the handset from the cradle.
- 2) Dial the number.

If pause is required, press **redial/p/vol** . P appears in the display, which represents a pause

- 3) Press **talk/flash**.

From the Handset Speakerphone

- 1) Remove the handset from the cradle.
- 2) Press **speaker**.
- 3) Listen for the dial tone.
- 4) Dial the number.
- 5) When the other party answers, talk into the microphone.

From the base

- 1) Pick up the corded handset, or press **speaker**.
- 2) Listen for the dial tone.
- 3) Dial the number.

OR

- 1) Dial the number.
If pause is required, press the **PAUSE** soft key.
- 2) Pick up the corded handset, or press **speaker**.

Receiving a call

From the handset

- 1) Remove the handset from the cradle. (If AutoTalk is on, the phone will automatically answer the call when you pick it up.)
- 2) Press **talk/flash**.

OR

If the handset is off the cradle, press **talk/flash** or number keypad, ***/tone/**, or **#/>**. (Anykey answer is on.)

From the base

Press **speaker** or pick up the corded handset.

Hanging Up

From the handset or handset speakerphone, press **end** or return the handset to the cradle (AutoStandby).

From the base, press **speaker** or return the corded handset to the base.

Switching to the Handset Speakerphone During a Call

To switch a normal call to the speakerphone, press **speaker** on the handset. To switch from a speakerphone call to a normal call, press **speaker** again.




- You must subscribe through your local telephone company to receive Call Waiting or Caller ID on call waiting service.

- You can place a call on hold for five minutes. When five minutes has passed, the call is disconnected, and the phone returns to standby mode.

- While a call is on hold, CIDCW can not be received.

Call Waiting

If you have Call Waiting service and a call waiting tone sounds while you are on a call, press **talk/flash** on the handset or **flash/find handset** on the base to accept the waiting call. There is a short pause, and then you will hear the new caller. To return to the original caller, press **talk/flash** on the handset or **flash/find handset** on the base again.

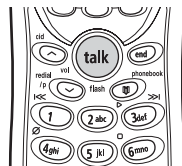


Placing a Call on Hold

- 1) During a call, press **intcom/hold** on the handset or **intercom/hold** on the base. The call will be put on hold.




If you leave a call on hold for more than ten seconds, the base display screen will read, *Line On Hold* and handset display screen will read "Hold."



- 2) To return to the call, pick up the corded handset or press **talk/flash** on a handset. To talk to the caller on a speakerphone, press **speaker** on the base or on a handset.

Redialing a Call

The last three phone numbers dialed can be quickly redialed from the handset or base.


- 1) With the phone in standby mode, press **redial/p/vol**  on the handset or press the **REDIAL** soft key on the base.
- 2) Press **volume up/down**. Each press of **volume up/down** will display one of the last three number redialed.
- 3) Press **talk/flash** or **speaker** on the handset (or pick up the corded base handset, or press **speaker** on the base). The selected number is dialed.
- 4) To hang up, press **end** (or return the corded base handset to the base, or press **speaker** on the base).

From the handset, you can dial the last number dialed. During a call, press the **MENU** soft key. Use **volume up/down** to select **Redial** and then press the **OK** soft key. Press the **DIAL** soft key. The number will be dialed.

Adjusting the Earpiece and Speaker Volume

Earpiece and Speaker Volume

You can select earpiece volume from among six volume levels on the handset and the base. For speaker volume, select from among six volume levels on the handset and ten volume levels on the base. Pressing **volume up/down** on the handset or base during a call will change the earpiece or speaker volume. This setting will remain in effect after the telephone call has ended.

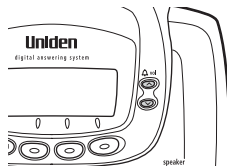


note

- If the number exceeds 32 digits, only the first 32 digits are retained in redial memory.
- If the redial memory is empty, you will hear a beep.
- Redial numbers stored in the handset and the base are independent from each other.
- To store or delete a redial numbers, see page 41.



While charging a handset, you can not mute the ringer tone for the handset.

If you press **volume up** when the earpiece is at the maximum volume level, an error tone sounds. The error tone also sounds if you press **volume down** at the lowest volume.

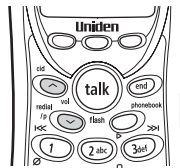

Muting the Ringer

Do Not Disturb (DND)


The do not disturb feature (DND) allows you to mute the ringer, the base, and any registered handsets at the same time. The phone must be in standby mode. Press and hold **do not disturb** on the base. You will hear a confirmation tone, and the **DND** LED illuminates. To cancel the DND feature, press **do not disturb** again. You can also mute the ringer tone while the phone is ringing by pressing **do not disturb** on the base.

Temporarily Muting the Ringer

To mute the ringer tone temporarily for each handset or the base, when the phone is ringing, press **end** or the **MUTE** soft key on the handset you want to mute or the base. The mute will last for the current incoming call only. The ringer tone will return to the previous setting starting with the next incoming call.


Mute Microphone

With the handset

You can temporarily mute the microphone so that the caller cannot hear you. Press the **MUTE** soft key during talk mode (while the phone is in use) to mute the microphone. *Mute On* and  appear in the display. To cancel muting, press the **MUTE** soft key again. *Mute Off* appears.




With the base

During a call, press the **MUTE** soft key on the base to mute the microphone. *Mute On* and  appear in the display. To cancel muting, press the **MUTE** soft key again or press *speaker*. *Mute Off* appears.

Tone Dialing Switch-over


If your telephone company requires pulse dialing, you can switchover to tone dialing after the call connects. This feature is useful when you need tone dialing to use any automated menu systems, such as telephone bank tellers, telephone prescription refills, customer support menus, etc.

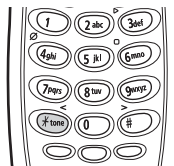



The tone feature only applies when the dial mode is set to pulse.

If your phone is set to pulse dialing mode, make your call normally. Once your call connects, press ***/tone/**. Any digits you enter from then on will be sent as tone digits. When this particular call ends, the phone automatically returns to pulse dialing mode.

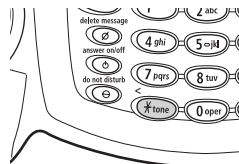


Traveling Out of Range

During a call, as you begin to move your handset too far from your base unit, noise may increase. If you pass the range limits of the base unit, you will hear a beep and see **Out of Range** on the display, and then the handset returns to standby mode.

Privacy Mode

Privacy Mode prevents interruption from other registered handsets or the base. **This works only when the phone is in use.**

- 1) Press the **MENU** soft key on the handset or base during talk mode.
- 2) Press **volume up/down** to move the pointer to Privacy Mode and then press the **OK** soft key.

Privacy Mode On and  appear in the display. To exit the Privacy Mode, repeat above step again. Privacy Mode Off appears.

Conferencing

If you have more than one handset, up to four people can participate in a conference call.

3-Way Conferencing

- Outside line + Handset + Base (or Handset)

4-Way Conferencing


- Outside line + Handset + Handset + Base

Joining a Conference Call

You can easily join a call already in progress.


From the base

- 1) Press **speaker** on the base or pick up the corded handset to join the conference call.
- 2) To hang up, press **speaker** or return the corded handset to the base. The handset(s) will still be connected to the call.

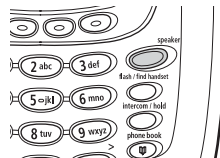

From a second handset

- 1) Press **talk/flash** or **speaker** on the handset to join the call.
- 2) To hang up, return the handset to the cradle or press **end** on the handset. The base or other handset will still be connected to the call.

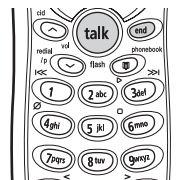




If the battery pack is completely drained, the handset will not beep when paging.

Find Handset

To locate the handset, press **flash/find handset** on the base when the phone is in standby mode. All registered handsets beep for 60 seconds, and Paging appears on the handset display. To cancel paging, press any key on the handset or **flash/find handset** on the base.



Setting up the Phonebook

You can store names and numbers in your phone's phonebook, search for names alphabetically, and dial phonebook entries with just a few key presses. Phonebook memory is stored independently in the base and handsets. You can store up to 100 numbers in the base and up to 100 numbers in each handset.

The phone uses the same memory to store phonebook entries and Caller ID messages. If the shared memory is already full, the phone will not store any more phonebook entries. You will have to delete some of the Caller ID messages before you can store a new phonebook entry.

The phonebook entries in the handset are not limited to phone numbers. You can also store a group of numbers (up to 20 digits) that you need to enter once your call connects. This is referred to as Chain Dialing.

Storing and Editing Phone Numbers, Names, Distinctive Rings and Speed Dial

- 1) When the phone is in standby mode, press **phonebook**.
- 2) Press the **STORE** soft key. Store/Edit Name appears.
- 3) Enter the name (up to 16 characters) by using the number keypad. If a name is not required, go to step 4.
<No Name> will be used as the name.

A screenshot of a phone's internal display showing the Phonebook menu. The text on the screen is: "Phonebook : 1", "Search [A-Z/↑/↓]", "Store [STORE]", and at the bottom, three soft keys: "BACK", "COPY", and "STORE".

```
Phonebook : 1
Search [A-Z/↑/↓]
Store [STORE]
BACK COPY STORE
```


•Base

A screenshot of a handset's internal display showing the Phonebook menu. The text on the screen is: "<Phonebook>", "Total:100", "Search [A-Z/↑/↓]", and at the bottom, three soft keys: "COPY", "STORE", and "DELETE".

```
<Phonebook>
Total:100
Search [A-Z/↑/↓]
COPY STORE DELETE
```

•Handset



- Selecting a phonebook entry where a number is already stored overwrites the old number. The new number will be stored in the phonebook entry.
- When the memory is full, you will hear a beep and **Memory Full** appears. You will have to delete some Caller ID messages before you can store new phonebook entries.
- The pause key counts as one digit. Pressing **redial/p/vol**  on the handset or the **PAUSE** soft key on the base more than once increases the length of the pause between numbers. Each pause represents a 2 second delay.

Refer to the letters on the number keys to select the desired characters. With each press of a number key (**0-9**), the displayed character appears in the following order: upper case letters first, lower case letters next and finally the number corresponding to the key.

For example, to enter **Movies**:

- 1) Press 6 once, and then press **#/>** to move the cursor to the right.
- 2) Press 6 six times.
- 3) Press 8 six times.
- 4) Press 4 six times.
- 5) Press 3 five times.
- 6) Press 7 eight times.

	Number of times key is pressed								
keys	1	2	3	4	5	6	7	8	9
1	i								
2 abc	A	B	C	a	b	c	2		
3 def	D	E	F	d	e	f	3		
4 ghi	G	H	I	g	h	i	4		
5 jkl	J	K	L	j	k	l	5		
6 mno	M	N	O	m	n	o	6		
7 pqrs	P	Q	R	S	p	q	r	s	7
8 tuv	T	U	V	t	u	v	8		
9 wxyz	W	X	Y	Z	w	x	y	z	9
0 opqr	&	<	>	<	>	/	(blank)
	#	0							

If you make a mistake while entering a name

Use ***/tone/<** or **#/>** to move the cursor to the incorrect character.

Press the **DELETE** soft key to erase the wrong character, and then enter the correct character. To delete all characters press and hold the **DELETE** soft key.


- 4) Press the **OK** soft key to store the name;

Store/Edit No. appears.

- 5) Use the number keypad, ***/tone/<**, or **#/>** to enter the phone number (up to 20 digits).

If you make an error, use the **DELETE** soft key to erase the incorrect digits. When you are finished, press the **OK** soft key to store the number.

- 6) If you store the phonebook entry in the handset, Distinctive Ring appears. Press **volume up/down** to move the pointer to one of the Distinctive Ring options and then press the **OK** soft key. If you choose not to store a Distinctive Ring, simply select the "No Selectn" option.



- 7) Speed Dial appears. Press **volume up/down** to move the pointer to select the Speed dial location (10 locations: SPD1-SPD0). If you choose not to store the name/number as a Speed Dial, simply choose the "No Selectn" option.



- 8) Press the **OK** soft key. You will hear a confirmation tone, and Done! appears in the display.

Storing Caller ID messages in the Phonebook

Messages shown in the Caller ID list can be stored in the phonebook. The phone number and name of the party on the Caller ID list can be stored in memory.

- 1) When the phone is in standby mode, select the Caller ID message to be stored (see "Viewing the Caller ID List" on page 48). Then press the **EDIT** soft key.
- 2) Press **volume up/down** to select Store into PB?, then the **OK** soft key. Store/Edit Name appears. If the Caller ID message is already stored in memory, you will hear a beep and This data is already stored !! appears. The number will not be stored.
- 3) To complete the setting, follow the steps 3-8 in "Storing and Editing Phone Numbers, Names, Distinctive Rings and Speed Dial" on pages 38-40.



- If the Caller ID message was received as a private/unknown number, or the message does not have the number, you cannot store the message in the phonebook. If it was received as private/unknown name, the message will be stored as <No Name>.
- If all 100 memory entries are full, the Caller ID message will be erased from Caller ID list when you store it in the phonebook.

Storing a Redial Record (Handset only)

- 1) With the phone in standby mode, press **redial/p/vol** ∇ .
- 2) **redial/p/vol** ∇ repeatedly to display the number to be stored. Then press the **EDIT** soft key.
- 3) Press **cid/vol/** \wedge or **redial/p/vol/** ∇ to select Store into PB?, then the **OK** soft key. Store/Edit Name appears.
- 4) To complete the setting, follow the steps 3-8 in “Storing and Editing Phone Numbers, Names, Distinctive Rings and Speed Dial” on pages 38-40.

Deleting a Redial Record (Handset only)

- 1) With the phone in standby mode, press **redial/p/vol** ∇ .
- 2) Press **cid/vol/** \wedge or **redial/p/vol/** ∇ repeatedly to display the number to be deleted. Then press the **EDIT** soft key.
- 3) Press **cid/vol/** \wedge or **redial/p/vol/** ∇ to select Delete?, then the **OK** soft key.
- 4) Press **cid/vol/** \wedge or **redial/p/vol/** ∇ to choose Yes.
- 5) Press the **OK** soft key. The redialed number is deleted.

Viewing the Phonebook

- 1) Press **phonebook**. If you open the phonebook during a call, the **COPY** and **STORE** soft key will not appear.
- 2) Press **volume up/down** to scroll through the phonebook entries. Phonebook entries appear in alphabetical order (from first to last when you press **volume down**, from last to first when you press **volume up**).

You can also use the letters on the number keys to select the first letter of the desired name. Press a number key (**2-9** and **0**) once for the first letter, twice for the second letter, and so on. The first entry that begins with the letter you entered appears.

For example, to search for an entry starting with "M," press **6** once. Press **volume up/down** until the phonebook entry is displayed.

- 3) To finish the viewing operation:

From the Handset-press **end** (or the **BACK** soft key or **talk/flash** during a call).
From the Base-press **caller id/exit** key or the **BACK** soft key.



<Phonebook>
Total:100
Search [A-Z/↑/↓]
COPY STORE DELETE

•Handset



Phonebook :100
Search [A-Z/↑/↓]
Store [STORE]
BACK COPY STORE

•Base

Making Calls Using the Phonebook

From Standby Mode

- 1) When the phone is in standby mode, select the phonebook entry you want to dial (see "Viewing the Phonebook" on page 42).
- 2) Press **talk/flash** or **speaker** on the handset (or press **speaker** on the base or pick up the corded handset).
- 3) To hang up press **end** on the handset (or press **speaker** on the base or return the corded handset to the base).

From Talk Mode

- 1) Press **talk/flash** or **speaker** on the handset (or press **speaker** or pick up the corded handset from the base).
- 2) Select the phonebook entry you want to dial (see "Viewing the Phonebook" on page 42).
- 3) Press the **DIAL** soft key. The number in the displayed phonebook entry is dialed.
- 4) To hang up press **end** on the handset (or press **speaker** on the base or return the corded handset to the base).

Speed Dialing

You can program up to ten speed dial numbers in the base and up to ten speed dial numbers in each handset. You must program a speed dial number before you can use the speed dialing feature. When the phone is in standby mode, press and hold a number key (**0-9**) associated with the speed dial until the phone number appears, and then press **talk/flash** or **speaker** on the handset or **speaker** on the base. The number stored in the speed dial (SPD1 - SPD0) is dialed.

Editing or Erasing a Phonebook Entry

- 1) When the phone is in standby mode, press **phonebook**.
- 2) Use **volume up/down** or the number keypad to select the desired phonebook entry (see "Viewing the Phonebook" on page 42). Then press the **EDIT** soft key.
- 3) To edit entry, select **Edit**. To delete the entry, select **Delete?**.
- 4) If you are deleting the entry, press **volume up/down** to select **Yes**, and then press the **OK** soft key. you will hear a confirmation tone, and **Deleted!** appears in the display.

If you are editing the entry, follow the steps 3 to 8 under "Storing and Editing Phone Numbers, Names, Distinctive Rings and Speed Dial" on pages 38-40 to complete the editing operation.



- If you stored 100 phonebook entries, you can not store the phonebook entries and you will hear beep.
- If the selected handset is out of range or data transfer is canceled, Unavailable appears in the display. phonebook entries will not be transferred.

Copying Phonebook Entries

Copy Phonebook allows you to transfer stored phonebook entries from handset to handset or from base to handset (or from handset to base) without having to manually re-enter names and numbers. You can transfer one memory (phonebook entry) at a time, or all memory entries at once.


- 1) When the phone is in standby mode, press **phonebook**.
- 2) Press the **COPY** soft key.
- 3) Press **volume up/down** to select the handset or base to which you want transfer the phonebook entries and then press the **OK** soft key.
- 4) Press **volume up/down** to select One Memory or All Memories; and then press the **OK** soft key.

If you select All Memory, Are you sure? appears on the display screen.

Press **volume up/down** to select Yes, and then press the **OK** soft key.

If you select One Memory, press **volume up/down**, or the number key (2-9 and 0) to select the phonebook entry you want to export and then press the **COPY** soft key.

- 5) The phonebook entries will be transferred to the handset or the base. Copying and the receiving handset name or base appear. When the transfer is completed Done! appears on the handset or the base.



Caller ID and CIDCW (Caller ID on Call Waiting)

You must subscribe to Caller ID services through your local telephone provider to use these features.

When the telephone rings, the Caller ID feature allows you to view the caller's name, phone number, date and time of call. With CIDCW (Caller ID on Call Waiting), you will hear a call waiting tone while you are on a call, and the Caller ID data is displayed. To accept the waiting call, press **talk/flash** on the handset or **flash/find handset** on the base. Additionally, you can dial a number stored in the Caller ID list or save data to your phonebook entries.

Important:

Memory locations for Caller ID messages and Phonebook entries (including Speed Dials) are common, you can store up to all 100 entries for each handset and the base. Caller ID messages are not stored when you have 100 phonebook entries. When you have stored a total of 100 phonebook entries and Caller ID messages, the oldest Caller ID message is overwritten.

The date and time received
 Caller's name
 Caller's phone number

12/21 12:30PM
 Jane Smith
 214-555-1234
 BACK DELETE STORE

•Base

12/21 12:30P *
 Uniden Corp
 817-858-3300
 EDIT

•Handset

When the Caller ID message is received, the display shows the caller's phone number along with the date and time. The incoming call information is stored in the Caller ID record. If the Caller ID service includes the caller's name, the name will appear in the display (up to 15 characters).

note

- If you answer a call before the Caller ID message is received (for example, before the second ring), the Caller ID message will not appear.
- When the call is received via a telephone company that does not offer Caller ID service, the caller's phone number and name does not appear. (This includes some international calls.)
- When the call is via a private branch exchange (PBX), the caller's phone number and name may not appear.



- To activate features and display the **CWDX** soft key, select **CW On/CWDX On** in the CIDCW option. See page 26.
- Press the **BACK** soft key to return to the caller. Also, if you don't enter a Call Waiting Deluxe option within 30 seconds, the phone returns to the caller.

You may receive any one of the following messages:

When a private name is received; Private Name

When a private number is received; Private Number

When a unknown name is received; Unknown Name

When a unknown number is received; Unknown Number

When invalid data is received; Incomplete Data



Data errors appear as "I."

Call Waiting Deluxe Features

Your phone gives you new options for call waiting. At the touch of a button, you can place the caller on hold, send them to your voice mail service, or conference them into your current call. You must subscribe to Call Waiting and Call Waiting Deluxe to use these features. Not all features are available in all areas. Check with your local telephone company for details.

From the base

- 1) When you receive a Call Waiting call, press the **CWDX** soft key for a list of options.

From the handset

- 1) When you receive a Call Waiting call, press the **MENU** soft key. Press **cid/vol/∧** or **redial/p/vol/✓** to select **CallWaitDeluxe**, then press the **OK** soft key for a list of option.

- 2) Press **volume up/down** or the number keypad (**1-7**) to select an option.
 - Ask to Hold** - A prerecorded message states that user will be available shortly, and the call is place on hold.
 - Tell Busy** - A prerecorded message tells the caller you are busy, and the waiting call is disconnected.
 - Forward Call** - The caller is sent to your voice mail box, if available.
 - Answer/Drop 1** - Disconnects the first call and connects the new caller.
 - Conference** - Allow you to have a conference call with your first and second callers.
 - Drop First/Drop Last** - During a conference call, allows you to choose to drop the first or drop the last caller.
- 3) Press the **OK** soft key. A confirmation screen will appear, and the phone returns to the call.

Viewing the Caller ID List

The Caller ID list stores information for incoming calls - even unanswered calls. You can store up to 100 Caller ID messages and phonebook entries (including Speed Dials) for each handset and the base. You can view the Caller ID list through the handset or base during a call or when the phone is in standby mode.

- 1) With the phone in standby mode, press **cid/vol** **^** (or **caller id/exit**). Or with the handset in talk mode, press the **MENU** soft key. Use **volume up/down** to select **Caller ID**, then press the **OK** soft key.
The summary screen appears. The screen shows the number of new messages and total messages.



- Check with your local telephone company for a full list of options.
- The number of calls from the same Caller ID appears next to the received time. Once you view the new message, the number will be cleared and disappear.

note

Once the Caller ID data has been deleted, the information cannot be retrieved

- 2) To view the Caller ID messages in historical order (newest to oldest or from oldest to newest), use, ***volume down*** to scroll through the messages from the latest to the earliest, ***volume up*** to scroll back through the messages. To view the Caller ID messages with alphabetical search, press the number key pad (**2-9** and **0**) with the letter associated with the first letter of the desired message.

note

Once you view the Caller ID list with alphabetical search, you cannot switch back to historical order unless you exit and re-enter the operation.

- 3) To finish the viewing operation:

From Handset - press the **BACK** soft key.



From Base - press ***caller id/exit*** or the **BACK** soft key.

Deleting Information from the Caller ID List

- 1) When the phone is in standby mode, view the Caller ID information to be deleted (see "Viewing the Caller ID List" on page 48). Then press the **EDIT** soft key.
- 2) Use ***volume up/down*** to select Delete?. Press the **OK** soft key. Delete Caller ID ? appears.
- 3) Press ***volume up/down*** to select Yes, and then press the **OK** soft key.
- 4) You will hear a confirmation tone.

Deleting all Caller ID names/numbers

- 1) When the phone is in standby mode, press **cid/vol** \wedge (**caller id/exit** on the base).
- 2) Press the **DELETE** soft key. Delete All? appears.
- 3) Press **volume up/down** to choose Yes.
- 4) Press the **OK** soft key. You will hear a confirmation tone.



Calling a Party from the Caller ID List

Standby mode

- 1) When the phone is in standby mode, select the Caller ID message (see "Viewing the Caller ID List" on page 48).
- 2) To have the phone dial a "1" before the displayed Caller ID number, press ***/tone/**<. To have the phone dial the stored area code before the displayed Caller ID number, press ***/#**>.
- 3) Press **talk/flash** or **speaker** on the handset or **speaker** on the base or pick up the corded handset. The displayed phone number dials automatically.

- When a long distance call has been set, "1" appears in the display.
- You cannot make a call from the Caller ID list if your phone is connected to a private branch exchange (PBX).

Talk mode

- 1) Press ***talk/flash*** or ***speaker*** on the handset or ***speaker*** on the base or pick up the corded handset.
- 2) Select the Caller ID message you want to dial (see "Viewing the Caller ID List" on page 48).
- 3) Press the **DIAL** soft key. The displayed phone number will be dialed.

The Integrated Telephone Answering Device

The phone has a built-in answering system that answers and records incoming calls. You can also use your answering system to record a conversation, leave a voice memo message, or announce a special outgoing message to callers when you're away from your phone.

Features

- Digital Tapeless Recording
- Up-to 12 minutes of Recording Time
- Call Screening
- Personal or Prerecorded Outgoing Messages
- Voice Prompts for TAD (English, Spanish, or French)
- Time and Day Announcement
- Remote Message Retrieval
- Toll Saver
- Conversation Recording
- Voice Memo
- Message Alert On/Off
- Retrieve TAD Messages using Handset



- The greeting must be more than two seconds long, or it will not be recorded.
- To delete the personal outgoing message, press the **DELETE** soft key while the message is playing. The system announces “Greeting has been deleted.”

Answering System Setup

This main menu option allows you to set up the built in answering device.

Record a Personal Outgoing Message (Base Only)

Record Greeting allows you to record a personal outgoing message (greeting) which the answering system automatically plays when you receive a call.

- 1) Press the **MENU** soft key. Select the Answ. Setup menu, and then the Record Greeting submenu. To record greeting press [START] appears.
- 2) Press the **START** soft key. You will hear “Record Greeting.”The message counter displays 30 and then begins to count down.
- 3) Position yourself near the base microphone and record your greeting.
- 4) When you are finished recording, press the **STOP** soft key. Your greeting will playback for confirmation.



Selecting Your Greeting (Base only)

Select Greeting allows you to choose between the two outgoing messages, a pre-recorded message or your own greeting.

- 1) Press the **MENU** soft key. Select the Answ. Setup menu, and then the Select Greeting. Play back greeting appears, and the current outgoing message is played. LCD is an example if you recorded your greeting.




- 2) Once you have recorded a personal greeting, press the **CHANGE** soft key to choose the greeting. The selected outgoing message is played. Each time you press the **CHANGE** soft key, the phone switches the outgoing message between the prerecorded and the personal outgoing message.

To delete the personal greeting, press the **DELETE** soft key.

Setting a PIN Code

Security code selects a two-digit Personal Identification Number (PIN) code. A PIN code is required to play your messages from a remote location.

- 1) Press the **MENU** soft key. Select the Answ. Setup menu, and then the Security Code submenu.
- 2) Enter a two-digit PIN code (01-99) using the number keypad (**0-9**).
- 3) Press the **OK** soft key. You will hear a confirmation tone.



Setting the Ring Time

Ring Time allows you to set the number of rings the caller hears before your answering system plays the outgoing message. You can set the ring time to answer after two, four, or six rings. If you enable the Toll Saver (TS), the answering system picks up after two rings if you have new messages and after four rings if there are none.


- 1) Press the **MENU** soft key. Select the Answ. Setup menu, and then the Ring Time submenu.
- 2) Press **volume up/down** to select a Ring Time (Toll Saver, 2 Times, 4 Times, or 6 Times).
- 3) Press the **OK** soft key. You will hear a confirmation tone.



Setting the Record Time

Record Time sets the duration for recording the incoming messages. You have three record time options. The options "one minute" or "four minutes" set the duration for recording the incoming messages. "Announce only" answers the call but prevents the caller from leaving a message.

- 1) Press the **MENU** soft key. Select the Answ. Setup menu, and then the Record Time submenu.
- 2) Press **volume up/down** to select Record Time (1 Minute, 4 Minutes, or Announce Only).
- 3) Press the **OK** soft key. You will hear a confirmation tone.



Setting the Message Alert On or Off

Message Alert sounds an alert tone when you have an unheard message. If you set the Message Alert on, whenever a new message is received, the soft alert tone will sound every 15 seconds. When all messages have been played back, the alert tone automatically deactivates.

- 1) Press the **MENU** soft key. Select the Answ. Setup menu, and then the Message Alert submenu.
- 2) Press **volume up/down** to select On or Off.
- 3) Press the **OK** soft key. You will hear a confirmation tone.



Turning the message alert tone off by pressing any key

To quickly turn off the Message Alert tone, press any key on the base unit; the tone will automatically deactivate.

Setting the Language of your Answering System

Language allows you to set the language of your answering system announcements to English, French, or Spanish.

- 1) Press the **MENU** soft key. Select the Answ. Setup menu option, and then the Language submenu.
- 2) Press **volume up/down** to choose “English”, “Français” (French), or “Español” (Spanish).
- 3) Press the **OK** soft key. You will hear a confirmation tone.




Setting the Call Screen

Call Screen allows you to listen (from the base) to the incoming message being left by the caller before you answer the call.





- 1) Press the **MENU** soft key. Select the Answ. Setup menu and then the Call Screen submenu.
- 2) Press **volume up/down** to select On or Off.
- 3) Press the **OK** soft key. You will hear a confirmation tone.






- When the answering system is full, you will hear "No Remaining Time" and  appears on the LCD. You should delete some messages so that the system can record new messages.
- Position yourself as near to the base as possible and speak clearly when recording your outgoing message.
- If you make an outside call or a call is received during the operation, the operation is canceled.

Turning the Answering System On/Off

- 1) To turn the answering system on, press  **answer on/off** on the base when the phone is in standby mode.  and the number of messages stored in memory appears on the LCD. If the LCD flashes, then there are new messages waiting for you.
- 2) To turn the answering system off, press  **answer on/off** on the base.  appears on the LCD.

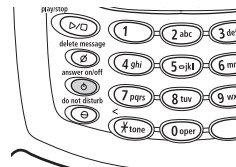

Setting Your Outgoing Message (Greeting)

When you receive a call, the answering system automatically plays either the pre-recorded message or your own greeting. To record your own greeting, or choose between the two outgoing messages, refer to "Answering System Setup" on page 53.

The following message is pre-recorded: "Hello, no one is available to take your call. Please leave a message after the tone."

Announce only feature

The announce only feature plays a pre-recorded outgoing message or your own personal outgoing message, but it will not allow the caller to leave a message. To set announce only, follow the steps on "Setting the Record Time" page 55. If you want to use your own greeting and you want to change your greeting to omit the prompt to leave a message, refer to "Selecting Your Greeting (Base only)" on page 53.

The following message is pre-recorded:

"Hello, no one is available to take your call. Please call again."


New Message LED

The new message LED on the handset flashes when you have new messages in your answering system. The LED stops flashing when all new messages are played back.

note

Using Your Answering System

The message counter displays the number of messages stored in memory. If the display flashes, then there are new messages waiting for you. The answering system is designed to play your new messages first. After you play all your new messages, you can then play your old messages.

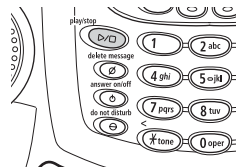

Playing your messages

- 1) When the base is in standby mode, press **▶/□ play/stop**.

The system announces the number of new and old messages while the message counter displays only the number of new messages. The time and day that each message was received is announced after the message is played. The message counter will then display the number of current stored messages.

- 2) When all new messages have been played, you hear a confirmation tone, and the system announces "End of messages." The system returns to standby. After you have reviewed your new messages, you can play your old messages by pressing **▶/□ play/stop** again. Once you have listened to a new message, it then becomes an old message. The old messages will be played in the order in which they were received.

The time stamp will not be heard until you have set the time.

Repeating a message

- 1) Press **▷/□ play/stop** to review your messages. The number of stored messages is announced.
- 2) To repeat the current message, press the **|<<** soft key after a few seconds of beginning the message. To quickly scroll backwards through a message, press and hold the **|<<** soft key. To repeat the previous message, press the **|<<** soft key within a few seconds (about four seconds during remote operation) after a message begins playing. If you have several messages, press the **|<<** soft key repeatedly until you return to the message you want to replay. If the current message is the first new message, the system plays back from the beginning of the current message (it does not go back into the old message group).
- 3) Press **▷/□ play/stop** at any time to stop reviewing messages and return to standby.
The message counter shows the number of messages stored in memory.

Skipping a message

- 1) Press **▷/□ play/stop** to review your messages. The number of stored messages is announced.
- 2) Press the **>>|** soft key at anytime to skip to the next message.
Each time the **>>|** soft key is pressed, the system scans forward one message. If you have several messages, press the **>>|** soft key repeatedly to find the message you want to play. To quickly scroll through a message, press and hold the **>>|** soft key. The system advances through the playback at double speed.
- 3) Press **▷/□ play/stop** at anytime to stop reviewing your messages and return to standby. The message counter shows the number of messages stored in memory.


 note

Deleting a message

To maintain maximum record time, delete the old messages. When you press **Ø delete message**, you are permanently deleting the message. Once deleted, the message cannot be replayed or retrieved.

- 1) Press **▷/□ play/stop** to review your messages.
- 2) Press the **DELETE** soft key or **Ø delete message** at anytime during the message to delete the message. You hear a confirmation tone and the message is deleted.
- 3) To delete all messages, press **Ø delete message** when the phone is in standby mode. After the announcement "To delete all messages, press delete again," press **Ø delete message** again.

When you try to delete all messages without first listening to your new messages, you hear several short beeps followed by an announcement "Please playback all messages." This protects you from accidentally erasing messages you have not yet reviewed.

Voice memo

The voice memo function allows the user to record messages (more than two seconds and less than four minutes).

- 1) In stand by mode, press the **RECORD** soft key on the base.
- 2) Press the **START** soft key. You will hear the announcement "Record Memo Message" and a confirmation tone.
- 3) Start your recording.
- 4) When you have finished, press the **STOP** soft key to stop recording. The system returns to standby.

- The voice memo messages are recorded as an incoming messages.
- When the answering system is full, **FULL** appears on the display, and recording is terminated.



- If the recording memory is full, **Unavailable** appears in the display. You can not record a conversation until you clear some messages from the memory.
- Every state has different regulations governing the recording of conversations over the telephone. Make sure to check your local, state and federal laws before using this product to record any telephone conversation in order to determine that your use is in compliance with such laws or guidelines.
- You can not record intercom conversations.
- To activate this feature, you must turn the Call Screen feature on. See "Setting the Call Screen" on page 56.

Recording a conversation

You can record a conversation from the handset or the base (more than two seconds and less than ten minutes).

1) During a conversation, press the **MENU** soft key.

2) Press **volume up/down** to select **Call Record**, and then press the **OK** soft key.

Recording a Call appears on the display.

A confirmation tone that can be heard by both parties sounds during recording.

3) To stop recording:

From the Handset - press the **MENU** soft key and **cid/vol / ^** or **redial/p/vol / v** to select **Call Record**. You will hear a confirmation tone.

From the Base - press **▷/□ play/stop**. Or press the **MENU** soft key and **△/vol / ^** or **△/vol / v** to select **Call Record**. You will hear a confirmation tone.

Screening a call

From the base

To screen an incoming call, use the following steps:

- 1) After the answering system answers, the base speaker will let you hear the calls as the machine records the message. To adjust the volume, press **△/vol / ^** or **△/vol / v**. If you set the answering system to off, you cannot screen a call.

2) To answer the call, pick up the corded handset or press **speaker** on the base.

To mute the Call Screen, press the **MUTE** soft key or **▷/□ play/stop**. To cancel muting, press the **SCREEN** soft key.

From the handset

Press the **SCREEN** soft key when the system is answering. To mute the Call Screen, press the **MUTE** soft key. To answer the call, press **talk/flash, speaker** or any number key, ***/tone/<**, or **#/>** (when AutoTalk is set to on). The answering system will disconnect automatically.

Remote Operation

You can check, play, or delete messages, even record a new greeting message from a remote location (when you are away from home, or from another room using a handset). Additionally, you can turn on or off your answering system remotely.

Remote access with the handset

You can operate your answering system from another room using a handset.

- 1) When the phone is in standby mode, press the **☒** key on the handset. Remote AnsweringMachine operation appears on the handset display. The answering system announces the current time and the number of messages stored in the memory.
- 2) You hear the announcement, "To play incoming messages, press two. For help, press zero," followed by a beep.



- If you press the **SCREEN** soft key while another handset is screening a call, you will hear a beep and you can not screen a call.
- The time stamp will not be heard until you have set the time.
- When the answering system is full, **FULL** appears on the base. You should delete some messages so that the system can record new messages. (Refer to "Deleting a message" on page 60.)



- If you press **end** before the answering system answers, the phone will return to standby.
- When the answering system does not answer within 6 seconds, you hear a beep and the phone will return to standby.
- When you receive a call, the remote operation is canceled.
- You can change the handset volume during a remote operation.
- During the remote operation Remote Answering Machine operation appears on the base.
- If you have new messages and old messages, after you have reviewed your new messages, you can play your old messages by pressing 2 again.
- To switch to normal conversation, press **speaker** on the handset.

3) Enter a command within 30 seconds. Select a command from the following chart:

Remote Key Function

<</1	Repeat a Message*	6	Answering System On
▷/2	Play incoming Messages**	7	Memo Record/Stop***
>> /3	Skip a Message	8	Greeting Message Record/Stop***
∅/4	Delete a Message	9	Answering System Off
□/5	Stop Operation	0	Help

* For the Repeat a Message function, press **1** within about four seconds to repeat the previous message, or press **1** after about four seconds to repeat the current message.

** Messages will be played in the order in which they were received. The time and day that each message was received is announced after the message is played.

*** For the Memo Record and Greeting Message Record function, the first time you enter the corresponding command, it starts the Recording function. If you want to stop the recording, enter the command again.

- 4) After the command has finished, you will hear intermittent beeps indicating that the system is waiting for a command. You may enter another command at this time from the chart above.
- 5) When you are finished, press **end** to exit the system.

Remote access away from home

You can operate your answering system from a remote location using any touch-tone telephone.

- 1) Call your telephone number and wait for the system to answer. If the answering system is off, it will answer after about ten rings and sound a series of beeps.
- 2) During the greeting message (or a series of beeps when the answering system is off), press 0 and enter your PIN code within two seconds (see "Setting a PIN Code" on page 54).
- 3) The answering system announces the current time and the number of messages stored in memory. You hear "To play incoming messages, press zero-two. For help, press one-zero." You will hear a beep.
- 4) Enter a command within 15 seconds, each command there after must be entered within two seconds. You may select a command from the following chart:



- The time stamp will not be heard until you have set the time. See "Setting Day and Time" on page 25.
- The system will only playback messages for four minutes and then it returns to the command waiting mode. To continue playing your messages, press 0 then 2 again within 15 seconds.
- If you enter an incorrect PIN code three times, you will hear a beep and the system will return to standby.
- During the remote operation, Line Remote appears on the display.



For your convenience a remote operation card is provided for you to use while away from home (refer to page 86).

Command	Function	Command	Function
0 then 1	Repeat a Message*	0 then 6	Answering System On
0 then 2	Play incoming Messages	0 then 7	Memo Record/Stop**
0 then 3	Skip a Message	0 then 8	Greeting Message Record/Stop**
0 then 4	Delete a Message	0 then 9	Answering System Off
0 then 5	Stop Operation	1 then 0	Help


* For the Repeat a Message function, press **0 then 1** within about four seconds to repeat the previous message, or press **0 then 1** after about four seconds to repeat the current message.

** For Memo Record and Greeting Message Record functions, the first time you enter the corresponding command, the phone starts recording. If you want to stop the recording, enter the command again.

- 5) After the command has finished, you hear intermittent beeps indicating that the system is in the command waiting mode. You may enter another command at this time from the chart above.
- 6) When you are finished, hang up to exit the system. The answering system automatically returns to standby.

Multi-Handset Features

The features in this section require a minimum of two handsets to operate. To add additional handsets to your system, see “Expanding Your Phone” on page 12.

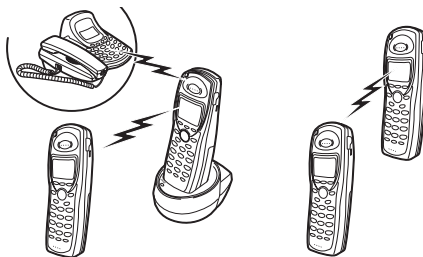

note

Handsets can be in Direct Link mode while other handsets are in use.

Using DirectLink Mode

In DirectLink Mode, a pair of handsets can function as two-way radios. You can have up to five pairs of handsets in DirectLink Mode at a time. DirectLink Mode does not interfere with the main base's ability to make or receive telephone calls. Use them at sporting events or while shopping to stay in contact with family members or friends. You must set both handsets to DirectLink Mode to activate this feature.


To use this feature, you must enter the handsets into DirectLink mode first.

- 1) Press the **MENU** soft key and select DirectLink Mode menu. To enter DirectLink mode Press [ENTER] appears.
- 2) Press the **ENTER** soft key to enter DirectLink mode. You will hear a confirmation tone, and DirectLink Mode Complete appears.
- 3) To return back to the normal mode, press the **CANCEL** soft key and then press the **OK** soft key, or return the handset to the cradle.

To enter
DirectLink mode
Press [ENTER]
BACK ENTER

DirectLink call

- 1) When the phone is in DirectLink standby mode, press the **DirectLink** soft key (example of DirectLink from handset #1).
- 2) Select the handset to which you wish to DirectLink with by pressing the number keys (**0-9**). Your handset will then page the other handset.
- 3) On the receiving handset, press **talk/flash** or the **ANSWER** soft key, or if Any Key Answer is on, press any number key, ***/tone/**<, or ***/**>.
- 4) When you finish your conversation, press **end** or the **END** soft key on either handset. To cancel DirectLink mode (and return to normal standby mode), return the handset to the cradle, or press the **CANCEL** soft key and then press the **OK** soft key.

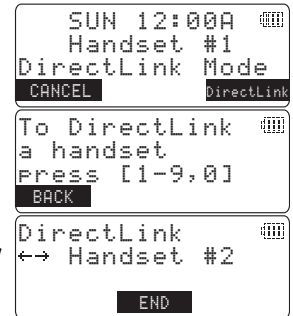

Intercom

The intercom feature lets you communicate with another handset or the base without using the phone line.

Making an Intercom Page

From a handset

- 1) With the phone in standby mode, press **intcom/hold**.
- 2) Use **cid/vol/△** or **redial/p/vol/▽** to select the base or the handset you want to talk with, and then press the **OK** soft key. If you select **A11**, all other handsets and the base will be paged. An intercom tone sounds. To cancel intercom, press the **CANCEL** soft key.



From the base

- 1) With the phone in standby mode, press **intercom/hold** on the base.
- 2) Use **△/vol/△** or **△/vol/▽** to select the handset you want to talk with, and then press the **OK** soft key. If you select **A11**, all other handsets will be paged. An intercom tone sounds. To cancel intercom, press **intercom/hold** or the **CANCEL** soft key.

Answering an Intercom Page

When the intercom page tone sounds, the display will show the ID of the handset or base that is paging.

note

- If the party is busy or out of range, the handset returns to standby mode.
- If you receive an outside/intercom call or page while selecting the other handset (or the base), the operation will be canceled.
- If you do not select a handset or the base within thirty seconds, the operation will be canceled.
- If the party does not answer within one minute, the operation is canceled.
- If the party is out of range, **Unavailable** appears in the display, and the operation will be canceled.
- If all handsets and the base are paged, only the first party to answer the page will connect.

From a handset

- 1) Pick up the handset from the cradle. (If AutoTalk is enabled, the handset will automatically answer when you pick it up.)
- 2) Press **talk/flash**, **intcom/hold**, or the **ANSWER** soft key.

From the base

Pick up the corded base handset. To answer with the base speakerphone, press **intercom/hold**, **speaker**, or the **ANSWER** soft key.

To hang up an intercom page from:

- Handset: press the **END** soft key or return the handset to the cradle.
- Base: press the **END** soft key or return the corded handset to the base.

Call Transfer Feature


The call transfer feature allows you to transfer a call between the base and a handset or between two handsets.

From a handset

- 1) During a call, press **intcom/hold** on the handset. The Call will be put on hold.
- 2) Use press **cid/vol/∧** or **redial/p/vol/∨** to select the base or the handset you want to transfer the call to, and then press the **OK** soft key. If you select **All**, all other handsets and the base will be paged.

The call will automatically be placed on hold, and paging tone sounds.

To cancel the transfer, press **talk/flash**, the **CANCEL** soft key or **speaker** on the initiating handset.



From the base

- 1) During a call, press **intercom/hold** on the base.
The Call will be put on hold.
- 2) Use **△/vol/△** or **△/vol/▽** to select the handset you want to transfer the call to, and then press the **OK** soft key. If you select **All**, all handsets will be paged. A paging tone sounds. To cancel the transfer, press **intercom/hold, speaker** or the **CANCEL** soft key on the base.

Answering a Call Transfer Page

When the page tone sounds, the display will show the ID of the handset or base that is transferring the call.

To answer a page from a handset

- 1) Pick up the handset from the cradle. (If AutoTalk is enabled, the handset will automatically answers when you pick it up. Or If Any Key Answer is enabled, pressing a number key, ***/tone/<**, or ***/>** will answer the page.)
- 2) Press **talk/flash, intcom/hold**, or the **ANSWER** soft key.

To answer a page from the base

Pick up the corded base handset. To answer with the base speakerphone, press **intercom/hold, speaker**, or the **ANSWER** soft key.

Accepting the call transfer

After answering the page, if you want to accept the call and speak to the outside caller, press **talk/flash** on the receiving handset or **speaker** on the base.



note


When you connect to the outside caller, the transferring handset (or base) returns to standby mode. To join in a conference call, press **talk/flash** on the transferring handset or **speaker** on the base.

note

- This feature only works when the handset(s) is within the range of the base.
- If the party is out of range, *Unavailable* appears in the display, and the operation will be canceled.

Room/Baby Monitor

This feature allows you to monitor sounds in another room. Place the base or a handset in the room you wish to monitor; it will function as a microphone. A second handset can be set to function as a remote speaker, allowing you to monitor sounds in the room.

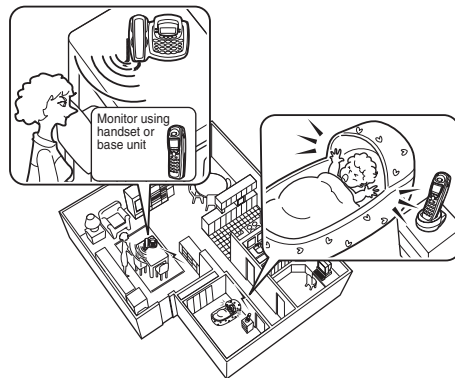

Using Room/Baby Monitor

- 1) Press the **MENU** soft key and select Room Monitor menu.
- 2) Select the handset or base you want to monitor by using **volume up/down**.
- 3) Press the **OK** soft key.
You hear sounds in the room where the handset or the base is installed.
- 4) To turn off the Room Monitor, press the **END** soft key, or **end**.

If you want to prevent other handsets or the base from monitoring this handset, press the **MENU** soft key. Select the Handset Setup menu, and then the Room Monitor submenu. Select **Off** and press the **OK** soft key.



Note on Power Sources

Power Failure

During the period that the power is off, you can make or receive calls with the base. You can not use the base speaker phone and the cordless handset.

Battery replacement and handling

When the operating time becomes short, even after a battery is recharged, please replace the battery. With normal usage, your battery should last about one year. Please contact your place of purchase or the Uniden Parts Department for a replacement battery.

Warning

To avoid the risk of personal injury or property damage from fire or electrical shock, only use the Uniden battery model and Uniden adapter model specifically designated for this product.

Caution

- Use only the specified Uniden battery pack (BT-446).
- Do not remove the batteries from the handset to charge them.
- Never throw the battery into a fire, disassemble them, or heat them.
- Do not remove or damage the battery casing.


Low battery alert

When the battery pack is very low, the phone is programmed to eliminate functions in order to save power.

The battery pack needs to be charged when:

- The empty battery icon appears.
- Low Battery appears in the display.

If the phone is in standby mode, none of keys will operate. If you are on a call, complete your conversation as quickly as possible, and return the handset to the cradle.



Cleaning the battery charging contacts

To maintain a good charge, clean the charging contacts on the handset once a month. Dampen a cloth with plain water. Gently rub the damp cloth over the charging contacts until all visible dirt is removed. Dry the contacts thoroughly before returning the handset to the base.

Caution: Do not use paint thinner, benzene, alcohol, or other chemical products. Doing so may discolor the surface of the telephone and damage the finish.



General Information

The phone complies with FCC Parts 15 and 68. Operating temperature:
0 °C to +50 °C (+32 °F to +122 °F)

AC Adapter Information

AC Adapter part number: AD-800 for the base	AD-0005 for the charger
Input Voltage: 120 AC 60Hz	120V AC 60Hz
Output Voltage: 9V DC 350mA	9V DC 210mA

Battery Information

Battery part number: BT-446
Capacity: 800mAh, 3.6V



- To avoid damage to the phone use only Uniden AD-800 and BT-446, and AD-0005 with your phone.
- If the handset is left off of the base, the actual Talk mode duration will be reduced respective to the amount of time the handset is off the base.

Recharge your phone on a regular basis by returning the handset to the base after each phone call. When the operating time becomes short even after the battery is recharged, please replace the battery. With normal usage, the battery should last about one year.

A replacement Uniden adapter or battery may be purchased by contacting the Uniden Parts Department (see back page).

Specifications, features, and availability of optional accessories are all subject to change without prior notice.

Troubleshooting

If your phone is not performing to your expectations, please try these simple steps first.

Symptom	Suggestion
The in use LED won't illuminate when the handset is placed in the cradle.	<ul style="list-style-type: none">• Make sure the AC adapter is plugged into the charger and wall outlet.• Make sure the handset is properly seated in the cradle.• Make sure the charging contacts on the handset are clean.
The audio sounds weak.	<ul style="list-style-type: none">• Move the handset and/or base away from metal objects or appliances and try again.• Make sure that you are not too far from the base.
Can't make or receive calls.	<ul style="list-style-type: none">• Make sure that you are not too far from the base.• Make sure the line is not in use. If call is already using a line, you cannot use that line to make another outside call.• Check both ends of the base telephone line cord.• Make sure the AC adapter is plugged into the base and wall outlet.• Disconnect the AC adapter for a few minutes, and then reconnect it.• De-register the handset (see "De-register the Handset" on page 14) and register the handset (see "Register the Handset" on page 13).
The handset doesn't ring or receive a page.	<ul style="list-style-type: none">• Make sure that you are not too far from the base.• Charge the batteries in the handset for 15-20 hours by placing the handset on the base or charging cradle.• De-register the handset (see "De-register the Handset" on page 14) and register the handset (see "Register the Handset" on page 13).
During power failure, can't make or receive a call.	<ul style="list-style-type: none">• Make sure to use corded base handset to make or receive a call.• Make sure that TEL line code is connected firmly.

Symptom	Suggestion
Severe noise interference.	<ul style="list-style-type: none"> • Keep the handset away from microwave ovens, computers, remote control toys, wireless microphones, alarm systems, intercoms, room monitors, fluorescent lights, and electrical appliances. • Move to another location or turn off the source of interference.
The Caller ID does not display.	<ul style="list-style-type: none"> • The handset was picked up before the second ring. • The call was placed through a switchboard. • Call your local telephone company to verify your Caller ID service is current. There may be a problem with your Caller ID service.
You cannot register the handset at the base.	<ul style="list-style-type: none"> • Charge the battery pack for 15-20 hours. • De-register the handset (see “De-register the Handset” on page 14) and register the handset (see “Register the Handset” on page 13).
The handset doesn't communicate with other handsets.	<ul style="list-style-type: none"> • De-register the handset (see “De-register the Handset” on page 14) and register the handset (see “Register the Handset” on page 13). • Make sure that you have registered all handsets.
An extra handset can't join the conversation.	<ul style="list-style-type: none"> • Make sure there are not two handsets already using the 3-way conference feature. • Make sure that another handset or base is not in privacy mode.
The base can't join the conversation	<ul style="list-style-type: none"> • Make sure that another handset or base is not in privacy mode.
Room Monitor feature does not work.	<ul style="list-style-type: none"> • Make sure to place the handset(s) within the range of the base.
The answering system does not work.	<ul style="list-style-type: none"> • Make sure the base unit is plugged in. • Make sure that the answering system is turned on. • Make sure that the message record time is not set to Announce only (see page 55).
Messages are incomplete.	<ul style="list-style-type: none"> • The incoming messages may be too long. Remind callers to leave a brief message. • The memory may be full. Delete some or all of the saved messages.
After a power failure, the outgoing message is deleted.	<ul style="list-style-type: none"> • Record your greeting again. The default message should remain.

Symptom	Suggestion
No sound on the base unit speaker during call monitoring or message playback.	<ul style="list-style-type: none"> • Adjust the speaker volume on the base unit. • Make sure the call screen feature is set to on.
Cannot access remote call-in features from another touch-tone phone.	<ul style="list-style-type: none"> • Make sure you are using the correct PIN number. • Make sure that the touch-tone phone you're using can transmit the tone for at least two seconds. If it cannot, you may have to use another phone to access your phone.
Time stamp cannot be heard.	<ul style="list-style-type: none"> • Make sure you have set the time (see "Setting Day and Time" on page 25).
If you still have a problem.	<ul style="list-style-type: none"> • Call our customer hotline at 1-800-297-1023.

Liquid Damage

Moisture and liquid may damage your cordless phone. Follow the steps below if your phone gets wet:

Case	Action
If the exterior plastic housing on the handset or base is exposed to moisture or liquid.	Wipe off the liquid, and use as normal.
If moisture or liquid has entered the plastic housing (i.e. liquid can be heard in the phone or liquid has entered the handset battery compartment or vent openings on the base).	<p>Handset:</p> <ol style="list-style-type: none">1) Remove the battery cover and leave it off for ventilation.2) Disconnect the battery pack. Leave the battery cover off and the battery pack disconnected for at least 3 days.3) Once the handset is completely dry, reconnect the battery pack and the battery cover.4) Recharge the handset's battery pack for 20 hours before using. <p>Base:</p> <ol style="list-style-type: none">1) Disconnect the AC adapter from the base, cutting off electrical power.2) Disconnect the telephone cord from the base.3) Let dry for at least 3 days. <p>IMPORTANT: You must unplug the telephone line while recharging the battery packs to avoid charge interruption.</p> <p>CAUTION: DO NOT use a microwave oven to speed up the drying process. This will cause permanent damage to the handset, base and the microwave oven.</p> <p>After following these steps, if your cordless telephone does not work, please call our Customer Service Hotline at 1-800-297-1023.</p>

Precautions!

Before you read anything else, please observe the following:


Warning!

Uniden America Corporation DOES NOT represent this unit to be waterproof. To reduce the risk of fire, electrical shock, or damage to the unit, DO NOT expose this unit to rain or moisture.

Rechargeable Nickel-Metal-Hydride Battery Warning

- This equipment contains a rechargeable Nickel-Metal-Hydride battery.
- Nickel is a chemical known to state of California to cause cancer.
- The rechargeable Nickel-Metal-Hydride battery contained in this equipment may explode if disposed of in a fire.
- Do not short-circuit the battery.
- Do not charge the rechargeable Nickel-Metal-Hydride battery used in this equipment in any charger other than the one designed to charge this battery as specified in the owner's manual. Using another charger may damage the battery or cause the battery to explode.

Rechargeable Nickel-Metal-Hydride Batteries Must Be Recycled or Disposed of Properly



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Uniden works to reduce lead content in our PVC coated cords in our products and accessories.

Warning!

The cords on this product and/or accessories contain lead, a chemical known to the State of California to cause birth defects or other reproductive harm. **Wash hands after handling.**

Important Safety Instructions

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
2. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
3. Do not use the telephone to report a gas leak in the vicinity of the leak.

4. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible battery disposal instructions.
5. Do not disassemble any component of this product.

SAVE THESE INSTRUCTIONS

CAUTION

Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions. Do not open or mutilate the battery, and disconnect the battery before shipping this product.

The FCC Wants You To Know

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the bottom of this equipment is a label that contains, among other information, a product identifier in the format US:AAEQ##TXXXX. If requested, this number must be provided to the telephone company.

An applicable Universal Service Order Codes (USOC) certification for the jacks used in this equipment is provided (i.e., RJ11C) in the packaging with each piece of approved terminal equipment.

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. For products approved after July 23, 2001, the REN for this product is part of the product identifier that has the format US:AAEQ##TXXXX. The digits represented by ## are the REN without a decimal point (e.g., 03 is a REN of 0.3). For earlier products, the REN is separately shown on the label.

If this equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service. Please follow instructions for repairing, if any (e.g. battery replacement section); otherwise do not substitute or repair any parts of the device except as specified in this manual.

Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information.

This equipment is hearing aid compatible.

Should you experience trouble with this equipment, please contact Uniden customer service at 800-297-1023. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

NOTICE: According to telephone company reports, AC electrical surges, typically resulting from lightning strikes, are very destructive to telephone equipment connected to AC power sources. To minimize damage from these types of surges, a surge arrester is recommended.

Changes or modifications to this product not expressly approved by Uniden, or operation of this product in any way other than as detailed by the owner's manual, could void your authority to operate this product.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Privacy of communications, may not be ensured when using this phone.

To insure the safety of users, the FCC has established criteria for the amount of radio frequency energy various products may produce depending on their intended usage. This product has been tested and found to comply with the FCC's exposure criteria. For body worn operation, the FCC RF exposure guidelines were also met when used with the Uniden accessories supplied or designed for this product. Use of other accessories may not ensure compliance with FCC RF exposure guidelines and should be avoided.

Radio Interference

Radio interference may occasionally cause buzzing and humming in your cordless handset, or clicking noises in the base. This interference is caused by external sources such as TV, refrigerator, vacuum cleaner, fluorescent lighting, or electrical storm. Your unit is NOT DEFECTIVE. If these noises continue and are too distracting, please check around your home to see what appliances may be causing the problem. In addition, we recommend that the base not be plugged into a circuit that also powers a major appliance because of the potential for interference. Be certain that the antenna on the unit is fully extended when needed. In the unlikely event that you consistently hear other voices or distracting transmissions on your phone, you may be receiving radio signals from another cordless telephone or other source of interference. If you cannot eliminate this type of interference, you need to change to a different channel.

Finally, it should be noted that some cordless telephones operate at frequencies that may cause interference to nearby TVs and VCRs. To minimize or prevent such interference, the base of the cordless telephone should not be placed near or on top of a TV or VCR. If interference is experienced, moving the cordless telephone farther away from the TV or VCR will often reduce or eliminate the interference.

Cordless Telephone Privacy

Cordless telephones are radio devices. Communications between the handset and base of your cordless telephone are accomplished by means of radio waves which are broadcast over the open airways. Because of the inherent physical properties of radio waves, your communications can be received by radio receiving devices other than your own cordless telephone unit. Consequently, any communications using your cordless telephone may not be private.

One Year Limited Warranty

Important: Evidence of original purchase is required for warranty service. **WARRANTOR: UNIDEN AMERICA CORPORATION ("Uniden")** ELEMENTS OF WARRANTY: Uniden warrants, for one year, to the original retail owner, this Uniden Product to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

WARRANTY DURATION: This warranty to the original user shall terminate and be of no further effect 12 months after the date of original retail sale. The warranty is invalid if the Product is (A) damaged or not maintained as reasonable or necessary, (B) modified, altered, or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden, (C) improperly installed, (D) serviced or repaired by someone other than an authorized Uniden service center for a defect or malfunction covered by this warranty, (E) used in any conjunction with equipment or parts or as part of any system not manufactured by Uniden, or (F) installed or programmed by anyone other than as detailed by the owner's manual for this product.

STATEMENT OF REMEDY: In the event that the product does not conform to this warranty at any time while this warranty is in effect, warrantor will either, at its option, repair or replace the defective unit and return it to you without charge for parts, service, or any other cost (except shipping and handling) incurred by warrantor or its representatives in connection with the performance of this warranty. Warrantor, at its option, may replace the unit with a new or refurbished unit. **THE LIMITED WARRANTY SET FORTH ABOVE IS THE SOLE AND ENTIRE WARRANTY PERTAINING TO THE PRODUCT AND IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES OF ANY NATURE WHATSOEVER, WHETHER EXPRESS, IMPLIED OR ARISING BY OPERATION OF LAW, INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES.** Some states do not allow this exclusion or limitation of incidental or consequential damages so the above limitation or exclusion may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This warranty is void outside the United States of America and Canada.

PROCEDURE FOR OBTAINING PERFORMANCE OF WARRANTY: If, after following the instructions in the owner's manual you are certain that the Product is defective, pack the Product carefully (preferably in its original packaging). Disconnect the battery from the Product and separately secure the battery in its own separate packaging within the shipping carton. The Product should include all parts and accessories originally packaged with the Product. Include evidence of original purchase and a note describing the defect that has caused you to return it. The Product should be shipped freight prepaid, by traceable means, to warrantor at:

Uniden America Service
4700 Amon Carter Blvd.
Fort Worth, TX 76155

I.C. Notice

TERMINAL EQUIPMENT

NOTICE: This equipment meets the applicable Industry Canada Terminal Equipment Technical Specifications. This is confirmed by the registration number. The abbreviation, IC, before the registration number signifies that registration was performed based on a Declaration of Conformity indicating that Industry Canada technical specifications were met. It does not imply that Industry Canada approved the equipment.

NOTICE: The Ringer Equivalence Number (REN) for this terminal equipment is marked on the equipment itself. The REN assigned to each terminal equipment provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed five.

RADIO EQUIPMENT

The term "IC:" before the radio certification number only signifies that Industry Canada technical specifications were met.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. "Privacy of communications may not be ensured when using this telephone".

Memory List

	Name	Phone No.
1		
2		
3		
4		
5		
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		
16		
17		
18		
19		
20		
21		
22		
23		
24		
25		
26		
27		
28		
29		
30		
31		
32		
33		
34		

	Name	Phone No.
35		
36		
37		
38		
39		
40		
41		
42		
43		
44		
45		
46		
47		
48		
49		
50		
51		
52		
53		
54		
55		
56		
57		
58		
59		
60		
61		
62		
63		
64		
65		
66		
67		
68		

	Name	Phone No.
69		
70		
71		
72		
73		
74		
75		
76		
77		
78		
79		
80		
81		
82		
83		
84		
85		
86		
87		
88		
89		
90		
91		
92		
93		
94		
95		
96		
97		
98		
99		
100		

Memo

Memo

Index

0-9	
20 ring options	19
A	
Animation screen	23
Announce only feature	57
Answering system	
Deleting a message	60
Playing your messages	58
Recording a conversation	61
Remote operation	62
Repeating a message	59
Skipping a message	59
Turning On/Off	57
Anykey Answer	21
Area Code	26
AutoTalk	20
B	
Banner	21
Battery	
Installing	10
Replacement and handling	72
Beltclip	15
C	
Call transfer feature	69
Caller ID	
Caller ID services	46
Calling	50
CIDCW	46
CWDX	47
Deleting	49
Setting	26
Storing	40

Viewing	48
Clock	25
Conferencing	36
Contrast	22
Copying phonebook	45
D	
Deluxe Call Waiting Features	47
De-register the handset	14
Dial mode	27
Distinctive ringer	20
E	
Earpiece volume	32
G	
General information	74
H	
Headset installation	15
Hold	31
I	
I.C. notice	81
Important safety instructions	79
Intercom	68
K	
Key touch tone	23
L	
Language	22
Liquid damage	78
M	
Making a call	28
Mute	34
N	
New message LED	58
O	
Outgoing message	53, 57

P	
Phonebook	
Making calls	43
Viewing	42
Precautions	79
Privacy Mode	35
R	
Receiving a call	30
Redialing a call	32
Remote	62
Remote access	
away from home	64
from your handset	62
Ringer	
Adjusting	32
Do not disturb	33
Mute	34
Room/baby monitor	71
S	
Setting up	
base unit	9
Handset	10
Menu options	17
Soft Key	7
Speed dialing	43
T	
Transferring a call	69
V	
Voice memo	60
W	
Warranty	80

Remote Operation Card

CUT

REMOTE OPERATION CARD

Uniden®

Remote access away from home

1. Call your phone number from a touch-tone phone.
2. During the outgoing message, press 0 and enter your PIN code. The answering system announces the number of messages stored in memory and the voice prompts.
3. To quit, hang up the phone.

Turn on the answering system remotely

1. Call your phone and let it ring 10 times until you hear a beep.
2. Press 0 and then enter your PIN code.
3. Press 0 then 5 to stop the announcement.
4. Press 0 then 6 to turn the answering system on.

CUT

REMOTE OPERATION CARD

Uniden®

Remote access away from home

1. Call your phone number from a touch-tone phone.
2. During the outgoing message, press 0 and enter your PIN code. The answering system announces the number of messages stored in memory and the voice prompts.
3. To quit, hang up the phone.

Turn on the answering system remotely

1. Call your phone and let it ring 10 times until you hear a beep.
2. Press 0 and then enter your PIN code.
3. Press 0 then 5 to stop the announcement.
4. Press 0 then 6 to turn the answering system on.

CUT

REMOTE OPERATION CARD

Uniden®

Remote access away from home

1. Call your phone number from a touch-tone phone.
2. During the outgoing message, press 0 and enter your PIN code. The answering system announces the number of messages stored in memory and the voice prompts.
3. To quit, hang up the phone.

Turn on the answering system remotely

1. Call your phone and let it ring 10 times until you hear a beep.
2. Press 0 and then enter your PIN code.
3. Press 0 then 5 to stop the announcement.
4. Press 0 then 6 to turn the answering system on.

CUT

REMOTE OPERATION CARD

Uniden®

Remote access away from home

1. Call your phone number from a touch-tone phone.
2. During the outgoing message, press 0 and enter your PIN code. The answering system announces the number of messages stored in memory and the voice prompts.
3. To quit, hang up the phone.

Turn on the answering system remotely

1. Call your phone and let it ring 10 times until you hear a beep.
2. Press 0 and then enter your PIN code.
3. Press 0 then 5 to stop the announcement.
4. Press 0 then 6 to turn the answering system on.

CUT

Task	Key
Repeat a Message	<input type="button" value="0"/> <input type="button" value="1"/>
Playing incoming Messages	<input type="button" value="0"/> <input type="button" value="2 abc"/>
Skipping a Message	<input type="button" value="0"/> <input type="button" value="3 def"/>
Deleting a Message	<input type="button" value="0"/> <input type="button" value="4 ghi"/>
Stop Operation	<input type="button" value="0"/> <input type="button" value="5 jkl"/>
Answering System On	<input type="button" value="0"/> <input type="button" value="6 mno"/>
Memo Record/Stop	<input type="button" value="0"/> <input type="button" value="7 pqrs"/>
Greeting Message Record/Stop	<input type="button" value="0"/> <input type="button" value="8 tuvw"/>
Answer System Off	<input type="button" value="0"/> <input type="button" value="9 wxyz"/>
Help Guidance	<input type="button" value="1"/> <input type="button" value="0 open"/>

CUT

Task	Key
Repeat a Message	<input type="button" value="0"/> <input type="button" value="1"/>
Playing incoming Messages	<input type="button" value="0"/> <input type="button" value="2 abc"/>
Skipping a Message	<input type="button" value="0"/> <input type="button" value="3 def"/>
Deleting a Message	<input type="button" value="0"/> <input type="button" value="4 ghi"/>
Stop Operation	<input type="button" value="0"/> <input type="button" value="5 jkl"/>
Answering System On	<input type="button" value="0"/> <input type="button" value="6 mno"/>
Memo Record/Stop	<input type="button" value="0"/> <input type="button" value="7 pqrs"/>
Greeting Message Record/Stop	<input type="button" value="0"/> <input type="button" value="8 tuvw"/>
Answer System Off	<input type="button" value="0"/> <input type="button" value="9 wxyz"/>
Help Guidance	<input type="button" value="1"/> <input type="button" value="0 open"/>

CUT

Task	Key
Repeat a Message	<input type="button" value="0"/> <input type="button" value="1"/>
Playing incoming Messages	<input type="button" value="0"/> <input type="button" value="2 abc"/>
Skipping a Message	<input type="button" value="0"/> <input type="button" value="3 def"/>
Deleting a Message	<input type="button" value="0"/> <input type="button" value="4 ghi"/>
Stop Operation	<input type="button" value="0"/> <input type="button" value="5 jkl"/>
Answering System On	<input type="button" value="0"/> <input type="button" value="6 mno"/>
Memo Record/Stop	<input type="button" value="0"/> <input type="button" value="7 pqrs"/>
Greeting Message Record/Stop	<input type="button" value="0"/> <input type="button" value="8 tuvw"/>
Answer System Off	<input type="button" value="0"/> <input type="button" value="9 wxyz"/>
Help Guidance	<input type="button" value="1"/> <input type="button" value="0 open"/>

CUT

Task	Key
Repeat a Message	<input type="button" value="0"/> <input type="button" value="1"/>
Playing incoming Messages	<input type="button" value="0"/> <input type="button" value="2 abc"/>
Skipping a Message	<input type="button" value="0"/> <input type="button" value="3 def"/>
Deleting a Message	<input type="button" value="0"/> <input type="button" value="4 ghi"/>
Stop Operation	<input type="button" value="0"/> <input type="button" value="5 jkl"/>
Answering System On	<input type="button" value="0"/> <input type="button" value="6 mno"/>
Memo Record/Stop	<input type="button" value="0"/> <input type="button" value="7 pqrs"/>
Greeting Message Record/Stop	<input type="button" value="0"/> <input type="button" value="8 tuvw"/>
Answer System Off	<input type="button" value="0"/> <input type="button" value="9 wxyz"/>
Help Guidance	<input type="button" value="1"/> <input type="button" value="0 open"/>

Main Menu Flow Chart

•From standby mode

•Base

SUN 12:00A
New CID: 5
REDIAL MENU RECORD

MENU
→

Room Monitor
Base Setup
Answ. Setup
BACK OK

Room Monitor
Base Setup
Answ. Setup
BACK OK

•Handset

SUN 12:00A
Handset #1
New CID: 5
MENU

MENU
→

DirectLink Mode
Room Monitor
Handset Setup
BACK OK

∇

DirectLink Mode
Room Monitor
Handset Setup
BACK OK

DirectLink Mode
Room Monitor
Handset Setup
BACK OK

∇

Room Monitor
Base Setup
Answ. Setup
BACK OK

To enter
DirectLink mode
Press [ENTER]
BACK ENTER

Enter

SUN 12:00A
Handset #1
DirectLink Mode
CANCEL DirectLink

∧

or

∇

Listen to:
Handset #2
Handset #3
Handset #4
Handset #5
Handset #6
Handset #7
Handset #8
Handset #9
Handset #0
Base
BACK OK

<HANDSET SETUP>
Ringer Volume
Ringer Tones
Distinctive Ring
Auto Talk
Anykey Answer
Banner
Language
LCD Contrast
Key Touch Tone
Animation Screen
Room Monitor
BACK OK

<BASE SETUP>
Language
Contrast
BACK OK

▲

or

▼

At Uniden, we'll take care of you!

Thank you for purchasing a Uniden product. If you have any questions or problems,
please do not return this product to the place of purchase.



Having Trouble?

Our customer care specialists are here to help you! Visit our website at www.uniden.com or call our Customer Service Hotline at **1-800-297-1023**, Mon-Fri, 7 a.m. to 7 p.m. or Sat/Sun, 9 a.m. to 5 p.m. CST. (The Customer Service Hotline is closed on holidays.)



Need a Part?

To order headsets, additional handsets, replacement batteries or other accessories, visit our website at www.uniden.com or call 1-800-554-3988, Mon-Fri, 8 a.m. to 5 p.m. CST.



Help for our Special Needs Customers

If you need special assistance due to a disability or have questions on the accessibility features of this product, please call **1-800-874-9314 (voice or TTY)**

Uniden®

May be covered under one or more of the following U.S. patents:

4,797,916	5,381,460	5,426,690	5,434,905	5,491,745	5,493,605
5,533,010	5,574,727	5,581,598	5,650,790	5,660,269	5,661,780
5,663,981	5,671,248	5,696,471	5,717,312	5,732,355	5,754,407
5,758,289	5,768,345	5,787,356	5,794,152	5,801,466	5,825,161
5,864,619	5,893,034	5,912,968	5,915,227	5,929,598	5,930,720
5,960,358	5,987,330	6,044,281	6,070,082	6,125,277	6,253,088
6,314,278	6,418,209	6,618,015	6,671,315	6,714,630	6,782,098
6,788,920	6,788,953				

Other patents pending.

FOR
ACCESSORIES,
GO ONLINE @
WWW.UNIDEN.COM

REGISTER ONLINE TODAY!

THANK YOU FOR BUYING A UNIDEN PRODUCT.

A World Without Wires | **Uniden®**